



- U.S.A. : **KUBOTA TRACTOR CORPORATION**
1000 Kubota Drive, Grapevine, TX 76051
Telephone : 888-4KUBOTA
- Canada : **KUBOTA CANADA LTD.**
5900 14th Avenue, Markham, Ontario, L3S 4K4, Canada
Telephone : (905)294-7477
- France : **KUBOTA EUROPE S.A.S**
19-25, Rue Jules Vercey, Z.I. BP88, 95101 Argenteuil Cedex, France
Telephone : (33)1-3426-3434
- Italy : **KUBOTA EUROPE S.A.S Italy Branch**
Via Grandi, 29 20068 Peschiera Borrome (MI) Italy
Telephone : (39)02-51650377
- Germany : **KUBOTA (DEUTSCHLAND) GmbH**
Senefelder Str. 3-5 63110 Rodgau /Nieder-Roden, Germany
Telephone : (49)6106-873-0
- U.K. : **KUBOTA (U.K.) LTD.**
Dormer Road, Thame, Oxfordshire, OX9 3UN, U.K.
Telephone : (44)1844-214500
- Spain : **KUBOTA ESPAÑA S.A.**
Avenida Recomba No.5, Poligno Industrial la Laguna, Leganes, 28914 (Madrid) Spain
Telephone : (34)91-508-6442
- Australia : **KUBOTA AUSTRALIA PTY LTD.**
25-29 Permas Way, Truganina, VIC 3029, Australia
Telephone : (61)-3-9394-4400
- Malaysia : **KUBOTA MALAYSIA SDN. BHD.**
Lot 766, Jalan Subang 4, off Persiaran Subang Sungai Penaga Industrial Park,
47500 Subang Jaya
Telephone : (60)-3-7890-3533
- Philippines: **KUBOTA PHILIPPINES, INC.**
232 Quirino Highway, Baesa, Quezon City 1106, Philippines
Telephone : (63)2-422-3500
- Taiwan : **SHIN TAIWAN AGRICULTURAL MACHINERY CO., LTD.**
16, Fengping 2nd Rd, Taliao Shiang Kaohsiung 83107, Taiwan R.O.C.
Telephone : (886)7-702-2333
- Indonesia : **PT KUBOTA MACHINERY INDONESIA**
Tower A at EightyEight@Kasablanka Lantai 16
Jalan Raya Casablanka Kav. 88, Jakarta 12870 Indonesia
Telephone : (62)-21-29568-720
- Thailand : **SIAM KUBOTA CORPORATION CO., LTD.**
101/19-24 Moo 20, Navanakorn Industrial Estate, Tambon Khlongnueng, Amphur Khlongluang,
Pathumthani 12120, THAILAND
Telephone : (66)2-909-0300
- Korea : **KUBOTA KOREA CO., LTD.**
41-27, Jayumyeok-gil, Baeksan-myeon, Gimje-si, Jeollabuk-do, Korea
Telephone : (82)-63-544-5822
- India : **KUBOTA AGRICULTURAL MACHINERY INDIA PVT. LTD.**
No.15, Medavakkam Road, Sholinganallur, Chennai-600119, T.N., India
Telephone : (91)44-6104-1500
- Vietnam : **KUBOTA VIETNAM CO., LTD.**
Lot B-3A2-CN, My Phuoc 3 Industrial Park, Thoi Hoa Ward, Ben Cat Town, Binh Duong Province, Vietnam
Telephone : (84)-274-3577-507

KUBOTA Corporation

English (U.S.A.)
Code No. 3C631-9972-4

OPERATOR'S MANUAL

KUBOTA TRACTOR

MODELS **M6060**
M7060



1AGAIJAP085A

M
6
0
6
0
·
M
7
0
6
0

READ AND SAVE THIS MANUAL



ABBREVIATION LIST

Abbreviations	Definitions
2WD	2 Wheel Drive
4WD	4 Wheel Drive
API	American Petroleum Institute
ASABE	American Society of Agricultural and Biological Engineers, USA
ASTM	American Society for Testing and Materials, USA
DIN	Deutsches Institut für Normung, GERMANY
DT	Dual Traction [4WD]
fpm	Feet Per Minute
GST	Glide Shift Transmission
Hi-Lo	High Speed-Low Speed
HST	Hydrostatic Transmission
m/s	Meters Per Second
PTO	Power Take Off
RH/LH	Right-hand and left-hand sides are determined by facing in the direction of forward travel
ROPS	Roll-Over Protective Structures
rpm	Revolutions Per Minute
r/s	Revolutions Per Second
SAE	Society of Automotive Engineers, USA
SMV	Slow Moving Vehicle

California Proposition 65

⚠ WARNING ⚠

Engine exhaust, some of its constituents, certain vehicle components and fluids, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Canadian Electromagnetic Compatibility (EMC):
This machine complies with Industry Canada ICES-002.

KUBOTA Corporation is ...

Since its inception in 1890, KUBOTA Corporation has grown to rank as one of the major firms in Japan.

To achieve this status, the company has through the years diversified the range of its products and services to a remarkable extent. 30 plants and 35,000 employees produce over 1,000 different items, large and small.

All these products and all the services which accompany them, however, are unified by one central commitment. KUBOTA makes products which, taken on a national scale, are basic necessities. Products which are indispensable. Products which are intended to help individuals and nations fulfill the potential inherent in their environment. KUBOTA is the Basic Necessities Giant.

This potential includes water supply, food from the soil and from the sea, industrial development, architecture and construction, and transportation.

Thousands of people depend on KUBOTA's know-how, technology, experience and customer service. You too can depend on KUBOTA.

UNIVERSAL SYMBOLS

As a guide to the operation of your tractor, various universal symbols have been utilized on the instruments and controls. The symbols are shown below with an indication of their meaning.

	Safety Alert Symbol		Position Control-Raised Position		Lock
	Diesel Fuel		Position Control-Lowered Position		Rear Window Defroster
	Engine-Rotational Speed		Engine Warning		Steering Wheel-Tilt Control
	Hourmeter/Elapsed Operating Hours		Emission Control		Empty
	Engine Coolant-Temperature		Draft Control-Shallow Position		Full
	Diesel Preheat/Glow Plugs(Low Temperature Start Aid)		Draft Control-Deep Position		PTO 540 rpm
	Parking Brake		3-Point Lowering Speed Control		PTO 1000 rpm
	Engine Intake/Combustion Air-Filter		Remote Cylinder-Retract		Regeneration
	Battery Charging Condition		Remote Cylinder-Extend		DPF INHIBIT (Switch)
	Engine Oil-Pressure		Hazard Warning Lights		Regeneration (Switch)
	Turn Signal		Headlight-Low Beam		Parked Regeneration
	Electrical Power-accessories		Headlight-High Beam		Engine RPM Increase
	Engine-Run		4-Wheel Drive-On		Rev-limiter Control
	Engine-Start		4-Wheel Drive-Off		Constant RPM Management
	Engine-Stop		Front-Wheel Drive-On		
	Power Take-Off Clutch Control-Off (Disengaged) Position		Fast		
	Power Take-Off Clutch Control-On (Engaged) Position		Slow		
	Bi-Speed turn		Creep		
	Differential Lock		Windshield Wiper		
			Windshield Wiper Intermittent		
			Windshield Washer		

FOREWORD

You are now the proud owner of a KUBOTA Tractor. This tractor is a product of KUBOTA quality engineering and manufacturing. It is made of fine materials and under a rigid quality control system. It will give you long, satisfactory service. To obtain the best use of your tractor, please read this manual carefully. It will help you become familiar with the operation of the tractor and contains many helpful hints about tractor maintenance. It is KUBOTA's policy to utilize as quickly as possible every advance in our research. The immediate use of new techniques in the manufacture of products may cause some small parts of this manual to be outdated. KUBOTA distributors and dealers will have the most up-to-date information. Please do not hesitate to consult with them.



SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.



DANGER : Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING : Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION : Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

IMPORTANT : Indicates that equipment or property damage could result if instructions are not followed.

NOTE : Gives helpful information.

CONTENTS

▲ SAFE OPERATION	▲ -1
SERVICING OF TRACTOR.....	1
SPECIFICATIONS.....	3
SPECIFICATION TABLE	3
TRAVELING SPEEDS	5
IMPLEMENT LIMITATIONS	6
INSTRUMENT PANEL AND CONTROLS.....	8
PRE-OPERATION CHECK	11
DAILY CHECK	11
OPERATING THE ENGINE.....	12
EXHAUST AFTERTREATMENT DEVICES.....	12
Diesel Particulate Filter (DPF) Muffler	12
Handling Points.....	13
DPF Regeneration Process.....	13
Regeneration Operating Procedure.....	14
PM Warning Level and Required Procedures	15
Regeneration Operating Procedure.....	16
PM Warning Level and Required Procedures	17
Tips on Diesel Particulate Filter (DPF) Regeneration.....	19
STARTING THE ENGINE	19
COLD WEATHER STARTING	23
Block Heater (if equipped).....	23
STOPPING THE ENGINE.....	23
WARMING UP	23
JUMP STARTING	24
OPERATING THE TRACTOR.....	25
OPERATING NEW TRACTOR	25
Do not Operate the Tractor at Full Speed for the First 50 Hours.....	25
Changing Lubricating Oil for New Tractors.....	25
BOARDING AND LEAVING THE TRACTOR	25
STARTING	25
Operator's Seat.....	25
Seat Belt	26
Tilt Steering Adjustment.....	27
Light Switch	27
Turn Signal / Hazard Light Switch	27
Horn Button.....	28
Brake Pedals (Right and Left).....	28
Brake Pedals (Right and Left).....	29
Clutch Pedal	30
Travel Speed Limiter.....	32
Main Gear Shift Lever.....	32
Range Gear Shift Lever.....	32

Hydraulic-Shuttle Shift Lever	32
Creep Speed (if equipped).....	32
Front Wheel Drive Lever.....	33
4WD Switch	34
Hand Throttle Lever	34
Foot Throttle	34
Parking Brake	35
STOPPING.....	35
Stopping.....	35
CHECK DURING DRIVING	35
Immediately Stop the Engine if:.....	35
Easy Checker(TM).....	35
Fuel Gauge	36
Coolant Temperature Gauge	37
Tachometer.....	37
LCD MONITOR.....	38
Changing Display Mode.....	38
PTO Speed Display Mode Switching.....	41
Entering the Travel Speed Coefficient.....	42
ELECTRONIC ENGINE CONTROL.....	43
Constant RPM Management Control.....	43
PARKING	43
Parking.....	43
Parking.....	44
OPERATING TECHNIQUES	44
Differential Lock	44
Operating the Tractor on a Road	45
Operating on Slopes and Rough Terrain	45
Transport the Tractor Safely	45
Directions for Use of Power Steering.....	45
Trailer Electrical Outlet	46
PTO	47
PTO OPERATION.....	47
PTO Clutch Control Switch	47
PTO Gear Shift Lever	48
PTO Speed Limiter	48
LCD Monitor Message	49
PTO Shaft Cover and Shaft Cap	49
3-POINT HITCH & DRAWBAR.....	50
3-POINT HITCH	51
Category 1 & 2.....	51
Selecting the holes of Lower Links	51
Selecting the Top Link Mounting Holes	51
Draft Stopper	52
Drawbar	52
Lifting Rod (Left)	52
Lifting Rod (Right).....	53
Top Link.....	53
Telescopic Stabilizers	53
Telescopic Lower Links	54

DRAWBAR.....	54
Adjusting Drawbar Length	54
Swing Drawbar	55
HYDRAULIC UNIT.....	56
3-POINT HITCH CONTROL SYSTEM.....	56
Draft Stopper	56
Position Control	57
Draft Control	57
Mixed Control.....	57
Float Control	57
3-point Hitch Lowering Speed.....	58
REMOTE HYDRAULIC CONTROL SYSTEM.....	58
Remote Control Valve.....	58
Remote Control Valve Lever.....	58
Remote Control Valve Coupler Connecting and Disconnecting	59
Hydraulic Control Unit Use Reference Chart.....	60
TIRES, WHEELS AND BALLAST.....	61
TIRES.....	61
Inflation Pressure.....	61
Dual Tires	61
WHEEL ADJUSTMENT	62
Front Wheels (with 2-wheel drive)	62
Front Wheels (with 4-wheel drive)	63
Rear Wheels.....	65
BALLAST	67
Front Ballast.....	67
Rear Ballast	67
CAB OPERATION	69
DOOR AND WINDOW	69
Locking and Unlocking the Door.....	69
Opening the Door	69
Rear Window	69
Side Window.....	70
Emergency Exit.....	70
DOME LIGHT	70
Dome Light	70
WORK LIGHT	70
Work Light Switch.....	70
Front Work Light	71
Rear Work Light.....	71
WIPER	71
Front Wiper / Washer Switch	71
Rear Wiper / Washer Switch (if equipped).....	71
Using the Wipers in Cold Season	71
AIR CONDITIONER	72
Airflow	72
Air Control Vent	72
Control Panel.....	73
Operation	74
REAR / SIDE DEFOGGER WITH TIMER (if equipped).....	75

CIGARETTE LIGHTER.....	76
INSTALLING THE IMPLEMENT CONTROL BOX.....	76
ELECTRICAL OUTLET.....	76
Electrical Outlet.....	76
MAINTENANCE.....	77
SERVICE INTERVALS	77
LUBRICANTS, FUEL AND COOLANT	81
Biodiesel Fuel (BDF).....	83
PERIODIC SERVICE.....	85
WASTE DISPOSAL	85
HOW TO OPEN THE HOOD	85
Hood	85
Side Cover.....	86
DAILY CHECK	86
Walk Around Inspection.....	86
Checking and Refueling.....	86
Checking Water Separator	87
Checking Engine Oil Level.....	87
Cleaning Remote Control Valve Coupler.....	88
Checking Transmission Fluid Level.....	88
Checking Coolant Level.....	88
Cleaning Evacuator Valve	89
Checking Dust Indicator.....	89
Cleaning Grill, Radiator Screen, Oil Cooler and Battery Mount.....	89
Cleaning Air Conditioner Condenser Screen.....	90
Checking DPF Muffler.....	91
Checking Brake Pedal	91
Checking Gauges, Meter and Easy Checker(TM)	91
Checking Head Light, Turn Signal / Hazard Light etc.....	91
Checking Seat Belt	91
Checking Movable Parts.....	91
EVERY 50 HOURS	92
Checking Engine Start System.....	92
Checking Wheel Bolt Torque	93
Checking Tie-rod Dust Cover	93
EVERY 100 HOURS	94
Lubricating Grease Fittings.....	94
Cleaning Air Cleaner Primary Element.....	95
Adjusting Fan / Air-conditioner Belt Tension.....	96
Adjusting Alternator Belt Tension	96
Adjusting Brake Pedal	97
Adjusting Brake Pedal	97
Checking Gear Locked Parking Brake.....	98
Checking Battery Condition	98
EVERY 200 HOURS	100
Adjusting Toe-in.....	100
Draining Fuel Tank Water.....	101
Cleaning Inner Air Filter.....	101
Cleaning Fresh Air Filter	101
Checking Air Conditioner Condenser	102

EVERY 400 HOURS	103
Cleaning Water Separator	103
Lubricating Grease Fitting [2WD Model]	103
EVERY 500 HOURS or 1 YEAR	104
Changing Engine Oil	104
EVERY 500 HOURS	104
Replacing Engine Oil Filter	104
Replacing Fuel Filter	105
Replacing Hydraulic Oil Filter	105
Checking Power Steering Line	106
Checking Radiator Hose and Clamp	106
Checking Fuel Line	107
Checking Intake Air Line	107
Checking Lift Cylinder Hose	107
Checking Air Conditioner Pipe and Hose	107
EVERY 600 HOURS	108
Adjusting Front Axle Pivot	108
EVERY 1000 HOURS	108
Changing Transmission Fluid	108
Changing Front Axle Gear Case Oil and Front Differential Case Oil	109
Adjusting Engine Valve Clearance	110
EVERY 1000 HOURS or 1 YEAR	110
Replacing Air Cleaner Primary Element and Secondary Element	110
Checking Exhaust Manifold	110
EVERY 1500 HOURS	111
Cleaning Fuel Injector Nozzle Tip	111
Replacing Oil Separator Element	111
Checking and Cleaning EGR Cooler	111
EVERY 2000 HOURS or 2 YEARS	111
Flushing Cooling System and Changing Coolant	111
Anti-Freeze	112
Cleaning Master Cylinder Filter	113
EVERY 3000 HOURS	113
Checking Turbocharger	113
Checking Supply Pump	113
Checking and Cleaning EGR System	113
Cleaning DPF Muffler	113
EVERY 3 TO 4 MONTHS	113
Rustproofing when in Storage	113
EVERY 1 YEAR	113
Checking CAB Isolation Cushion	113
Checking DPF Related Pipe	113
EVERY 2 YEARS	113
Replacing PCV (Positive Crankcase Ventilation) Valve Hose	113
Replacing DPF Related Rubber Pipe	113
Replacing EGR Cooler Hose	113
Replacing Boost Sensor Hose	113
Checking Oil Separator Related Rubber Pipe	113
Checking Power Steering Hose	114
Checking Radiator Hose (Water pipes)	114
Checking Fuel Hose	114

Checking Intake Air Line	114
Checking Lift Cylinder Hose	114
Checking Air Conditioner Hose.....	114
EVERY 4 YEARS.....	114
Replacing Master Cylinder Kit	114
Replacing Equalizer Kit.....	114
Replacing Brake Seal 1 and 2	114
SERVICE AS REQUIRED.....	114
Bleeding Fuel System.....	114
Bleeding Brake System	115
Draining Clutch Housing Water	115
Replacing Fuse.....	115
Replacing Slow-Blow Fuses	116
Replacing Light Bulb.....	117
Replacing Head Lamp	117
Lubricating Points	118
Adding Washer Liquid.....	118
Checking the Amount of Refrigerant (gas)	118
STORAGE	119
TRACTOR STORAGE	119
REMOVING THE TRACTOR FROM STORAGE.....	119
TROUBLESHOOTING.....	120
ENGINE TROUBLESHOOTING	120
POWERTRAIN TROUBLE SHOOTING.....	121
OPTIONS.....	122
MOUNTING THE SUPPORT PLATE.....	122
Installation Procedures	122
APPENDICES.....	124
INDEX	124



SAFE OPERATION

Careful operation is your best insurance against an accident.

Read and understand this manual carefully before operating the tractor.


All operators, no matter how much experience they may have, should read this and other related manuals before operating the tractor or any implement attached to it. It is the owner's obligation to instruct all operators in safe operation.

1. BEFORE OPERATING THE TRACTOR

1. Know your equipment and its limitations. Read this entire manual before attempting to start and operate the tractor.
2. Pay special attention to the danger, warning and caution labels on the tractor.
3. Do not operate the tractor or any implement attached to it while under the influence of alcohol, medication, controlled substances or while fatigued.
4. Before allowing other people to use your tractor, explain how to operate and have them read this manual before operation.
5. Never wear loose, torn, or bulky clothing around tractor. It may catch on moving parts or controls, leading to the risk of an accident. Use additional safety items, e.g. hard hat, safety boots or shoes, eye and hearing protection, gloves, etc., as appropriate or required.
6. Do not allow passengers to ride on any part of the tractor at anytime. The operator must remain in the tractor seat during operation.
7. Check brakes, clutch, linkage pins and other mechanical parts for improper adjustment and wear. Replace worn or damaged parts promptly. Check the tightness of all nuts and bolts regularly. (For further details, see "MAINTENANCE" section.)
8. Keep your tractor clean. Dirt, grease, and trash build up may contribute to fires and lead to personal injury.
9. Use only implements meeting the specifications listed under "IMPLEMENT LIMITATIONS" in this manual or implements approved by KUBOTA.
10. Use proper weights on the front or rear of the tractor to reduce the risk of upsets. When using the front loader, put an implement or ballast on the 3-point hitch to maintain proper balance and braking. Follow the safe operating procedures specified in the implement or attachment manual.
11. The narrower the tread, the greater the risk of a tractor upset. For maximum stability, adjust the wheels to the widest practical tread width for your application. (See "TIRES, WHEELS AND BALLAST" section.)
12. Do not modify the tractor. Unauthorized modification may affect the function of the tractor, which may result in personal injury.
13. Do not make any modifications to the engine or emission components as they may result in damage and malfunctions such as:
 - Damage to the powertrain from excessive engine output.
 - Engine overheating caused by exceeding the engine cooling performance capabilities.
 - Malfunctions of the exhaust gas aftertreatment control devices.

Modifications to the engine and its emission components may violate emission regulations and are subject to fines and penalties.

Kubota and its affiliates are not liable for any damage, malfunction or accidents caused by modifications to the engine or emission components.

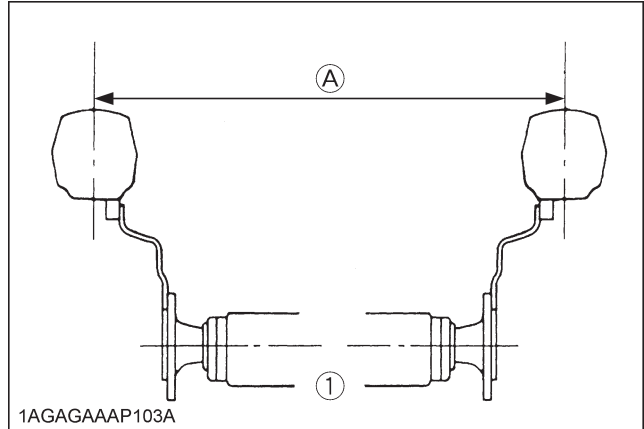

(1) Rear wheels


(A) Tread Width

◆ CAB, ROPS

1. KUBOTA recommends the use of a CAB or Roll Over Protective Structures (ROPS) and seat belt in almost all applications. This combination will reduce the risk of serious injury or death, should the tractor be upset. Check for overhead clearance which may interfere with a CAB or ROPS.
2. If the CAB or ROPS is loosened or removed for any reason, make sure that all parts are reinstalled correctly before operating the tractor.
3. Never modify or repair any structural member of a CAB or ROPS because welding, bending, drilling, grinding, or cutting may weaken the structure.
4. A damaged CAB or ROPS structure must be replaced, not repaired or revised.

5. If any structural member of the CAB or ROPS is damaged, replace the entire structure at your local KUBOTA Dealer.
6. Always use the seat belt if the tractor has a CAB or ROPS.

Do not use the seat belt if a foldable ROPS is down or there is no ROPS. Check the seat belt regularly and replace if frayed or damaged.

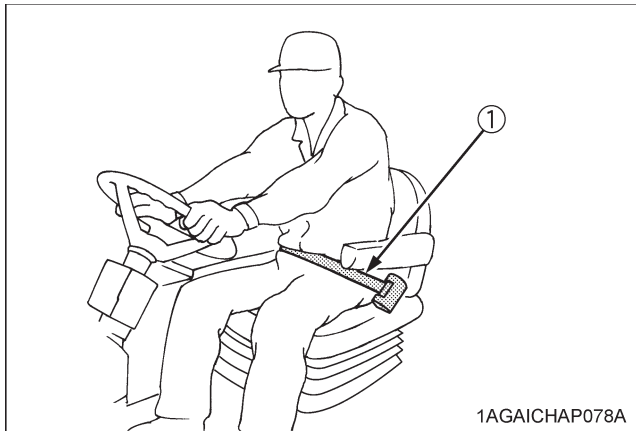

(1) Seat belt

2. OPERATING THE TRACTOR

Operator safety is a priority. Safe operation, specifically with respect to overturning hazards, entails understanding the equipment and environmental conditions at the time of use. Some prohibited uses which can affect overturning hazards include traveling and turning with implements and loads carried too high etc. This manual sets forth some of the obvious risks, but the list is not, and cannot be, exhaustive. It is the operator's responsibility to be alert for any equipment or environmental condition that could compromise safe operation.


◆ Starting

1. Always sit in the operator's seat when starting engine or operating levers or controls. Adjust seat per instructions in the operating the tractor section. Never start engine while standing on the ground.
2. Before starting the engine, make sure that all levers (including auxiliary control levers) are in their neutral positions, that the parking brake is engaged, and that both the clutch and the Power Take-Off (PTO) are disengaged or "OFF".
Fasten the seat belt if the tractor has a CAB, a fixed ROPS or a foldable ROPS in the upright and locked position.
3. Do not start engine by shorting across starter terminals or bypassing the safety start switch. Machine may start in gear and move if normal starting circuitry is bypassed.

4. Do not operate or idle engine in a non-ventilated area. Carbon monoxide gas is colorless, odorless, and deadly.
5. Check before each use that operator presence controls are functioning correctly. Test safety systems. (See "Checking Engine Start System" in "EVERY 50 HOURS" in "PERIODIC SERVICE" section.)
Do not operate unless they are functioning correctly.

◆ Working

1. Pull only from the drawbar. Never hitch to axle housing or any other point except drawbar; such arrangements will increase the risk of serious personal injury or death due to a tractor upset.

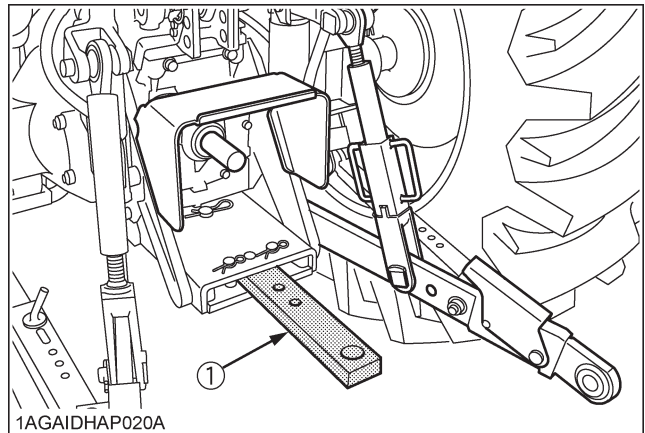

(1) Drawbar

2. For trailing PTO-driven implements, set the drawbar to the towing position.
3. Attach pulled or towed loads to the drawbar only.
4. Keep all shields and guards in place. Replace any that are missing or damaged.
5. Avoid sudden starts. To avoid upsets, slow down when turning, on uneven ground, and before stopping.
6. The tractor cannot turn with the differential locked and attempting to do so could be dangerous.
7. Do not operate near ditches, holes, embankments, or other ground surface features which may collapse under the tractor's weight. The risk of tractor upset is even higher when the ground is loose or wet. Tall grass can hide obstacles, walk the area first to be sure.
8. Watch where you are going at all times. Watch for and avoid obstacles. Be alert at row ends, near trees, and other obstructions.
9. When working in groups, always let the others know what you are going to do before you do it.
10. Never try to get on or off a moving tractor.
11. Always sit in the operator's seat when operating levers or controls.
12. Do not stand between tractor and implement or trailed vehicle unless parking brake is applied.
13. Whenever the tractor is operated in reverse, confirm visibility to the rear.

◆ Safety for children

Tragedy can occur if the operator is not alert to the presence of children. Children generally are attracted to machines and the work they do.

1. Never assume that children will remain where you last saw them.
2. Keep children out of the work area and under the watchful eye of another responsible adult.
3. Be alert and shut your machine down if children enter the work area.
4. Never carry children on your machine. There is no safe place for them to ride. They may fall off and be run over or interfere with your control of the machine.
5. Never allow children to operate the machine even under adult supervision.
6. Never allow children to play on the machine or on the implement.
7. Use extra caution when backing up. Look behind and down to make sure area is clear before moving.


◆ Operating on slopes

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. All slopes require extra caution.

1. To avoid upsets, always back up steep slopes. If you cannot back up the slope or if you feel uneasy on it, do not operate on it. Stay off slopes too steep for safe operation.
2. Driving forward out of a ditch, mired condition or up a steep slope increases the risk of a tractor to be upset backward. Always back out of these situations. Extra caution is required with 4-wheel drive models because their increased traction can give the operator false confidence in the tractor's ability to climb slopes.
3. Keep all movement on slopes slow and gradual. Do not make sudden changes in speed, direction or apply brake and make sudden motions of the steering wheel.
4. Avoid disengaging the clutch or changing gears speed when climbing or going down a slope. If on a slope disengaging the clutch or changing gears to neutral could cause loss of control.
5. Special attention should be made to the weight and location of implements and loads as such will affect the stability of the tractor.
6. To improve stability on slope, set widest wheel tread as shown in "TIRES, WHEELS AND BALLAST" section.
Follow recommendations for proper ballasting.
7. To avoid free wheeling:
 - Do not shift the shuttle lever while on a slope.
 - Stop completely by using the brake and by depressing the clutch pedal, then shift the shuttle lever.
 - Start off after selecting shuttle direction, by releasing the clutch pedal.


◆ Driving the tractor on the road

1. Lock the 2 brake pedals together to help assure straight-line stops. Uneven braking at road speeds could cause the tractor to tip over.

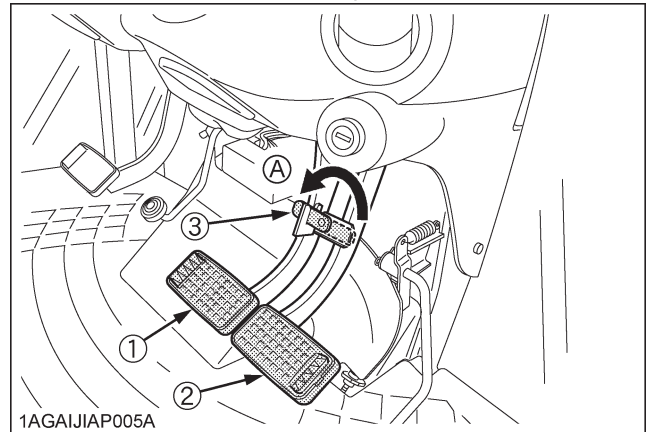

(1) Brake Pedal (LH) (A) Whenever traveling on the road
(2) Brake Pedal (RH)
(3) Brake Pedal Lock


2. Check the front wheel engagement. The braking characteristics are different between 2 and 4-wheel drive. Be aware of the difference and use carefully.
3. Always slow the tractor down before turning. Turning at high speed may tip the tractor over.
4. Make sure that the Slow Moving Vehicle (SMV) sign is clean and visible. Use hazard lights and turn signals as required.

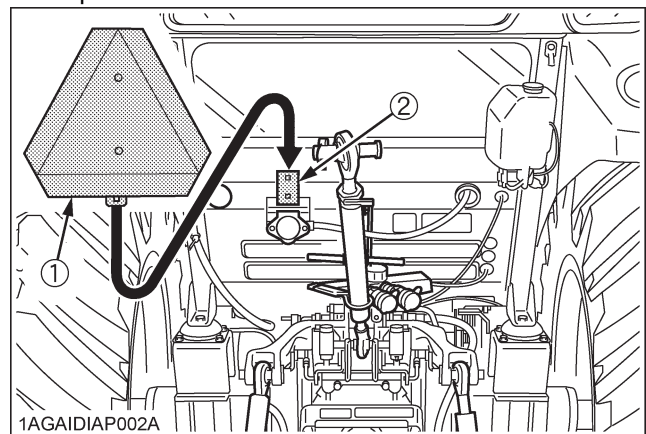

(1) SMV emblem
(2) Bracket


5. Observe all local traffic and safety regulations.
6. Turn the headlights on. Dim them when meeting another vehicle.
7. Drive at speeds that allow you to maintain control at all times.
8. Do not apply the differential lock while traveling at road speeds. The tractor may run out of control.
9. Avoid sudden motions of the steering wheel as they can lead to a dangerous loss of stability. The risk is especially great when the tractor is traveling at road speeds.

10. Do not operate an implement while the tractor is on the road. Lock the 3-point hitch in the raised position.
11. When towing other equipment, use a safety chain and place an SMV emblem on it as well.

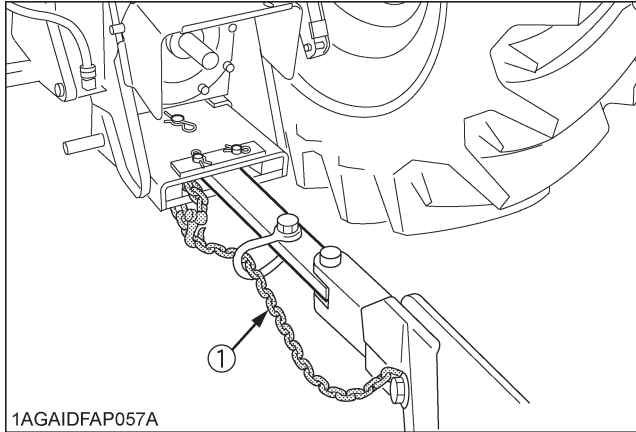

(1) Safety chain

12. Set the 3-point hitch lowering speed knob in the "LOCK" position to hold the implement in the raised position.

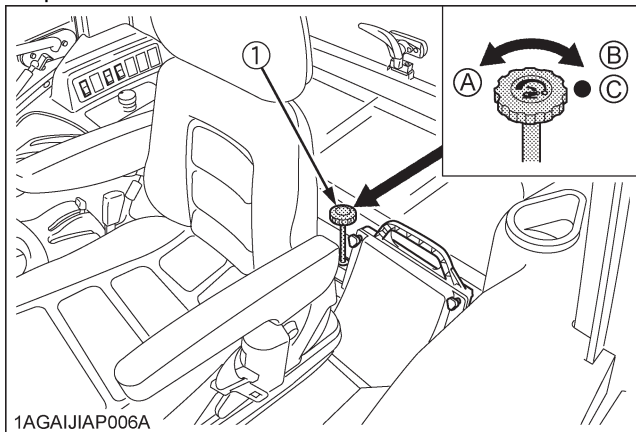

(1) 3-point hitch lowering speed knob


(A) "FAST"
(B) "SLOW"
(C) "LOCK"

3. PARKING THE TRACTOR

1. Disengage the PTO, lower all implements to the ground, place all control levers in their neutral positions, set the parking brake, stop the engine, remove the key from the ignition and lock the cab door (if equipped). Leaving transmission in gear with the engine stopped will not prevent tractor from rolling.
2. Make sure that the tractor has come to a complete stop before dismounting.
3. Avoid parking on steep slopes, if at all possible park on a firm and level surface; if not, park across a slope and chock the wheels.
Failure to comply with this warning may allow the tractor to move and could cause injury or death.
4. Do not stop the machine on top of straw chaff or dried grass.

4. OPERATING THE PTO

1. Wait until all moving components have completely stopped before getting off the tractor, connecting, disconnecting, adjusting, cleaning, or servicing any PTO driven equipment.
2. Keep the PTO shaft cover in place at all times. Replace the PTO shaft cap when the shaft is not in use.

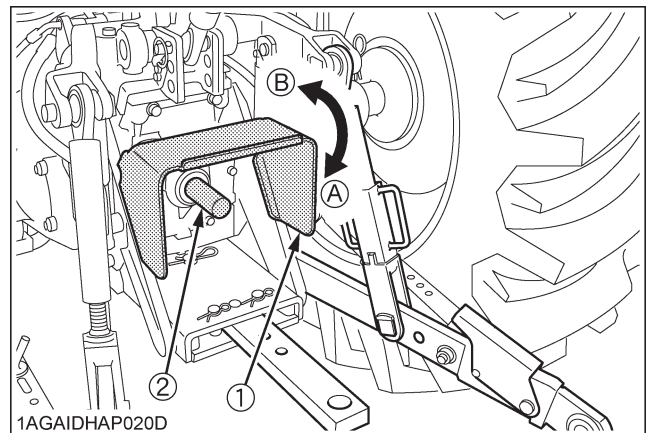

(1) PTO Shaft cover
(2) PTO Shaft cap


(A) "NORMAL POSITION"
(B) "RAISED POSITION"

3. Before installing or using PTO driven equipment, read the manufacturer's manual and review the safety labels attached to the equipment.
To prevent PTO driven equipment from improper or unsafe use, select the lower speed (540rpm) unless the higher one is specifically recommended as safe by the equipment manufacturer.

- When operating stationary PTO driven equipment, always apply the tractor parking brake and place chocks behind and in front of the rear wheels. Stay clear of all rotating parts. Never step over rotating parts.

5. USING 3-POINT HITCH

- Use the 3-point hitch only with equipment designed for the appropriate category of 3-point hitch usage.
- When using a 3-point hitch mounted implement, be sure to install the proper counterbalance weight on the front of the tractor.
- To avoid injury from separation: Do not extend lift rod beyond the groove on the threaded rod.

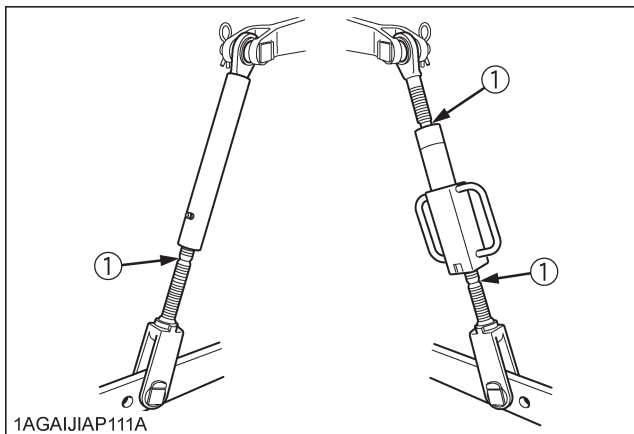


(1) Groove

6. SERVICING THE TRACTOR

Before servicing the tractor, park it on a firm, flat and level surface, set the parking brake, lower all implements to the ground, place the gear shift lever in neutral, stop the engine and remove the key.

- Allow the tractor time to cool off before working on or near the engine, muffler, radiator, etc.
- Do not remove radiator cap while coolant is hot. When cool, slowly rotate cap to the first stop and allow sufficient time for excess pressure to escape before removing the cap completely. If the tractor has a coolant recovery tank, add coolant or water to the recovery tank, not the radiator. (See "Checking Coolant Level" in "DAILY CHECK" in "PERIODIC SERVICE" section.)
- Always stop the engine before refueling. Avoid spills and overfilling.
- Do not smoke when working around battery or when refueling. Keep all sparks and flames away from battery and fuel tank. The battery presents an explosive hazard, because it gives off hydrogen and oxygen especially when recharging.

- Before "jump starting" a dead battery, read and follow all of the instructions. (See "JUMP STARTING" in "OPERATING THE ENGINE" section.)
- Keep first aid kit and fire extinguisher handy at all times.
- Disconnect the battery's ground cable before working on or near electric components.
- To avoid the possibility of battery explosion, do not use or charge the refillable type battery if the fluid level is below the LOWER (lower limit level) mark. Check the fluid level regularly and add distilled water as required so that the fluid level is between the UPPER and LOWER levels.
- To avoid sparks from an accidental short circuit, always disconnect the battery's ground cable (-) first and reconnect it last.

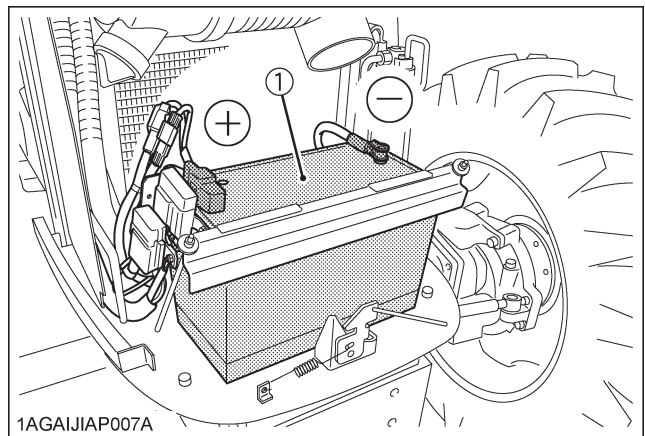

(1) Battery

- Do not attempt to mount a tire on a rim. This should be done by a qualified person with the proper equipment.
- Always maintain the correct tire pressure. Do not inflate tires above the recommended pressure shown in the operator's manual.




- Securely support the tractor when either changing wheels or adjusting the wheel tread width.
- Make sure that wheel bolts have been tightened to the specified torque.

14. Do not work under any hydraulically supported devices. They can settle, suddenly leak down, or be accidentally lowered. If it is necessary to work under tractor or any machine elements for servicing or adjustment, securely support them with stands or suitable blocking beforehand.
15. Escaping hydraulic fluid under pressure has sufficient force to penetrate skin, causing serious personal injury. Before disconnecting hydraulic lines, be sure to release all residual pressure. Before applying pressure to the hydraulic system, make sure that all connections are tight and that all lines, pipes, and hoses are free of damage.



16. Fluid escaping from pinholes may be invisible. Do not use hands to search for suspected leaks; use a piece of cardboard or wood. Use of safety goggles or other eye protection is also highly recommended. If injured by escaping fluid, see a medical doctor at once. This fluid will produce gangrene or severe allergic reaction.

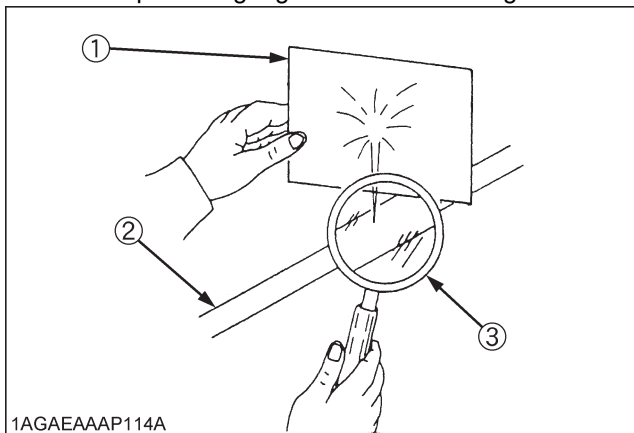

- (1) Cardboard
- (2) Hydraulic line
- (3) Magnifying glass

17. Do not open high-pressure fuel system.
High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect nor attempt to repair fuel lines, sensors, or any other components between the high-pressure fuel pump and injectors on engines with high pressure common rail fuel system.

18. To avoid hazardous high voltage, turn the key switch to the OFF position if it is necessary to check to repair the computer, harness or connectors.
19. During Diesel Particulate Filter (hereinafter called DPF) regenerating operations, exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite or melt common materials.
20. Keep the tractor away from people, animals or structures which may be susceptible to harm or damage from hot exhaust gases.
21. To prevent fires, keep the DPF muffler and its surroundings clear of anything flammable and keep clean at all times.
22. To avoid fire hazard:
After use and pressure-washing, make sure there is nothing flammable near the exhaust pipe. Grass or twigs under the hood may cause fire.
23. During regeneration, white exhaust gas may be visible. Do not allow regeneration in a non-ventilated space.
24. During regeneration, do not leave the tractor.
25. The improper disposal or burning of waste causes environmental pollution and can be punishable by your local laws and regulations.
 - When draining fluids from the tractor, place a container underneath the drain port.
 - Do not pour waste onto the ground, down a drain, or into any water source (such as rivers, streams, lakes, marshes, seas and oceans).
 - Waste products such as used oil, fuel, coolant, hydraulic fluid, aqueous urea solution (DEF (AdBlue®)), refrigerant, solvent, filters, rubber, batteries and harmful substances, can harm the environment, people, pets and wildlife. Please dispose properly.
See your local recycling center or KUBOTA Dealer to learn how to recycle or get rid of waste products.

7. DANGER, WARNING AND CAUTION LABELS

(1) Part No. 6C090-4958-2


Do not get your hands close to engine fan and fan belt.



1AGAIAP110A

(2) Part No. 32310-4958-1

Do not touch hot surface like muffler, etc.

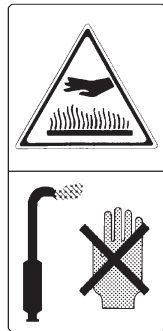

1AGAIAP071A

(3) Part No. 3C151-9861-1



1AGAIJAP084A

(5) Part No. TC420-4956-1

Diesel fuel only

No fire



1AGAIJAP154E

(4) Part No. 3J080-3822-1



1AGBCAAP762A

(6) Part No. K3512-4719-1

Do not touch hot surface like muffler, etc.




1BDABANAP080A


(7) Part No. 3A851-7295-1



1AGAIJAP074A

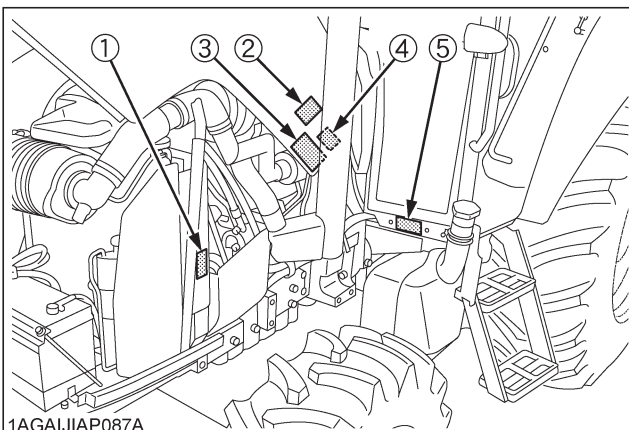


1AGAIJAP087A

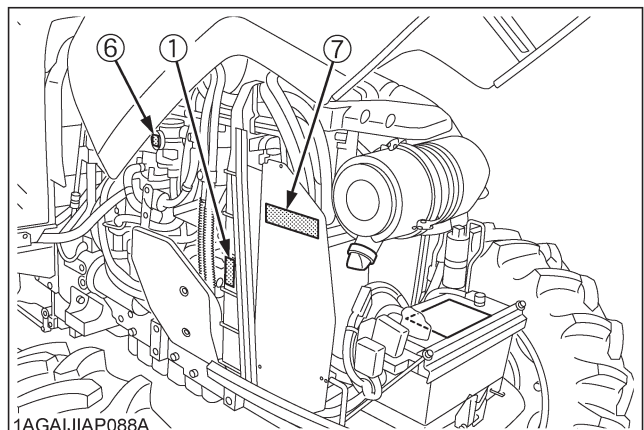

1AGAIJAP088A

1AGAIJAP089A

(1) Part No. 3Y205-9892-4

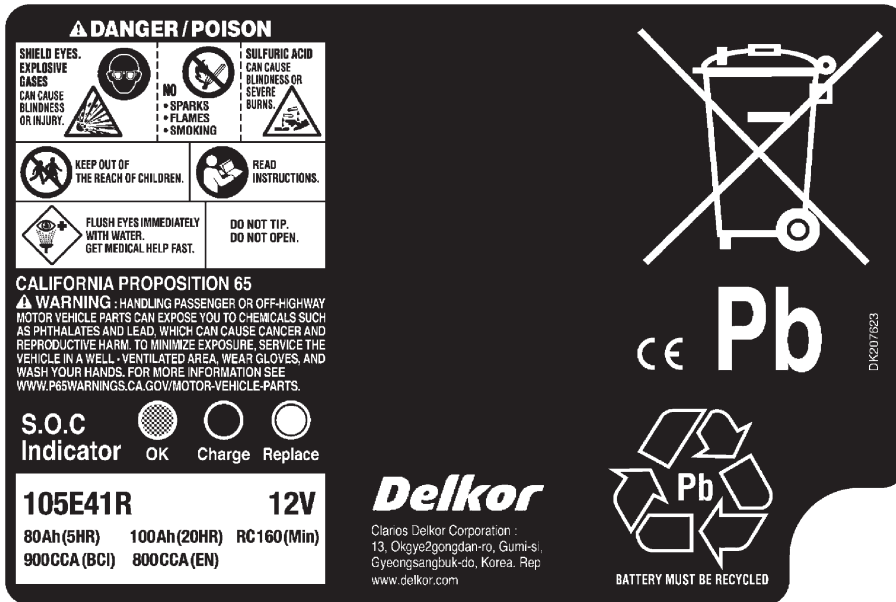


1AGAIJPAP032A


(2) Part No. 3C581-9858-1



1AGAIAP009A

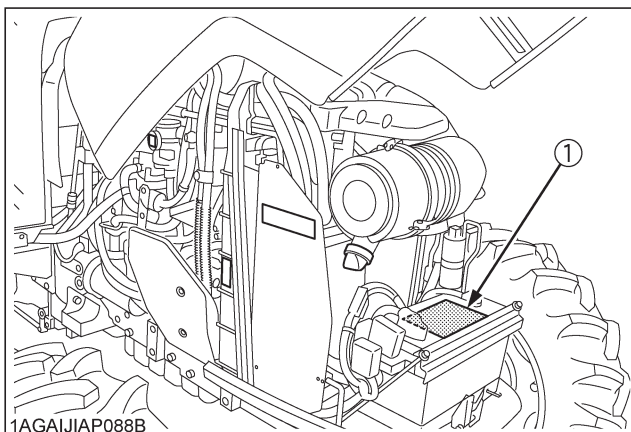

1AGAIJAP088B

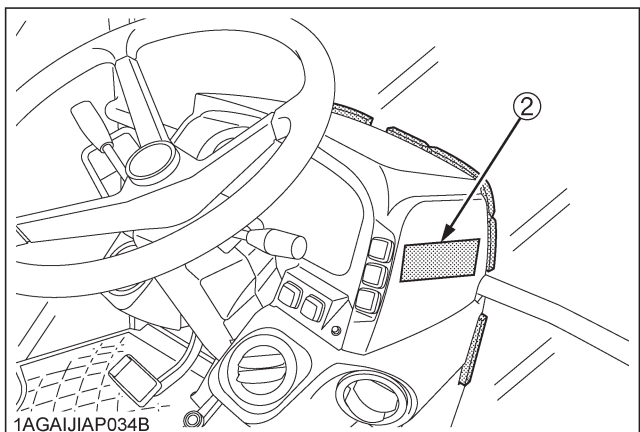

1AGAIJAP034B

1AGAIJAP143A

(1) Part No. 3F240-9857-1

⚠ WARNING

To avoid free wheeling when shifting the shuttle lever while on a slope: Stop completely by using the brake and by depressing the clutch pedal. Start off after selecting shuttle direction by releasing the clutch pedal.

1AGAIBDAP039A


(2) Part No. 6C150-4743-1

⚠ WARNING


BEFORE DISMOUNTING TRACTOR:

- 1. ALWAYS SET PARKING BRAKE.**
Leaving transmission in gear with the engine stopped will not prevent tractor from rolling.
- 2. PARK ON LEVEL GROUND WHENEVER POSSIBLE.**
If parking on a slope, position tractor across the slope.
- 3. LOWER ALL IMPLEMENTS TO THE GROUND.**
- 4. STOP THE ENGINE.**

1AGAIBDAP040A

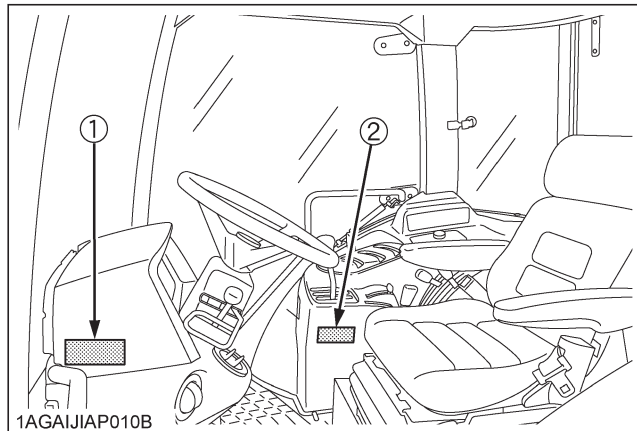

1AGAIJAP010B

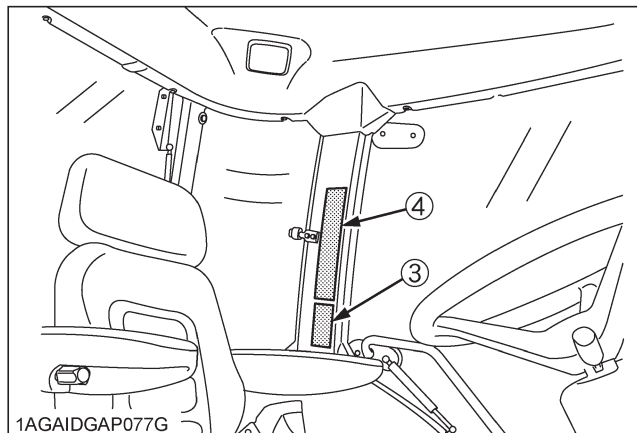

1AGAIIDGAP077G

1AGAIJAP086A

(3) Part No. TA040-4902-1

⚠ WARNING

TO AVOID INJURY OR DEATH FROM ROLL-OVER:
Always use seat belt when driving.

1AGAMAOAP078A

(4) Part No. 3F240-9836-2

⚠ CAUTION

TO AVOID PERSONAL INJURY:


1. Read and understand the operator's manual before operation.
2. Before starting the engine, make sure that everyone is at a safe distance from tractor and the PTO is off.
3. Do not allow passengers on the tractor at any time.
4. Before allowing other people to use the tractor, have them read the operator's manual.
5. Check the tightness of nuts and bolts regularly.
6. Keep all shields in place and stay away from all moving parts.
7. Lock the two brake pedals together before driving on the road.
8. Slow down for turns, or rough roads, or when applying individual brakes.
9. On public roads use SMV emblem and hazard lights, if required by local traffic and safety regulations.
10. Pull only from the drawbar.
11. Before dismounting, lower the implement to the ground, set the parking brake, stop the engine and remove the key.
12. Securely support tractor and implements before working underneath.

1AGAICHAP113A

(1) Part No. 3P305-9856-1





(4) Part No. TC650-6597-1

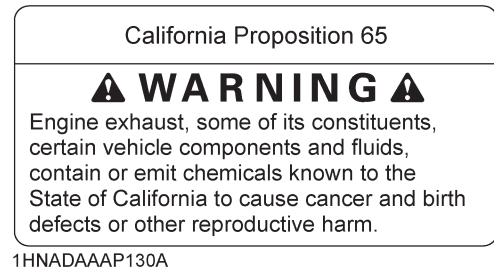


(2) Part No. TA040-4935-1



(3) Part No. TA040-4959-3

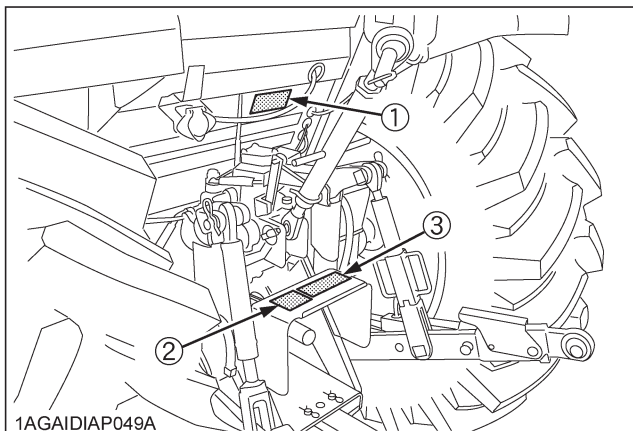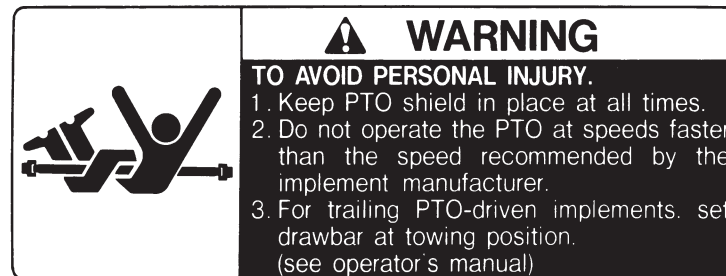

1AGAIIDAP086A

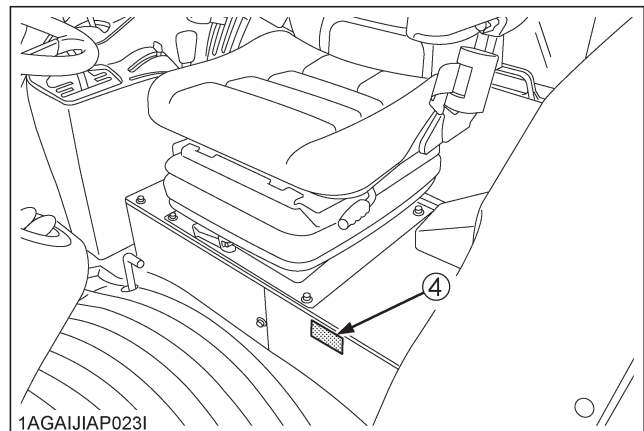

8. CARE OF DANGER, WARNING AND CAUTION LABELS

1. Keep danger, warning and caution labels clean and free from obstructing material.
 2. Clean danger, warning and caution labels with soap and water, dry with a soft cloth.
 3. Replace damaged or missing danger, warning and caution labels with new labels from your local KUBOTA Dealer.
 4. If a component with danger, warning and caution label(s) affixed is replaced with new part, make sure new label(s) is (are) attached in the same location(s) as the replaced component.
 5. Mount new danger, warning and caution labels by applying on a clean dry surface and pressing any bubbles to outside edge.
-

SERVICING OF TRACTOR

Your dealer is interested in your new machine and has the desire to help you get the most value from it. After reading this manual thoroughly, you will find that you can do some of the regular maintenance yourself.

However, when in need of parts or major service, be sure to see your KUBOTA Dealer.

For service, contact the KUBOTA Dealership from which you purchased your machine or your local KUBOTA Dealer.

When in need of parts, be prepared to give your dealer the product identification number (PIN), the CAB/ROPS serial number, and the engine serial number.

Locate the PIN and serial numbers now and fill in the following tables.


Date of purchase		
Name of dealer		
Tractor type		
PIN		
	Type	Serial No.
CAB/ROPS		
Engine		

◆ Warranty


This tractor is warranted under the KUBOTA Limited Express Warranty, a copy of which may be obtained from your selling dealer. No warranty shall, however, apply if the tractor has not been handled according to the instruction given in the operator's manual even it is within the warranty period.

◆ Scrapping the tractor and its procedure


To put the tractor out of service, correctly follow the local rules and regulations of the country or territory where you scrap it. If you have questions, consult your local KUBOTA Dealer.

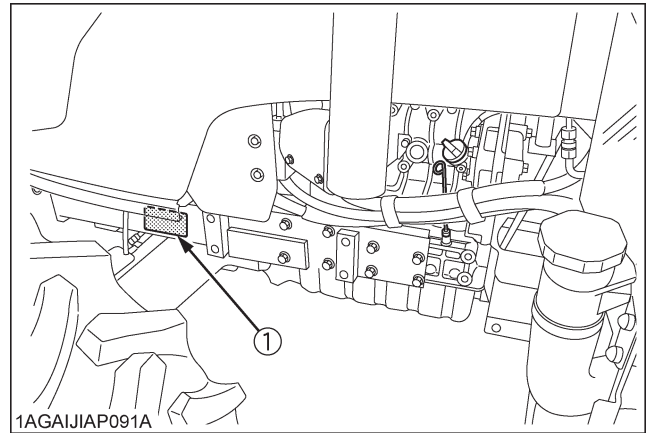


(1) Identification plate

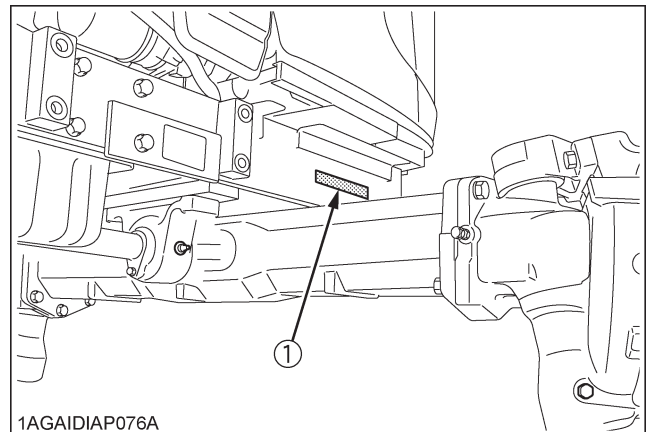


(1) Product identification number

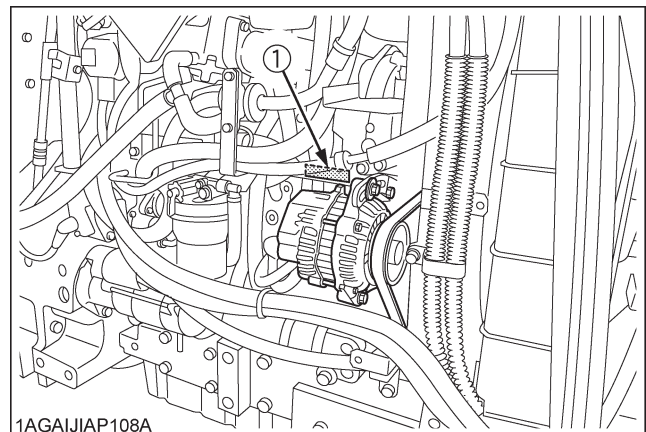

(1) Engine serial number

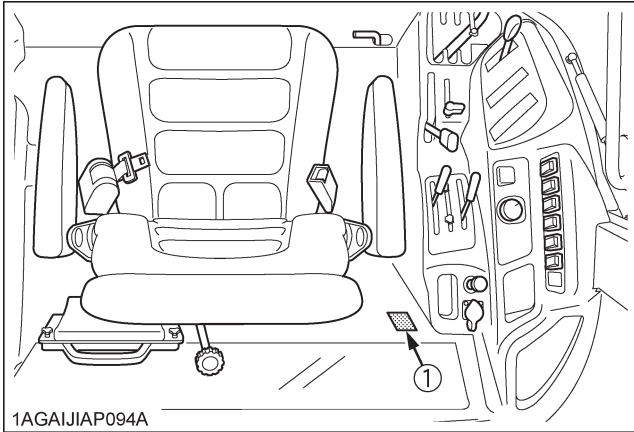

(1) CAB identification plate (CAB Serial No.)

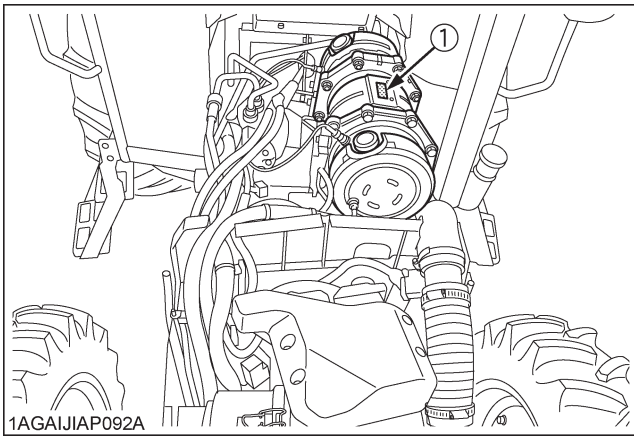

(1) Diesel Particulate Filter (DPF) serial number

SPECIFICATIONS

SPECIFICATION TABLE

Model			M6060		M7060		
			2WD	4WD	2WD	4WD	
Engine	Model		V3307-CR-TE4				
	Type		4 cylinder in-line, Common Rail System, direct injection				
	Number of cylinders		4				
	Total displacement	cm ³ (cu.in.)	3331 (203)				
	Bore and stroke	mm (in.)	94 x 120 (3.7 x 4.7)				
	Rated revolution	rpm	2400				
	Low idling revolution	rpm	950 to 1000				
	Net power *1	kW (HP)	47.4 (63.5)		51.3 (68.8)		
	PTO power *1 (factory observed)	kW (HP)	41.7 (56)		46.2 (62)	46.2 (62) (F8/R8 model) 44.7 (60) (F12/R12 model)	
	Maximum torque	N-m (lbf-ft) / rpm	229 (169) / 1400		258 (191) / 1400		
	Battery capacity		12V, RC: 160 min, CCA 900A				
	Fuel tank capacity	L (U.S.gals.)	90 (23.8)				
	Engine oil capacity	L (U.S.qts.)	12 (12.7)				
Coolant capacity	L (U.S.qts.)	8 (8.5)					
Dimensions	Overall length		mm (in.)	3625 (142.7)	3505 (138)	3625 (142.7)	3505 (138)
	Overall width (minimum tread)		mm (in.)	1860 (73)			
	Overall height		mm (in.)	2555 (100.6)		2565 (101)	
	Wheel base		mm (in.)	2145 (84.4)	2110 (83.1)	2145 (84.4)	2110 (83.1)
	Tread	Front	mm (in.)	1420 to 1820 (55.9 to 71.7)	1420, 1520 (55.9, 59.8)	1420 to 1820 (55.9 to 71.7)	1420, 1520 (55.9, 59.8)
		Rear	mm (in.)	1420 to 1720 (55.9 to 67.7)			
	Minimum ground clearance		mm (in.)	430 (16.9) (Fuel tank stay)		430 (17.3) (Fuel tank stay)	
Weight		kg (lbs.)	2370 (5226)	2430 (5358)	2380 (5248)	2440 (5380)	

4 SPECIFICATIONS

Model				M6060		M7060	
				2WD	4WD	2WD	4WD
Traveling system	Standard tire size	Front tires		7.5-16	9.5-24	7.5-16	9.5-24
		Rear tires		16.9-28		16.9-30 *2	
	Clutch			Multiple wet disc			
	Steering			Hydraulic Power Steering			
	Braking system			Mechanically operated wet disc (F8/R8 model) Hydraulically operated wet disc (F12/R12 model)			
	Differential			Bevel gears with differential lock (Rear)			
Hydraulic unit	Hydraulic control system			Position, draft (top link sensing) & mix control			
	Pump capacity		L (U.S.gals.) / min	41.6 (11.0) (F8/R8 model) 61.5 (16.2) (F12/R12 model)			
	3-point hitch			Category 1 and 2			
	Max. lifting force	At lifting points *3	kg (lbs.)	1900 (4189)			
		24 in. behind lifting point	kg (lbs.)	1500 (3307)			
	Remote hydraulic control			1 standard (2nd, 3rd valve optional)			
	System pressure		MPa (kgf/cm ²)	19.1 (195)			
	Traction system			Swinging drawbar, adjustable in direction			
PTO	Live PTO (Independent)	Direction of turning		Clockwise, viewed from tractor rear			
		PTO/ Engine speed	rpm	6 spline: 540 / 2160 (F8/R8 model) 6 spline: 540 / 2160, 540E/1828 (F12/R12 model)			

The company reserves the right to change the specifications without notice.

NOTE: *1 Manufacturer's estimate

*2 Cast iron disks available for wheels.

*3 At lower link end with links horizontal.

TRAVELING SPEEDS

(At rated engine rpm)

Model			M6060 / M7060			
			F8 / R8 model		F12 / R12 model	
Tire size (Rear)			16.9-28		16.9-30	
Shuttle shift lever	Range gear shift lever	Main gear shift lever	km/h	mph	km/h	mph
Forward 	CREEP (option)	1	0.34	0.21	0.43	0.27
		2	0.49	0.30	0.60	0.38
		3	0.65	0.41	0.78	0.49
		4	1.06	0.66	1.00	0.63
		5	---	---	1.28	0.80
		6	---	---	1.69	1.06
	L	1	2.4	1.5	2.5	1.6
		2	3.4	2.1	3.6	2.2
		3	4.6	2.9	4.6	2.9
		4	7.5	4.7	5.9	3.7
		5	---	---	7.6	4.7
		6	---	---	10.0	6.2
	H	1	9.4	5.8	12.0	7.5
		2	13.3	8.3	17.0	10.6
		3	17.8	11.1	22.0	13.7
		4	29.0	18.0	28.2	17.6
		5	---	---	36.0	22.5
		6	---	---	38.9 *1	24.3 *1
Reverse 	CREEP (option)	1	0.34	0.21	0.42	0.26
		2	0.48	0.30	0.60	0.37
		3	0.64	0.40	0.77	0.48
		4	1.05	0.65	0.99	0.62
		5	---	---	1.26	0.79
		6	---	---	1.67	1.04
	L	1	2.4	1.5	2.5	1.5
		2	3.4	2.1	3.5	2.2
		3	4.5	2.8	4.5	2.8
		4	7.4	4.6	5.8	3.6
		5	---	---	7.4	4.7
		6	---	---	9.8	6.1
	H	1	9.2	5.7	11.8	7.4
		2	13.1	8.1	16.7	10.5
		3	17.5	10.9	21.7	13.5
		4	28.5	17.7	27.7	17.3
		5	---	---	35.5	22.2
		6	---	---	38.3 *1	23.9 *1

The company reserves the right to change the specifications without notice

*1: At 1960rpm




IMPLEMENT LIMITATIONS

The KUBOTA Tractor has been thoroughly tested for proper performance with implements sold or approved by KUBOTA. Use with implements which are not sold or approved by KUBOTA and which exceed the maximum specifications listed below, or which are otherwise unfit for use with the KUBOTA Tractor may result in malfunctions or failures of the tractor, damage to other property and injury to the operator or others. [Any malfunctions or failures of the tractor resulting from use with improper implements are not covered by the warranty.]

Tread (max. width)			Lower link end max. lifting capacity: W 0
Front		Rear	
2WD	4WD		
1820 mm (71.7 in.)	1520 mm (59.8 in..)	1720 mm (67.0 in.)	1900 kg (4189 lbs.)

Implement weight: W 1	Max. drawbar Load: W 2	Trailer loading weight: W 3	
		2WD	4WD
As in the following list (Shown on the next page)	1000 kg (2200 lbs.)	4500 kg (9900 lbs.)	5000 kg (11000 lbs.)

 Lower link end max, hydraulic lifting capacity.....W 0
Implement weight.....The implement's weight which can be put on the lower link: W 1
Max. drawbar load.....W 2
Trailer loading weight.....The max. loading weight for trailer: W 3

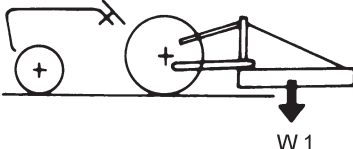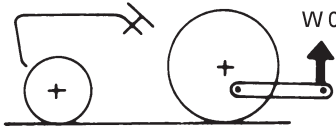

1AGAIAZAP121B

NOTE :

- Implement size may vary depending on soil operating conditions.
- Strictly follow the instructions outlined in the operator's manual of the mounted or trailed machinery or trailer, and do not operate the combination tractor - machine or tractor - trailer unless all instructions have been followed
- Forestry Application
Following hazards exist;
 - (a) toppling trees, primarily in case a rear-mounted tree grab-crane is mounted at the rear of the tractor;
 - (b) penetrating objects in the operator's enclosure, primarily in case a winch is mounted at the rear of the tractor.
 Optional equipments such as OPS (Operator Protective Structure), FOPS (Falling Object Protective Structure), etc. to deal with these hazards and other related hazards are not available for this tractor. Without such optional equipment use is limited to tractor specific applications like transport and stationary work.

No.	Implement		Remarks		M6060		M7060	
					2WD	4WD	2WD	4WD
1	Slurry Tank		Max. Tank Capacity	L (gals.)	3000 (790)			
			Max. Load Capacity	kg (lbs.)	4000 (8800)			
2	Trailer		Max. Load Capacity	kg (lbs.)	4500(9900)	5000 (11000)	4500(9900)	5000 (11000)
			Max. Drawbar Load	kg (lbs.)	1000 (2200)			
3	Mower	Rotary-Cutter	Max. Cutting Width	mm (in.)	2130 (84)			
			Max. Weight	kg (lbs.)	540 (1200)			
		Flail Mower (Heavy)	Max. Cutting Width	mm (in.)	3050 (120)			
			Max. Weight	kg (lbs.)	800 (1760)			
		Sickle Bar	Max. Cutting Width	mm (in.)	2130 (84)			
4	Sprayer		Max.Tank Capacity	Mid	L (gals.)	680 (180)		
				Rear 3P	L (gals.)	680 (180)		
				Drawbar	L (gals.)	3000(800)	3500 (920)	
5	Rotary Tiller		Max. Tilling Width	mm (in.)	2130 (84)		2330 (91)	
			Max. Weight	kg (lbs.)	800 (1760)			
6	Bottom Plow		Max. Size		16 in. x 2 18 in. x1	14 in. x 3 16 in. x 2 18 in. x 1	14 in. x 3 16 in. x 2	16 in. x 3 18 in. x 2
			Max. Weight	kg (lbs.) 3P Type	450 (1000)		550 (1200)	
7	Disk harrow	3P Type	Max. Size		18 in. x 24			20 in. x 24
			Max. Harrowing Width	mm (in.)	2130 (84)			2450 (96)
			Max. Weight	kg (lbs.)	450 (1000)		550 (1200)	
		Drawbar Type	Max. Harrowing Width	mm (in.)	2450 (96)	2750 (108)		3050 (120)
8	Disc Plow		Max. Size		24 in. x 3 26 in. x 2			26 in. x 3
			Max. Weight	kg (lbs.)	450 (1000)		550 (1200)	
9	Sub Soiler		Numbers of Cultivating Tines		2			
			Cultivating Depth	mm (in.)	300 (12)	400 (16)		450 (18)
10	Cultivator		Max. Width	mm (in.)	3050 (120)	3660 (144)		4270 (168)
			Number of Rows		4			
			Max. Weight	kg (lbs.)	450 (1000)		550 (1200)	
11	Front Blade *1, *2		Max. Cutting Width	mm (in.)	1820 (72)			2130 (84)
			Max. Oil Pressure	MPa (psi.)	19.6 (2842)			
12	Rear Blade		Max. Cutting Width	mm (in.)	1820 (72)			2130 (84)
			Max. Oil Pressure	MPa (psi.)	19.6 (2842)			
13	Front Loader *1, *2		Max. Lifting Capacity (Bucket Pivot Pin, Max. Height)	kg (lbs.)	1150 (2535)			
			Max. Oil Pressure	MPa (psi.)	19.6 (2842)			
14	Box Blade		Max. Cutting Width	mm (in.)	1820 (72)			2130 (84)
			Max. Weight	kg (lbs.)	450 (1000)		550 (1200)	
15	Back Hoe *2		Max. Digging Depth	mm (in.)	2530 (100)			
			Max. Weight	kg (lbs.)	900 (2000)			
16	Snow Blade		Max. Width	mm (in.)	1820 (72)			2130 (84)
			Max. Weight	kg (lbs.)	450 (1000)			550 (1200)

NOTE :


● Implement size may vary depending on soil operating conditions.

*1 Must remove front weight with this implement.

*2 Need subframe


INSTRUMENT PANEL AND CONTROLS

■ Instrument Panel, Switches and Hand Controls

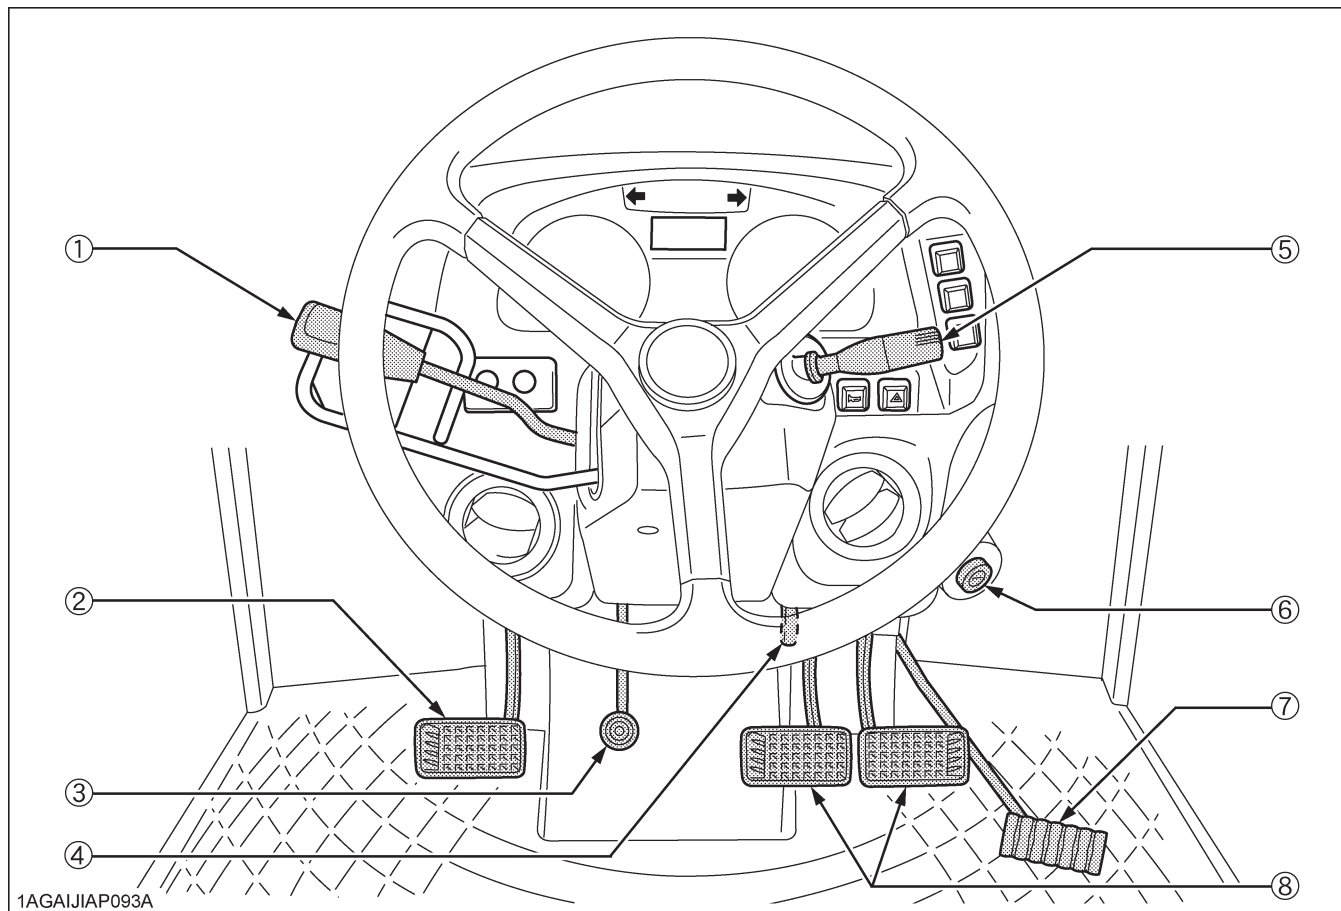

ILLUSTRATED CONTENTS

(1) Hydraulic-shuttle shift lever	32
(2) Clutch pedal	30
(3) Tilt pedal	27
(4) Parking Brake lever [F8/R8 model]	43
(5) Turn signal / Head light switch	27, 27
(6) Key switch	-
(7) Foot throttle	34
(8) Brake pedal	28

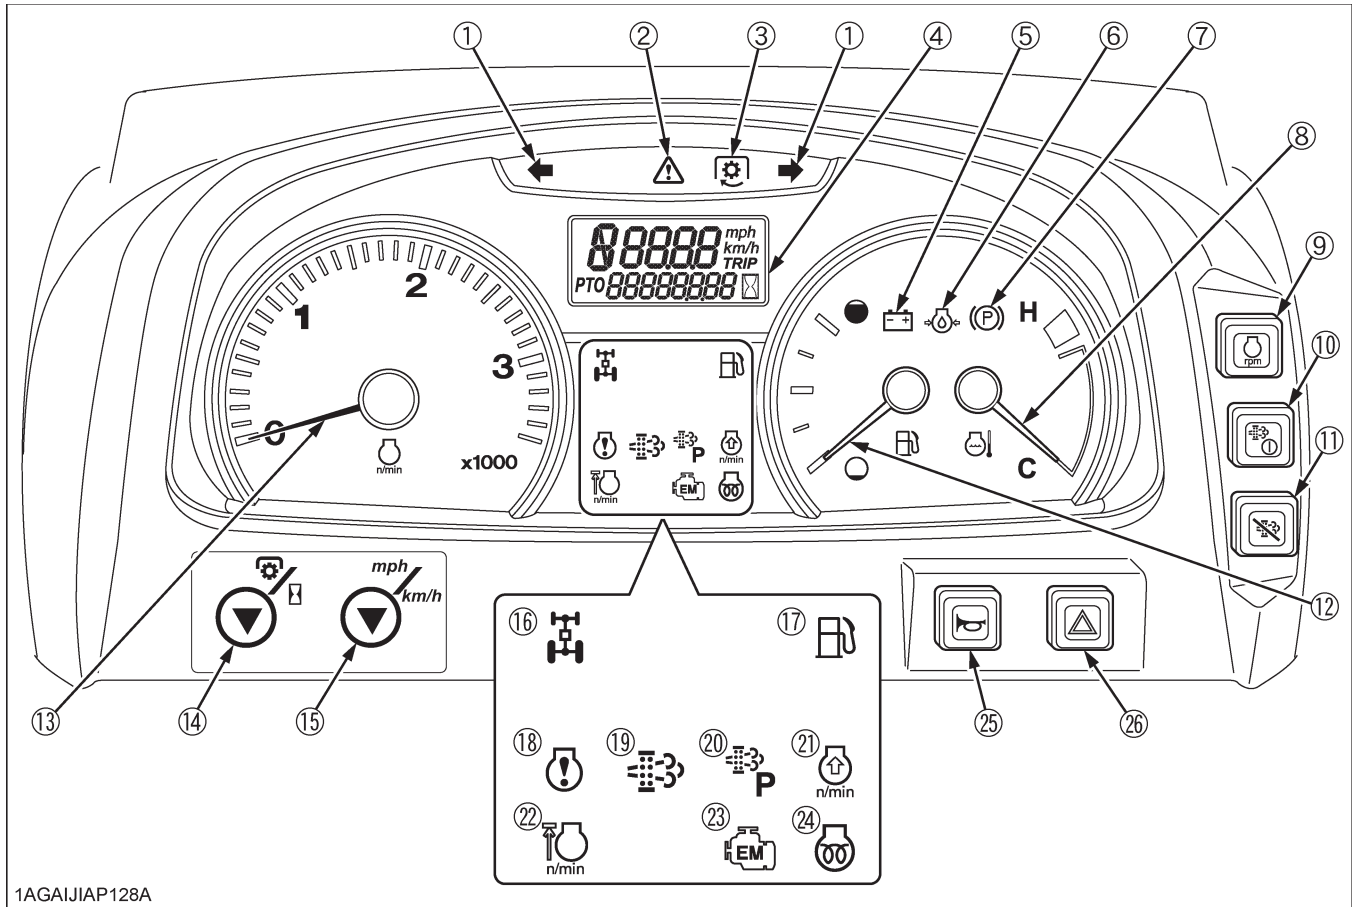

1AGAIJAP128A



ILLUSTRATED CONTENTS

(1) Hazard / Turn signal indicator	27
(2) Master system warning indicator	35
(3) PTO clutch indicator	47
(4) Liquid crystal display.....	38
(5) Electrical charge warning indicator	35
(6) Engine oil pressure warning indicator	35
(7) Parking brake warning indicator	19
(8) Coolant temperature gauge	37
(9) Constant RPM management switch	43
(10) Parked regeneration switch	16
(11) DPF INHIBIT switch	16
(12) Fuel gauge	36
(13) Tachometer	37

ILLUSTRATED CONTENTS

(14) PTO / Hour meter select switch	38
(15) Travel speed select switch	38
(16) 4WD indicator	33
(17) Fuel level indicator	35
(18) Engine warning indicator	35
(19) Regeneration indicator	14
(20) Parked regeneration indicator	16
(21) Engine RPM increase indicator	14
(22) Rev-limiter indicator	32
(23) Emission indicator	35
(24) Heater indicator	23
(25) Horn button	28
(26) Hazard light switch	27

■ Foot and Hand Controls

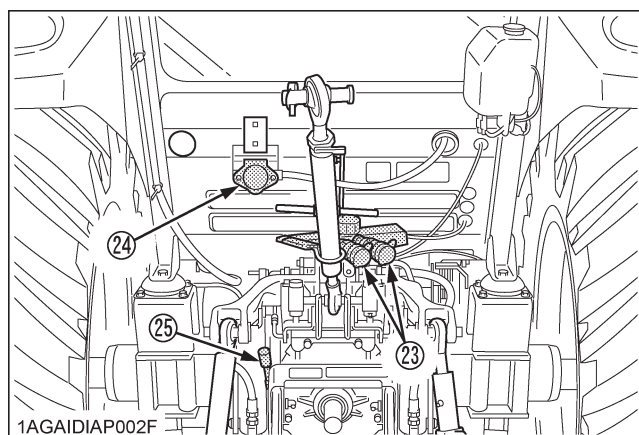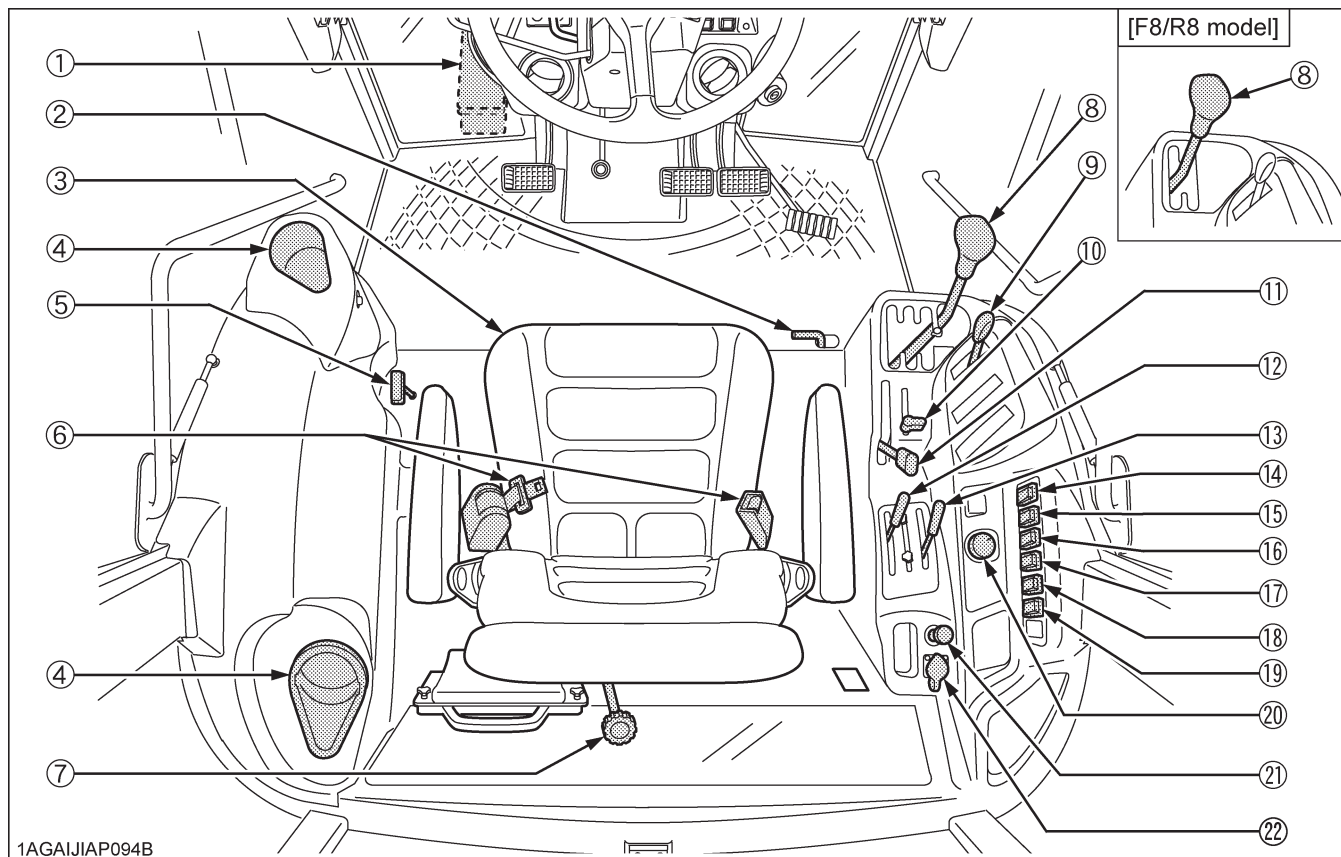

ILLUSTRATED CONTENTS

(1) Tool box	-
(2) Differential lock pedal	44
(3) Operator's seat	25
(4) Cup holder	-
(5) Front wheel drive lever [F8/R8 model]	33
(6) Seat belt	26
(7) 3-Point hitch lowering speed knob	58

ILLUSTRATED CONTENTS

(8) Main gear shift lever	32
(9) Remote control valve lever	58
(10) Hand throttle lever	34
(11) Range gear shift lever	32
(12) Draft control lever	57
(13) Position control lever	57
(14) Front wiper / Washer switch	71
(15) Rear wiper / Washer switch (if equipped)	71
(16) Front work light switch	70
(17) Rear work light switch	70
(18) Front wheel drive switch (4WD)	
[F12/R12 model]	34
(19) Rear / side defogger switch (if equipped)	75
(20) PTO clutch control switch	47
(21) Cigarette lighter	76
(22) Electrical outlet	76
(23) Remote control valve coupler	59
(24) Trailer electrical outlet	46
(25) PTO gear shift lever (if equipped)	48

PRE-OPERATION CHECK

DAILY CHECK

To prevent trouble from occurring, it is important to know the condition of the tractor well. Check it before starting.



WARNING

To avoid personal injury or death:

- **Be sure to check and service the tractor on a level surface with the engine shut off and the parking brake "ON" and implement lowered to the ground.**

Check item

- Walk around inspection
- Check engine oil level
- Check transmission oil level
- Clean remote control valve coupler
- Check coolant level
- Check washer liquid level
- Check water separator
- Clean grill and radiator screen
- Clean air conditioner condenser screen
- Clean oil cooler
- Clean fuel cooler
- Check DPF muffler
- Check air cleaner evacuator valve
(When used in a dusty place)
- Check air cleaner dust indicator
(When used in a dusty place)
- Check brake pedal
- Check indicators, gauges and meter
- Check lights
- Check seat belt
- Check movable parts
- Refuel
(See "DAILY CHECK" in "PERIODIC SERVICE" section.)
- Care of danger, warning and caution labels
(See "DANGER, WARNING AND CAUTION LABELS" in "SAFE OPERATION" section.)

OPERATING THE ENGINE



WARNING

To avoid personal injury or death:

- Read and understand "Safe Operation" in the front of this manual.
- Read and understand the danger, warning and caution labels located on the tractor.
- To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building without proper ventilation.
- Never start engine while standing on ground. Start engine only from operator's seat.
- Make it a rule to set all shift levers to the "NEUTRAL" positions and to place PTO clutch control switch in "OFF" position before starting the engine.

IMPORTANT :

- Do not use starting fluid or ether.
- To protect the battery and the starter, make sure that the starter is not continuously turned for more than 10 seconds.

EXHAUST AFTERTREATMENT DEVICES



WARNING


To avoid personal injury or death:

- During Diesel Particulate Filter (DPF) regenerating operations, exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite or melt common materials.
- Keep tractor away from people, animals or structures which may be susceptible to harm or damage from hot exhaust gases.
- During regeneration, white exhaust gases may be visible. Do not allow regeneration in a non ventilated garage or confined area.
- During regeneration, do not leave the tractor.

■ Diesel Particulate Filter (DPF) Muffler

This tractor is equipped with an engine with a DPF (Diesel Particulate Filter) muffler which serves to reduce hydrocarbons, carbon monoxide and other gases, all of which are contained in diesel engine emissions, to harmless carbon dioxide and water. The DPF also traps PM (particulate matter).

Please handle exhaust aftertreatment devices correctly and in an environmentally responsible manner.

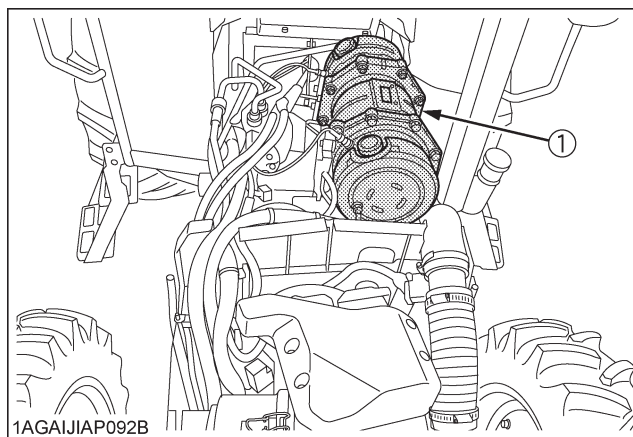

(1) Diesel Particulate Filter (DPF)

■ Handling Points

When a specific amount of PM (particulate matter) has accumulated in the DPF muffler, it is necessary to refresh the DPF muffler by burning the PM inside it. This burning off work is called "Regeneration".

To extend operating time to reach this regeneration, and to avoid DPF muffler trouble, make sure to observe the following handling matters.

◆ Fuel

Be sure to use Ultra Low Sulfur Fuel (S15).

IMPORTANT :

- Use of diesel fuel other than Ultra Low Sulfur Fuel may adversely affect the engine and DPF performance.
Use of fuels other than Ultra Low Sulfur Fuel (S15) may not meet regulations for your region.

◆ Engine oil

Use DPF-compatible oil (CJ-4) for the engine.

IMPORTANT :

- If any engine oil other than CJ-4 is used, the DPF may become clogged earlier than expected and the fuel economy may drop.

◆ Prohibition of unnecessary idling operation

Generally, the lower the engine speed, the lower the exhaust gas temperature is, so the PM contained in exhaust gas will not be burnt, and begins to accumulate. Therefore, don't idle unnecessarily.

◆ Regeneration

When there is "Regeneration" instruction sign by lamp or buzzer, immediately perform the required procedure for regeneration.

IMPORTANT :

- Interrupting the regeneration cycle or continued operation by ignoring the warning signs may cause DPF and engine damage.

■ DPF Regeneration Process

DPF regeneration process can be performed by choosing from "Auto Regeneration" or "Regeneration inhibit" mode according to your job conditions. For jobs not affected by hot gases emitted during regeneration, the "Auto Regeneration" is advisable.

◆ Auto Regeneration Mode;

When starting the engine (switch operation is unnecessary), the "Auto Regeneration" mode is automatically activated.

With the auto regeneration mode on, when a specific amount of PM has accumulated, and the regeneration conditions are satisfied (See the "Tips on Diesel Particulate Filter [DPF] Regeneration"), the DPF will be automatically regenerated whether the tractor is in motion or parked.

By this way, work efficiency is improved. For details of auto regeneration, refer to "Operating Procedure for Auto Regeneration Mode" section.

◆ Regeneration Inhibit Mode;

After starting the engine, if the "DPF INHIBIT switch" is pressed to turn on the switch lamp, the "Regeneration inhibit" mode will be activated.

With "Regeneration Inhibit" mode on, the PM which has accumulated inside the DPF will not be burnt, unless the operator performs the regeneration work manually.


The "Regeneration Inhibit" mode is effective for work in poorly ventilated work spaces.

For details of regeneration prohibition, refer to "Operating Procedure for Regeneration Inhibit Mode" section.

NOTE :

- If stop the engine once, the "Auto Regeneration" mode will be activated.
-

Operating Procedure for Auto Regeneration Mode

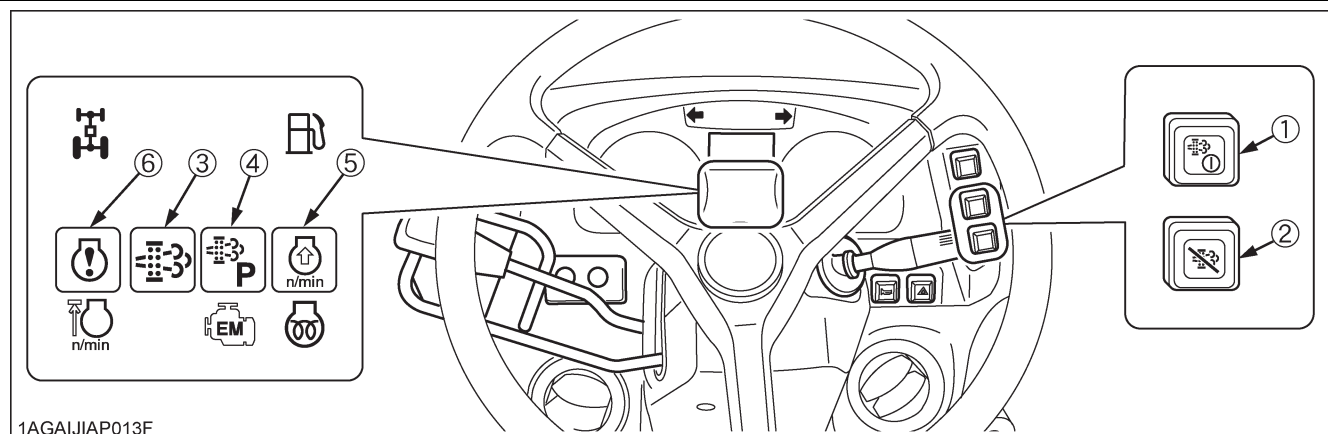

(1) Parked regeneration switch
(2) DPF INHIBIT switch

(3) Regeneration indicator
(4) Parked regeneration indicator

(5) Engine RPM increase indicator
(6) Engine warning indicator

■Regeneration Operating Procedure

1. Start the engine.
(Make sure that the DPF INHIBIT switch lamp  is "OFF".)

Switch lamp OFF: Auto Regeneration Mode activated.

Switch lamp ON: Regeneration Inhibit Mode activated.

NOTE :

- When the engine is started, the "Auto Regeneration" mode is automatically activated.
- "Regeneration Inhibit" mode is activated, when the DPF INHIBIT switch is pushed after the engine is started.

2. When the regeneration indicator  starts flashing:

A specific amount of PM has built up in the DPF.

Continue to operate the tractor, and the regeneration process will begin automatically, make sure the working place is in a safe area as DPF and exhaust temperature will rise.

3. When the engine rpm increase indicator  starts flashing:

Keep on working and increase the engine rpm until the indicator turns "OFF".

NOTE :

- Even if the Auto Regeneration Mode is selected, DPF regeneration may not begin because system requirements have not been satisfied.
- The engine rpm increase indicator is used as a guide to satisfy the regeneration conditions. If the engine load is too heavy, the engine rpm increase indicator may continue to flash, even though regeneration system conditions are satisfied and regeneration may begin automatically. (See the "Tips on Diesel Particulate Filter [DPF] Regeneration")

■ PM Warning Level and Required Procedures


During Auto Regeneration Mode when the PM level has built up in the DPF, the regeneration cycle will begin automatically. If the regeneration cycle is interrupted or the regeneration conditions are not satisfied, the buzzer starts sounding and the indicator display changes in response to the PM level in order to prompt the operator to perform the required procedure listed below.

IMPORTANT :

- Once the regeneration level has been reached, immediately perform the required procedure for regeneration. Interrupting the regeneration cycle or continued operation by ignoring the warning signs may cause DPF and engine damage.

Auto Mode		
	DPF system status	Required procedure
PM warning level: 1 Buzzer: Not sounding	 The regeneration indicator starts flashing.  The RPM increase indicator starts flashing.  The regeneration indicator will stop flashing and remain "ON" constantly.	A specific amount of PM has accumulated in the DPF muffler. Continue to work the tractor to raise the DPF temperature. Continue the work and increase the engine rpm until the indicator turns "OFF". The regeneration cycle begins and continues until cycle is complete then the indicator will turn "OFF".
PM warning level: 2-1 Buzzer: Sounding every 5 seconds	If the regeneration cycle was interrupted or conditions are not satisfied for regeneration then DPF system is now in Level 2.  The regeneration indicator starts flashing.	Start the regeneration, referring to PM warning level: 1 above. Now the parked regeneration indicator starts flashing, and the parked regeneration can also be started.
PM warning level: 2-2 Buzzer: Sounding every 3 seconds	 The RPM increase indicator starts flashing.  The parked regeneration indicator starts flashing.	If the regeneration conditions are not met, perform the parked regeneration. For the procedure, refer to "Operating Procedure for Parked Regeneration".
PM warning level: 3 Buzzer: Sounding every 1 second Engine output: 50%	If the regeneration fails in the warning level 2:  The engine warning indicator starts flashing.  The parked regeneration indicator starts flashing.	Immediately discontinue working the tractor and begin the parked regeneration cycle process. For the procedure, refer to "Operating Procedure for Parked Regeneration". At this PM warning level, the Auto Regeneration Mode does not function. If the tractor is operated further, the regeneration cycle will be disabled.
PM warning level: 4 Buzzer: Sounding every 1 second Engine output: 50%	If the parked regeneration is interrupted or the tractor is continuously operated in the warning level 3:  The engine warning indicator remains constantly "ON".	Immediately move the tractor to a safe place and park it there and turn the engine "OFF". Contact your local KUBOTA Dealer. At this level, never continue to operate the tractor otherwise damage will result to the DPF and engine.

Operating Procedure for Regeneration Inhibit Mode

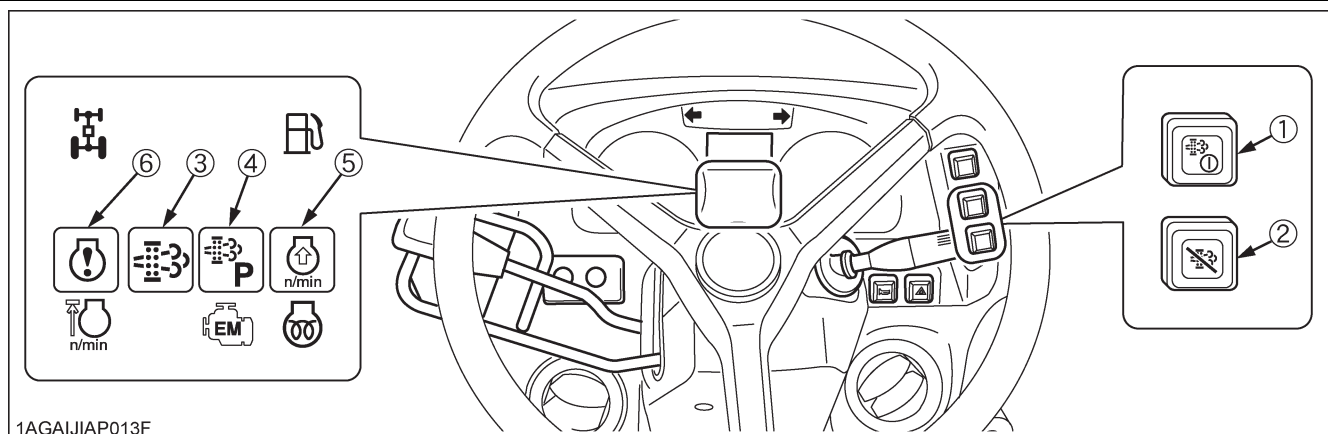

(1) Parked regeneration switch
(2) DPF INHIBIT switch

(3) Regeneration indicator
(4) Parked regeneration indicator

(5) Engine RPM increase indicator
(6) Engine warning indicator

■Regeneration Operating Procedure

1. Start the engine.

2. Press the DPF INHIBIT switch , and the switch lamp illuminates.

Switch lamp ON: Regeneration Inhibit Mode selected.

Switch lamp OFF: Auto Regeneration Mode selected.

3. When the parked regeneration indicator  starts flashing:

A specific amount of PM has accumulated in the DPF muffler.

Move the tractor to a safe place and activates the DPF muffler. Follow the "Operating Procedure for Parked Regeneration" procedure.

■PM Warning Level and Required Procedures

In the Regeneration Inhibit Mode, the buzzer starts sounding and the indicator display changes in response to the PM level in order to prompt the operator to perform the required procedure listed below.

IMPORTANT :

- Once the regeneration level has been reached, immediately perform the required procedure for regeneration. Interrupting the regeneration cycle or continued operation by ignoring the warning signs may cause DPF and engine damage.

Regeneration Inhibit Mode		
DPF system status		Required procedure
PM warning level: 1 Buzzer: Not sounding	 The regeneration indicator starts flashing.	A specific level of PM has built up in the DPF muffler. Continue with the operation as it is.
	 At PM warning levels range from 1 to 2-2, it is also possible to change DPF INHIBIT switch to auto regeneration mode then perform regeneration.	
PM warning level: 2-1 Buzzer: Sounding every 5 seconds	 The regeneration indicator starts flashing.	Move the tractor to a safe area, then follow the "Operating Procedure for Parked Regeneration".
PM warning level: 2-2 Buzzer: Sounding every 3 seconds	 The Parked regeneration indicator starts flashing.	
PM warning level: 3 Buzzer: Sounding every 1 second Engine output: 50%	If the parked regeneration cycle is interrupted or the tractor is continuously operated in the PM warning level 2:	
	 The engine warning indicator starts flashing.  The parked regeneration indicator starts flashing	Immediately stop working the tractor, move the tractor to a safe area, then follow the "Operating Procedure for Parked Regeneration". If the tractor is operated further and the operator ignores the warning signs, then regeneration will be disabled.
PM warning level: 4 Buzzer: Sounding every 1 second Engine output: 50%	If the regeneration cycle is interrupted or the tractor is continuously operated ignoring the warning signs, in the PM warning level 3:	
	 The engine warning indicator remains constantly "ON".	Immediately move the tractor to a safe place and place in park, turn "OFF" engine. Contact your local KUBOTA Dealer. ● At this level never continue to operate the tractor, otherwise damage may result to the DPF and engine.

Operating Procedure for Parked Regeneration
--

1. Park the tractor in a safe area away from buildings, people, and animals.
2. Apply the parking brake.
3. Set the shuttle shift lever to the neutral position.
4. Turn "OFF" the PTO clutch control switch.
5. Return the engine rpm to the idle speed.
6. Lower the implement to the ground.
7. Press the DPF INHIBIT switch , and the switch lamp turns "OFF".
8. When the regeneration conditions are satisfied (2 to 5 and 7 mentioned above), the parked regeneration switch lamp  start flashing.
9. Press the parked regeneration switch  to start the regeneration cycle.
(The switch lamp will stop flashing and remain "ON" constantly during the cycle.)
10. The engine rpm will automatically rise, and the regeneration process will begin.
11. Both indicators   stay "ON" while regenerating the DPF.
They turn "OFF" when the cycle is complete.
12. After the lamp turns "OFF", normal tractor work may resume.
When driving in "Regeneration Inhibit" mode, press the DPF INHIBIT switch to turn on the switch lamp.

NOTE :

- During the regeneration cycle, do not touch the above levers, and switches (in steps 2, 3, 4), nor change the engine rpm other than an emergency stop. Otherwise, the regeneration will be interrupted.
 - Never leave the tractor when parked regeneration process is activated.
 - If the parked regeneration cycle is interrupted, the engine rpm is fixed at the idling level for about 30 seconds. For this period, keep the hand throttle lever and foot throttle pedal at the idle position. Do not move them. They will function again in 30 seconds.
-

■ Tips on Diesel Particulate Filter (DPF) Regeneration

● Operation

The higher in speed or load the engine operates, the higher the exhaust temperature rises. As a result, particulate matter (PM) inside the DPF is consumed, therefore the regeneration process is required less frequently over time.

The lower in speed or load the engine operates, the lower the exhaust temperature. Accordingly, less particulate matter (PM) inside the DPF is consumed, therefore more accumulation of PM will occur, which requires frequent regeneration, therefore avoid prolonged idling if possible.

● Necessary conditions for "Regeneration"

When conditions below are all satisfied, regeneration will start. However, if even one condition is deviated during the process, the regeneration will be interrupted.

- (1) The engine coolant temperature.
- (2) The DPF temperature.
- (3) The engine speed is 1200 rpm or higher.

- Usually it takes 15-20 minutes to complete the regeneration cycle.

Actual regeneration time may depend on ambient temperature, exhaust temperature and engine speed.

- It is recommended to do the regenerating while the engine is warm.

- Do not unnecessarily start and interrupt the regeneration process. Otherwise, a small amount of fuel becomes mixed with the engine oil, which degrades the oil quality.

- While the DPF is being regenerated, the engine air flow rate is automatically limited to keep up the exhaust temperature. Because of this the engine may sound differently, this is normal for this engine.

- Just after the regeneration has ended, the DPF muffler remains hot. It is advisable to keep the engine running for about 5 minutes to allow cooling of the exhaust components.


STARTING THE ENGINE

1. Make sure the parking brake is set.

■ Parking Brake


[F8/R8 model]

1. To set the parking brake;
 - (1) Interlock the brake pedals.
 - (2) Depress the brake pedals.
 - (3) Latch the brake pedals with the parking brake lever.
 - (4) The parking brake warning indicator light on the Easy Checker(TM) will turn "ON" when the parking brake is set.
2. To release the parking brake, depress the brake pedals again.

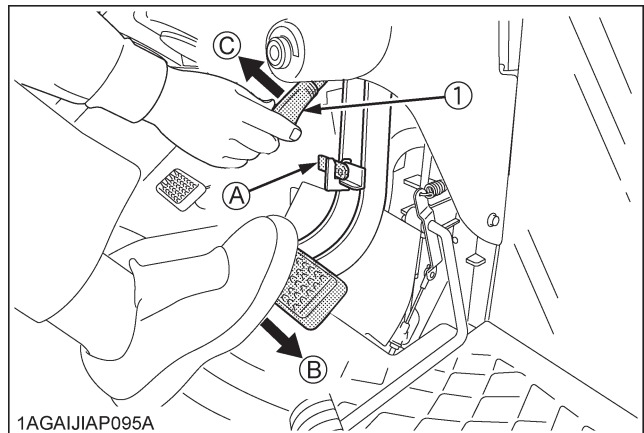

(1) Parking brake lever

(A) "Interlock the brake pedals"
(B) "DEPRESS"
(C) "PULL"

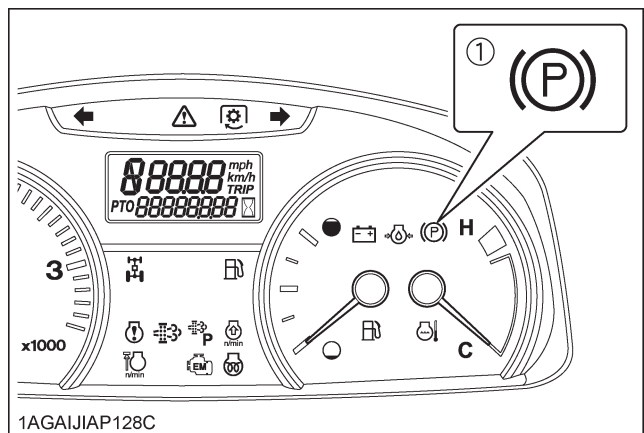

(1) Parking brake warning indicator

IMPORTANT :

- To prevent damage to the parking brake lever, make sure that brake pedals are fully depressed before pulling the parking brake lever up.


■ Parking Brake

[F12/R12 model]

To set the parking brake;

1. Depress the brake pedals and stop the tractor's motion.
2. Place the main gear shift lever into the "Park" position. The parking brake warning indicator light on the Easy Checker(TM) will turn "ON" when the parking brake is set.


To release the parking brake, depress the brake pedals and shift the lever to the neutral position.

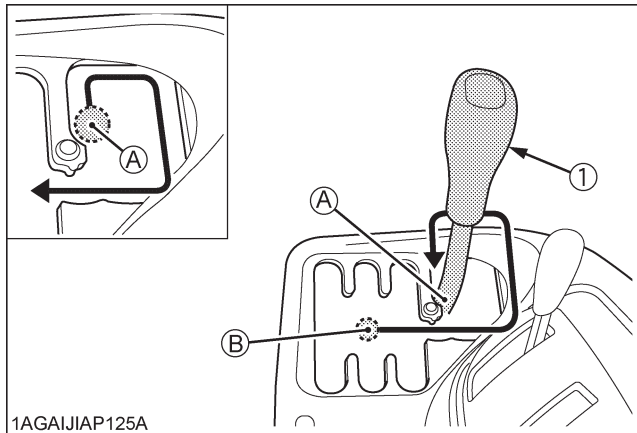

(1) Main gear shift lever

(A) "PARK POSITION"

(B) "NEUTRAL POSITION"

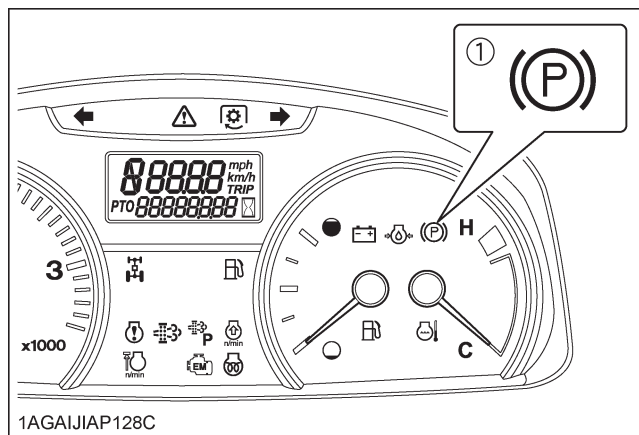

(1) Parking brake warning indicator


IMPORTANT :

- Bring the tractor to a complete stop before applying the parking brake or transmission damage may occur.

NOTE :

- In moving the main gear shift lever to park position, you may feel it heavy some time or light other time. This is normal condition for this transmission.

2. Make sure the fuel shutoff-valve is in the "OPEN" position.


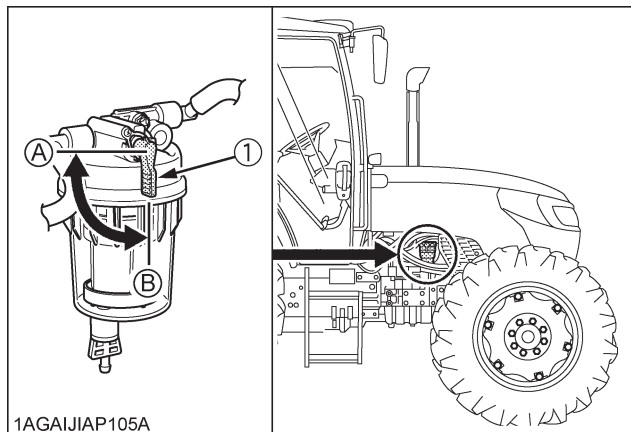


(1) Fuel shutoff-valve

(A) "CLOSE"


(B) "OPEN"

3. Place the shift lever in "NEUTRAL" position.

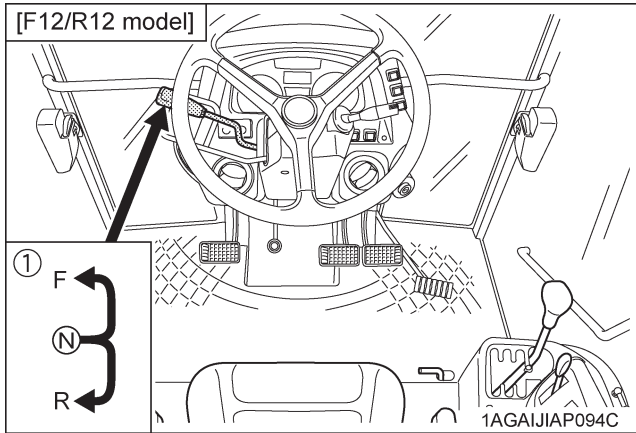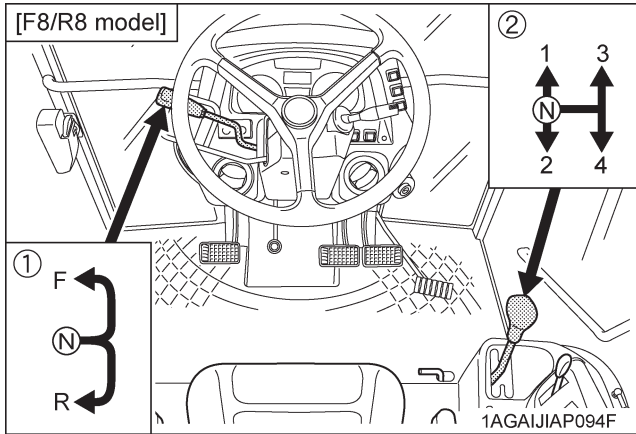


- (1) Hydraulic-shuttle shift lever (F) "FORWARD"
 (2) Main gear shift lever (N) "NEUTRAL POSITION"
 (R) "REVERSE"

4. Place the PTO clutch control switch in "OFF" position and hydraulic control levers in "LOWEST" position.

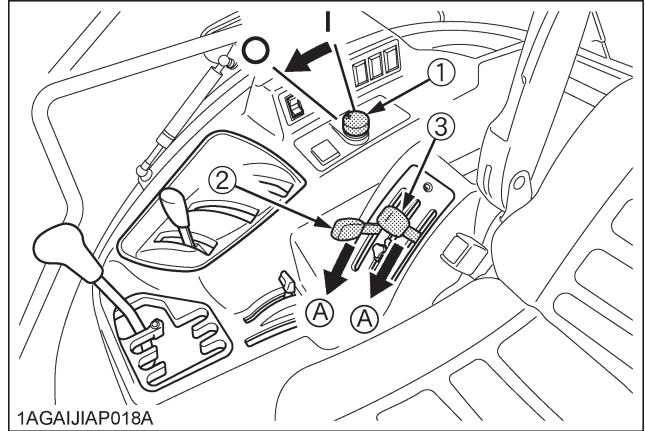


- (1) PTO clutch control switch | "ON" ○ "OFF"
 (2) Position control lever (A) "DOWN"
 (3) Draft control lever

5. Set the throttle lever at the minimum speed position.

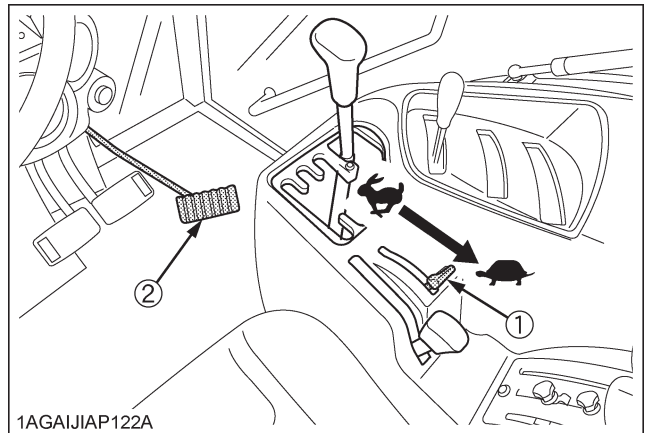

- (1) Hand throttle lever ⬆ "INCREASE"
 (2) Foot throttle ⬇ "DECREASE"

6. Insert the key into the key switch and turn it "ON".

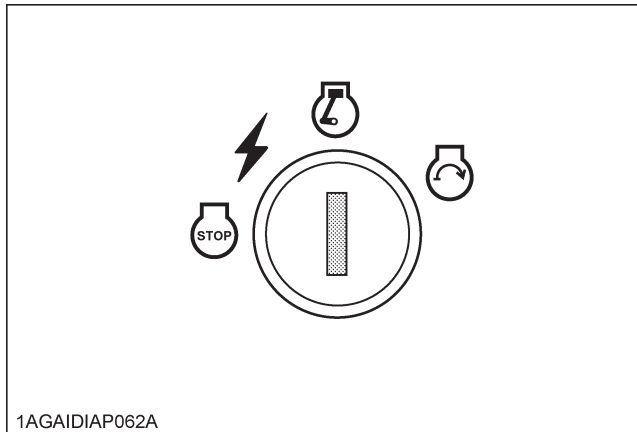


- | | |
|--------------------------------------|------------------------|
| "OFF" (Engine-Stop) | "ON" (Engine-Run) |
| "ACC" (Electrical Power-accessories) | "START" (Engine-Start) |

NOTE:

- ACC...
- The accessories can be used while the engine is stopped.
 - Do not leave the key at "ACC" position. The battery will be quickly discharged. Turn it back to "OFF" after use.

◆ Check Easy Checker(TM) Indicators:

1. When the key is turned "ON", indicators (2) (3) should come on. If trouble should occur at any location while the engine is running, the indicator corresponding to problem will turn "ON".
2. Suppose that the engine coolant temperature is not high enough yet. The heater indicator (4) also turns "ON" when the key is turned "ON" to preheat the engine and goes off automatically when preheat is completed.
Illumination time of indicator varies according to the temperature of coolant.
3. The PTO clutch indicator (1) comes on while PTO clutch control switch is engaged "ON" and goes off when disengaged.
4. If the fuel level indicator (5) lights up, when fuel level is very low, therefore add fuel and the indicator will turn "OFF".
5. If the parking brake warning indicator (6) does not illuminate, set the parking brake.

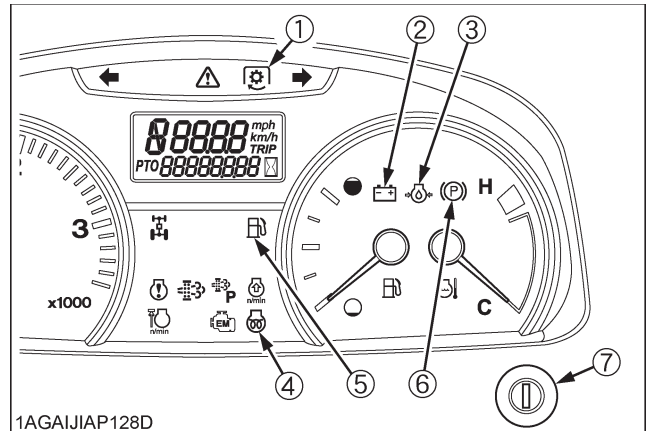

- | | |
|---|-------------------------------------|
| (1) PTO clutch indicator | (4) Heater indicator |
| (2) Electrical charge warning indicator | (5) Fuel level indicator |
| (3) Engine oil pressure warning indicator | (6) Parking brake warning indicator |
| | (7) Key switch |

NOTE :

- Some of the Easy Checker(TM) indicators may illuminate or start flashing depending on the positions of the levers and switches.

IMPORTANT :

- Daily checks with the Easy Checker(TM) only, are not sufficient. Never fail to conduct daily checks carefully by referring to Daily Check. (See "DAILY CHECK" in "PERIODIC SERVICE" section.)

7. Fully depress the clutch pedal.

8. Turn the key to "START" position and release when the engine starts.

IMPORTANT :

- Because of the safety devices, the engine will not start except when the PTO clutch control switch is placed in the "OFF" position and shuttle shift lever is placed in the "NEUTRAL" position.

9. Check to see that all the indicators on the Easy Checker(TM) are "OFF".

If an indicator is still on, immediately stop the engine and determine the cause.


10. Release the clutch pedal.

COLD WEATHER STARTING

If the ambient temperature is below 0 °C (32 °F) and the engine is very cold, follow the procedure below after taking the step 1 through 5 in the previous pages.

6. Turn the key to "ON" position and hold it until the heater indicator turns off.

Heater indicator comes on when the key is turned to "ON" position and engine coolant temperature is below 0 °C (32 °F), and goes off automatically when preheat is completed.

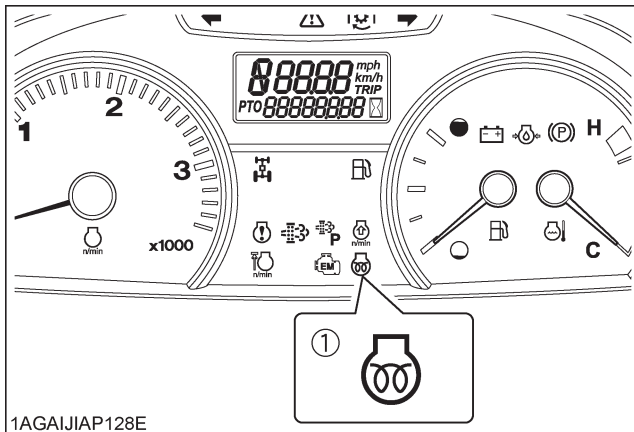

1AGAIJAP128E

(1) Heater indicator

7. Fully depress the clutch pedal.

8. Turn the key to the "START" position and the engine should start.

(If the engine fails to start after 10 seconds, turn off the key for 30 seconds. Then repeat steps 6 through 8. To protect the battery and the starter, make sure that the starter is not continuously turned for more than 10 seconds.)

■Block Heater (if equipped)

A block heater is available as an option from your dealer. It will assist you in starting your tractor when the ambient temperature is below -20 °C (-4 °F).

STOPPING THE ENGINE

1. After slowing the engine to idle, wait 3 to 5 minutes for turbo to slow down and then turn the key to "OFF".

2. Remove the key.

NOTE :

- If key's operation does not stop the engine, consult your local KUBOTA Dealer.

WARMING UP

[F8/R8 model]



WARNING

To avoid personal injury or death:

- Do not conduct warm-up operation if the place is not sufficiently ventilated. If the place is poorly ventilated, exhaust gas can cause carbon monoxide poisoning.
- Be sure to set the parking brake during warm-up.
- Be sure to set all shift levers to the "NEUTRAL" positions and to place PTO switch in "OFF" position during warm-up.

[F12/R12 model]



WARNING

To avoid personal injury or death:

- Do not conduct warm-up operation if the place is not sufficiently ventilated. If the place is poorly ventilated, exhaust gas can cause carbon monoxide poisoning.
- Be sure to set the main gear shift lever to "PARK" position and set the shuttle shift lever to the "NEUTRAL" position and place the PTO switch in the "OFF" position during warm-up.

After starting the engine, set the accelerator lever to low speed and conduct a warm-up operation by referring to the following table, in order to warm up the transmission oil.

Ambient temperature	Total warm-up time requirement
1 °C to 10 °C (33.8 °F to 50 °F)	10 minutes
-9 °C to 0 °C (15.8 °F to 32 °F)	20 minutes
-19 °C to -10 °C (-2.2 °F to 14 °F)	30 minutes
Below -20 °C (-4 °F)	40 minutes

IMPORTANT :

- Warm-up operation ensures a thorough circulation of oil to metals. If the engine is operated at load immediately after it is started, engine failure such as seizure or damage may occur.
- The tractor incorporates a hydraulic clutch and uses the transmission oil as hydraulic fluid. If the transmission oil is not warmed up sufficiently by engine warm-up operation, the tractor will not provide satisfactory performance and malfunction may occur in the worst case.
- If you expect to use the machine in environments with an ambient temperature below -20°C (-4°F), the installation of a CCV heater kit will be necessary. Consult your local KUBOTA Dealer for more information.

NOTE :

- At low temperature range, warm-up operation can cause the water condensed in the muffler and pipe to drip out of the exhaust pipe.


JUMP STARTING**WARNING**

To avoid personal injury or death:

- **Battery gases can explode. Keep cigarettes, sparks, and flames away from battery.**
- **If tractor battery is frozen, do not jump start engine.**
- **Do not connect the other end of the negative (-) jumper cable to the negative (-) terminal of the tractor battery.**

When jump starting the engine, follow the instructions below to safely start the engine.

1. Bring the helper vehicle with a battery of the same voltage as disabled tractor within easy cable reach. "THE VEHICLES MUST NOT TOUCH".
2. Engage the parking brakes of both vehicles and put the shift levers in neutral. Shut both engines off.
3. Wear eye protection and rubber gloves.
4. Attach the red clamp to the positive (red, (+) or pos.) terminal of the dead battery and clamp the other end of the same cable to the positive (red, (+) or pos.) terminal of the helper battery.
5. Clamp the other cable to the negative (black, (-) or neg.) terminal of the helper battery.
6. Clamp the other end to the engine block or frame of the disabled tractor as far from the dead battery as possible.
7. Start the helper vehicle and let its engine run for a few moments. Start the disabled tractor.
8. Disconnect the jumper cables in the exact reverse order of attachment. (Steps 6, 5 and 4)

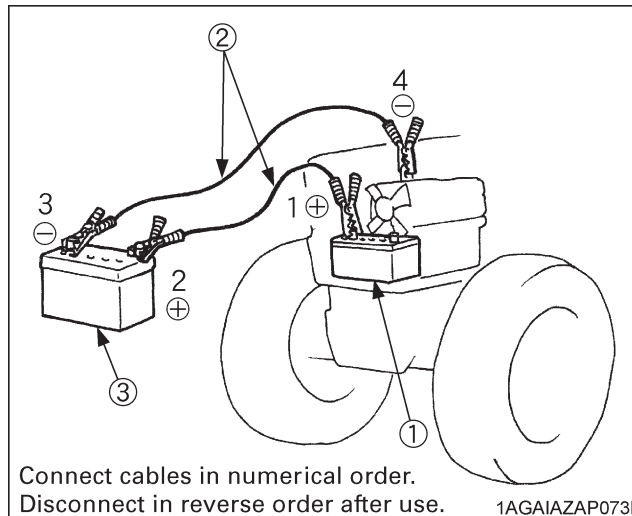

- (1) Dead battery
(2) Jumper cables
(3) Helper battery

IMPORTANT :

- This machine has a 12 volt negative (-) ground starting system.
- Use only same voltage for jump starting.
- Use of a higher voltage source on tractor's electrical system could result in severe damage to tractor's electrical system.
Use only matching voltage source when "Jump starting" a low or dead battery condition.
- Do not operate the tractor with the battery cable disconnected from the battery.
- Do not operate the tractor without the battery mounted.
- Do not operate the tractor with the battery dead. Charge the battery fully enough before operating the tractor.
Otherwise the tractor might malfunction.

OPERATING THE TRACTOR

OPERATING NEW TRACTOR

How a new tractor is handled and maintained determines the life of the tractor.

A new tractor just off the factory production line has been, of course, tested, but the various parts are not accustomed to each other, so care should be taken to operate the tractor for the first 50 hours at a slower speed and avoid excessive work or operation until the various parts become "broken-in". The manner in which the tractor is handled during the "breaking-in" period greatly affects the life of your tractor.

Therefore, to obtain the maximum performance and the longest life of the tractor, it is very important to properly break-in your tractor. In handling a new tractor, the following precautions should be observed.

■ Do not Operate the Tractor at Full Speed for the First 50 Hours.

- Do not start quickly nor apply the brakes suddenly.
- In winter, operate the tractor after fully warming up the engine.
- Do not run the engine at speeds faster than necessary.
- On rough roads, slow down to suitable speeds. Do not operate the tractor at fast speed.

The above precautions are not limited only to new tractors, but to all tractors. But it should be especially observed in the case of new tractors.

■ Changing Lubricating Oil for New Tractors

The lubricating oil is especially important in the case of a new tractor. The various parts are not "broken-in" and are not accustomed to each other; small metal grit may develop during the operation of the tractor; and this may wear out or damage the parts. Therefore, care should be taken to change the lubricating oil a little earlier than would ordinarily be required.

For further details of change interval hours.
(See "MAINTENANCE" section.)

BOARDING AND LEAVING THE TRACTOR

1. Never try to get on or off a moving tractor or jump off the tractor to exit.
2. Face the tractor when getting into or out of the tractor. Do not use the controls as hand holds to prevent inadvertent machine movements.
3. Always keep steps and floor clean to avoid slippery conditions.



STARTING

1. Adjusting the Operator's Position.

NOTE :

- The seat and suspension should be adjusted to ensure that the controls are comfortably at hand for the operator, ensuring that the operator maintains a good posture and minimizes risks from whole body vibration.


■ Operator's Seat




WARNING

To avoid personal injury or death:

- Make adjustments to the seat only while the tractor is stopped.
- Make sure that the seat is completely secured after each adjustment.
- Do not allow any person other than the operator to ride on the tractor.

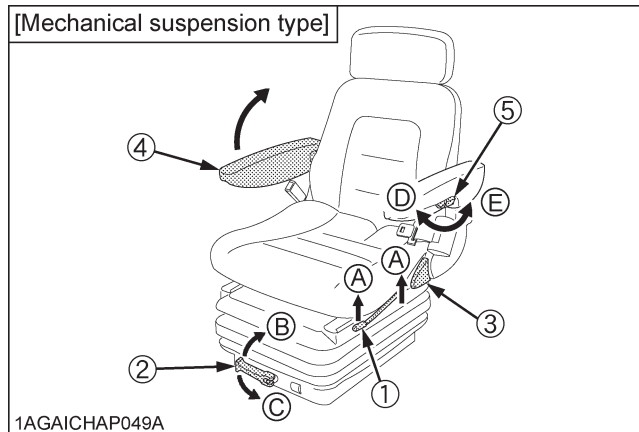

- | | |
|--------------------------------|---------------------------|
| (1) Travel adjust lever | (A) "UNLOCK" |
| (2) Weight adjust lever | (B) "TO INCREASE TENSION" |
| (3) Backrest tilt adjust lever | (C) "TO DECREASE TENSION" |
| (4) Arm rest | (D) "TO INCREASE ANGLE" |
| (5) Arm rest angle adjust knob | (E) "TO DECREASE ANGLE" |

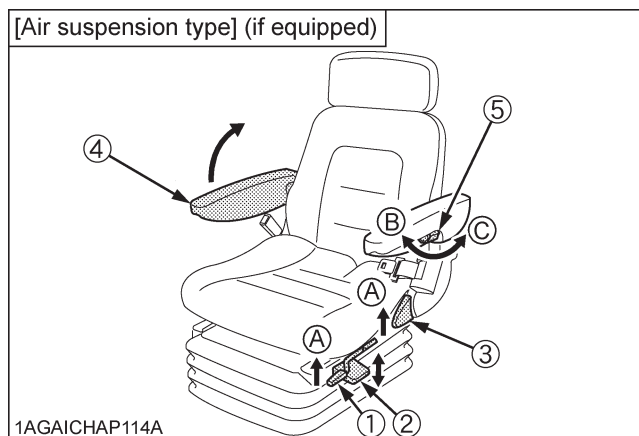

- | | |
|----------------------------------|-------------------------|
| (1) Travel adjust lever | (A) "UNLOCK" |
| (2) Weight / Height adjust lever | (B) "TO INCREASE ANGLE" |
| (3) Backrest tilt adjust lever | (C) "TO DECREASE ANGLE" |
| (4) Arm rest | |
| (5) Arm rest angle adjust knob | |

◆ Travel adjustment

Unlock the travel adjust lever and slide the seat backward or forward, as required. The seat will lock in position when the lever is released.

◆ Weight adjustment [Mechanical suspension type]

Turn the weight adjust lever to achieve the optimum suspension setting.

◆ Height adjustment [Mechanical suspension type]

Pull up with your hands the seat pan to the desired height of the 3 available positions.

Once it has reached the highest level, it will return to the lowest level.

◆ Weight and Height adjustment

[Air suspension type] (if equipped)

The seat should be adjusted for the operator's weight by briefly pulling up or pushing down the actuator lever of the weight and height adjuster with the tractor in a stationary position and the operator sitting on the seat. The operator must sit absolutely during adjustment.

IMPORTANT :

- In order to avoid damage of the seat, do not operate the actuator lever for more than 1 minute.

◆ Tilt adjustment

Pull the backrest tilt adjust lever and tilt the backrest to the desired position.

◆ Arm rest

Arm rest may be set at upright position if desired.

◆ Arm rest angle adjustment

Turn the arm rest angle adjust knob to the desired angle.

IMPORTANT :

- After adjusting the operator's seat, be sure to check to see that the seat is properly locked.

■ Seat Belt




WARNING

To avoid personal injury or death:

- Always use the seat belt when any ROPS or CAB are installed.

Adjust the seat belt for proper fit and connect the buckle. This seat belt is auto-locking retractable type.

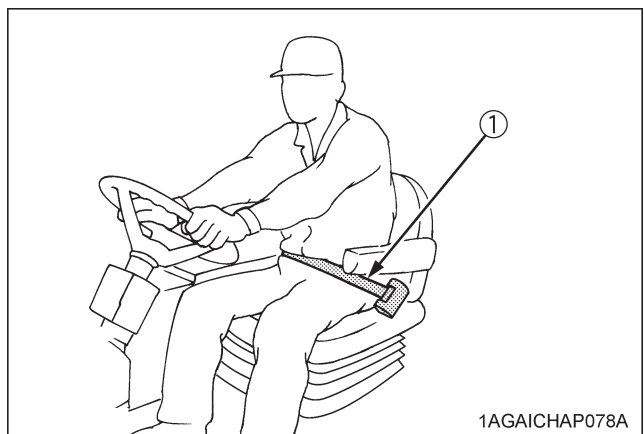

(1) Seat belt

■ Tilt Steering Adjustment




CAUTION

To avoid personal injury:

- Do not adjust the steering wheel while the tractor is in motion.

Press down the steering wheel tilt pedal, to release the lock so the steering wheel can be adjusted to one of 5 desired positions.

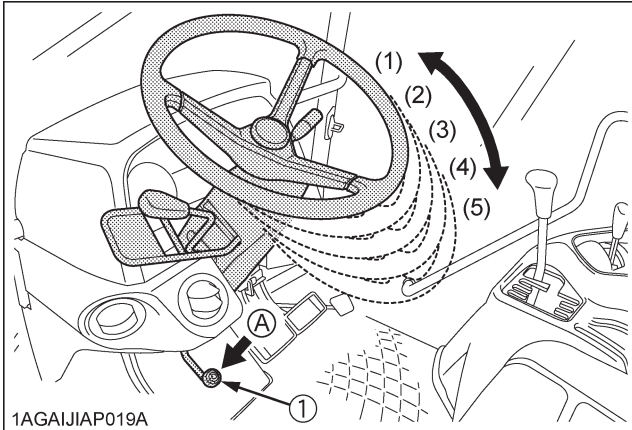


(1) Steering wheel tilt pedal (A) "PRESS DOWN"

2. Selecting Light Switch Position.

■ Light Switch

Turn the light switch clockwise, and the following lights are activated on the switch position.

- Head lights OFF.
- ☉ Head lights dimmed, low beam.
- ☉ Head lights ON, high beam.

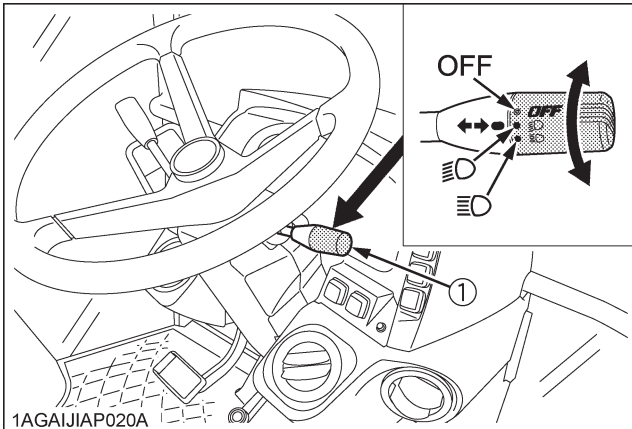

(1) Head light switch

■ Turn Signal / Hazard Light Switch

◆ Hazard Light

1. When the hazard light switch is pushed, the hazard lights flash, along with the L/H and R/H indicators on the instrument panel.
2. Push the hazard light switch again to turn off the hazard lights.

◆ Turn Signal with Hazard Light


1. To indicate a right turn with the hazard lights already flashing, turn the switch clockwise.
2. To indicate a left turn with the hazard lights already flashing, turn the switch counterclockwise.
3. When the left or right turn signal is activated in combination with the hazard lights, the indicated turning light will flash and the other will stay on.

◆ Turn Signal without Hazard Light



1. To indicate a right turn without hazard lights, turn the switch clockwise.
2. To indicate a left turn without hazard lights, turn the switch counterclockwise.
3. When the left or right turn signal is activated without the hazard lights, the indicated turning light will flash and the other will stay on.

NOTE :

- The hazard light switch is operative when the key switch is in either the "ON" or "OFF" position.
- The turn signal light switch is only operative when the key switch is in the "ON" position.
- Be sure to return the turn signal switch to center position after turning.

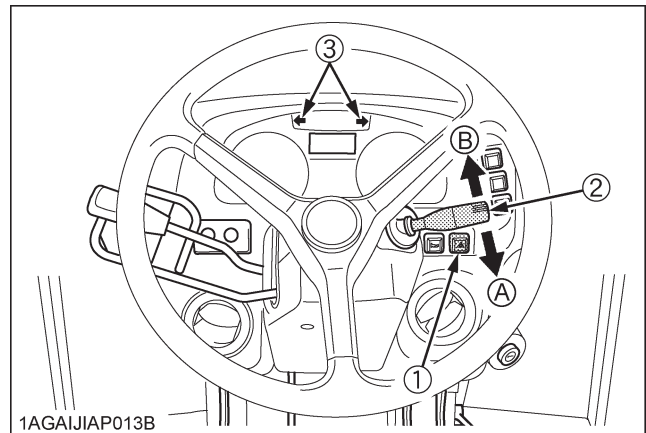


(1) Hazard light switch (A) "RIGHT TURN"
(2) Turn signal light switch (B) "LEFT TURN"
(3) Hazard / Turn signal indicator

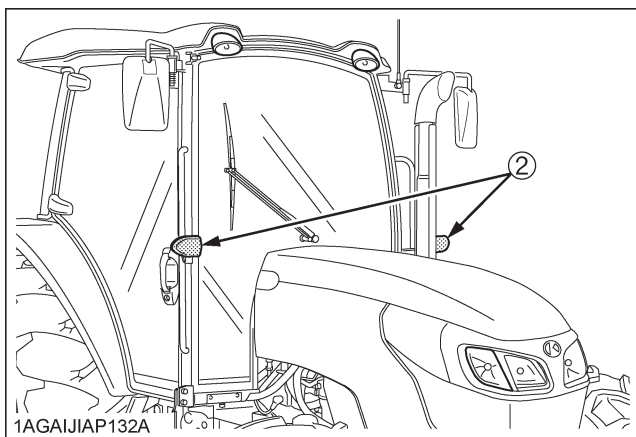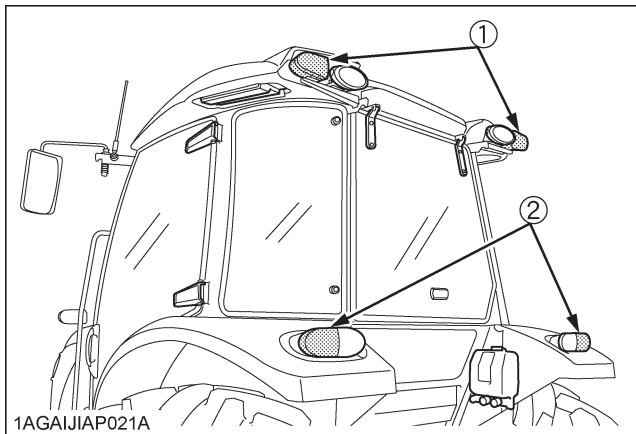

(1) Hazard light
(2) Turn signal light

■ Horn Button

The horn will sound when the key switch is "ON" position and horn button is pushed.

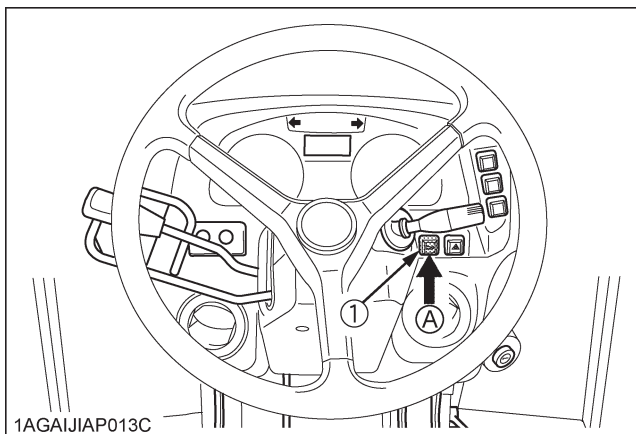

(1) Horn button (A) "PUSH"

3. Checking the Brake Pedal.

■ Brake Pedals (Right and Left)

[F8/R8 model]



WARNING

To avoid personal injury or death:

- Be sure to interlock the right and left pedals. Applying only one rear wheel brake at high speeds could cause the tractor to swerve or roll-over.
- Be sure brake pedals have equal adjustment when using locked together. Incorrect or unequal brake pedal adjustment can cause the tractor to swerve or roll-over.




WARNING

To avoid personal injury or death:

- Do not make brake suddenly. An accident may occur as a result of a heavy towed load shifting forward or loss of control.
- To avoid skidding and loss of steering control when driving on icy, wet, or loose surfaces, make sure the tractor is correctly ballasted, operated at reduced speed, operated with front wheel drive engaged (if equipped).
- The braking characteristics are different between 2 and 4-wheel drive. Be aware of the difference and use carefully.

1. Before operating the tractor on the road, be sure to interlock the right and left pedals as illustrated below.
2. Use individual brakes to assist in making sharp turns at slow speeds (Field Operation Only). Disengage the brake pedal lock and depress only one brake pedal.
3. Be sure brake pedals have equal adjustment when being used locked together.

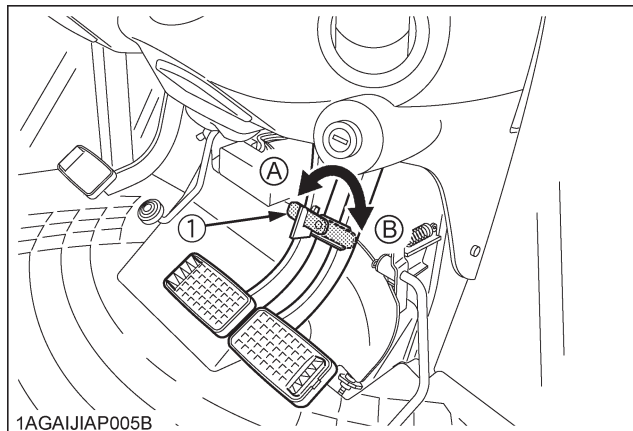

(1) Brake pedal lock (A) "LOCK" (B) "RELEASE"

■ Brake Pedals (Right and Left) [F12/R12 model]



WARNING

To avoid personal injury or death:

- Be sure to interlock the right and left pedals. Applying only one rear wheel brake at high speeds could cause the tractor to swerve or roll-over.
- Be sure brake pedals have equal adjustment when using locked together. Incorrect or unequal brake pedal adjustment can cause the tractor to swerve or roll-over.




WARNING

To avoid personal injury or death:

- Be aware of the enhanced braking characteristics of 4 wheel braking system. Appropriate care should be taken during hard braking and/or when pulling towed loads.
- Do not make brake suddenly. An accident may occur as a result of a heavy towed load shifting forward or loss of control.
- To avoid skidding and loss of steering control when driving on icy, wet, or loose surfaces, make sure the tractor is correctly ballasted, operated at reduced speed, operated with front wheel drive engaged (If equipped).
- The braking characteristics are different between 2 and 4-wheel drive. Be aware of the difference and use carefully.

1. Before operating the tractor on the road, be sure to interlock the right and left pedals as illustrated below.
2. Use individual brakes to assist in making sharp turns at slow speeds (Field Operation Only). Disengage the brake pedal lock and depress one brake pedal.
3. Be sure brake pedals have equal adjustment when being used locked together.

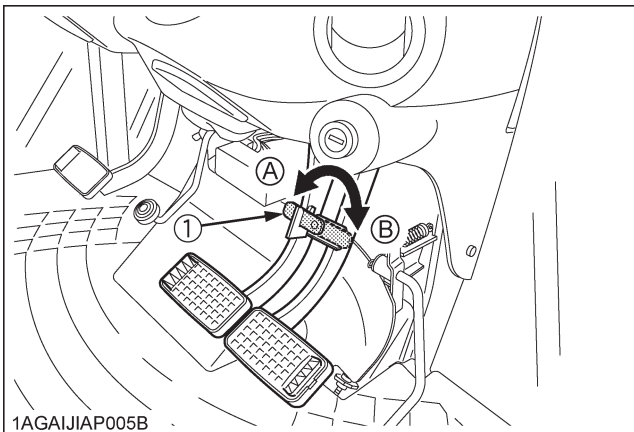

(1) Brake pedal lock

(A) "LOCK"

(B) "RELEASE"

◆ 4WD Braking System [4WD model]

4WD model tractor is equipped with 4WD braking system. When both brake pedals are applied together, the front axle is engaged for 4-wheel braking regardless of the mode selected at the 4WD switch.

When you step on the brake pedal while driving in 2WD mode, the "4WD braking system" gets activated and the 4WD indicator lights up.



WARNING


To avoid the possibility of personal injury, death or property damage from machine runaway during testing, service or repair with the rear wheels off the ground, make sure:

- Battery is disconnected and engine is not started.

If it is necessary to run the engine, make sure:

- Both front and rear wheels are off the ground and secured with stands before starting engine.

4. Raise the Implement. (see "HYDRAULIC UNIT" section.)

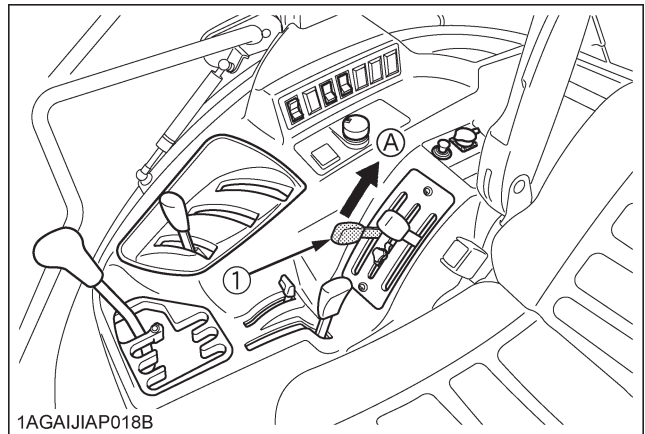

(1) Position control lever

(A) "UP"

5. Depress the Clutch Pedal.

■ Clutch Pedal




WARNING

To avoid personal injury or death:

- Sudden release of the clutch may cause the tractor to lunge in an unexpected manner.
- Always use the clutch pedal to start the tractor.

The clutch is disengaged when the clutch pedal is fully pressed down.

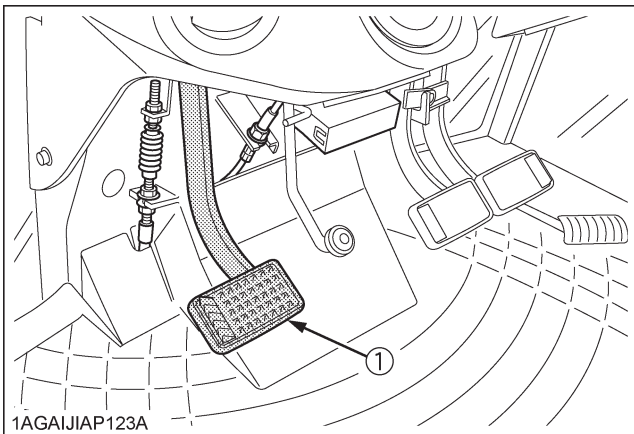


(1) Clutch pedal

IMPORTANT :

To help prevent premature clutch wear:

- The clutch pedal must be quickly disengaged and be slowly engaged.
- Avoid operating the tractor with your foot resting on the clutch pedal.
- Select proper gear and engine speed depending on the type of job.

6. Selecting the Travel Speed.

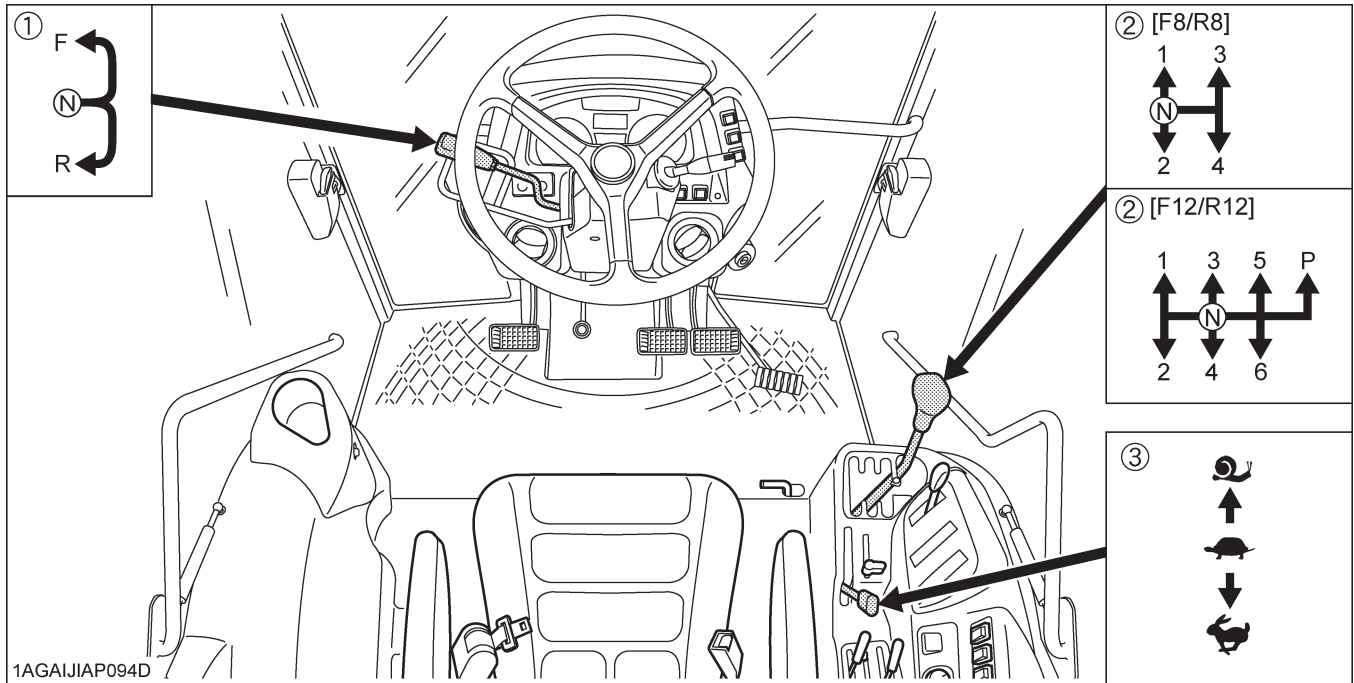

- (1) Hydraulic - shuttle shift lever
(2) Main gear shift lever
(3) Range gear shift lever

- (F) "FORWARD"
(N) "NEUTRAL POSITION"
(R) "REVERSE"
(P) "PARK POSITION"

- ↑ "LOW"
↓ "HIGH"
↺ "CREEP" (if equipped)


By combination of using the main gear shift lever, the range gear shift lever and hydraulic-shuttle shift lever, forward speeds and reverse speeds shown in the table below are obtained.

F8 / R8 model	Without creep	8 forward speeds 8 reverse speeds
	With creep	12 forward speeds 12 reverse speeds
F12 / R12 model	Without creep	12 forward speeds 12 reverse speeds
	With creep	18 forward speeds 18 reverse speeds

■ Travel Speed Limiter

With the 6-speed main gear shift type, the highest travel speed is reachable when the engine rpm is at around the middle level with the maximum travel speed range. This provides for a fuel-efficient run while traveling along roads, pulling a trailer, etc. Step on the foot throttle, and the engine rpm rises proportionally and the travel speed goes up accordingly. But the engine speed is limited to 1960 rpm or so, and it does not increase even if the foot throttle is increased.

When the main gear shift lever is set to the H-6 position, the Rev-Limiter indicator illuminates.

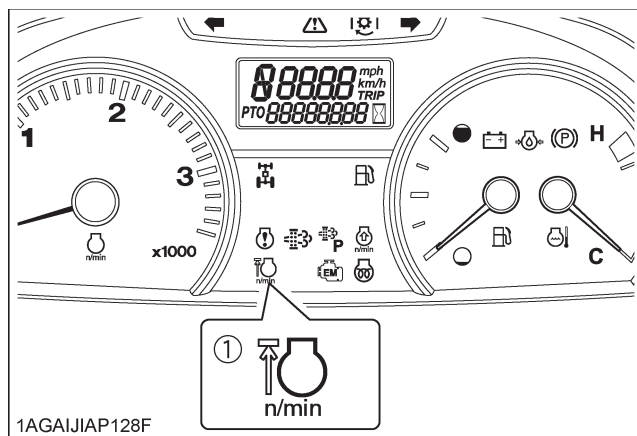

(1) Rev-limiter indicator

■ Main Gear Shift Lever

The main gear shift is fully synchronized to shift without stopping.

IMPORTANT :

- The main gear shift may be shifted between speeds on-the-go, but the clutch must be depressed.

■ Range Gear Shift Lever

The range gear shift can only be shifted when the tractor is completely stopped and the clutch is depressed.

IMPORTANT :

- To avoid transmission damage, depress clutch pedal and stop the tractor before shifting between ranges.

■ Hydraulic-Shuttle Shift Lever


Raise up and shift the shuttle shift lever forward to obtain forward speeds and shift back to obtain reverse speeds. This shifting does not require clutch operation.

IMPORTANT :

- The hydraulic-shuttle shift lever may be shifted while the tractor is moving slowly.

NOTE :

- While the shuttle shift lever is at the "NEUTRAL" position, the "N" character appears on the LCD monitor.

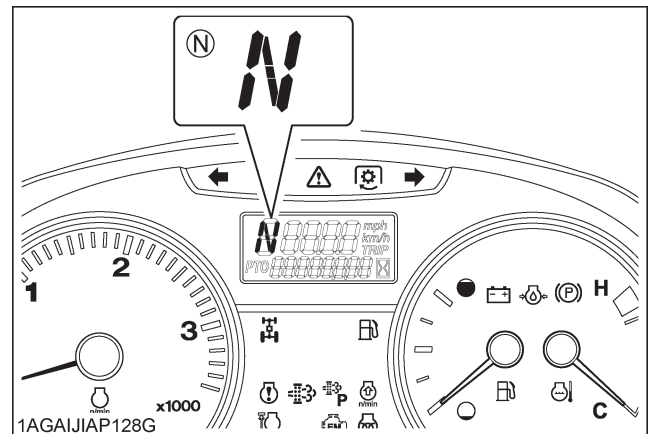


(N) "NEUTRAL"

■ Creep Speed (if equipped)

Shift the range gear shift lever to  to obtain low speeds.

This shifting requires clutch operation.

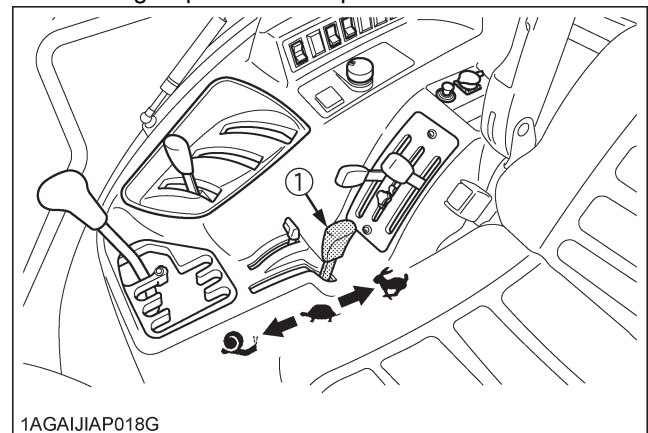

(1) Range gear shift lever

 ...Creep ON

◆ Creep speed should be used only when doing one of the following jobs:

1. Deep rotary-tilling and harrowing
2. Planting
3. Turf application

◆ Creep speed can not be used for any of the followings:

1. Pulling a trailer
2. Front-loader operation
3. Front-blade operation
4. Earth-moving
5. Entering and leaving a field
6. Loading onto and unloading from a truck



WARNING

To avoid personal injury or death:

- When you leave the tractor, be sure to apply the parking brake and stop the engine.
 - **IN APPLYING THE BRAKES:**
 - The torque of the wheel axle is extremely high while creep speed is being used. Be sure to step down on the clutch pedal completely before applying the brakes, or they will not work
 - When starting to operate the tractor, be sure to release the parking brakes.
- Misuse of the brakes may cause damage to the transmission and is therefore not acceptable to KUBOTA for coverage under the warranty.

IMPORTANT :

- Press the clutch pedal completely down and stop the tractor's motion before shifting the range gear shift lever.

■ Front Wheel Drive Lever

[F8/R8 model]




WARNING

To avoid personal injury or death:

- Do not engage the front wheel drive when traveling at road speed.
- When driving on icy, wet, or loose surfaces, make sure the tractor is correctly ballasted to avoid skidding and loss of steering control. Operate at reduced speed and engage front wheel drive.
- An accident may occur if the tractor is suddenly braked, such as by heavy towed loads shifting forward or loss of control.
- The braking characteristics are different between 2 and 4-wheel drive. Be aware of the difference and use carefully.

The front wheel drive lever can be operated with the tractor moving slowly and with the engine decelerating without clutch operation. Shift the lever to "ON" to engage the front wheel drive.

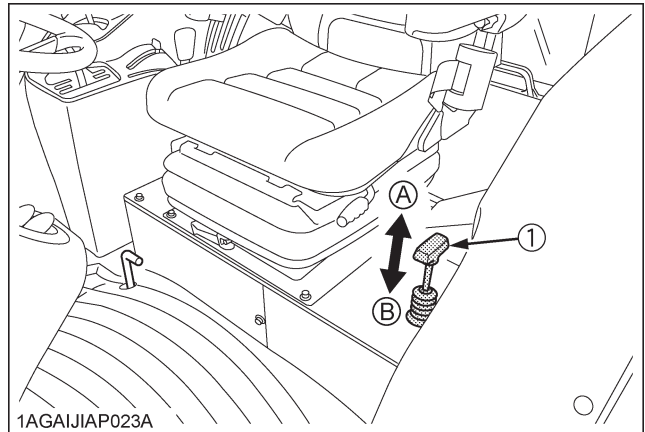

(1) Front wheel drive lever


(A) "ON"

(B) "OFF"

◆ 4WD Indicator

The 4WD indicator turns on while the front wheel drive lever is in "ON" (4WD) position.

The 4WD indicator goes off when the front wheel drive lever is in "OFF" (2WD) position.

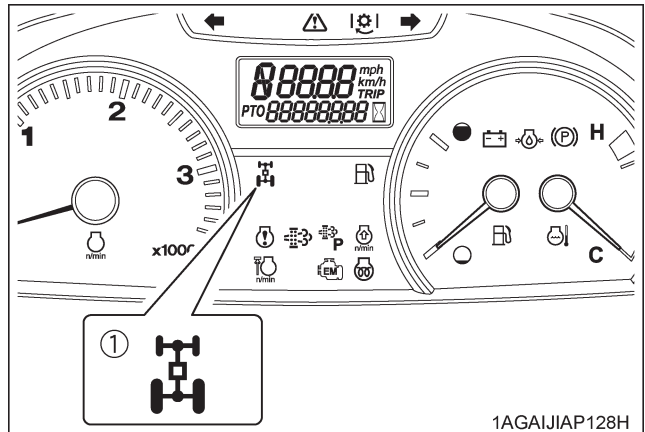

(1) 4WD indicator

NOTE :

- Even when the front wheel drive lever is moved, the 4WD indicator may fail to light up or go out immediately. Just keep on running the tractor, and the indicator will light up or go out accordingly.
- If the indicator fails to come on or off with the tractor at a stop, turn the steering wheel clockwise and counterclockwise, and the indicator will light up or go out accordingly.

IMPORTANT :

- Tires will wear quickly if front wheel drive is engaged on paved roads.
- Reduce the rear wheels traction before engaging the front wheel drive lever.

◆ **Front wheel drive is effective for the following jobs:**

1. When greater pulling force is needed, such as working in a wet field, when pulling a trailer, or when working with a front-end loader.
2. When working in sandy soil.
3. When working on a hard soil where a rotary tiller might push the tractor forward.
4. For increased braking at reduced speed.

■ **4WD Switch**

[F12/R12 model]



WARNING

To avoid personal injury or death:

- Do not engage the front wheel drive when traveling at road speed.
- When driving on icy, wet, or loose surfaces, make sure the tractor is correctly ballasted to avoid skidding and loss of steering control. Operate at reduced speed and engage front wheel drive.
- 4WD model tractor is equipped with 4 wheel braking and appropriate care should be taken during hard braking.
- An accident may occur if the tractor is suddenly braked, such as by heavy towed loads shifting forward or loss of control.
- The braking characteristics are different between 2 and 4-wheel drive tractor models. Be aware of the difference and use carefully.

Press the bottom half of this switch;



The front wheel drive (4WD) is engaged.

The switch with indicator and 4WD indicator come on when the system is in 4WD mode.

Press the top half of this switch;

The drive system returns to 2WD mode.

The all indicators goes off when the system is in 2WD mode.

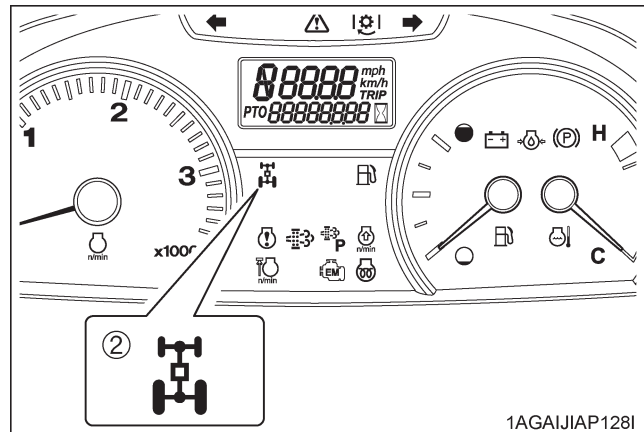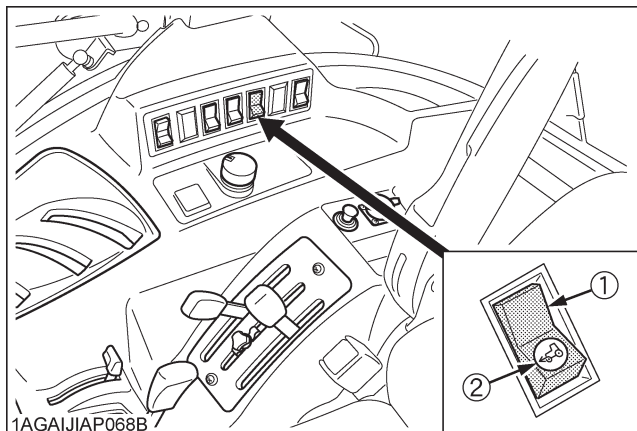

(1) 4WD switch with indicator

(2) 4WD indicator

◆ **Front wheel drive is effective for the following jobs:**

1. When greater pulling force is needed, such as working in a wet field, when pulling a trailer, or when working with a front-end loader.
2. When working in sandy soil.
3. When working on a hard soil where a rotary tiller might push the tractor forward.

IMPORTANT :

- Tires will wear quickly if the front wheel drive is engaged on paved roads.


7. Accelerate the Engine.

■ **Hand Throttle Lever**

Pulling the throttle lever back decreases engine speed, and pushing it forward increases engine speed.

■ **Foot Throttle**

Use the foot throttle when traveling on the road. Press down on it for higher speed. The foot throttle is interlocked with the hand throttle lever; when using the foot throttle, keep the hand throttle lever in low idling position.

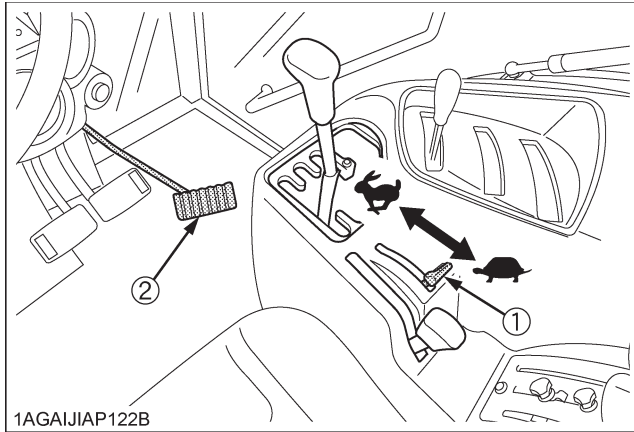

1AGAIJAP122B

- (1) Hand throttle lever
(2) Foot throttle


- ↑ "INCREASE"
↓ "DECREASE"

8. Unlock the Brake Pedals and Slowly Release the Clutch.

■ Parking Brake

[F8/R8 model]

To release the parking brake, depress the brake pedals again.

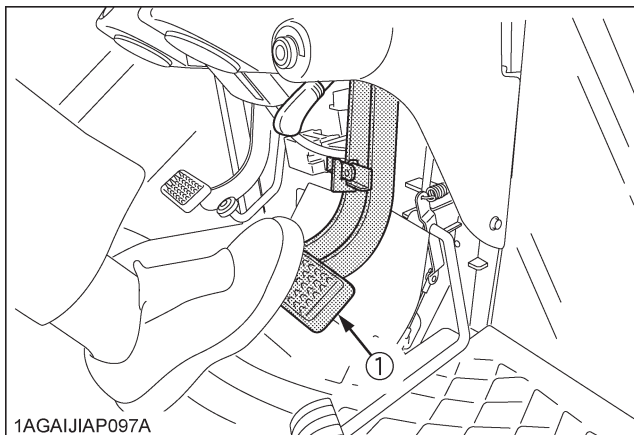

1AGAIJAP097A

- (1) Brake pedals

STOPPING

■ Stopping

1. Slow down the engine.
2. Step on the clutch and brake pedal.
3. After the tractor has stopped, disengage the PTO, lower the implement to the ground, shift the transmission to neutral, release the clutch pedal, and set the parking brake.

CHECK DURING DRIVING


■ Immediately Stop the Engine if:

- The engine suddenly slows down or accelerates,
- Unusual noises are suddenly heard,
- Exhaust fumes suddenly become very dark,

■ Easy Checker(TM)

If the warning lamps in the Easy Checker(TM) come on during operation, immediately stop the engine, and find the cause as shown below.

Never operate the tractor while Easy Checker(TM) lamp is on.

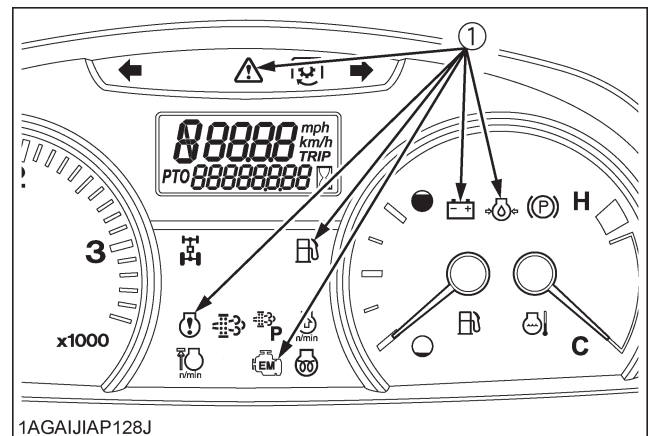

1AGAIJAP128J

- (1) Easy Checker(TM)



Engine warning

This indicator serves the following two functions. If the indicator lights up, pinpoint the cause and take a proper measure.

1. Error with the engine control system
If during operation the water temperature gauge reads an acceptable level but the warning lamp in the Easy Checker(TM) comes on, stop the engine and get it restarted. If the error happens again, consult your local KUBOTA Dealer.

IMPORTANT :

- If the warning indicator lights up, the following phenomena may appear depending on the engine's trouble spot.
 - The engine stops unexpectedly.
 - The engine fails to start or gets interrupted just after start.
 - The engine output is not enough.
 - The engine output is enough, but the warning indicator stays on.

If the engine output is not enough, immediately interrupt the operation and move the tractor to a safe place and stop the engine.

2. Engine overheat

If the water temperature gauge reads an unusual level and the warning lamp in the Easy Checker(TM) comes on, the engine may have got overheated. Check the tractor by referring to "TROUBLESHOOTING" section.



Engine oil pressure

If the oil pressure in the engine goes below the prescribed level, the warning lamp in the Easy Checker(TM) will come on.

If this should happen during operation, and it does not go off when the engine is accelerated to more than 1000 rpm, check level of engine oil.

(See "Checking Engine Oil Level" in "DAILY CHECK" in "PERIODIC SERVICE" section.)



Fuel level

If the fuel in the tank goes below the prescribed level, the warning lamp in the Easy Checker(TM) will come on. (less than 15 L (4.0 gals.))

If this should happen during operation, refuel as soon as possible.

(See "Checking and Refueling" in "DAILY CHECK" in "PERIODIC SERVICE" section.)

IMPORTANT :

- When the fuel warning indicator lights up, refuel the tank as soon as possible. If the tractor runs out of fuel and stalls, the engine and its components may be damaged.



Emission indicator

If this indicator lights up, take the steps to lower the water temperature. This helps keep the emission clean.



Electrical charge

If the alternator is not charging the battery, the Easy Checker(TM) will come on.

If this should happen during operation, check the electrical charging system or consult your local KUBOTA Dealer.



Master system warning

If trouble should occur at the engine, transmission or other control parts, the indicator flashes as a warning. If the trouble is not corrected by restarting the tractor, consult your local KUBOTA Dealer.

NOTE :


- For checking and servicing of your tractor, consult your local KUBOTA Dealer for instructions.

Fuel Gauge

When the key switch is on, the fuel gauge indicates the fuel level.

Be careful not to empty the fuel tank. Otherwise air may enter the fuel system.

Should this happen, the system should be bled. (See "Bleeding Fuel System" in "SERVICE AS REQUIRED" in "PERIODIC SERVICE" section.)

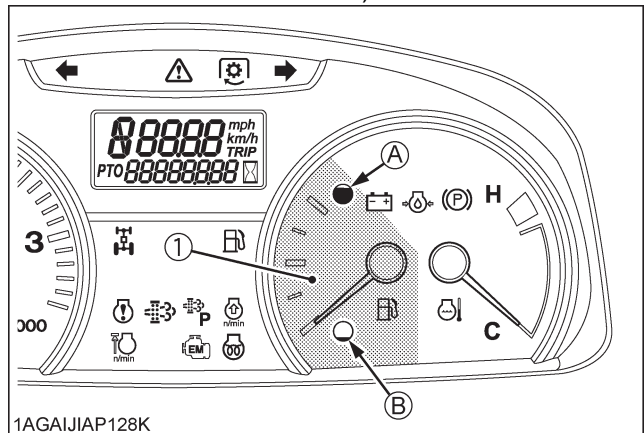

(1) Fuel gauge

(A) "FULL"

(B) "EMPTY"

■ Coolant Temperature Gauge




WARNING

To avoid personal injury or death:

- Do not remove radiator cap until coolant temperature is well below its boiling point. Then loosen cap slightly to the stop to relieve any pressure before removing cap completely.

1. With the key switch at "ON", this gauge indicates the temperature of the coolant. "C" for "cold" and "H" for "hot."
2. If the indicator reaches the red zone position, engine coolant is overheated. Check the tractor by referring to "TROUBLESHOOTING" section.

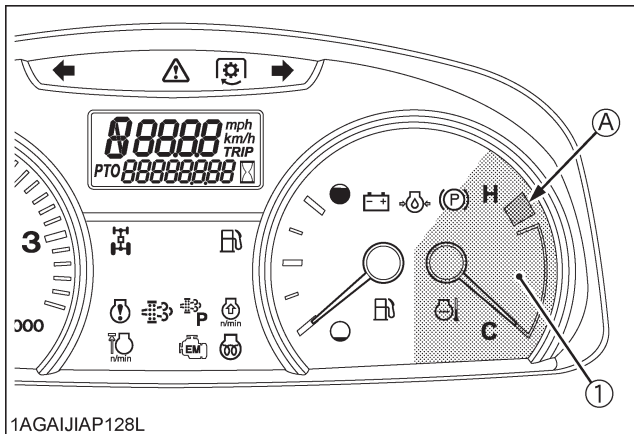

(1) Coolant temperature gauge

(A) "RED ZONE"


◆ Precaution at Overheating

Take the following actions in the event the coolant temperature is nearly or more than the boiling point, what is called "Overheating"

1. Park the tractor in a safe place and keep the engine unloaded idling.
2. Don't stop the engine suddenly, but stop it after about 5 minutes of unloaded idling.
3. Keep yourself well away from the machine for further 10 minutes or while the steam blows out.
4. Check that there are no dangers such as burns. Get rid of the causes of overheating according to the manual, see "TROUBLESHOOTING" section, and then, start again the engine.

■ Tachometer

The tachometer indicates the engine speed on the dial.

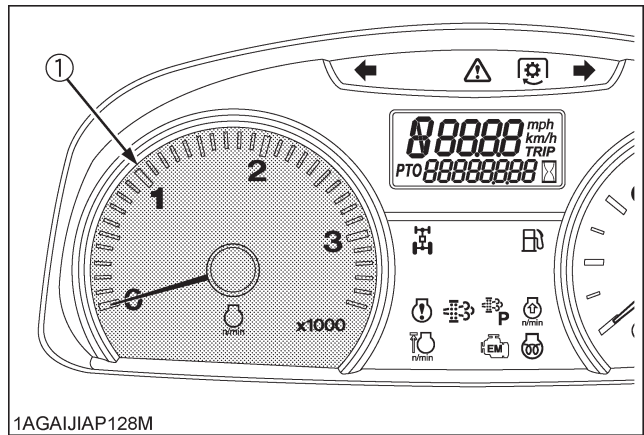


(1) Engine revolution





LCD MONITOR



■ Changing Display Mode

1. The LCD monitor gives three different display modes: "Traveling speed and Hour meter", "Traveling speed and PTO speed" and "Traveling speed and Fuel meter". Each time the PTO/Hour meter select switch is pressed, the mode is switched to the changing display.
2. The PTO clutch control switch works for the following automatic display modes.
 - 1) PTO clutch control switch ON: Traveling speed and PTO speed are displayed.
 - 2) PTO clutch control switch OFF: Traveling speed and Hour meter are displayed.
3. The units of travel speed and mileage (mile, km, gallon and liter) can be selected with the traveling speed select switch.

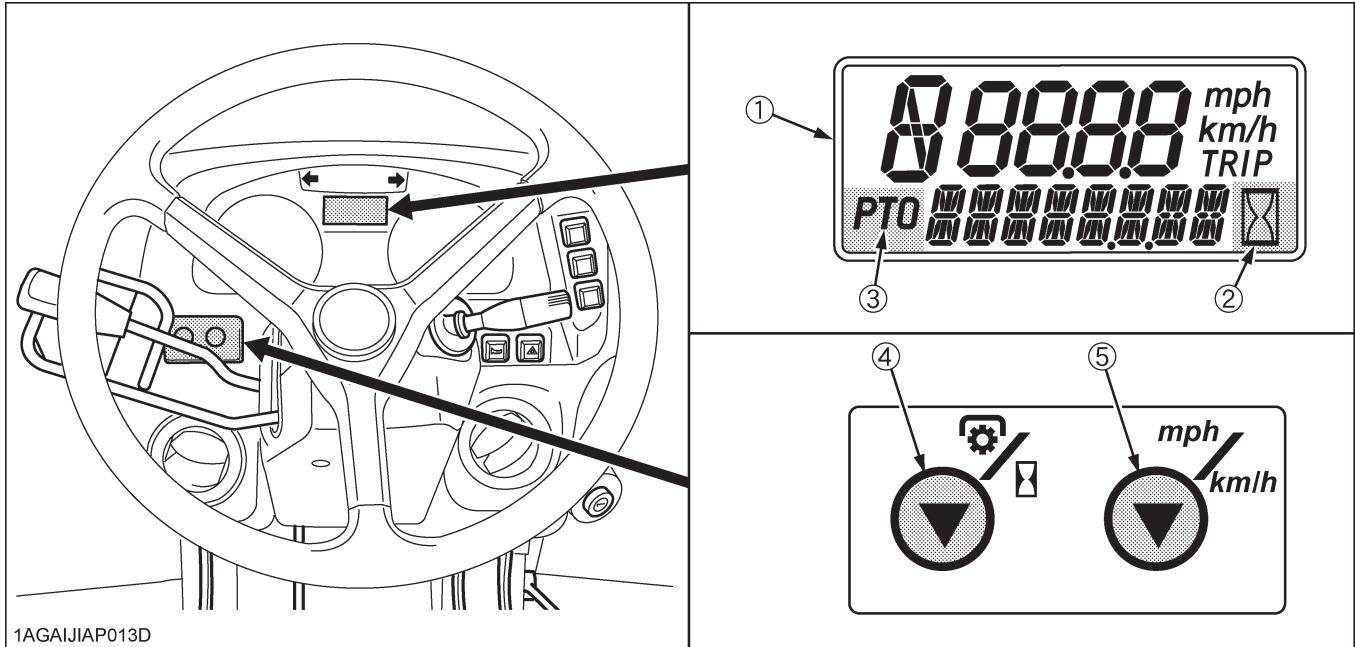

  - (1) LCD monitor
- (2) Hour Meter Indication
- (3) PTO Indication
- (4) PTO / Hour Meter Select Switch
- (5) Traveling Speed Select Switch

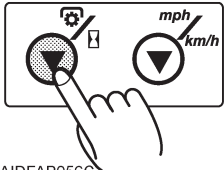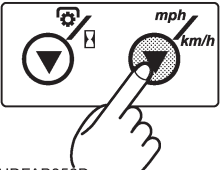	Each push on the switch changes the following modes (1 thru 3).  1AGAIDFAP056C	Each push on the switch changes the following displays.  1AGAIDFAP056D	
1	1. Traveling speed and Hour meter mode	Hour meter  1AGAIJHAP002A Trip meter  1AGAIJHAP002B	● Traveling speed and total operating hours are displayed. ● The hour meter indicates in 5 digits the hours the tractor has been used; the last digit indicates 1/10 of an hour. ● The total operating hours, counted from the previous resetting, is displayed. ● Hold down the PTO / Hour meter select switch for 2 seconds or longer to reset the trip meter to [0. 0].
	2. Traveling speed and PTO mode	[PTO speed]  1AGAIJHAP002C	● Traveling speed and PTO speed are displayed. ● When the PTO clutch control switch is in "OFF" position, "OFF" is displayed. ● See "PTO Speed Display Mode Switching" in "LCD MONITOR" in "OPERATING THE TRACTOR" section.
	3. Traveling speed and Fuel meter mode	Instantaneous fuel consumption (Gallons (Liters) / hour display)  1AGAIJHAP002D Average fuel consumption (Gallons (Liters) / hour display)  1AGAIJHAP002E Total fuel consumption (Gallons (Liters) display)  1AGAIJHAP002F	● The fuel consumption under the current operating conditions is converted to an per-hour value and displayed digitally. ● The amount of fuel consumed in operation from the time of the last reset to the present is converted to an per-hour value and displayed digitally. ● Hold down the PTO / Hour meter select switch for 2 seconds or longer to reset the average fuel consumption display to [0. 0]. ● The total amount of fuel consumed in operation from the time of the last reset to the present is displayed digitally. The maximum value which can be displayed is 8000 gallons or 30000 liters. ● Hold down the PTO / Hour meter select switch for 2 seconds or longer to reset the total fuel consumption display to [0. 0].

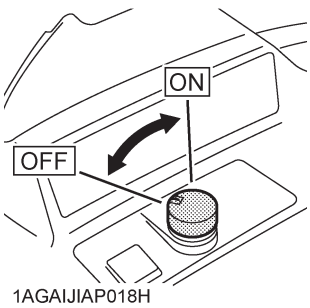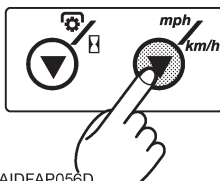2	PTO clutch control switch  1AGAIJAP018H	PTO OFF (Hour meter mode)  1AGAIJHAP002A PTO ON (PTO speed mode)  1AGAIJHAP002H	● Traveling speed and total operating hours are displayed. ● The hour meter indicates in 5 digits the hours the tractor has been used; the last digit indicates 1/10 of an hour. ● When the PTO / Hour meter select switch is pressed in this state, "OFF" is displayed. ● Traveling speed and PTO speed are displayed. ● When the PTO / Hour meter select switch is pressed in this state, the display mode switches to hour meter mode.
3	Display mode switching Press and hold longer than 2 seconds.  1AGAIJFAP056D	mph (Traveling speed) gallons (Fuel consumption)  1AGAIJHAP002G ↔ km/h (Traveling speed) liters (Fuel consumption)  1AGAIJHAP002G	

NOTE :

- Errors may occur in the fuel consumption display depending on the conditions of use. Use the displayed data only as an approximate guide. In particular, do not use the total fuel consumption display mode in place of the fuel gauge.
- The travel speed displayed when the wheels slip under traction is different from the actual one.
- In cold weather the LCD monitor response will normally be slower and the visibility be less, than in warmer weather.

■ PTO Speed Display Mode Switching

[with 540 rpm model]


[with 540/540E rpm model]

The PTO speed display mode has been factory-set at Code 1. Do not attempt to change the code. Otherwise the correct PTO speed will not be displayed in the LCD monitor.


(NOTE: The current code can be checked in the following switching procedure.)

◆ Switching procedure

- ① While pressing the PTO/Hour meter select switch, turn the key switch to "ON" position.

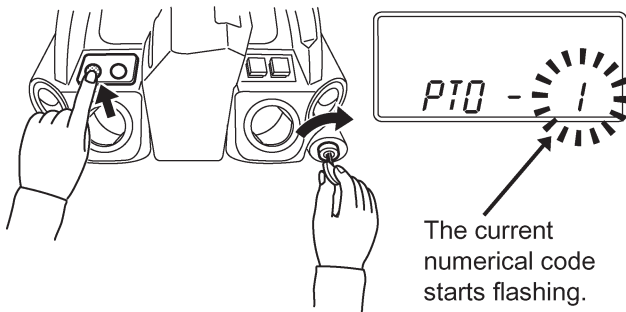


- ② Each time the Traveling speed select switch is pressed, the code changes in the order of [1]→[2]→[1]. Select the appropriate code according to the table below.

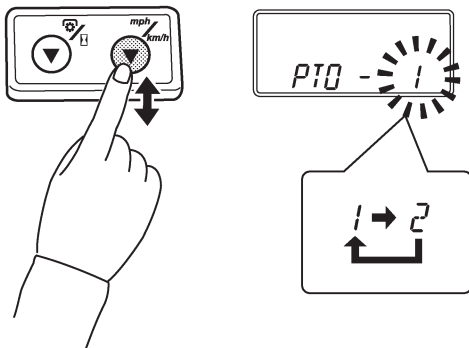

1AGAIJAP124A

- ③ Press and hold the Traveling speed select switch longer than 2 seconds. The setting is put in memory, and the LCD monitor goes back to the PTO speed display mode.

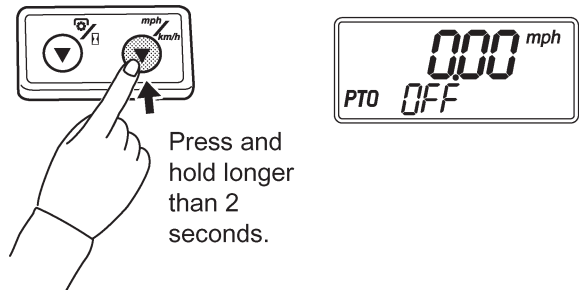

NOTE:

- The setting will be cancelled if the key switch is turned OFF halfway in the procedure.

Numerical code	PTO speed (rpm)
1	540
	540 / 540E (with PTO gear shift lever)
2	Not select (North American model)


■ Entering the Travel Speed Coefficient

When optional different-diameter tires are fitted on the machine, the travel speed display mode must be changed. Otherwise the travel speed will not get correctly displayed. Such mode switching is also needed when the original tires are back on the machine.


◆ How to enter the tire circumference

Example: Entering 179.0 inch.


① While pressing the Traveling speed select switch, turn the key switch to ON position. The setting of the current tire's circumference is displayed in inches or millimeters. The highest-digit numeral starts flashing.

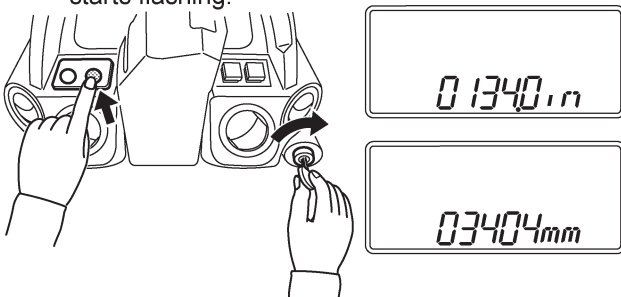


② Each time both the PTO/Hour meter select switch and Traveling speed select switch are pressed at the same time, the unit changes for inches or millimeters. Select the inch display mode.

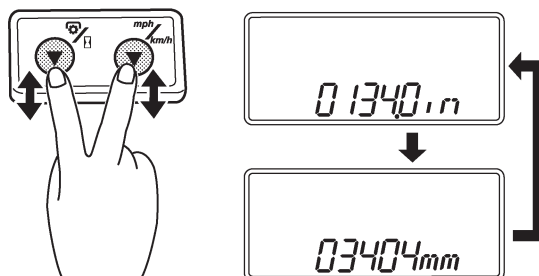


③ Note that the highest-digit numeral is flashing. Press the Traveling speed select switch to select "1". (The numeral changes from 0 to 9 at each push of the switch.)

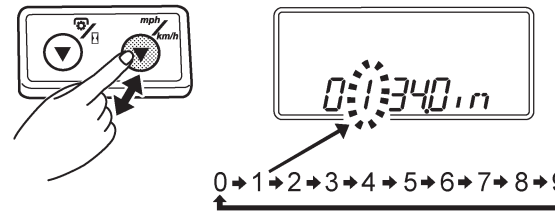

④ Press the PTO/Hour meter select switch, and the next highest digit starts flashing.

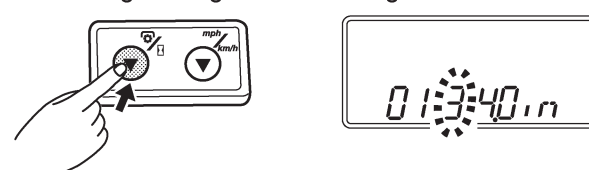


Now press the Traveling speed select switch to select "7".

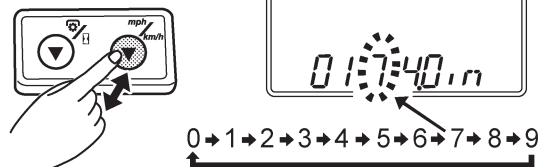

⑤ Enter "9" and "0" for the remaining digits in the same procedure.

⑥ Make sure the entry is "179.0". Press and hold the Traveling speed select switch longer than 2 seconds. The setting is put in memory, and the LCD monitor goes back to the Hour meter mode.

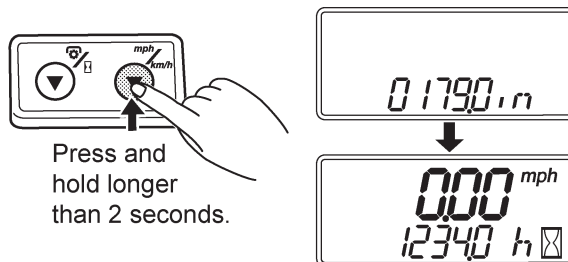

NOTE:

- The setting will be cancelled if the key switch is turned OFF halfway in the procedure.

◆ Tire circumference chart (reference)

[M6060, M7060 2WD model]

Rear tire size	Entry (in.)	Entry (mm)
21.5L-16.1 R3 Turf	129.5	3289
570-648 LSW Turf	136.7	3471
22.5LL-16.1 Galaxy	138.2	3511
16.9-24 R4 IND	150.0	3810
16.9-24 R3	152.0	3861
14.9-28 R1	159.0	4039
16.9-28 R1	165.0	4191

[M7060 4WD model]

Rear tire size	Entry (in.)	Entry (mm)
16.9-30	179	4540
16.9-24 R1	162	4120
420/85R30	173	4400
21.5L-16.1	133	3370
18.4-26	172	4360
LSW570-648	143	3620
16.9-24 R4	157	4000
LSW420/75R34	180	4580

ELECTRONIC ENGINE CONTROL

■ Constant RPM Management Control


Constant RPM Management can be turned "ON" or "OFF" by operating the switch. Pressing the switch turns the control "ON" and pressing the switch again turns it "OFF".

◆ When constant RPM management is "ON"

Fluctuations in the engine speed due to load fluctuations are reduced and the travel speed and PTO speed are kept nearly constant, allowing stable work. When constant RPM management is "ON", the switch's indicator light up.

◆ When constant RPM management is "OFF"

As in a conventional engine, the engine speed increases or decreases according to changes in the load. The operator judges the size of the load from the engine speed and engine sound, and can adjust the travel speed or plowing depth to prevent overload on the tractor.

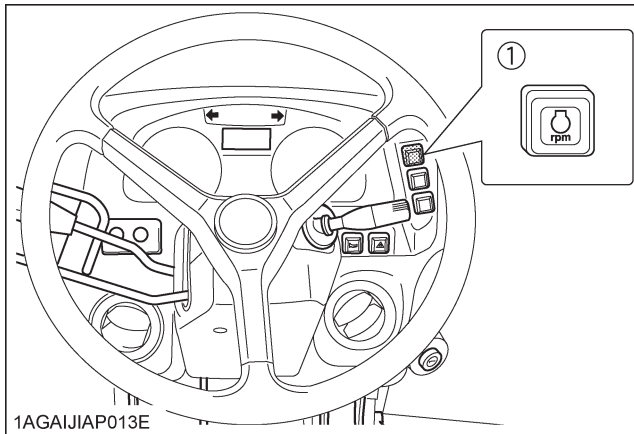

(1) Constant RPM management switch with indicator

NOTE :

- In a mechanically-controlled engine, the engine speed changes according to increases and decreases in the load. For example, when working in a hilly area, the load increases and engine speed drops while ascending a slope, and conversely the load drops when descending. These changes in engine speed affect the travel speed and PTO-driven implements. In order to minimize these effects, the operator must make fine adjustments to the travel speed and hand throttle lever. When the constant RPM management switch in this tractor with its electronically controlled engine is turned "ON", the engine speed will be kept nearly constant in response to a certain level of load fluctuations. This improves the accuracy of work without the need for troublesome manipulation of the travel speed and hand throttle lever.

- There is a limit to the range within which a constant speed can be maintained. If a load exceeding the engine performance is applied, the engine speed will drop.
- The purpose of constant RPM management is not to increase the engine power.

PARKING

■ Parking

[F8/R8 model]




WARNING

To avoid personal injury or death:
BEFORE DISMOUNTING TRACTOR

- **ALWAYS SET PARKING BRAKE AND LOWER ALL IMPLEMENTS TO THE GROUND.**
Leaving transmission in gear with the engine stopped will not prevent the tractor from accidental rolling.
- **STOP THE ENGINE AND REMOVE THE KEY.**

1. When parking, be sure to set the parking brake.
To set the parking brake;
 - (1) Interlock the brake pedals.
 - (2) Depress the brake pedals.
 - (3) Latch the brake pedals with the parking brake lever.

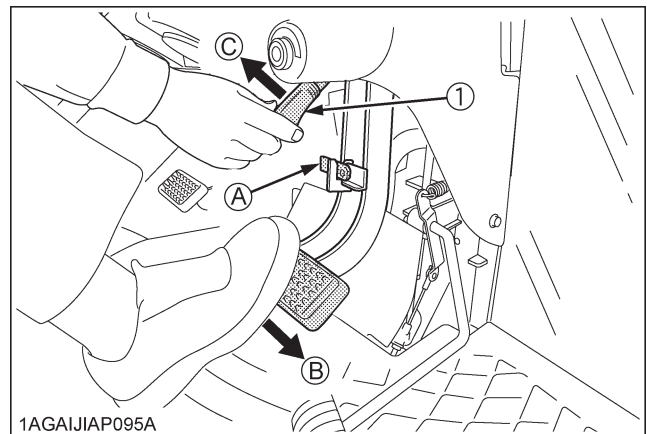

(1) Parking brake lever

(A) Interlock the brake pedals
(B) "DEPRESS"
(C) "PULL"

IMPORTANT :

- To prevent damage to the parking brake lever, make sure that brake pedals are fully depressed before pulling the parking brake lever up.
2. Before getting off the tractor, disengage the PTO, lower all implements to the ground, place all control levers in their neutral positions, set the parking brake, stop the engine and remove the key.

3. If it is necessary to park on an incline, be sure to chock the wheels to prevent accidental rolling of the machine.

IMPORTANT :

- Do not leave your tractor in the rain. If it cannot be avoided, cover the muffler pipe to prevent water entering.

■Parking

[F12/R12 model]



WARNING

To avoid personal injury or death:


BEFORE DISMOUNTING TRACTOR

- **ALWAYS SET PARKING BRAKE AND LOWER ALL IMPLEMENTS TO THE GROUND.**

Leaving transmission in gear with the engine stopped will not prevent the tractor from accidental rolling.

- **STOP THE ENGINE AND REMOVE THE KEY.**

1. Before leaving the tractor, disengage the PTO, lower all implements, place the shuttle shift lever to neutral position, place the main gear shift lever to park position, stop the engine and remove the key.
2. If it is necessary to park on an incline, be sure to chock the wheels to prevent accidental rolling of the tractor.

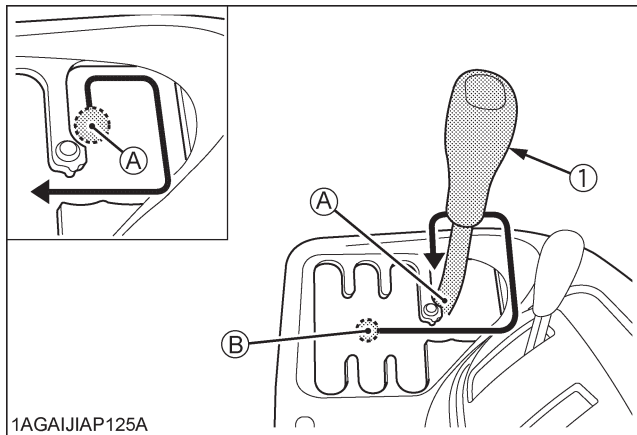

1AGAIJAP125A

(1) Main gear shift lever

(A) "PARK POSITION"

(B) "NEUTRAL POSITION"

IMPORTANT :

- Do not leave your tractor in the rain. If it cannot be avoided, cover the muffler pipe to prevent water entering.

OPERATING TECHNIQUES

■Differential Lock




WARNING

To avoid personal injury or death due to loss of steering control:

- Do not operate the tractor at high speed with differential lock engaged.
- Do not attempt to turn with the differential lock engaged.
- Be sure to release the differential lock before making a turn in field conditions.

If one of the rear wheels should slip, step on the differential lock pedal. Both wheels will turn together, then reduce slippage.

Differential lock is maintained only while the pedal is depressed.

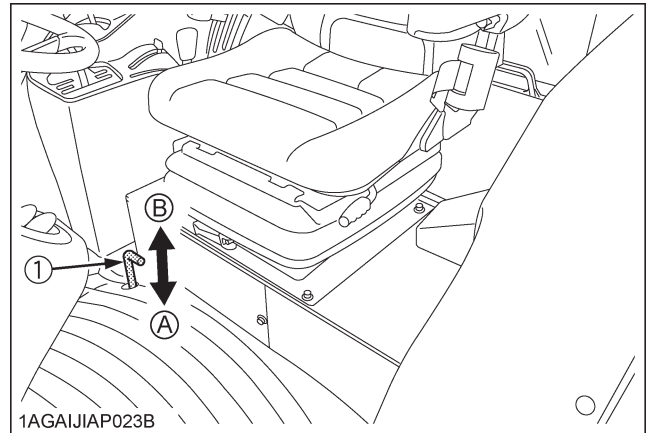

1AGAIJAP023B

(1) Differential lock pedal

(A) Press to "ENGAGE"

(B) Release to "DISENGAGE"

IMPORTANT :

- When using the differential lock, always slow the engine down.
- To prevent damage to powertrain, do not engage differential lock when one wheel is spinning and the other is completely stopped.
- If the differential lock cannot be released, step lightly on the brake pedals alternately.

■ Operating the Tractor on a Road




WARNING

To avoid personal injury or death:

- To help assure straight line stops when driving at transport speeds, lock the brake pedals together. Uneven braking at road speeds could cause the tractor to roll-over.
- When traveling on road with 3-point hitch mounted implement attached, be sure to have sufficient front weight on the tractor to maintain steering ability.

Be sure SMV emblem and warning lamps are clean and visible. If towed or rear-mounted equipment obstructs these safety devices, install SMV emblem and warning lamps on equipment.

Consult your local KUBOTA Dealer for further details.

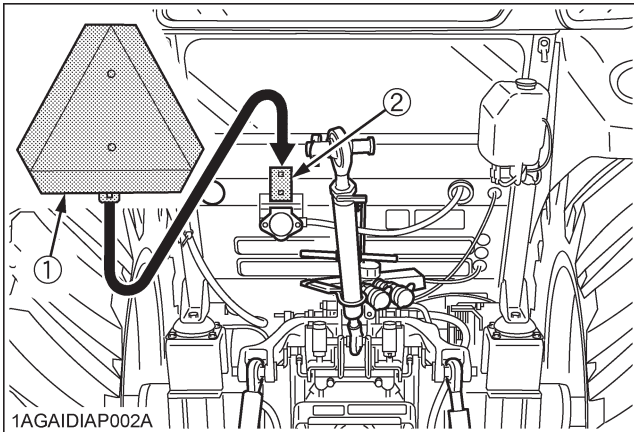

(1) SMV emblem

(2) Bracket

■ Operating on Slopes and Rough Terrain



WARNING

To avoid personal injury or death:

- Always back up when going up a steep slope. Driving forward could cause the tractor to tip over backward. Stay off hills and slopes too steep for safe operation.
- Avoid changing gears when climbing or descending a slope.
- If operating on a slope, never disengage the clutch or shift levers to neutral. Doing so could cause loss of control.
- Do not drive the tractor close to the edges of ditches or banks which may collapse under the weight of the tractor. Especially when the ground is loose or wet.

1. Be sure wheel tread is adjusted to provide maximum stability.
(See "WHEEL ADJUSTMENT" in "TIRES, WHEELS AND BALLAST" section.)
2. Slow down for slopes, rough ground, and sharp turns, especially when transporting heavy, rear mounted equipment.
3. Before descending a slope, shift to a gear low enough to control speed without using brakes.

■ Transport the Tractor Safely


1. The tractor, if damaged, must be carried on a truck. Secure the tractor tightly with ropes.
2. Follow the instruction below when towing the tractor: Otherwise, the tractor's powertrain may get damaged.
 - Set the all shift levers to "NEUTRAL" position.
 - If possible, start engine and select 2WD, if creep speed is fitted ensure that it is disengaged.
 - Tow the tractor using its front hitch or drawbar.
 - Never tow faster than "10 km/h (6.2 mph)".

■ Directions for Use of Power Steering

1. Power steering is activated only while the engine is running. Slow engine speeds make the steering a little heavier. While the engine is stopped, the tractor functions in the same manner as tractors without power steering.
2. When the steering wheel is turned all the way to the stop, the relief valve is activated. Do not hold the steering wheel in this position for a long period of time.
3. Avoid turning the steering wheel while the tractor is stopped, or tires may wear out sooner.
4. The power steering mechanism makes the steering easier. Be careful when driving on a road at high speeds.


■ **Trailer Electrical Outlet**

A trailer electrical outlet is supplied for use with trailer or implement.

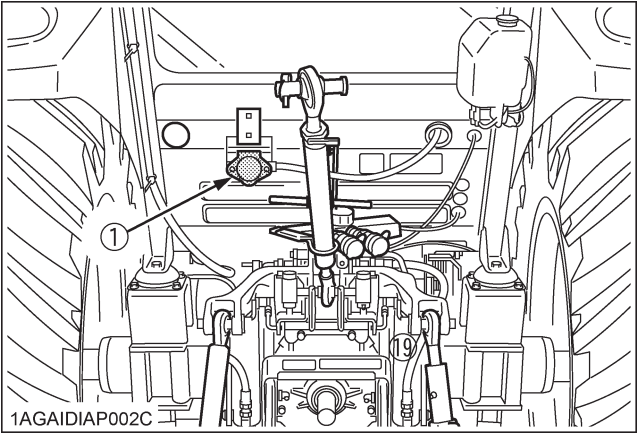

(1) Trailer electrical outlet

◆ **Function of each terminals in trailer electrical outlet**

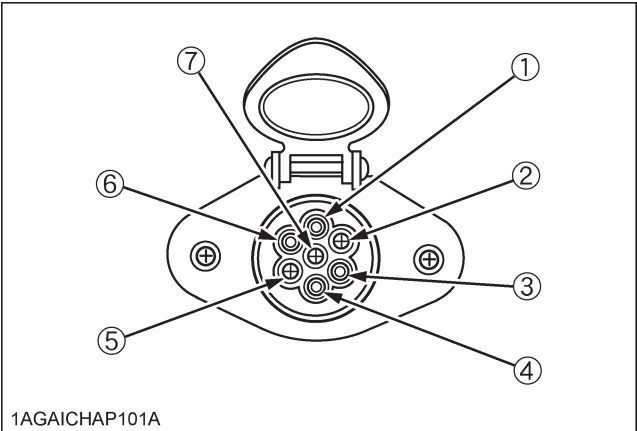

Terminal	Function
(1)	Ground
(2)	Tail light Sidemarker light Parking light
(3)	Turn signal light (LH)
(4)	Brake stop light
(5)	Turn signal light (RH)
(6)	Registration plate light
(7)	---

PTO

PTO OPERATION




WARNING

To avoid personal injury or death:

- Disengage PTO, stop engine, and allow all rotating components to come to a complete stop before connecting, disconnecting, adjusting, or cleaning any PTO driven equipment.

■ PTO Clutch Control Switch

The PTO clutch control switch engages or disengages the PTO clutch which gives the PTO independent control. Turn the switch to "ON" to engage the PTO clutch. Turn the switch to "OFF" to disengage the PTO clutch.

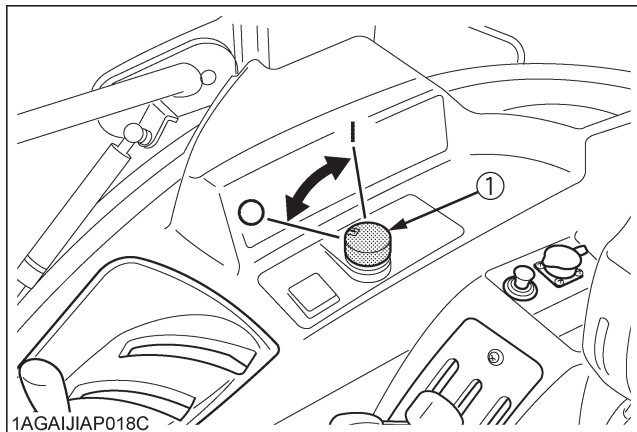


(1) PTO clutch control switch | "ON" ○ "OFF"

◆ PTO Clutch Control Switch


To turn ON

While pushing the switch, turn clockwise to the " | " position and release your hand. (In the ON position, switch slightly rises itself.)

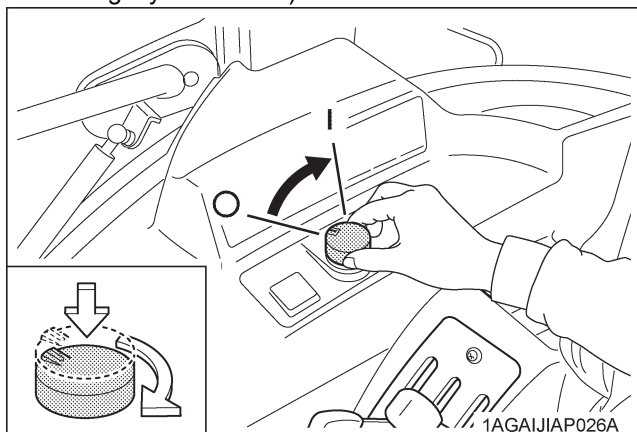

To Turn OFF

Tap on top of the switch, and the switch will return to the OFF position.

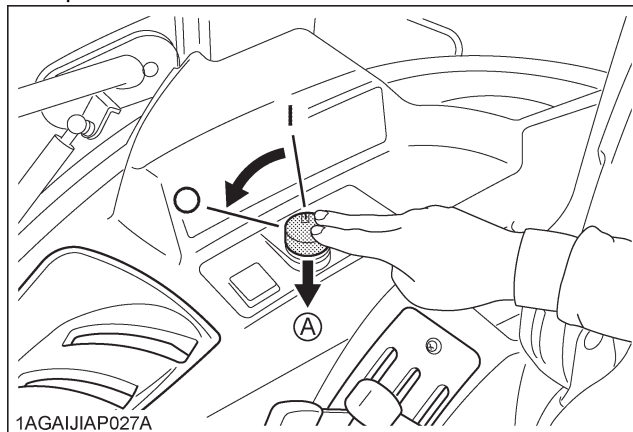

(A) "PUSH"

IMPORTANT :


- To avoid shock loads to the PTO, reduce engine speed when engaging the PTO, then open the throttle to the recommended speed.

NOTE :

- Tractor engine will not start if PTO clutch control switch is in the engaged "ON" position.

◆ PTO Clutch Indicator

The PTO clutch indicator turns on while PTO clutch control switch is in "ON" (Engage) position.

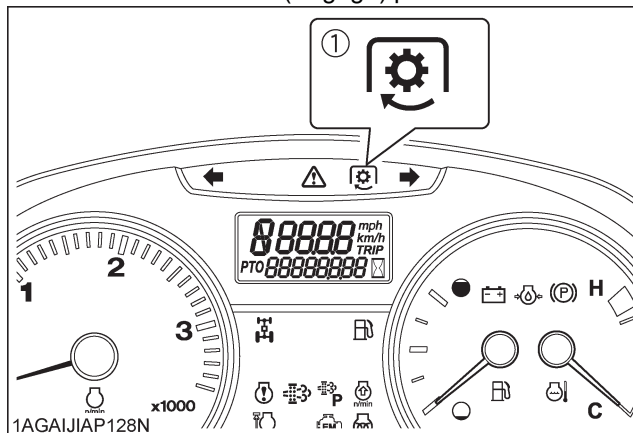

(1) PTO clutch indicator

■PTO Gear Shift Lever

[if equipped]




WARNING

To avoid personal injury or death:

- Be sure to observe the PTO shaft speed prescribed for the individual implements. It is extremely dangerous to run an implement at high speed that is meant to be operated at low speed. Use only when this higher rpm is specifically recommended by the implement manufacturer.

The PTO gear shift lever can be set to either 540 rpm or 540E rpm positions.

Move this lever to either position with the PTO clutch control switch set to "OFF".

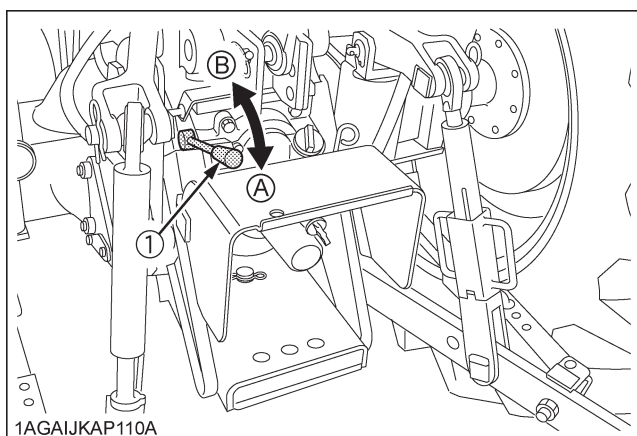

(1) PTO gear shift lever

(A) 540 rpm

(B) 540E rpm

NOTE :


- When light load, select the "540E" position for economical operation.

PTO gear shift lever	Engine speed rpm	PTO speed rpm
540	2160	540
540E	1828	540

■PTO Speed Limiter

NOTE :

- Move the PTO gear shift lever (if equipped) to "540E" and then turn on the PTO clutch control switch, and the rev-limiter indicator lights up on the meter panel.
- If the PTO clutch control switch is turned on with the engine rpm higher than the PTO 540E limit level, the PTO clutch indicator on the meter panel starts blinking and the PTO is disabled. After a while, the engine rpm automatically drops below the PTO 540E limit level and the PTO starts functioning. At the same time, the flashing PTO clutch indicator stays "ON".
- If the PTO clutch control switch is turned "OFF" but the engine rpm fails to rise with the throttle, return the engine rpm to a lower level. This enables acceleration again.

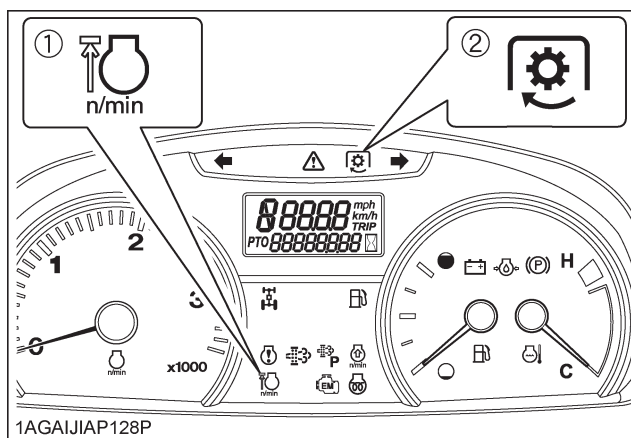


(1) Rev-limiter indicator

(2) PTO clutch indicator


PTO	Limitation PTO / Engine speed (rpm)
540E	630 / 2132

■ LCD Monitor Message

1. The PTO rpm can be checked in the LCD monitor.
(See "LCD MONITOR" in "OPERATING THE TRACTOR" section.)
2. When the PTO system gets engaged (ON), the indicator lights up.

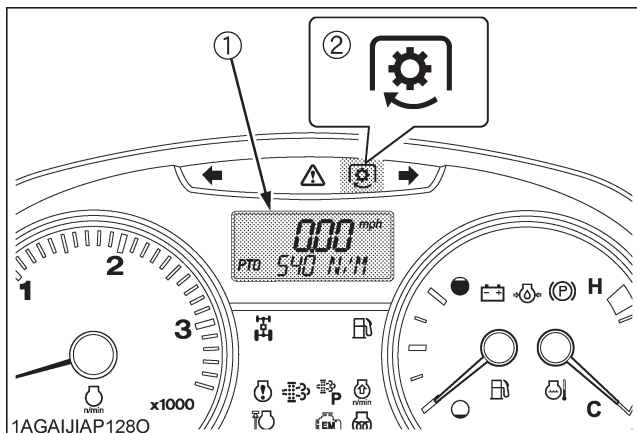

- (1) LCD monitor
(2) PTO clutch indicator

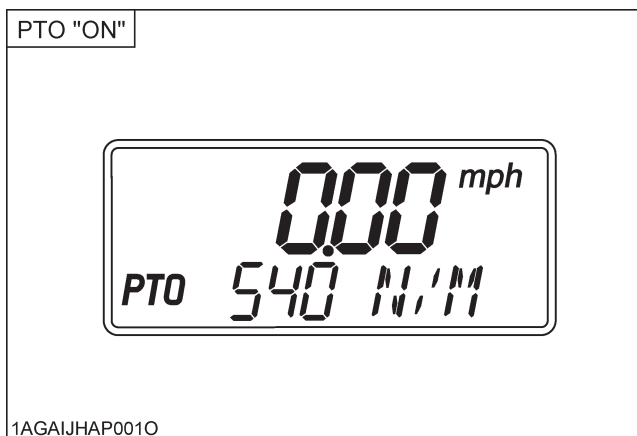

1AGAIJHAP0010


■ PTO Shaft Cover and Shaft Cap



WARNING

To avoid personal injury or death:

- Keep the PTO shaft cover in place at all times. Replace the PTO shaft cap when the PTO is not in use.
- Before connecting or disconnecting a drive shaft to PTO shaft, be sure engine is "OFF". Raise up the PTO shaft cover. Afterward be sure to return the PTO shaft cover to the "NORMAL POSITION".

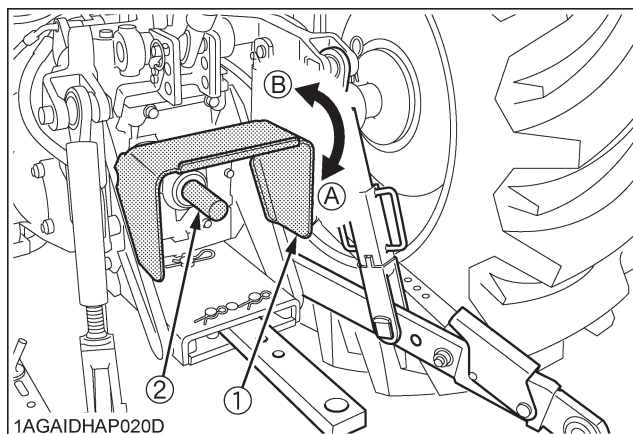

1AGAI DHAP020D


- (1) PTO shaft cover
(2) PTO shaft cap

- (A) "NORMAL POSITION"
(B) "RAISED POSITION"

IMPORTANT :

- The universal joint of the PTO drive shaft is technically limited in its moving angle. Refer to the PTO Drive Shaft Instructions for proper use.

3-POINT HITCH & DRAWBAR

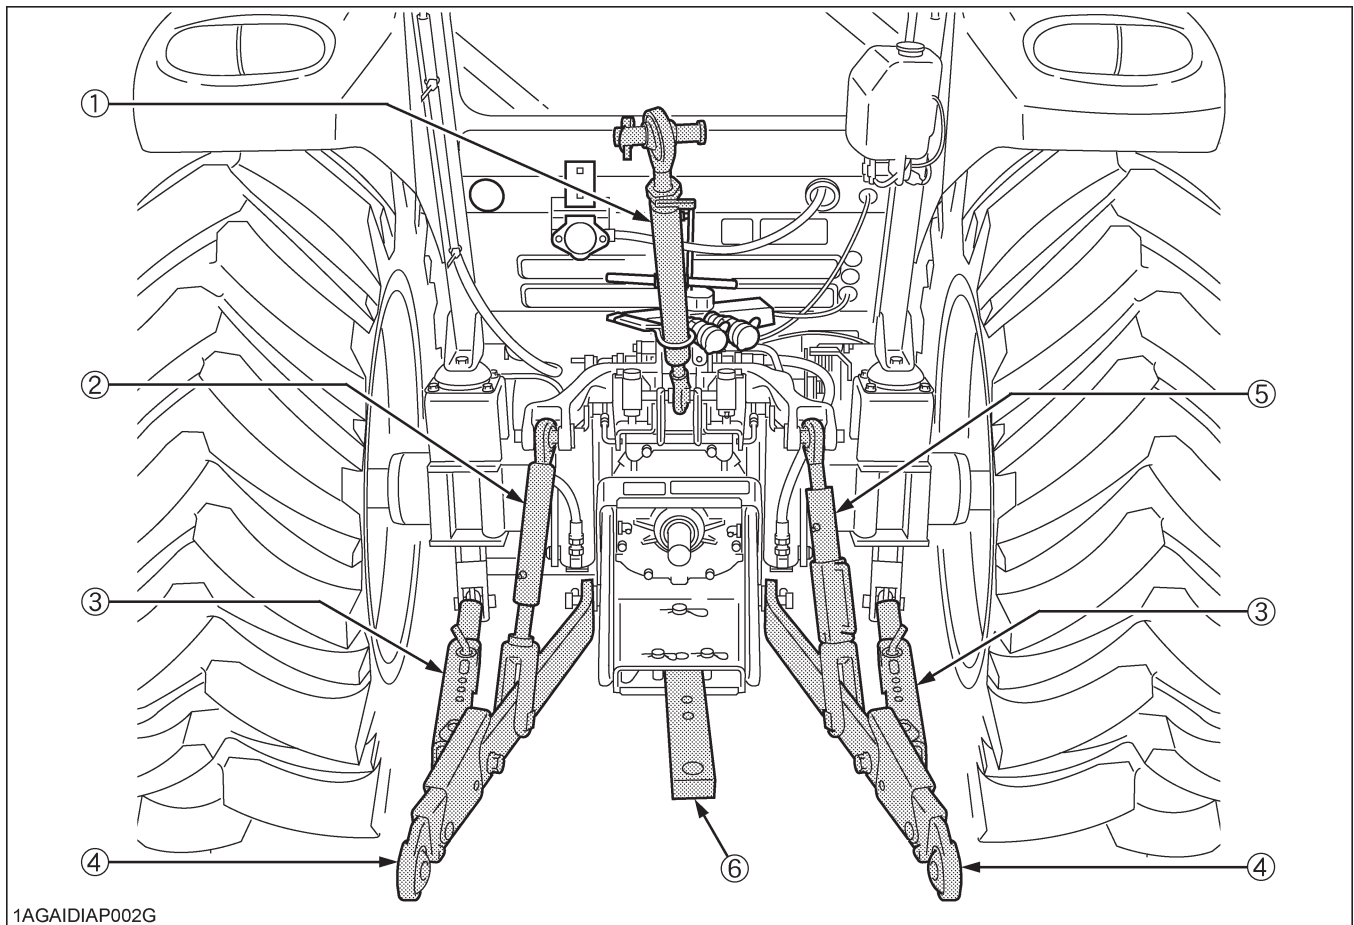

1AGAIDIAP002G

- (1) Top link
- (2) Lifting rod (Left)
- (3) Telescopic stabilizers
- (4) Lower link
- (5) Lifting rod (Right)
- (6) Drawbar

3-POINT HITCH



1. Make preparations for attaching implement.

■Category 1 & 2

The standard tractor has both category 1 & 2. Category 1 type is standard and assemble all parts shown as below.

To change from category 1 to category 2.


1. Remove adjusting collar from the lower link.
2. Add side collar onto both the lower links.
3. Remove adjusting collar from the rear top link pin.
4. Use the correct rear top link pin for category 2.

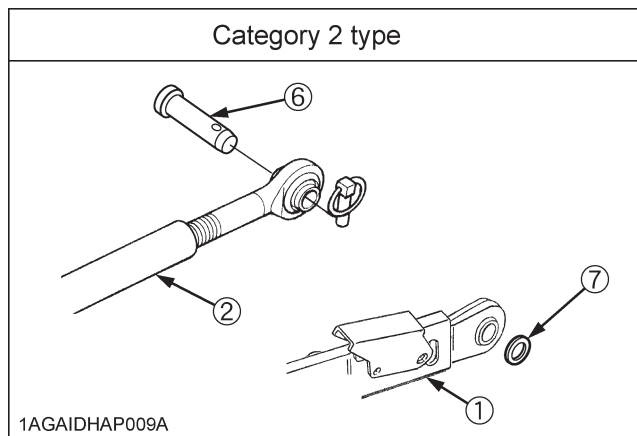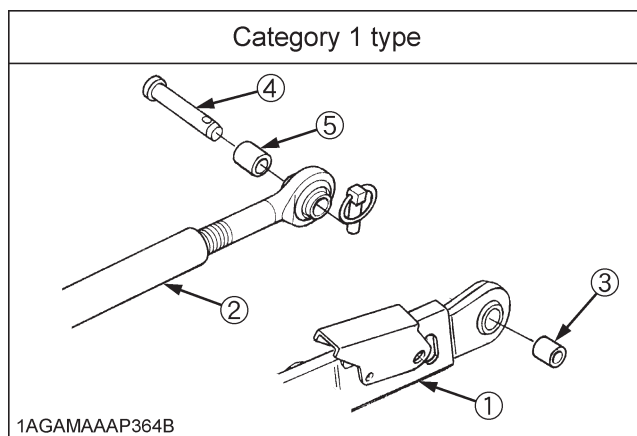

- | | |
|----------------------------|---------------------------|
| (1) Lower link | (5) Collar, top link (1) |
| (2) Top link | (6) Top link rear pin (2) |
| (3) Collar, lower link (1) | (7) Collar, side (2) |
| (4) Top link rear pin (1) | |

■Selecting the holes of Lower Links

There are 2 holes in the lower links. For most operations the lifting rods should be attached to the (B) hole.

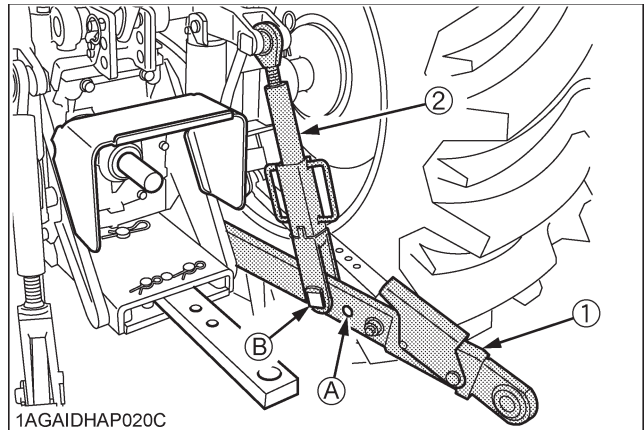

- (1) Lower link
(2) Lifting rod

holes: (A), (B)


NOTE :

- The lifting rods may be attached to (A) for greater lifting force.

■Selecting the Top Link Mounting Holes

Select the proper set of holes by referring to the "Hydraulic Control Unit Use Reference Chart" in Hydraulic Unit section.

If the hydraulic unit is set for draft control, draft response is more sensitive when an implement is connected to the lower set of top link mounting holes. If draft control is not required, it is recommended to use the top set (1).

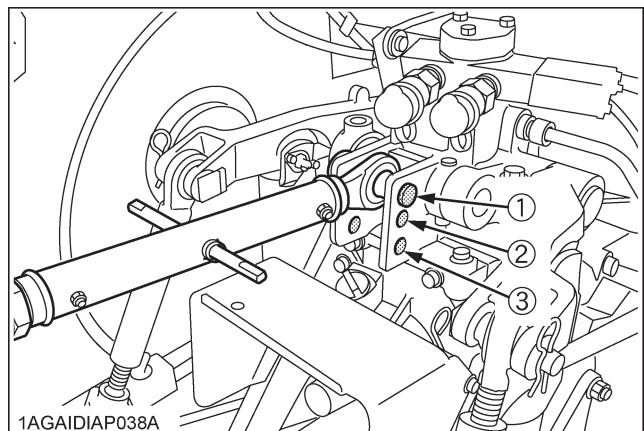


■ Draft Stopper

To reduce the vibrations of attachments, set the draft stopper to the "LOCK" position.

When using the draft control for plowing and similar works, set the draft stopper to the "UNLOCK" position.

When the draft stopper has been slid into position, insert the hairpin cotter to secure the draft stopper in that position against vibrations and the like.

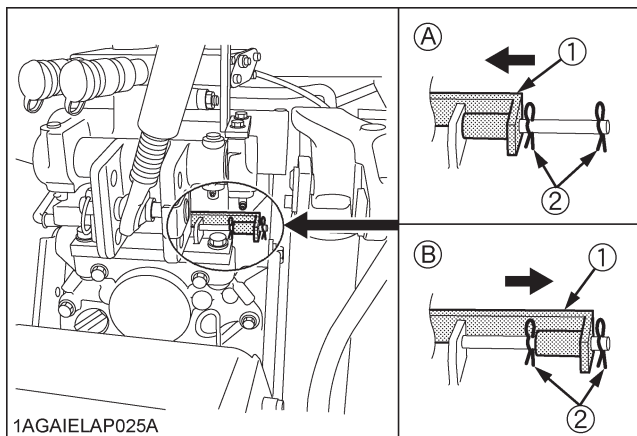

(1) Draft stopper
(2) Hairpin cotter

(A) "LOCK"
(B) "UNLOCK"

■ Drawbar

Remove the drawbar if a close mounted implement is attached.

2. Attaching and detaching implements



WARNING


To avoid personal injury or death:

- Be sure to stop the engine.
- Do not stand between tractor and implement unless parking brake is applied.
- Before attaching or detaching implement, locate the tractor and implement on a firm level surface.
- Whenever an implement or other attachment is connected to the tractor 3-point hitch, check full range of operation for interference, binding or PTO separation.
- Do not exceed maximum allowable length of either lifting rod, or the lifting rod will come apart and the 3-point equipment may fall.

■ Lifting Rod (Left)

By turning the rod itself, the lifting rod varies its length.

When extending the rod, do not exceed the groove on the rod thread.

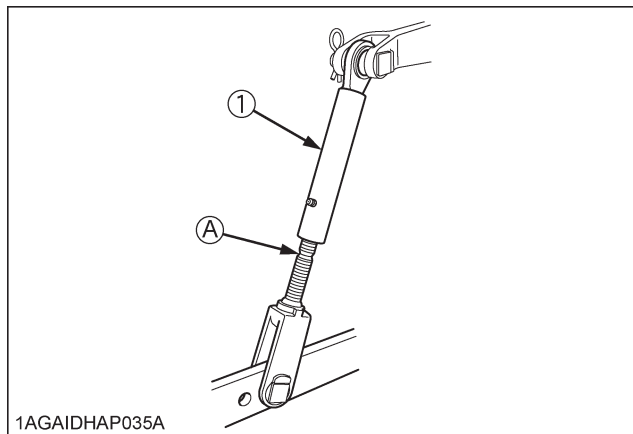

(1) Lifting rod

(A) "GROOVE"

■ Lifting Rod (Right)




WARNING

To avoid personal injury or death:

- Do not extend lifting rod beyond the groove on the thread rod.


1. To adjust the length of the lifting rod, lift the adjusting handle and turn to desired length.
2. After adjusting, lower the lifting rod adjusting handle to the lock position.
3. When extending the rod using adjusting handle, do not exceed the groove on the rod thread.

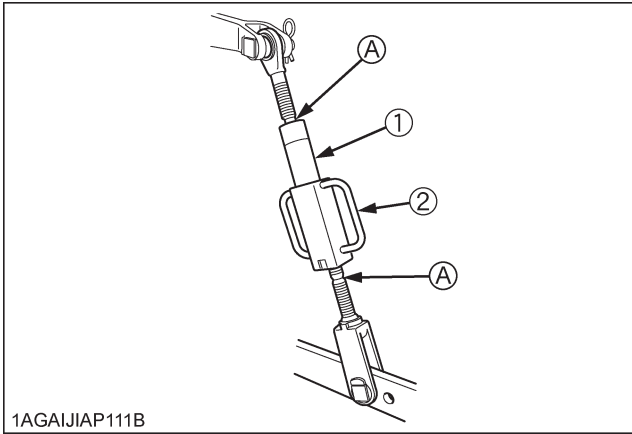

1AGAIJAP111B

- (1) Lifting rod
(2) Adjusting handle

(A) "GROOVE"

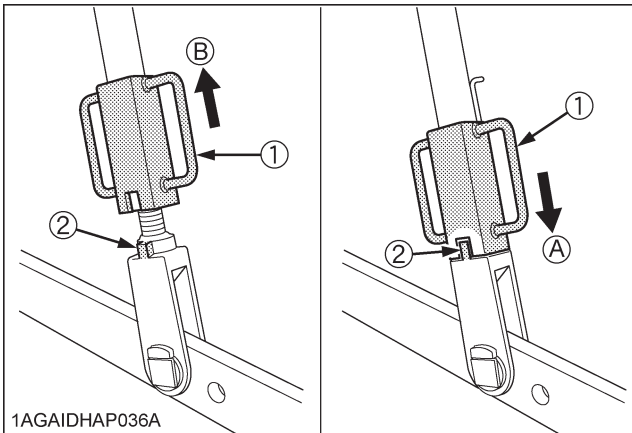

1AGAIIDHAP036A

- (1) Adjusting handle
(2) Lock pin

(A) "LOCK POSITION"
(B) "UNLOCK POSITION"

■ Top Link




WARNING

To avoid personal injury or death:

- When extending the top link, do not exceed the groove on the top link thread, or the top link will come apart and the 3-point equipment may fall.

1. Adjust the angle of the implement to the desired position by shortening or lengthening the top link.
2. The proper length of the top link varies according to the type of implement being used.

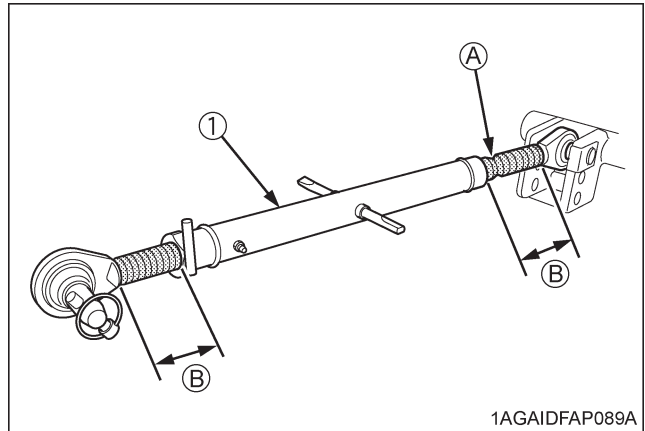

1AGAIIDFAP089A

(1) Top link

(A) "GROOVE"

(B) "Length of the screw"


NOTE :

- The length of the screw at both ends of the top link must be the same always.


■ Telescopic Stabilizers

Adjust the telescopic stabilizers to control horizontal sway of the implement. Select the proper set of holes by referring to the "Hydraulic Control Unit Use Reference Chart" in "REMOTE HYDRAULIC CONTROL SYSTEM" in "HYDRAULIC UNIT" section.

After aligning satisfactorily, insert the set-pin through any one of the 5 holes on the outer tube that align with one of the holes on the inner bar, both stabilizers will be locked. If the set-pin is inserted through the slot to engage one of the holes on the inner bar, a limited degree of sway will be permitted.

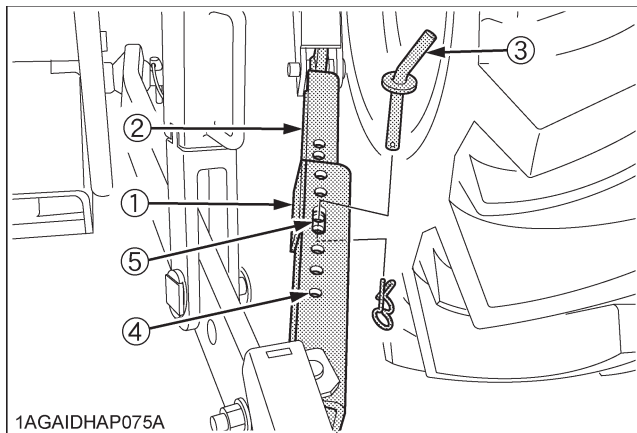

- (1) Outer tube
 (2) Inner bar
 (3) Set-pin
 (4) Hole
 (5) Slot

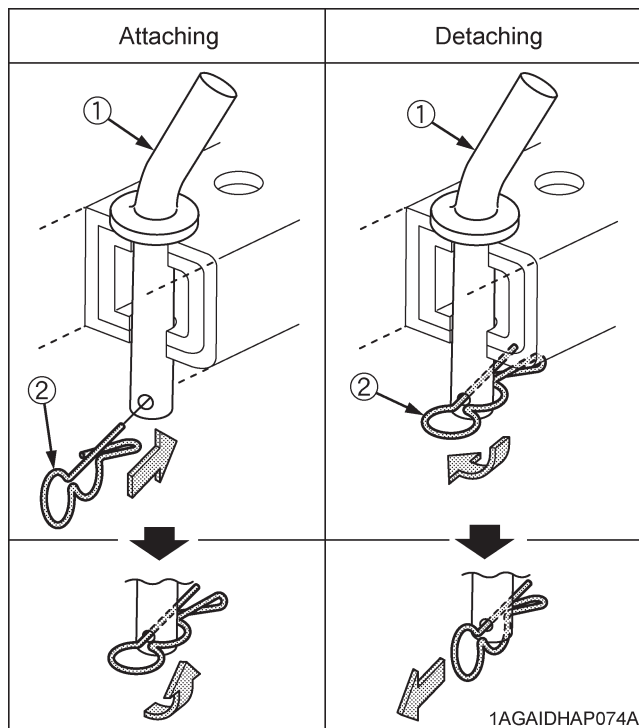


- (1) Set-pin
 (2) Hairpin cotter

■ Telescopic Lower Links

To attach an implement, follow the instructions below:

1. Push the levers, pull out the lower link ends, and attach to the implement.
2. Back up the tractor slightly to make sure the lower links are pushed in securely.

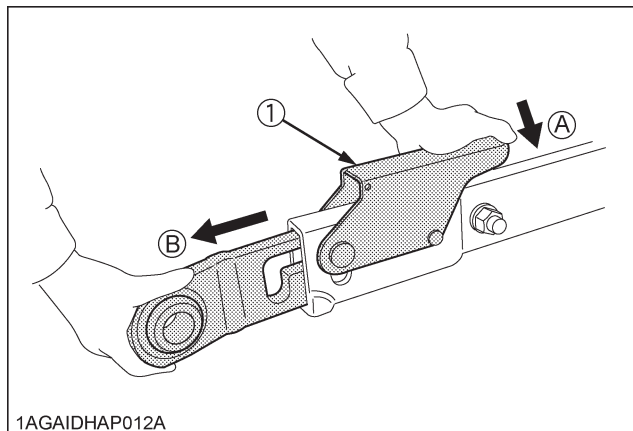

- (1) Lever

- (A) "PUSH"
 (B) "PULL OUT"

DRAWBAR



WARNING


To avoid personal injury or death:


- Never pull from the top link, the rear axle or any point above the drawbar. Doing so could cause the tractor to tip over rearward causing personal injury or death.

■ Adjusting Drawbar Length

When towing an implement, it is recommended that the (A) hole in drawbar be utilized.

The drawbar load is specified in the "IMPLEMENT LIMITATIONS" section.

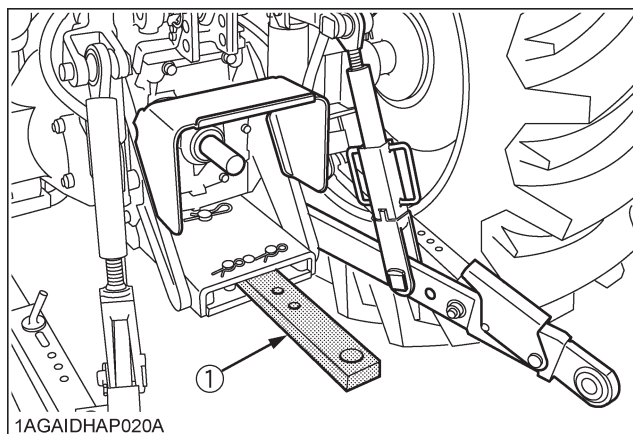

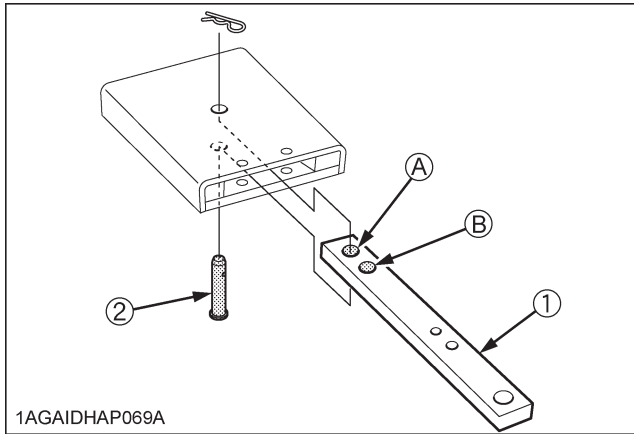


(1) Drawbar
(2) Pivot pin

Holes: (A), (B)

■ Swing Drawbar

The drawbar can be used in 3 different ways as illustrated below. Assemble it correctly with locating pins.

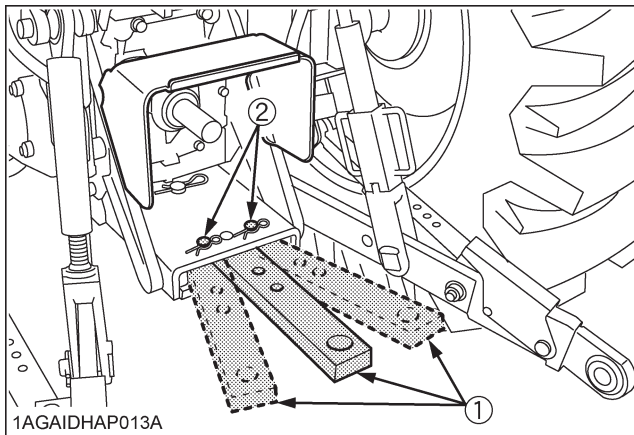

(1) Drawbar
(2) Locating pin

HYDRAULIC UNIT

The standard tractor has following hydraulic control systems as shown below. Therefore, use the most appropriate system for the implement you are using.

◆ 3-Point Hitch Control System

1. Position Control
2. Draft Control
3. Mixed Control
4. Float Control

◆ Remote Hydraulic Control System

IMPORTANT :

- Do not operate until the engine is warmed up. If operation is attempted when the engine is still cold, the hydraulic system may be damaged.
- If noises are heard when implement is lifting after the hydraulic control lever has been activated, the hydraulic mechanism is not adjusted properly. Unless corrected, the unit will be damaged. Contact your KUBOTA Dealer for adjustment.

3-POINT HITCH CONTROL SYSTEM



WARNING

To avoid personal injury or death:


- Before using the 3-point hitch controls, ensure that no person or object is in the area of the implement or 3-point hitch. Do not stand on or near the implement or between the implement and tractor when operating the 3-point hitch controls.

■ Draft Stopper

To reduce the vibrations of attachments, set the draft stopper to the "LOCK" position.

When using the draft control for plowing and similar works, set the draft stopper to the "UNLOCK" position.

When the draft stopper has been slid into position, insert the hairpin cotter to secure the draft stopper in that position against vibrations and the like.

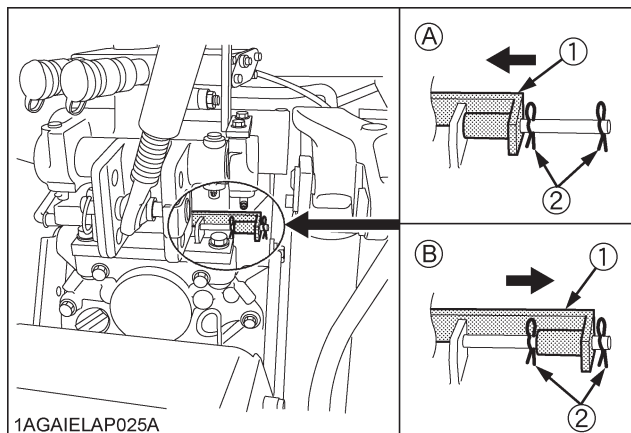


- (1) Draft stopper
(2) Hairpin cotter

- (A) "LOCK"
(B) "UNLOCK"

■ Position Control


This will control the working depth of 3-point hitch mounted implement regardless of the amount of pull required.

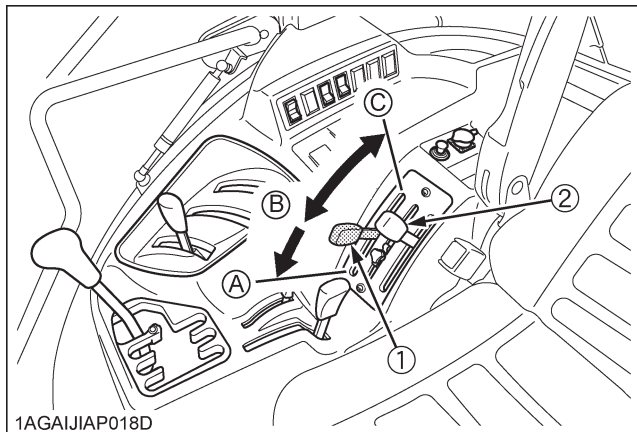

- (1) Position control lever
(2) Draft control lever
(A) "FLOAT"
(B) "DOWN"
(C) "UP"

■ Draft Control

This will control the pull of the 3-point implement. As the load on the 3-point hitch changes due to various soil conditions, the draft control system automatically responds to these changes by either raising or lowering the implement slightly to maintain a constant pull. Place the position control lever in the lowest position and set the implement pull with the draft control lever.

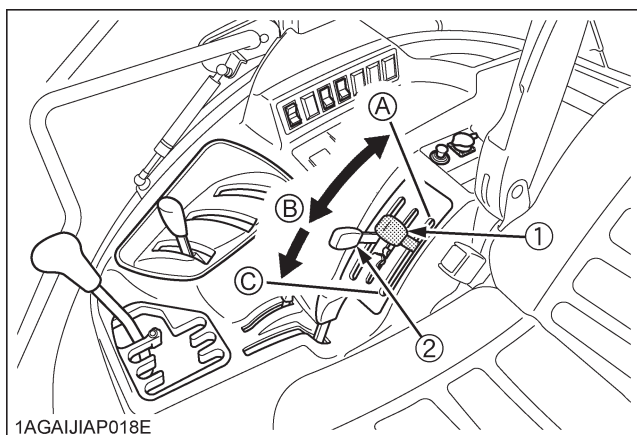


- (1) Draft control lever
(2) Position control lever
(A) "SENSITIVE"
(B) "INSENSITIVE"
(C) "FLOAT"

■ Mixed Control

In draft control, when draft decreases, the implement automatically lowers to increase draft. However, the implement sometimes lowers too much. To limit the degree, the implement can be lowered, set the position control lever at the lowest working depth desired for the implement. Lower the draft control lever to the point where the implement is at the desired depth.

This stops the implement from going too deep and causing loss of traction and ground speed.

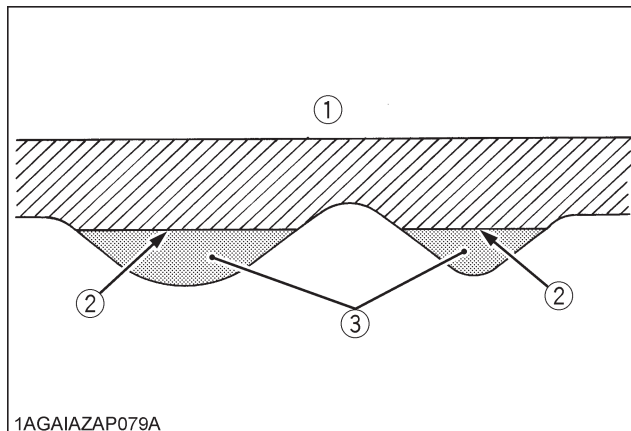

- (1) Ground surface
(2) Implement penetration limit
(3) Light soil

■ Float Control

Place both the draft control lever and the position control lever in the float position to make the lower links move freely along with the ground conditions.

3-point Hitch Lowering Speed




WARNING

To avoid personal injury or death:

- Fast lowering speed may cause damage or injury. Lowering speed of implement should be adjusted to 2 or more seconds.

The lowering speed of the 3-point hitch can be controlled by adjusting the 3-point hitch lowering speed knob.

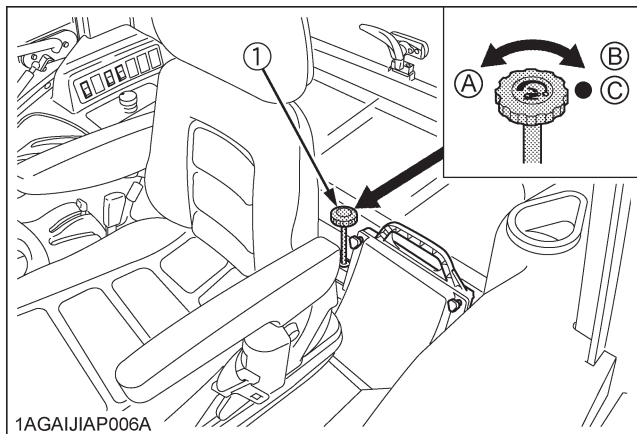

(1) 3-point hitch lowering speed knob

(A) "FAST"
(B) "SLOW"
(C) "LOCK"

REMOTE HYDRAULIC CONTROL SYSTEM

The hydraulic auxiliary control valves can be installed up to triple segments.

Remote Control Valve

There are 2 types of remote valves available for these models.


- Double acting valve with detents and self cancelling:
This valve may be placed in the detent mode. The lever will stay in this position until the pressure reaches a predetermined level or a cylinder reaches the end of its stroke. Then it will automatically return to neutral.
- Double acting valve with float position:
This valve may be placed in the float mode with the control lever all the way forward. The cylinder is free to extend or retract, letting an implement such as a loader bucket follow the ground.

Remote Control Valve Lever


The remote control valve lever directs pressurized oil flow to the implement hydraulic system.

[Example: Installing triple segment valves]

1st	Double acting valve with detents and self cancelling (standard)
2nd	Double acting valve with float position (option)
3rd	Double acting valve with detents and self cancelling (option)

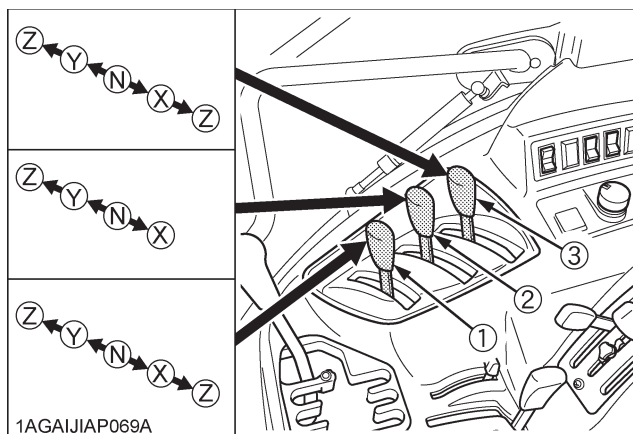

(1) Remote control valve lever 1
(2) Remote control valve lever 2
(3) Remote control valve lever 3

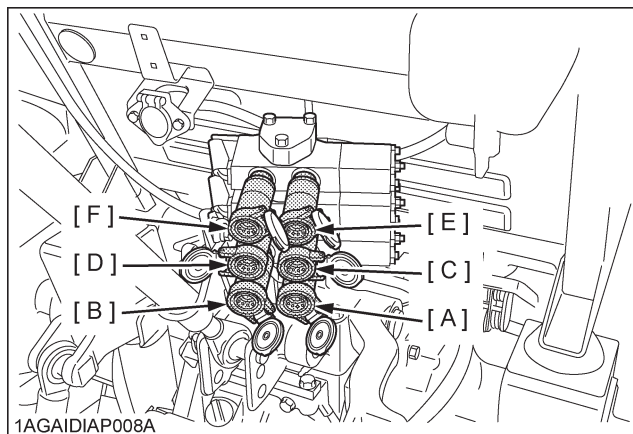

Pressure →
Returning ←

Lever (1)		Lever position			
		Z (detent)	Y	X	Z (detent)
Port	[A]	out →		in ←	
	[B]	in ←		out →	

Lever (2)		Lever position			
		Z (detent)	Y	X	
Port	[C]	in	Float	out →	in ←
	[D]	out		in ←	out →

Lever (3)		Lever position			
		Z (detent)	Y	X	Z (detent)
Port	[E]	out →		in ←	
	[F]	in ←		out →	

IMPORTANT :

- Do not hold the lever in the "pull" or "push" position once the remote cylinder has reached the end of the stroke, as this will cause oil to flow through the relief valve. Forcing oil through the relief valve for extended periods will overheat the oil.
- When using the tractor hydraulic system to power front loader, do not operate boom and bucket cylinders simultaneously.

NOTE :

- Connect the pressure of load side of implement cylinders to ports [B], [D] or [F] which have built in load check valve to prevent leak down.
- To use the single-acting cylinder with the float valve, connect this cylinder to the [B], [D] or [F] port. To extend a single-acting cylinder, pull the remote control valve lever rearward. To retract a cylinder, push it fully forward to the "FLOAT" position. Do not hold it in the down position, the transmission fluid may be overheat.

Remote Control Valve Coupler Connecting and Disconnecting

**WARNING**

To avoid personal injury or death:

- Stop the engine and relieve pressure before connecting or disconnecting lines.
- Do not use your hand to check for leaks.

◆ Connecting

1. Clean both couplers.
2. Remove dust plugs.
3. Insert the implement coupler to the tractor hydraulic coupler.
4. Pull the implement coupler slightly to make sure couplers are firmly connected.

◆ Disconnecting

1. Lower the implement first to the ground to release hydraulic pressure in the hoses.
2. Clean the couplers.
3. Relieve pressure by moving hydraulic control levers with engine shut off. Pull the hose straight from the hydraulic coupler to release it.
4. Clean oil and dust from the coupler, then replace the dust plugs.




 

NOTE :

- Your local KUBOTA Dealer can supply parts to adapt couplers to hydraulic hoses.

■Hydraulic Control Unit Use Reference Chart

In order to handle the hydraulics properly, the operator must be familiar with the following.

Though this information may not be applicable to all types of implements and soil conditions, it is useful for general conditions.

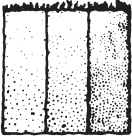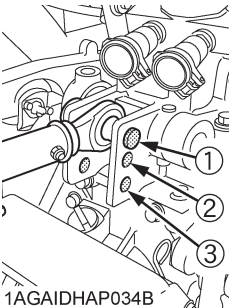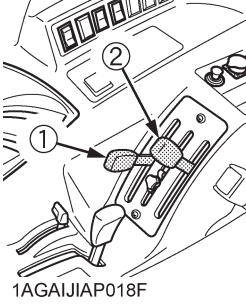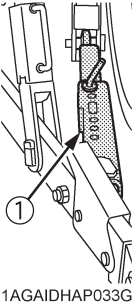Implement	 1AGAIAP122A Soil condition	 1AGAIHAP034B Top link mounting holes	 1AGAIAP018F (1) Position control lever (2) Draft control lever	 1AGAIAP070A Gauge wheel	 1AGAIHAP033G (1) Telescopic stabilizers	Remarks
Moldboard plow	Light soil Medium soil Heavy soil	3 2 or 3 2	Draft and Mixed control (Place the draft control lever to the suitable position and set the implement pull with the position control lever.)	YES/NO	Loose	Insert the set-pin through the slot on the outer tube that align with one of the holes on the inner bar. For implements with gauge wheels, lower the position control lever all way.
Disc plow	---	2 or 3				
Harrower (spike, springtooth, disc type)	---	2				
Sub-soiler.....						
Weeder, ridger.....	---	1	Position control (Hold the draft control lever at the front most position during operation.)	YES	Tighten	Telescopic stabilizer should be tight enough to prevent excessive implement movement when implement is in raised position. For implements with gauge wheels, lower the position control lever all way.
Earthmover, digger, scraper, manure fork, rear carrier.....				YES/NO		
Mower (mid- and rear-mount type) Hayrake, tedder.....				NO		

TIRES, WHEELS AND BALLAST

TIRES



WARNING

To avoid personal injury or death:

- Do not attempt to mount a tire on a rim. This should be done by a qualified person with the proper equipment.
- Always maintain the correct tire pressure. Do not inflate tires above the recommended pressure shown in the operator's manual.

IMPORTANT :

- Do not use tires other than those approved by KUBOTA.

NOTE :

- When optional different-diameter tires are fitted on the machine, the travel speed display mode must be changed. Otherwise the travel speed will not get correctly displayed. Such mode switching is also needed when the original tires are back on the machine.
(See "LCD MONITOR" in "OPERATING THE TRACTOR" section.)

■ Inflation Pressure

Though the tire pressure is factory-set to the prescribed level, it naturally drops slowly in the course of time. Thus, check it everyday and inflate as necessary.

NOTE :

- Maintain the maximum pressure in front tires, if using a front loader or when equipped with a full load of front weights.

[M6060, M7060 2WD model]

	Tire sizes	Inflation Pressure
Front	6.50-16, 6PR	320 kPa (3.2 kgf/cm ² , 46 psi.)
	7.50-16, 6PR	280 kPa (2.8 kgf/cm ² , 40 psi.)
	9.5L-15, 6PR	220 kPa (2.2 kgf/cm ² , 32 psi.)
	9.5-20, 6PR	200 kPa (2.0 kgf/cm ² , 29 psi.)
	9.5-22, 6PR	200 kPa (2.0 kgf/cm ² , 29 psi.)
	9.5-24, 6PR	180 kPa (1.8 kgf/cm ² , 26 psi.)
Rear	16.9-28, 6PR	120 kPa (1.2 kgf/cm ² , 18 psi.)

[M7060 4WD model]

	Tire sizes	Inflation Pressure
Front	320/85R20	160 kPa (1.6 kgf/cm ² , 23 psi.)
	9.5-24	180 kPa (1.8 kgf/cm ² , 26 psi.)
	9.5-20	200 kPa (2.0 kgf/cm ² , 29 psi.)
	29x12.50-15	205 kPa (2.1 kgf/cm ² , 30 psi.)
	13.50-16.1	220 kPa (2.2 kgf/cm ² , 32 psi.)
	9.50-24 turf	140 kPa (1.4 kgf/cm ² , 20 psi.)
	LSW305-521	205 kPa (2.1 kgf/cm ² , 30 psi.)
	14-17.5	380 kPa (3.9 kgf/cm ² , 55 psi.)
Rear	420/85R30	160 kPa (1.6 kgf/cm ² , 23 psi.)
	16.9-30	120 kPa (1.2 kgf/cm ² , 17 psi.)
	16.9-24 R1	120 kPa (1.2 kgf/cm ² , 17 psi.)
	21.5L-16.1	80 kPa (0.8 kgf/cm ² , 12 psi.)
	18.4-26	110 kPa (1.1 kgf/cm ² , 16 psi.)
	LSW570-648	205 kPa (2.1 kgf/cm ² , 30 psi.)
	16.9-24 R4	190 kPa (1.9 kgf/cm ² , 28 psi.)
	LSW420/75R34	103 kPa (1.1 kgf/cm ² , 15 psi.)

■ Dual Tires

Dual tires are not approved.

WHEEL ADJUSTMENT



WARNING

To avoid personal injury or death:


- When working on slopes or when working with trailer, set the wheel tread as wide as practical for maximum stability.
- Support tractor securely on stands before removing a wheel.
- Do not work under any hydraulically supported devices. They can settle, suddenly leak down, or be accidentally lowered. If necessary to work under tractor or any machine elements for servicing or adjustment, securely support them with stands or suitable blocking beforehand.
- Never operate tractor with a loose rim, wheel, or axle.

■ Front Wheels (with 2-wheel drive)

Front tread width can be adjusted as shown with the standard equipped tires.

To change the tread width

1. Remove the front axle mounting bolts and the tie-rod mounting bolts.
2. Move the front axles (right and left) to the desired position, and tighten the bolts.
3. Adjust the toe-in: [1 to 5 mm (0.04 to 0.2 in.)]
(See "Adjusting Toe-in" in "EVERY 200 HOURS" in "PERIODIC SERVICE" section.)

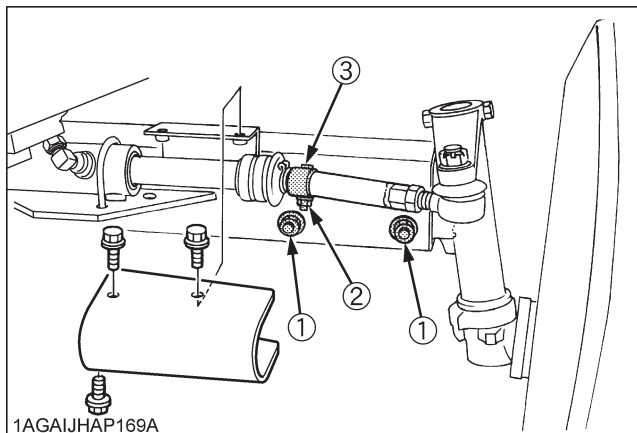

(1) Front axle mounting bolt

124 to 147 N-m (12.6 to 15 kgf-m) [91.5 to 108.9 lbf-ft]

(2) Tie-rod mounting bolt

61 to 71 N-m (6.2 to 7.2 kgf-m) [44.8 to 52.1 lbf-ft]

(3) Tie rod clamp

	 1420 mm (55.9 in.)
	 1520 mm (59.8 in.)
	 1620 mm (63.8 in.)
	 1720 mm (67.7 in.)
	 1820 mm (71.7 in.)

1AGAIJDHAP070A

(1) Extension1

(A) "TREAD"

IMPORTANT :


- The front tread width for the front loader application on 2WD models should not be greater than 1420 mm (55.9 in.).



WARNING

To avoid personal injury or death:

- Before jacking up the tractor, park it on a firm and level ground and chock the rear wheels.
- Fix the front axle to keep it from pivoting.
- Select jacks that withstand the machine weight and set them up as shown below.

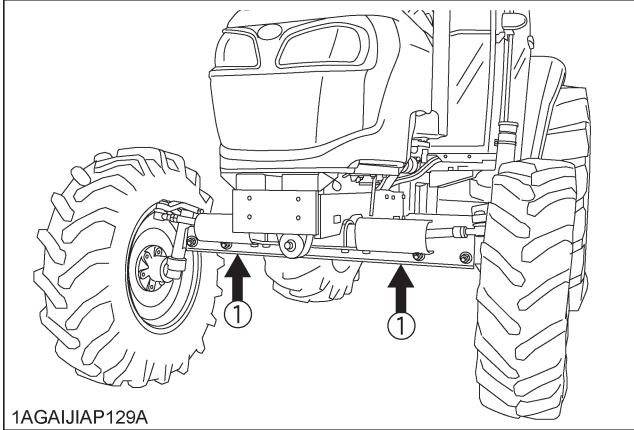

(1) Jack points

Front Wheels (with 4-wheel drive)

Front tread width can be adjusted as shown with the standard equipped tires.


To change the tread width

1. Remove the wheel rim and disk mounting bolts.
2. Change the position of the rim and disk (right and left) to the desired position, and tighten the bolts.
3. Adjust the toe-in [2 to 8mm (0.1 to 0.3 in.)]

See "Adjusting Toe-in" in "EVERY 200 HOURS" in "PERIODIC SERVICE" section.

IMPORTANT :

- Always attach wheels as shown in the drawing.
- If not attached as illustrated, transmission parts may be damaged.
- When re-fitting or adjusting a wheel, tighten the bolts to the following torques then recheck after driving the tractor 200m (200 yards) and 10 times of shuttle movement by 5 m (5 yards), and thereafter according to service interval. (See "MAINTENANCE" section.)

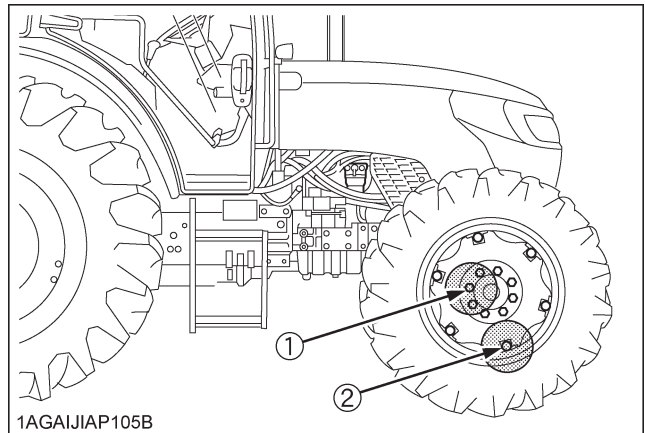



(1) 260 to 304 N-m (26.5 to 31 kgf-m) (192 to 224 lbf-ft)

(2) 244 N-m (24.9 kgf-m) (180 lbf-ft)





NOTE :

- Wheels with beveled or tapered holes: Use the tapered side of lug nut.

[M6060]

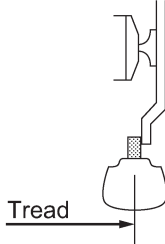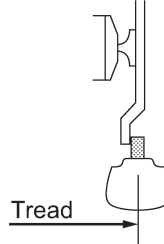	
1420 mm (55.9 in.)	1520 mm (59.8 in.)

[M7060]

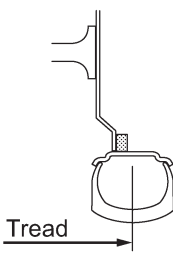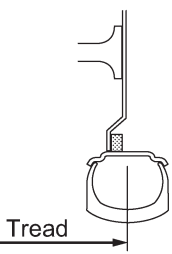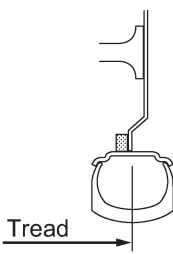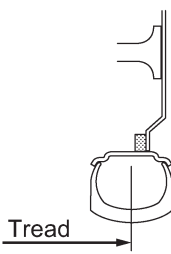
				
9.5-24 R1, R4	-	1520 mm (59.8 in.)	1420 mm (55.9 in.)	-
9.5-20 R1	-	-	-	1410 mm (55.5 in.)
320/85R20	-	-	-	1487 mm (58.5 in.)
29x12.50-15	1681 mm (66.2 in.)	-	-	-
13.50-16.1	1655 mm (65.2 in.)	-	-	-
LSW305-521	-	-	-	1486 mm (58.5 in.)
14-17.5	1657 mm (65.2 in.)	-	-	1583 mm (62.3 in.)

1AGAIDHAP236A

**WARNING**

To avoid personal injury or death:

- Before jacking up the tractor, park it on a firm and level ground and chock the rear wheels.
- Fix the front axle to keep it from pivoting.
- Select jacks that withstand the machine weight and set them up as shown below.

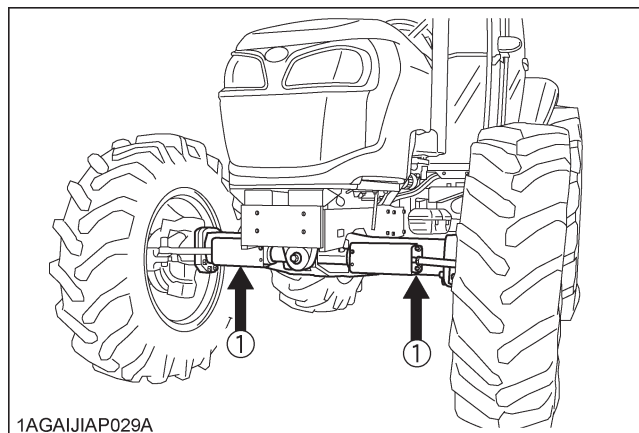

1AGAIJIAP029A

(1) Jack points

■ Rear Wheels


Rear tread width can be adjusted as shown with the standard equipped tires.

To change the tread width

1. Remove the wheel rim and / or disk mounting bolts.
2. Change the position of the rim and / or disk (right and left) to the desired position, and tighten the bolts.

IMPORTANT :


- Always attach wheels as shown in the drawing.
- If not attached as illustrated, transmission parts may be damaged.
- When re-fitting or adjusting a wheel, tighten the bolts to the following torques then recheck after driving the tractor 200m (200 yards) and 10 times of shuttle movement by 5 m (5 yards), and thereafter according to service interval. (See "MAINTENANCE" section.)

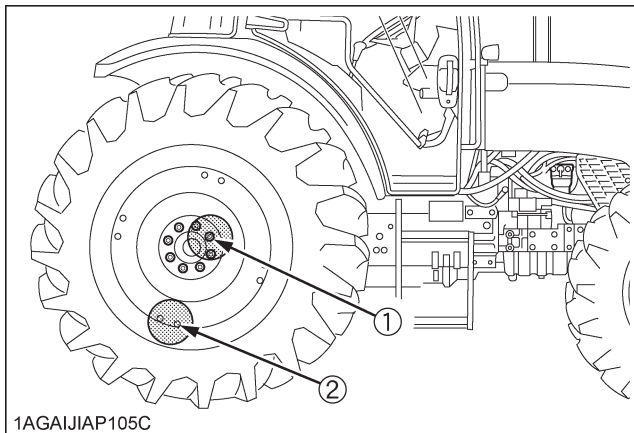





N-m (kgf-m) [lbf-ft]

(1)	(2)	
	Steel disk	Cast iron disk
260 to 304 (26.5 to 31.0) [191.8 to 224.2]	244 (24.9) [180]	260 to 304 (26.5 to 31.0) [191.8 to 224.2]

[M6060, M7060 2WD model]

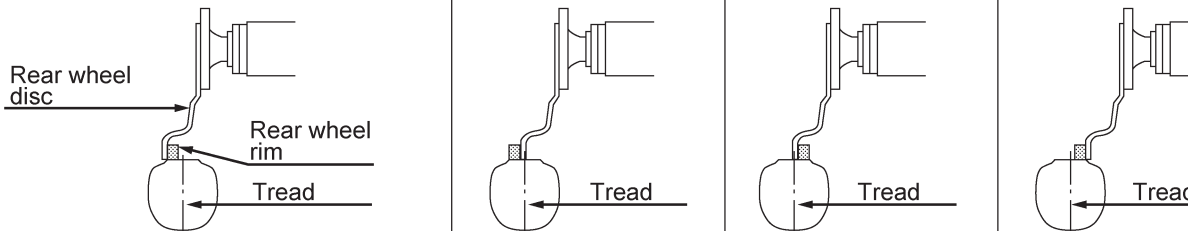 The diagram illustrates the measurement of the rear wheel tread for different wheel widths. It shows a cross-section of the rear wheel assembly, including the disc, rim, and tread. The measurement points are indicated by arrows and labels: 'Rear wheel disc', 'Rear wheel rim', and 'Tread'. The tread measurement is taken from the center of the wheel to the outer edge of the tread.				
16.9—28	1420 mm (55.9 in.)	1520 mm (59.8 in.)	1620 mm (63.8 in.)	1720 mm (67.7 in.)

   
[M7060 4WD model]

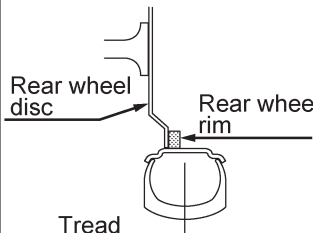				
16.9-30	1732 mm (68.2 in.)	1619 mm (63.7 in.)	1528 mm (60.1 in.)	1416 mm (55.7 in.)
16.9-30 cast iron disc	-	1672 mm (65.8 in.)	1529 mm (60.2 in.)	1424 mm (56.0 in.)
16.9-24 R1	1718 mm (67.6 in.)	1613 mm (63.5 in.)	1515 mm (59.6 in.)	1410 mm (55.5 in.)
420/85R30	1732 mm (68.2 in.)	1619 mm (63.7 in.)	1528 mm (60.1 in.)	1416 mm (55.7 in.)
420/85R30 cast iron disc	-	1672 mm (65.8 in.)	1529 mm (60.2 in.)	1424 mm (56.0 in.)
21.5L-16.1	1501 mm (59.1 in.)	-	-	-
18.4-26	1729 mm (68.0 in.)	1624 mm (63.9 in.)	1526 mm (60.1 in.)	1420 mm (55.9 in.)
LSW570-648	1653 mm (65.1 in.)	-	-	-
16.9-24 R4	1695 mm (66.7 in.)	1593 mm (62.7 in.)	1557 mm (61.3 in.)	1455 mm (57.3 in.)
LSW420/75R34	1726 mm (68.0 in.)	1694 mm (66.7 in.)	1522 mm (59.9 in.)	1491 mm (58.7 in.)

1AGAIJHAP177A

**WARNING****To avoid personal injury or death:**

- Before jacking up the tractor, park it on a firm and level ground and chock the front wheels.
- Fix the front axle to keep it from swinging.
- Select a jack that withstands the machine weight and set it up as shown below.

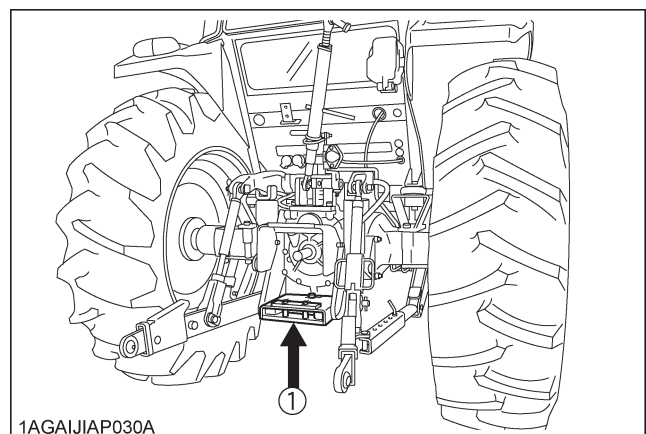

1AGAIJIAP030A

(1) Jack point

BALLAST



WARNING

To avoid personal injury or death:


- Additional ballast will be needed for transporting heavy implements. When the implement is raised, drive slowly over rough ground, regardless of how much ballast is used.
- Do not fill the front wheels with liquid to maintain steering control.

■ Front Ballast

Add weights if needed for stability (2WD, 4WD models) and improve traction (4WD model). Heavy pulling and heavy rear mounted implements tend to lift front wheels. Add enough ballast to maintain steering control and prevent tip over. Remove weight when no longer needed.

◆ Front End Weights (option)

The front end weights can be attached to the bumper. See your implement operator's manual for required number of weights or consult your local KUBOTA Dealer to use.

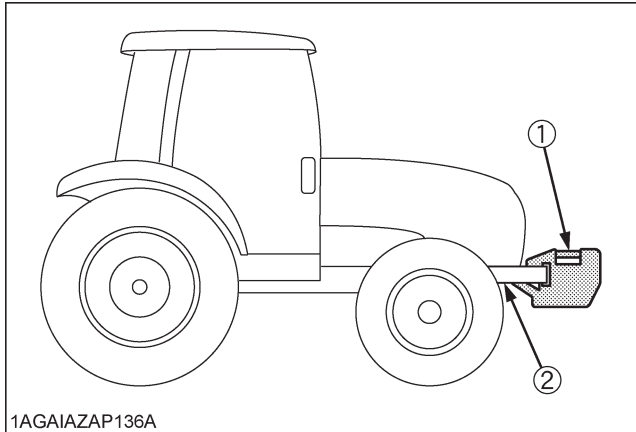

- (1) Front end weights
(2) Bumper

IMPORTANT :

- Do not overload tires.
- Add no more weight than indicated in chart.
- Do not attach the front bumper when the front loader is attached.

Maximum weight	47 kg x 8 pieces (830 lbs.)
----------------	--------------------------------

■ Rear Ballast

Add weight to rear wheels if needed to improve traction or for stability. The amount of rear ballast should be matched to job and the ballast should be removed when it is not needed.

The weight should be added to the tractor in the form of liquid ballast, rear wheel weights, and/or cast iron disks.


◆ Cast Iron Disk (option)

The cast iron rear wheel disk may be utilized to provide additional rear weight.

Tire size	Cast Iron Disk
16.9-30	158 kg x 2 Pieces (700 lbs.)

◆ Rear Wheel Weights (option)

The rear wheel weights can be attached to the rear wheel. See your implement operator's manual for required number of weights or consult your local KUBOTA Dealer to use.

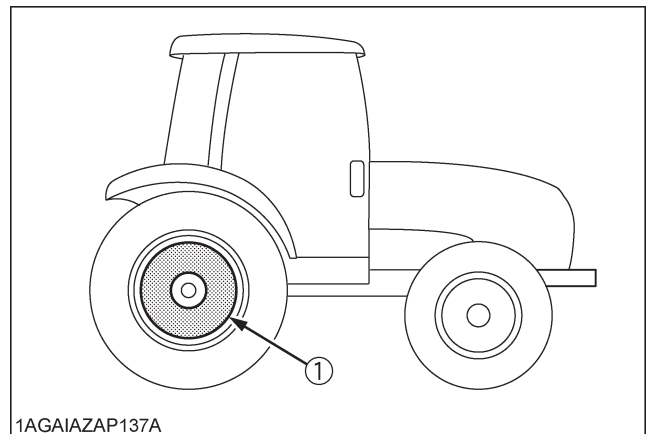

(1) Rear wheel weights

IMPORTANT :

- Do not overload tires.
- Add no more weight than indicated in chart.

Maximum weight per wheel	73 kg x 2 pieces (320 lbs.)
-----------------------------	--------------------------------

◆ Liquid Ballast in Rear Tires


Water and calcium chloride solution provides safe economical ballast. Used properly, it will not damage tires, tubes or rims. The addition of calcium chloride is recommended to prevent the water from freezing. Use of this method of weighting the wheels has the full approval of the tire companies. See your tire dealer for this service.

Liquid weight per tire (75 Percent filled)

Tire sizes	16.9-28	16.9-30	LSW420/ 75R34
Slush free at -10 °C (-14 °F) Solid at -30 °C (-22 °F) [Approx. 1 kg (2 lbs.) CaCl ₂ per 4 L (1 gal.) of water]	295 kg (651 lbs.)	314 kg (693 lbs.)	241 kg (531 lbs.)
Slush free at -24 °C (-11 °F) Solid at -47 °C (-53 °F) [Approx. 1.5 kg (3.5 lbs.) CaCl ₂ per 4 L (1 gal.) of water]	317 kg (699 lbs.)	338 kg (746 lbs.)	282 kg (622 lbs.)
Slush free at -47 °C (-53 °F) Solid at -52 °C (-62 °F) [Approx. 2.25 kg (5 lbs.) CaCl ₂ per 4 L (1 gal.) of water]	339 kg (747 lbs.)	357 kg (787 lbs.)	301 kg (664 lbs.)

IMPORTANT :

- Do not fill tires with water or solution more than 75% of full capacity (to the valve stem level).

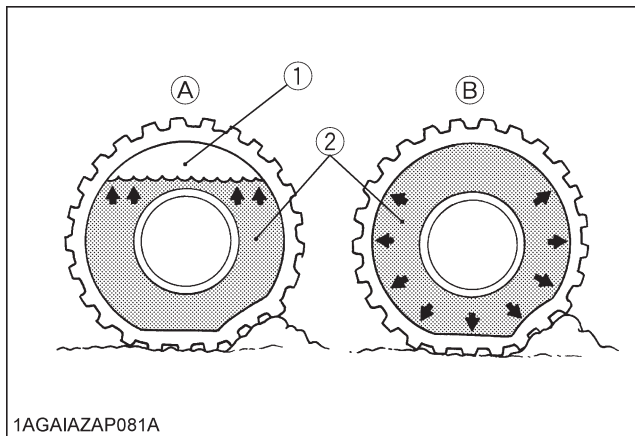

- (1) Air (A) Correct-75% Air compresses like a cushion
(2) Water (B) Incorrect-100% Full Water can not be compressed


CAB OPERATION

DOOR AND WINDOW

■ Locking and Unlocking the Door

From the outside Insert the key into the door lock. Turn the key clockwise to unlock the door. To lock the door, turn the key in the opposite direction. The key can be removed when it is in the vertical direction.

From the inside Push down the lock knob to lock the door. Pull up the lock knob to unlock the door.

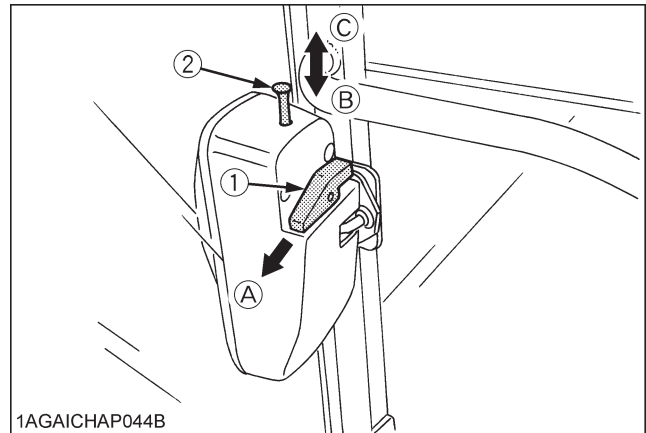


(1) Inner door handle
(2) Lock knob

(A) "PULL"
(B) "PUSH" (Lock)
(C) "PULL" (Unlock)

■ Opening the Door

From the outside Unlock the door, and pull the outer door handle.

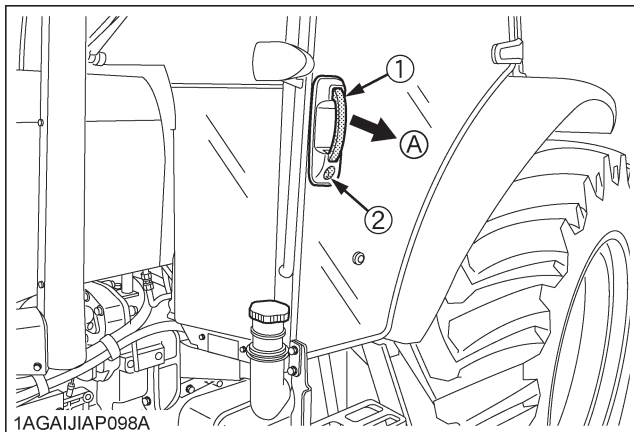


(1) Outer door handle
(2) Door lock

(A) "PULL"

From the inside Unlock the door and pull the inner door handle.

■ Rear Window

Turn the rear window handle clockwise to the vertical position and push the handle. The rear window is opened by the gas spring cylinder.

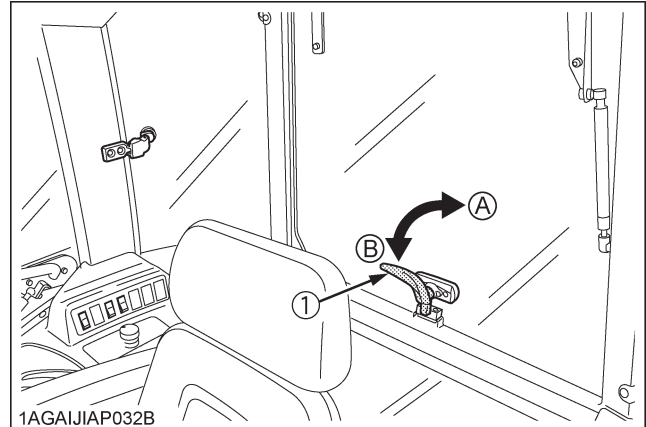


(1) Rear window handle

(A) "OPEN"
(B) "CLOSE"

Side Window

Pull the side window handle and push the side window to open the window.

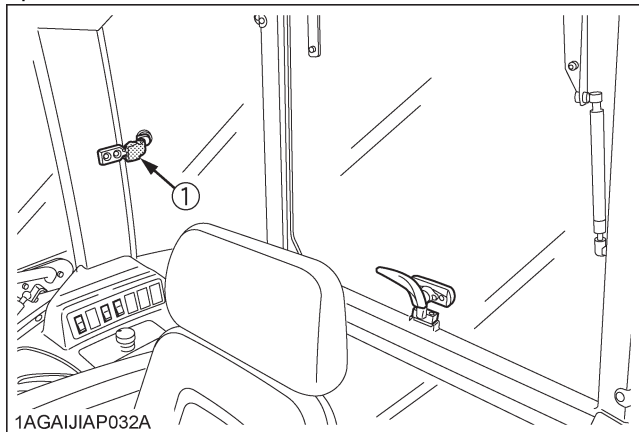

(1) Side window handle

Emergency Exit


1. Open the right door of the cab if the left door is blocked, and vice versa in an emergency situation.
2. Exit through rear window if CAB doors are blocked in an emergency situation.

DOMELIGHT

Dome Light

Sliding the dome light switch will give the following light condition:

OFF	The light does not turn on when the door is opened.
DOOR	The light turns on when the door (LH) is opened. It turns off when the door (LH) is closed.
ON	The light remains on regardless of the door position.

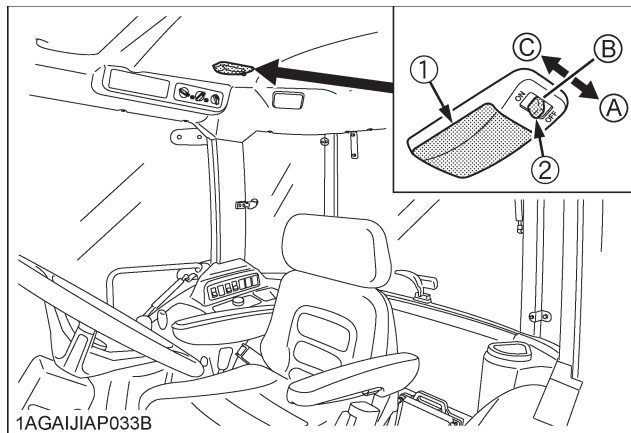

(1) Dome light
(2) Dome light switch

(A) "OFF"
(B) "DOOR"
(C) "ON"

IMPORTANT :

- The battery will discharge if the dome light remains on. Be sure to check the dome light switch position and/or door closure.

WORK LIGHT




WARNING

To avoid personal injury or death:

- Do not operate on roads with work lights on. Work lights may blind or confuse operators of oncoming vehicles.

Work Light Switch


Turn on the key switch and press the top half of the work light switch. The work light and the switch's indicator light up. Press the bottom half of the work light switch to turn off the light and indicator.

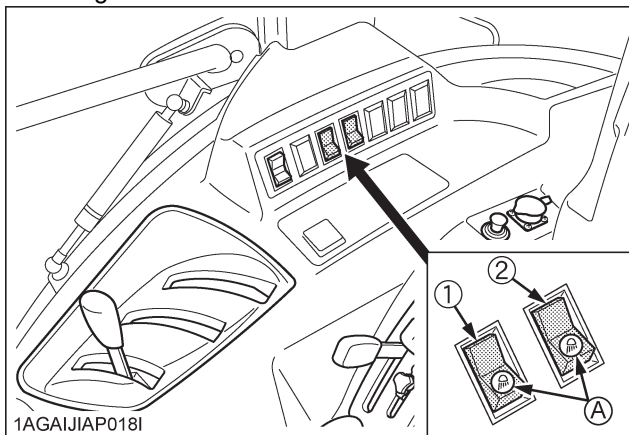

(1) Front work light switch
(2) Rear work light switch


(A) Indicator for work lights

■ Front Work Light

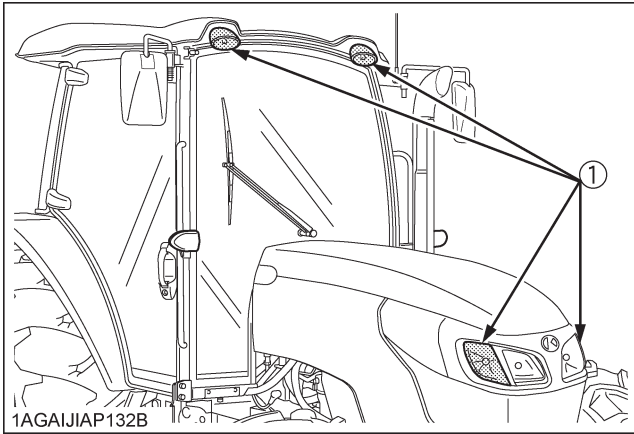

(1) Front work light

■ Rear Work Light

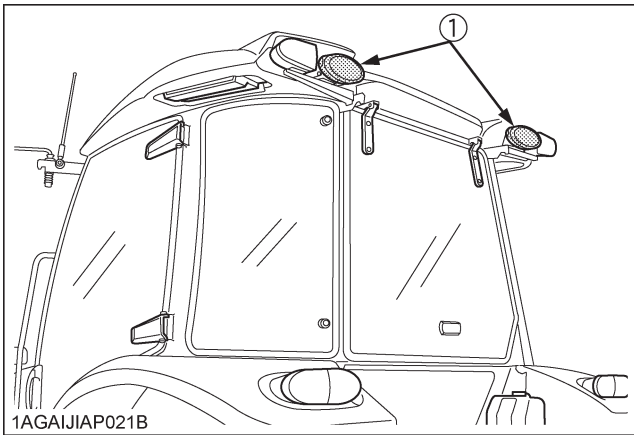

(1) Rear work light


WIPER

■ Front Wiper / Washer Switch

1. Turn on the key switch and press the top half of the wiper switch to the first step, the wiper is activated. When the switch is pressed further to the second step, washer liquid jets out. The jetting continues while the switch is pressed and the wiper is activated continuously.
2. Press the bottom half to the first step, the wiper is activated at regular intervals. When the switch is pressed further to the second step, washer liquid jets out and the wiper is activated at regular intervals.

■ Rear Wiper / Washer Switch (if equipped)

1. Turn on the key switch and press the top half of the wiper switch to the first step, and the wiper is activated. When the switch is pressed further to the second step, washer liquid jets out. The jetting continues while the switch is pressed and the wiper is activated continuously.
2. Press the bottom half of the wiper / washer switch, washer liquid only jets out.

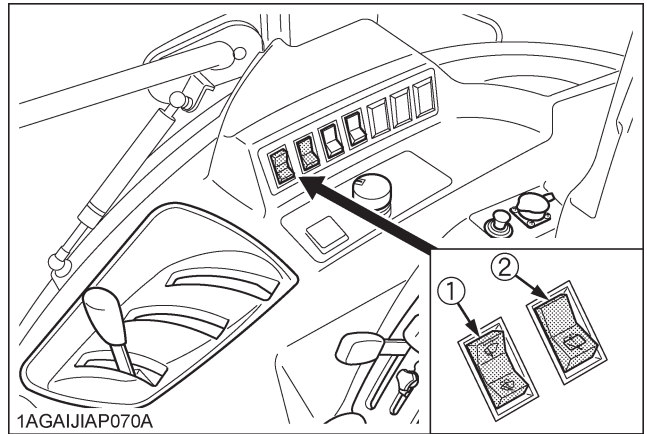

(1) Front wiper / washer switch

(2) Rear wiper / washer switch (if equipped)

IMPORTANT :

- Do not activate the wipers when the windows are dry, they may be scratched. Be sure to jet washer liquid first and then activate the wipers.

■ Using the Wipers in Cold Season

1. While not used in cold season, keep the wiper blades off the windshield to prevent them from being stuck with ice.
2. If the windshield is covered with snow, scrape it off the windshield before using the wipers.
3. If the wiper blades are stuck on the windshield with ice and fail to move, be sure to turn the main key switch to "OFF" and remove the ice off the blades. Then place the main key switch back to "ON".
4. When commercially available cold-season wiper blades are used, make sure their size is the same as or smaller than that of the standard ones.

IMPORTANT :

- In cold season, the wiper blades and the wiper motor might get overloaded causing damage. To avoid this, be sure to take the above precautions.

AIR CONDITIONER





CAUTION

To avoid personal injury;


- If the window fails to defrost in extreme conditions or becomes cloudy when dehumidifying the CAB, wipe off moisture with a soft cloth.
- Do not block all the air outlets of the air conditioner. A problem could occur.

■ Airflow

Air in the CAB and fresh air introduced into the CAB flow as shown below. Adjust the seven air ports to obtain the desired condition.

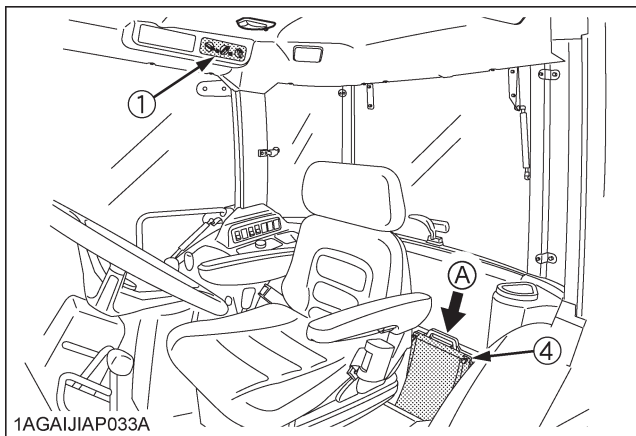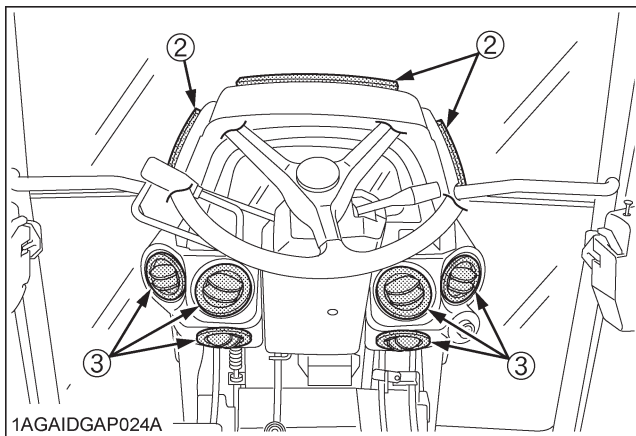

- (1) Control panel
(2) Defroster air outlets
(3) Dashboard air outlets
(4) Inner air filter
- (A) Inner air recirculation

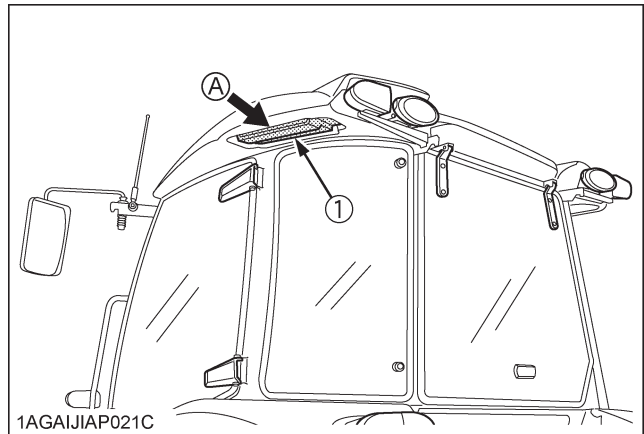

(1) Fresh air filter

(A) "FRESH AIR INLET"


IMPORTANT :

- Do not pour water directly into the fresh air port while washing the vehicle.

■ Air Control Vent

◆ Dashboard air outlet


The dashboard air outlets can be independently adjusted as required.

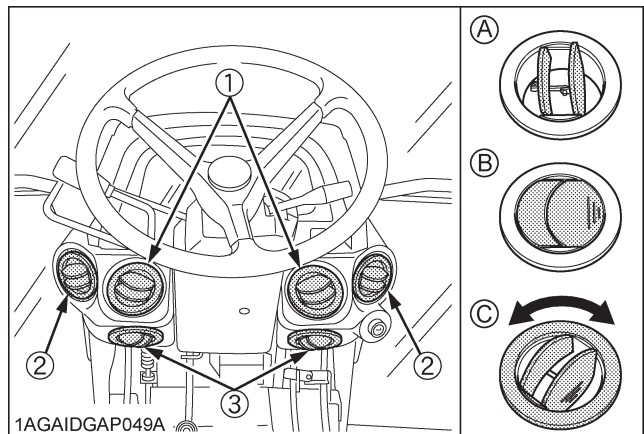

- (1) Face area air outlets
(2) Back area air outlets
(3) Feet area air outlets

- (A) "OPEN"
(B) "SHUT"
(C) "TURN"

Control Panel

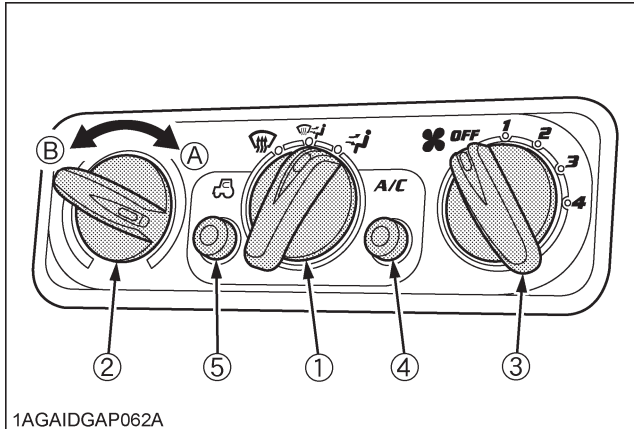

- (1) Mode switch
 (2) Temperature control dial
 (3) Blower switch
 (4) Air conditioner switch with indicator light
 (5) Recirculation / fresh air selection switch with indicator light
- (A) "WARM"
 (B) "COOL"

Mode switch

Set the mode switch to the desired position.

- Air is blown from only the dashboard air outlets.
- Air is blown from the dashboard and defroster air outlets.
- Air is blown from only the defroster air outlet.

Temperature Control Dial

Set this dial at the desired position to obtain the optimum air temperature. Turn the dial in the "WARM" direction to obtain warmer air. Turn it in the "COOL" direction to obtain cooler air.

Blower Switch

Air volume can be changed in 4 steps. At the "4" position, the largest air volume is obtained.

Air Conditioner Switch

Push this switch to activate the air conditioner. An indicator light will light up when the switch is set to "ON". Push the switch again to turn the air conditioner off, in which case the indicator light will be off.

Recirculation / fresh air selection switch


Each time the switch is pressed, the air flow position changes for "RECIRCULATION" or "FRESH AIR". An indicator light will light up when the switch is set to "RECIRCULATION". And the indicator light will be off when the switch is set to "FRESH AIR".

FRESH AIR:
 (Indicator: OFF)

Fresh air will flow into the CAB. This is helpful when you work in dusty conditions or if the glass windows get foggy.

RECIRCULATION:
 (Indicator: ON)

In-CAB air will be recirculated. This is useful for cooling or heating the CAB quickly or keeping it extra cool or warm.

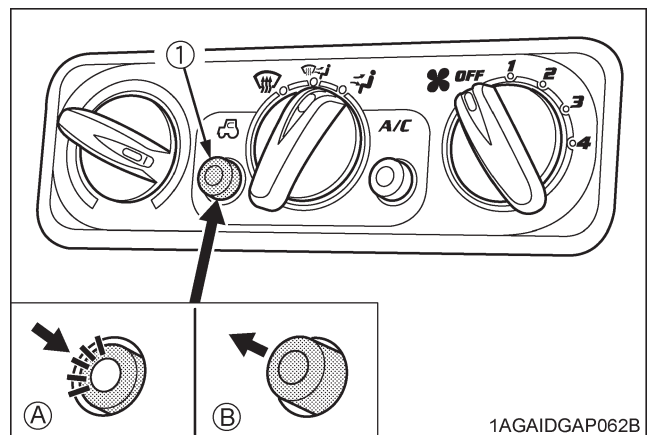

- (1) Recirculation / fresh air selection switch with indicator light

- (A) "RECIRCULATION"
 (B) "FRESH AIR"


NOTE :

- When heating, do not keep the switch at the "RECIRCULATION" position for a long time. The windshield easily gets foggy.
- While working in a dusty conditions, keep the switch at the "FRESH AIR" position. This increases the pressure in the CAB, which helps prevent dust from coming into the CAB.

■ Operation


◆ Heating

1. Set the mode switch to the  position.
2. Set the recirculation / fresh air selection switch to the "FRESH AIR" position. To raise the temperature in the CAB quickly, set this switch to the "RECIRCULATION" position.
3. Adjust the blower (1/2/3/4) switch and the temperature control dial to achieve a comfortable temperature level.

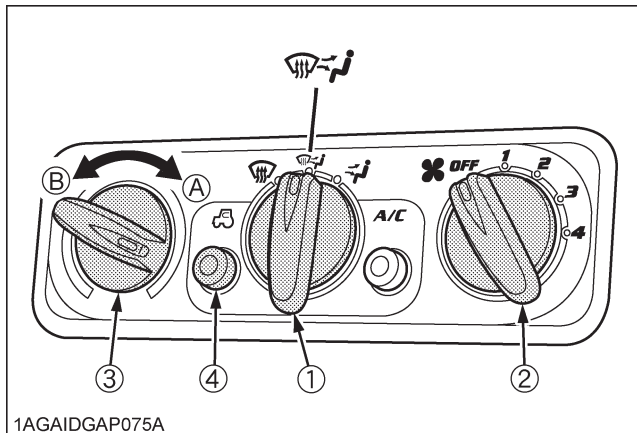

- (1) Mode switch
(2) Blower switch
(3) Temperature control dial
(4) Recirculation / fresh air selection switch with indicator light
- (A) "WARM"
(B) "COOL"

4. Adjust the air volume and air direction from the dashboard air outlets. In general, open Feet area air outlets, and shut Face / Back area air outlets.

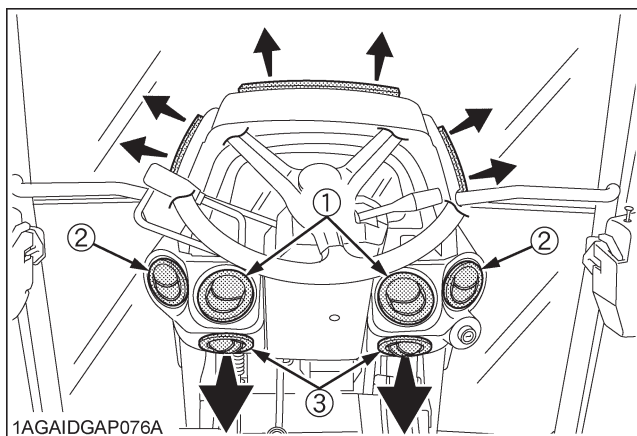


- (1) Face area air outlets
(2) Back area air outlets
(3) Feet area air outlets

◆ Cooling or dehumidifying-heating

1. Set the mode switch to the  position.
2. Set the recirculation / fresh air selection switch to the "FRESH AIR" position. To fall the temperature in the CAB quickly, set this switch to the "RECIRCULATION" position.
3. Press and turn on the air-conditioner switch with indicator.
4. Turn on the blower (1/2/3/4) switch.
5. Adjust the temperature control dial to the "COOL" or an intermediate position to achieve a comfortable temperature level.


NOTE :

- In summer when the heater is not used, keep the temperature control dial at the max "COOL" (end of counterclockwise) position. Otherwise, hot air will raise the temperature in the CAB.

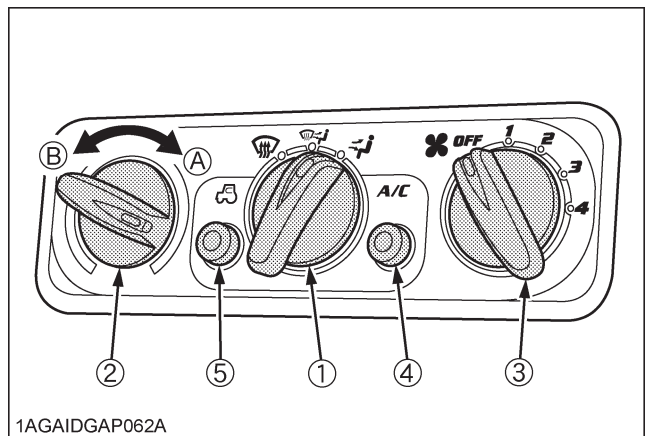

- (1) Mode switch
(2) Temperature control dial
(3) Blower switch
(4) Air conditioner switch with indicator light
(5) Recirculation / fresh air selection switch with indicator light
- (A) "WARM"
(B) "COOL"

6. Adjust the air volume and air direction from the dashboard air outlets. In general, the air volume from Face area air outlets is adjusted to increase, and the air volume from Feet / Back area air outlets is adjusted to decrease.

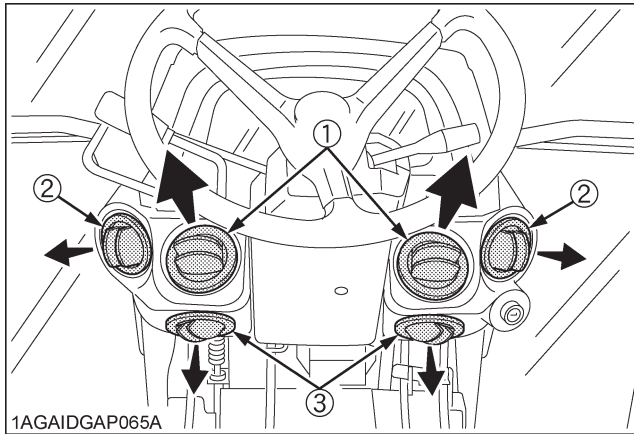


- (1) Face area air outlets
(2) Back area air outlets
(3) Feet area air outlets

◆ Defrosting or demisting


To defrost or demist the windshield, take the following steps.

1. Set the mode switch to the position.
2. Set the recirculation / fresh air selection switch to the "FRESH AIR" position.
3. Set the blower switch and the temperature control dial to the "4" and max "WARM" (end of clockwise) positions, respectively.

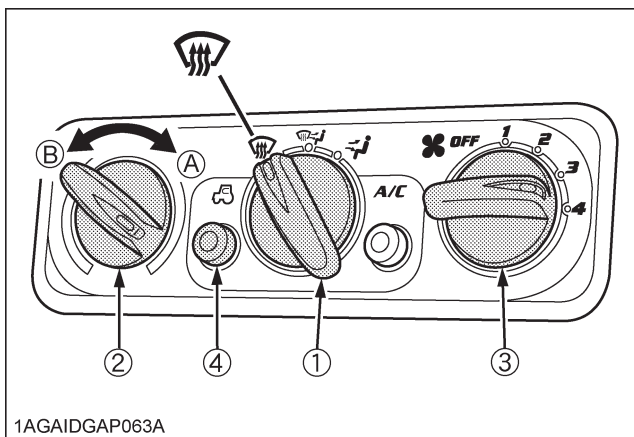

- (1) Mode switch
(2) Temperature control dial
(3) Blower switch
(4) Recirculation / fresh air selection switch with indicator light

(A) "WARM"
(B) "COOL"

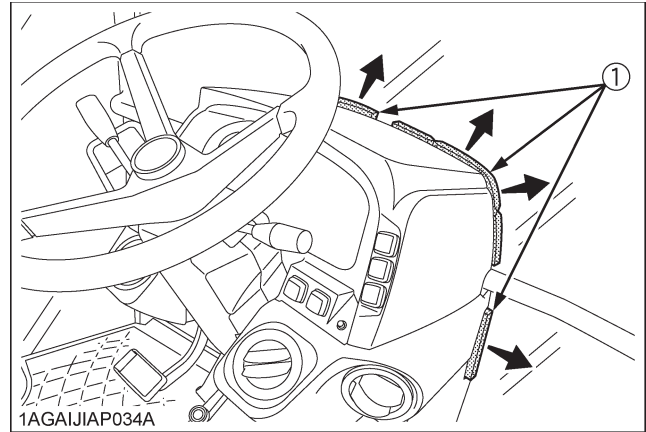


(1) Defogger air outlet

NOTE :

- If you set the mode switch to position, air will not come out from the dashboard air outlets.

REAR / SIDE DEFOGGER WITH TIMER (if equipped)

To activate the rear / side window defoggers, press the switch marked while the key switch is in the "ON" position. Then, the yellow light on the switch turns on. After about 15 minutes, the defoggers automatically turn off as well as the yellow light. To turn the defogger off, press the switch once more.

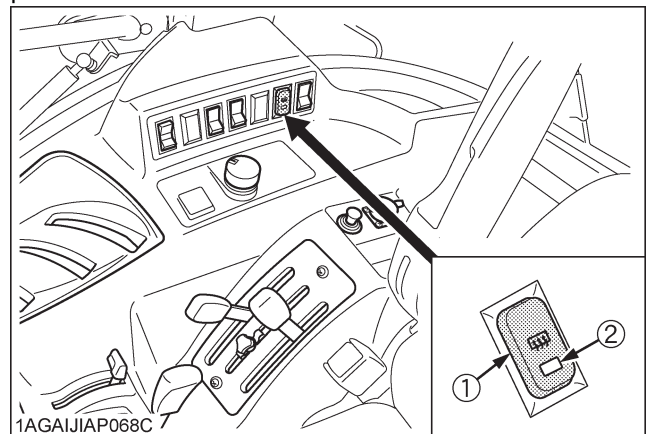

- (1) Defogger switch
(2) Yellow light


IMPORTANT :

- The battery will discharge if the defogger and the key switch remain in the "ON" or "ACC" positions with the engine stopped. Always use the defogger with the engine running.

CIGARETTE LIGHTER

Push the lighter knob down to activate, with the key switch in the "ON" or "ACC" positions.


Lighter will move up when ready to use.

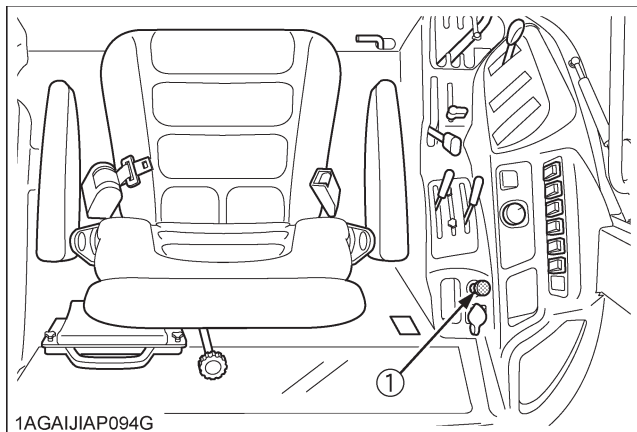

(1) Cigarette lighter

INSTALLING THE IMPLEMENT CONTROL BOX

1. Make an opening in each of the rubber caps or corner plug. Introduce the implement control cable and hydraulic hose through these openings into the CAB.

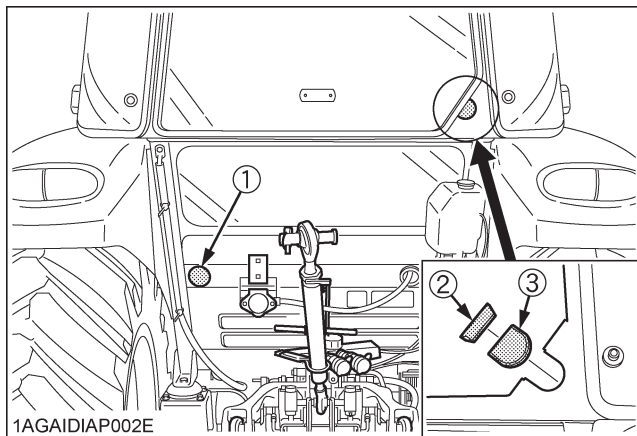


(1) Rubber cap
(2) Cap
(3) Corner plug

ELECTRICAL OUTLET

■ Electrical Outlet

An electrical outlet is supplied for use with implement.

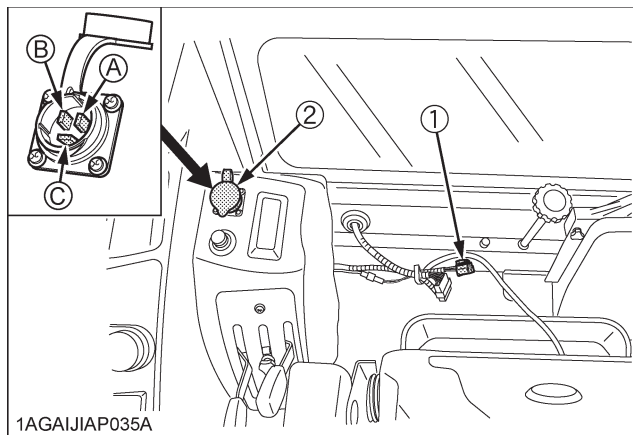

(1) Accessory electrical outlet (Max 15A)
(2) Accessory electrical outlet
(A) Terminal: Through the ACC position of the key switch
(Max 5 A)
(B) Terminal: Through the battery direct (Max 25A)
(C) Terminal: Ground

MAINTENANCE

SERVICE INTERVALS

No.	Items		Indication on hour meter														Interval	Ref. page		
			50	100	150	200	250	300	350	400	450	500	550	600	650	700				
1	Engine start system	Check	○	○	○	○	○	○	○	○	○	○	○	○	○	○	every 50 Hr	92		
2	Wheel bolt torque	Check	○	○	○	○	○	○	○	○	○	○	○	○	○	○	every 50 Hr	93		
3	Tie-rod dust cover	Check	○	○	○	○	○	○	○	○	○	○	○	○	○	○	every 50 Hr	93	*2	
4	Battery condition	Check		○		○		○		○		○		○		○	every 100 Hr	98	*3	
5	Greasing	---		○		○		○		○		○		○		○	every 100 Hr	94		
6	Fan/Air conditioner belt	Adjust		○		○		○		○		○		○		○	every 100 Hr	96		
7	Alternator belt	Adjust		○		○		○		○		○		○		○	every 100 Hr	96		
8	Brake Pedal [F8/R8 model]	Adjust		○		○		○		○		○		○		○	every 100 Hr	97		
	Brake Pedal [F12/R12 model]	Adjust		○		○		○		○		○		○		○	every 100 Hr	97		
9	Air cleaner element	Primary element	Clean	○		○		○		○		○		○		○	every 100 Hr	95	*1	
		Replace															every 1000 Hr or 1 year	110	*5	
		Secondary element	Replace														every 1000 Hr or 1 year	110	*5	
10	Parking brake [F12/R12 model]	Check		○		○		○		○		○		○		○	every 100 Hr	98		
11	Toe-in	Adjust				○				○				○			every 200 Hr	100		
12	Fuel tank water	Drain				○				○				○			every 200 Hr	101		
13	Water separator	Clean								○							every 400 Hr	103		
14	Greasing (2WD front wheel hub)	---								○							every 400 Hr	103		
15	Engine oil	Change	◎									○					every 500 Hr or 1 year	104	*4	
16	Engine oil filter	Replace	◎									○					every 500 Hr	104		
17	Fuel filter	Replace										○					every 500 Hr	105		

No.	Items		Indication on hour meter													Interval	Ref. page		
			50	100	150	200	250	300	350	400	450	500	550	600	650	700			
18	Hydraulic oil filter	Replace										○					every 500 Hr	105	
19	Power steering oil line	Check										○					every 500 Hr	106	
20	Radiator hose and clamp	Check										○					every 500 Hr	106	
21	Fuel line	Check										○					every 500 Hr	107	
22	Intake air line	Check										○					every 500 Hr	107	
23	Lift cylinder hose	Check										○					every 500 Hr	107	
24	Front axle pivot	Adjust												○			every 600 Hr	108	
25	Transmission fluid	Change															every 1000 Hr	108	
26	Front differential case oil	Change															every 1000 Hr	109	
27	Front axle gear case oil	Change															every 1000 Hr	109	
28	Engine valve clearance	Adjust															every 1000 Hr	110	*2
29	Exhaust manifold	Check															every 1000 Hr or 1 year	110	*2 *5
30	Fuel injector nozzle tip	Check															every 1500 Hr	111	*2 @
31	Oil separator element	Replace															every 1500 Hr	111	@
32	EGR cooler	Check Clean															every 1500 Hr	111	*2 @
33	Cooling system	Flush															every 2000 Hr or 2 years	111	*6
34	Coolant	Change															every 2000 Hr or 2 years	111	*6
35	Master cylinder filter [F12/R12 model]	Clean															every 2000 Hr or 2 years	113	*2 *6
36	Turbo charger	Check															every 3000 Hr	113	*2 @
37	Supply pump	Check															every 3000 Hr	113	*2
38	EGR system	Check Clean															every 3000 Hr	113	*2 @
39	DPF muffler	Clean															every 3000 Hr	113	*2 @

No.	Items		Indication on hour meter													Interval	Ref. page		
			50	100	150	200	250	300	350	400	450	500	550	600	650	700			
40	Rustproofing operation	Perform															every 3 to 4 months	113	
41	DPF related pipe	Check															every 1 year	113	*2
42	PCV (Positive Crankcase Ventilation) valve hose	Replace															every 2 years	113	*2
43	DPF related rubber pipe	Replace															every 2 years	113	*2
44	EGR cooler rubber pipe	Replace															every 2 years	113	*2
45	Boost sensor hose	Replace															every 2 years	113	*2
46	Oil separator related rubber pipe	Check															every 2 years	113	*2
47	Power steering oil line	Check															every 2 years	114	*2
48	Radiator hose and clamp	Check															every 2 years	114	*2
49	Fuel line	Check															every 2 years	114	*2
50	Intake air line	Check															every 2 years	114	*2
51	Lift cylinder hose	Check															every 2 years	114	*2
52	Master cylinder kit [F12/R12 model]	Replace															every 4 years	114	*2
53	Equalizer kit [F12/R12 model]	Replace															every 4 years	114	*2
54	Brake seal 1 and 2 [F12/R12 model]	Replace															every 4 years	114	*2
55	Fuel system	Bleed															Service as required	114	
56	Brake system [F12/R12 model]	Bleed																115	*2
57	Clutch housing water	Drain																115	
58	Fuse	Replace																115	
59	Light bulb	Replace																117	

No.	Items		Indication on hour meter													Interval	Ref. page		
			50	100	150	200	250	300	350	400	450	500	550	600	650	700			
1	Inner air filter	Clean				○				○				○			every 200 Hr	101	
2	Fresh air filter	Clean				○				○				○				101	
3	Air conditioner condenser	Clean				○				○				○				102	
4	Air conditioner pipes and hoses	Check										○					every 500 Hr	107	

No.	Items		Indication on hour meter													Interval	Ref. page		
			50	100	150	200	250	300	350	400	450	500	550	600	650				
5	CAB isolation cushion	Check														every 1 year	113		
6	Air conditioner pipes and hoses	Check														every 2 years	114	*2	
7	Washer liquid	Add														Service as required	118		
8	Refrigerant (gas)	Check															118		

IMPORTANT :

- The jobs indicated by ☉ must be done after the first 50 hours of operation.
- *1 Air cleaner should be cleaned more often in dusty conditions than in normal conditions.
- *2 Consult your local KUBOTA Dealer for this service.
- *3 When the battery is used for less than 100 hours per year, check the battery condition by reading the indicator annually.
- *4 Every 500 hours or every 1 year, whichever comes first.
- *5 Every 1000 hours or every 1 year, whichever comes first.
- *6 Every 2000 hours or every 2 years, whichever comes first.
- The items listed above (@ marked) are registered as emission related critical parts by KUBOTA in the U.S.EPA nonroad emission regulation. As the engine owner, you are responsible for the performance of the required maintenance on the engine according to the above instruction.
Please see Warranty Statement in detail.

LUBRICANTS, FUEL AND COOLANT

No.	Locations	Capacities		Lubricants	
		M6060	M7060		
1	Fuel	90 L (23.8 U.S.gals.)		No.2-D S15 diesel fuel No.1-D S15 diesel fuel if temperature is below -10 °C (14 °F)	
2	Coolant	8 L (8.5 U.S.qts.) (Recovery tank: 1.0 L (1.1 U.S.qts.))		Fresh clean soft water with anti-freeze	
3	Washer liquid	1.3 L (1.4 U.S.qts.)		Automobile washer liquid	
4	Engine crankcase (with filter)	12 L (12.7 U.S.qts.)		● Engine oil: API Service Classification	CJ-4 [DPF type engine]
				Above 25 °C (77 °F)	SAE30, SAE10W-30 or 15W-40
				-10 to 25 °C (14 to 77 °F)	SAE20, SAE10W-30 or 15W-40
				Below -10 °C (14 °F)	SAE10W-30
5	Transmission case	56 L (59.2 U.S.qts.)		● KUBOTA SUPER UDT2 fluid*	
6	Front differential case oil [4WD]	5.5 L (5.8 U.S.qts.)		● KUBOTA SUPER UDT2 fluid* or SAE 80 - SAE 90 gear oil	
7	Front axle gear case oil [4WD]	3.5 L (3.7 U.S.qts.)			
8	Greasing	No. of greasing points		Capacity	Type of grease
	Top link	2		Until grease overflows.	Multipurpose Grease NLGI-2 OR NLGI-1(GC-LB)
	Top link bracket	2			
	Lift rod	2			
	Hydraulic lift cylinder pin	4			
	Front axle gear case support [4WD]	2			
	Front axle support	2			
	Front wheel hub [2WD]	2			
	Knuckle shaft [2WD]	2			
	Steering joint shaft	1			
	Battery terminal	2		A small amount	

NOTE :

The product name of KUBOTA genuine UDT fluid may be different from that in the operator's manual depending on countries or territories. Consult your local KUBOTA Dealer for further details.

NOTE :**◆ Engine Oil:**

- Oil used in the engine should have an American Petroleum Institute (API) service classification and Proper SAE Engine Oil according to the ambient temperatures as shown above:
- Refer to the following table for the suitable API classification engine oil according to the engine type (with DPF (Diesel Particulate Filter) type engines) and the fuel.

Fuel used	Engine oil classification (API classification)
	Oil class for engines with DPF
Ultra Low Sulfur Fuel [<0.0015% (15 ppm)]	CJ-4

◆ Fuel:

- Use the ultra low sulfur diesel fuel only [below 0.0015% (15 ppm)] for these engines.
- Cetane number of 45 minimum. Cetane number greater than 50 is preferred, especially for temperatures below -20 °C (-4 °F) or elevations above 1500 m (5000 ft).
- Diesel fuels specified to EN 590 or ASTM D975 are recommended.
- No.2-D is a distillate fuel of lower volatility for engines in industrial and heavy mobile service. (SAE J313 JUN87)

◆ Transmission Oil:

*KUBOTA Super UDT-2: For an enhanced ownership experience, we highly recommend Super UDT-2 to be used instead of standard hydraulic/transmission fluid.

Super UDT-2 is a proprietary KUBOTA formulation that delivers superior performance and protection in all operating conditions.

Regular UDT is also permitted for use in this machine.

- Indicated capacities of water and oil are manufacturer's estimate.
-

■ Biodiesel Fuel (BDF)

B0-B20 Biodiesel fuels (BDF): mixed diesel fuels containing 20% or less biodiesel can be utilized under the following conditions.

IMPORTANT :

- Refueling and handling fuel should be done with caution in order to avoid contact with the fuel and spillage that could create a potential environmental or fire hazard. Wear appropriate protective equipment when refueling.
 - ◆ Applicable BDF:
 1. Blended diesel fuels containing 6% through 20% BDF (B6 - B20) which comply with American Society for Testing and Materials (ASTM) D7467 Standard, as revised, can be used without adversely affecting the performance and durability of the engine and fuel system components.
 2. Any mineral oil diesel fuel, if used, must conform to ASTM D975 (or the European EN590) Standard, as revised. B100 fuel used to make Biodiesel blended fuels must meet ASTM D6751 (or EN14214) Standard, as revised. The final blended fuel B20 must conform to ASTM D7467 Standard, as revised. Straight vegetable oil is NOT allowed in any blended fuel.
 3. Allowable blended fuel is mineral oil diesel fuel blended with B100 (i.e. 100% BDF). The blended fuel ratio shall be less than 20% B100 and 80% or more diesel fuel. The B100 source used for Biodiesel blends must be purchased from an accredited BQ-9000 marketer or producer. More information about qualified marketer(s) and producer(s) can be found at <http://www.bq-9000.org>.
 - ◆ Preparation:
 1. Before using BDF concentrations greater than B5, you are advised to replace the engine oil, engine oil filter and fuel filter with new oil and filters. For replacement procedures, refer to "Changing Engine Oil", "Replacing Engine Oil Filter" and "Replacing Fuel Filter" in the "PERIODIC SERVICE" section.
 - ◆ Product Warranty, Emission and Other Precautions:
 1. The engine emission control system was certified according to current regulations based on the use of non-BDF. When using BDF, the owner is advised to check applicable local and federal emission regulations and comply with all of them.
 2. BDF may cause restricted or clogged fuel filters during cold weather conditions, resulting in the engine not operating properly.
 3. BDF encourages the growth of microorganisms which may cause degradation of the fuel. This in turn may cause fuel line corrosion or reduce fuel filter flow earlier than expected.
 4. BDF inherently absorbs moisture which may cause degradation of the fuel earlier than expected. To avoid this, drain the water separator and fuel filter port often.
 5. Do not use Biodiesel concentrations higher than 20% (i.e. greater than B20). Engine performance and fuel consumption will be affected, and degradation of the fuel system components may occur.
 6. Do not readjust the engine fuel control system as this will violate emission control levels for which the equipment was approved.
 7. Compared with soybean-based and rapeseed-based feedstock, palm oil-based feedstock has a thicker consistency (i.e. higher viscosity) at lower temperatures. Consequently, fuel filter performance may be reduced, particularly during cold weather conditions.
 8. The KUBOTA Warranty, as specified in the Owner's Warranty Information Guide, only covers defects in product materials and workmanship. Accordingly, any problems that may arise due to the use of poor quality fuels that fail to meet the above requirements, whether biodiesel or mineral oil based, are not covered by the KUBOTA Warranty.
 - ◆ Routine handling:
 1. Avoid spilling BDF onto painted surfaces as this may damage the finish. If fuel is spilled immediately wipe clean and flush with soapy water to avoid permanent damage.
 2. When using BDF, you are advised to maintain a full tank of fuel, especially overnight and during short term storage, to reduce condensation within the tank. Be sure to tighten the fuel cap after refueling to prevent moisture build up within the tank. Water in the Biodiesel mixture will damage fuel filters and may damage engine components.
-

- ◆ Maintenance Requirements when using BDF B0 through B5:
Follow the oil change intervals recommended by referring to the "MAINTENANCE" section. Extended oil change intervals may result in premature wear or engine damage.
- ◆ Maintenance Requirements when using BDF B6 through B20:
The maintenance interval for fuel related parts changes.
See the table below for the new maintenance interval.

Items		Interval	Remarks
Fuel filter	Replace	every 250 Hr	
Fuel line	Check	every 250 Hr	Replace if any deterioration (crack, hardening, scar or deformation) or damage occurred.
	Replace	every 2 years	Consult your local KUBOTA Dealer for this service.

- ◆ Long Term Storage:
 1. BDF easily deteriorates due to oxygen, water, heat and foreign substances.
Do not store B6 through B20 longer than 1 month and B5 longer than 3 months.
 2. When using B6 through B20 and storing the machine longer than 1 month, drain the fuel from the tanks and replace with light mineral oil diesel fuel.
Subsequently, run the engine at least 30 minutes to remove all of the Biodiesel from the fuel lines.
 3. When using B5 fuel and storing machine longer than 3 months, drain the fuel from the tanks and replace with light mineral oil diesel fuel.
Subsequently, run the engine at least 30 minutes to remove all of the Biodiesel from the fuel lines.
-

PERIODIC SERVICE



WARNING

To avoid personal injury or death:

- Do not work under any hydraulically supported devices. They can settle, suddenly leak down, or be accidentally lowered. If necessary to work under tractor or any machine elements for servicing or adjustment, securely support them with stands or suitable blocking beforehand.

WASTE DISPOSAL

The improper disposal or burning of waste causes environmental pollution and can be punishable by your local laws and regulations.

- When draining fluids from the tractor, place a container underneath the drain port.
- Do not pour waste onto the ground, down a drain, or into any water source (such as rivers, streams, lakes, marshes, seas and oceans).
- Waste products such as used oil, fuel, coolant, hydraulic fluid, aqueous urea solution (DEF (AdBlue®)), refrigerant, solvent, filters, rubber, batteries and harmful substances, can harm the environment, people, pets and wildlife.

Please dispose properly.

See your local recycling center or KUBOTA Dealer to learn how to recycle or get rid of waste products.

HOW TO OPEN THE HOOD




WARNING

To avoid personal injury or death from contact with moving parts;

- Never open the hood while the engine is running.
- Do not touch muffler or exhaust pipes while they are hot; Severe burns could result.
- Hold the hood with other hand while unlocking release lever.

Hood

To open the hood, hold the hood and pull the release lever and open the hood.

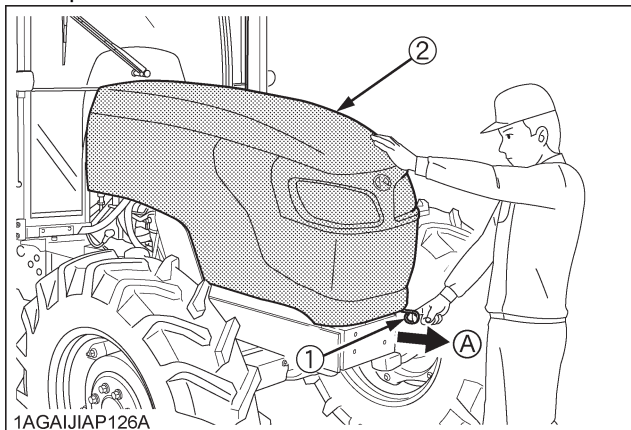


(1) Release lever

(A) "PULL"

(2) Hood


NOTE :

- To close the hood, push the hood into position using both hands.

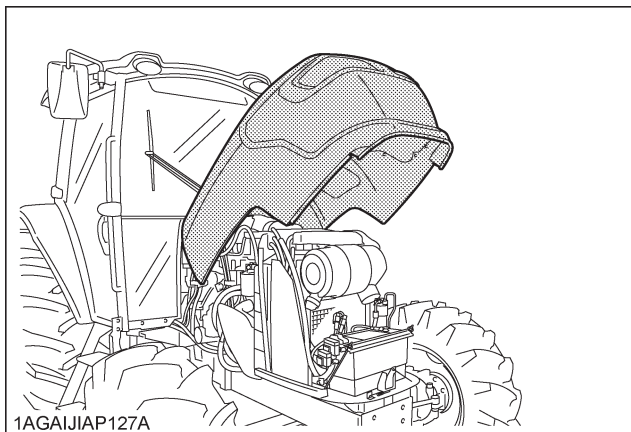

Side Cover

Remove the bolts as shown below.

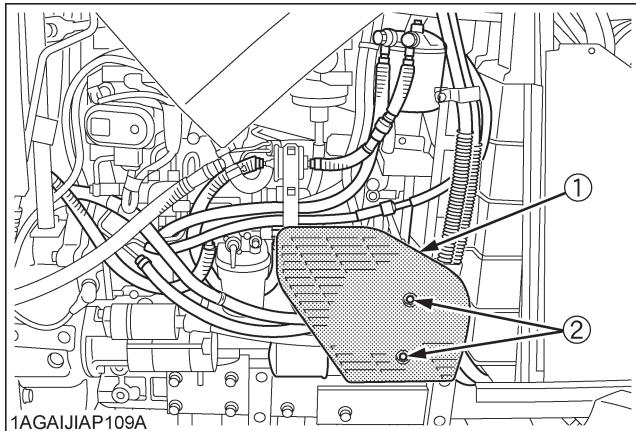

(1) Side cover
(2) Bolt

DAILY CHECK

For your own safety and maximum service life of the machine, make a thorough daily inspection before operating the machine to start the engine.



WARNING

To avoid personal injury or death:

Take the following precautions when checking the tractor.

- Park the machine on firm and level ground.
- Set the parking brake.
- Lower the implement to the ground.
- All residual pressure of the hydraulic system released.
- Stop the engine and remove the key.

Walk Around Inspection

Look around and under the tractor for such items as loose bolts, trash build-up, oil or coolant leaks, broken or worn parts.

Checking and Refueling




WARNING

To avoid personal injury or death:

- Do not smoke while refueling.
- Be sure to stop the engine before refueling.

1. Check the amount of fuel by fuel gauge.
2. When the fuel warning indicator lights up, it is time to add fuel.

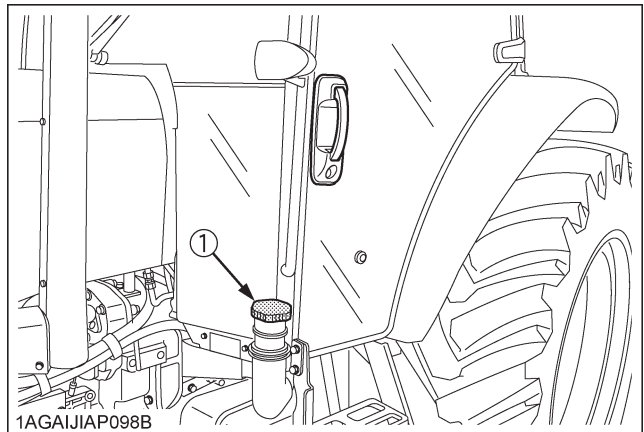

(1) Fuel tank cap


Fuel tank capacity	90 L (23.8 U.S.gals.)
--------------------	-----------------------

IMPORTANT :

- Be sure to use Ultra Low Sulfur Fuel (S15).
- Do not permit dirt or trash to get into the fuel system.
- Be careful not to let the fuel tank become empty, otherwise air will enter the fuel system, necessitating bleeding before next engine start.
- If the engine runs out of fuel and stalls, the engine components may be damaged.
- Be careful not to spill during refueling. If a spill should occur, wipe it off at once, or it may cause a fire.
- To prevent condensation (water) accumulation in the fuel tank, fill the tank before parking overnight.

■ Checking Water Separator

1. As water is collected in the water separator, the red float is raised.
2. When the red float has reached the upper limit, close the fuel shutoff-valve and loosen the drain plug by several turns.
Allow water to drain. When no more water comes out and fuel starts to flow out, retighten the drain plug.
3. Bleed the fuel system.
(See "SERVICE AS REQUIRED" in "PERIODIC SERVICE" section.)

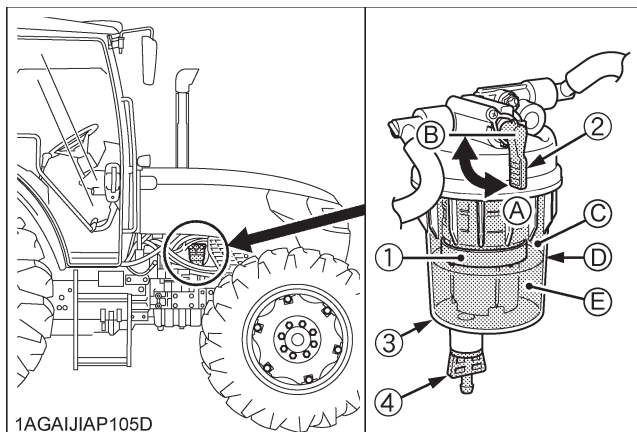

- | | |
|------------------------|-------------------|
| (1) Red float | (A) "ON" |
| (2) Fuel shutoff-valve | (B) "OFF" |
| (3) Cup | (C) "FUEL" |
| (4) Drain plug | (D) "UPPER LIMIT" |
| | (E) "WATER" |

IMPORTANT :

- If water is drawn through to the fuel pump, extensive damage will occur.

■ Checking Engine Oil Level




WARNING

To avoid personal injury or death:

- Be sure to stop the engine before checking the oil level.

1. Park the machine on a flat surface.
2. Check engine oil before starting the engine or 5 minutes or more after the engine has stopped.
3. To check the oil level, draw out the dipstick, wipe it clean, replace it, and draw it out again. Check to see that the oil level lies between the 2 notches.
If the level is too low, add new oil to the prescribed level at the oil inlet.
(See "LUBRICANTS, FUEL AND COOLANT" in "MAINTENANCE" section.)

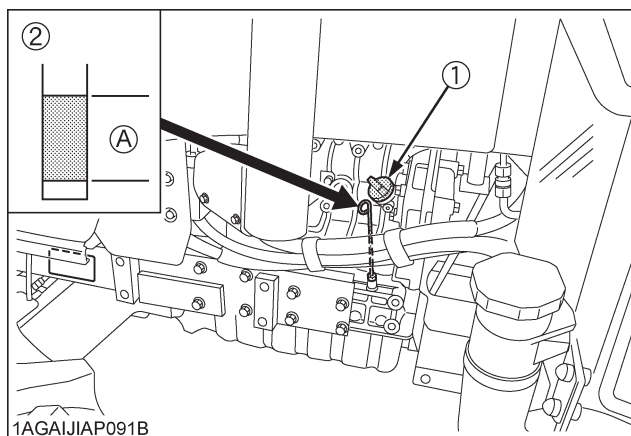

- | | |
|---------------|--|
| (1) Oil inlet | (A) Oil level is acceptable within this range. |
| (2) Dipstick | |

IMPORTANT :

- When using an oil of different maker or viscosity from the previous one, remove all of the old oil.
Never mix two different types of oil.
- If oil level is low, do not run engine.

NOTE :

- At times a small amount of fuel, which is used to regenerate the DPF, may get mixed with the engine oil and the engine oil may increase in volume.

■ Cleaning Remote Control Valve Coupler




WARNING

To avoid personal injury or death:

- Stop the engine before cleaning the coupler.
- The remote control valve coupler becomes hot after use. Allow sufficient time for the coupler to cool down before checking and cleaning it.

1. During use, mud and other debris that adheres to the remote control valve coupler may enter the inner part of the coupler. Check and clean the coupler (both tractor side and implement side) frequently in order to prevent malfunctions such as oil leakage.
2. If any dirt or debris remains stuck to the coupler, use a general lubricant spray to clean the parts (both tractor side and implement side). Remove any residue with a clean cloth or paper.

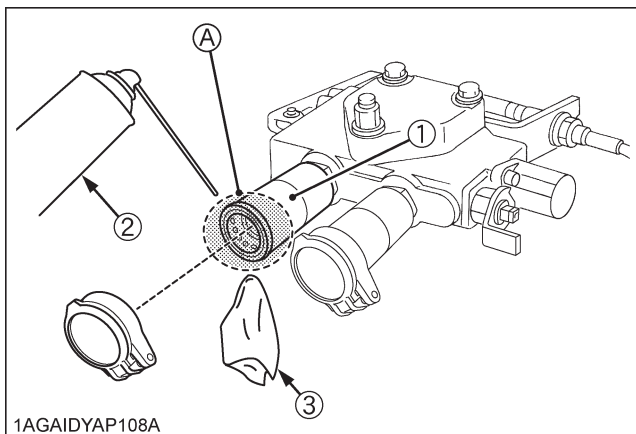


- (1) Remote control valve coupler
(2) General lubricant spray
(3) Clean cloth or paper

(A) Clean the coupler on both the tractor side and the implement side

■ Checking Transmission Fluid Level

1. Park the machine on a flat surface, lower the implement and shut off engine.
2. To check the oil level, draw out the dipstick, wipe it clean, replace it, and draw it out again. Check to see that the oil level lies between the 2 notches. If the level is too low, add new oil to the prescribed level at the oil inlet.
(See "LUBRICANTS, FUEL AND COOLANT" in "MAINTENANCE" section.)

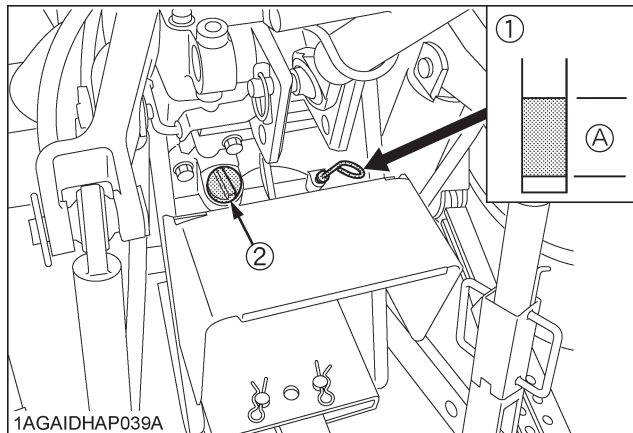

(1) Dipstick

(2) Oil inlet

(A) Oil level is acceptable within this range.

IMPORTANT :

- If oil level is low, do not run engine.

■ Checking Coolant Level




WARNING

To avoid personal injury or death:

- Do not remove radiator cap while coolant is hot. When cool, slowly rotate cap to the first stop and allow sufficient time for excess pressure to escape before removing the cap completely.

1. Check to see that the coolant level is between the "FULL" and "LOW" marks of recovery tank.
2. When the coolant level drops due to evaporation, add soft water only up to the full level.
In case of leakage, add anti-freeze and soft water in the specified mixing ratio up to the full level.
(See "Flushing Cooling System and Changing Coolant" in "EVERY 2000 HOURS or 2 YEARS" in "PERIODIC SERVICE" section.)
3. When the coolant level is lower than "LOW" mark of recovery tank, remove the radiator cap and check to see that the coolant level is just below the port. If level is low, add coolant.

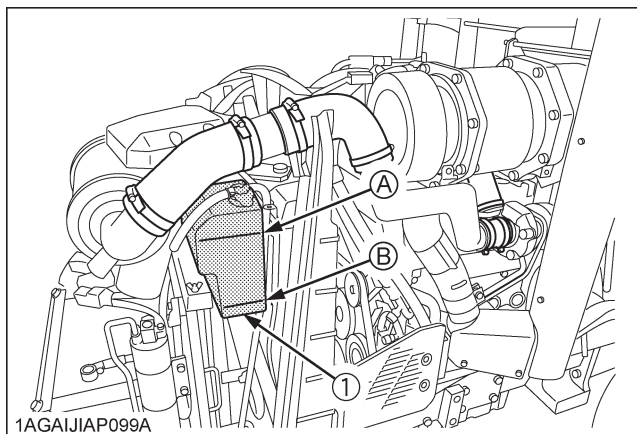

(1) Recovery tank

(A) "FULL"


(B) "LOW"

IMPORTANT :

- If the radiator cap has to be removed, follow the caution above and securely retighten the cap.
- Use clean, fresh soft water and anti-freeze to fill the radiator.
- If coolant should leak, consult your local KUBOTA Dealer.

■Cleaning Evacuator Valve


Open the evacuator valve to get rid of large particles of dust and dirt.

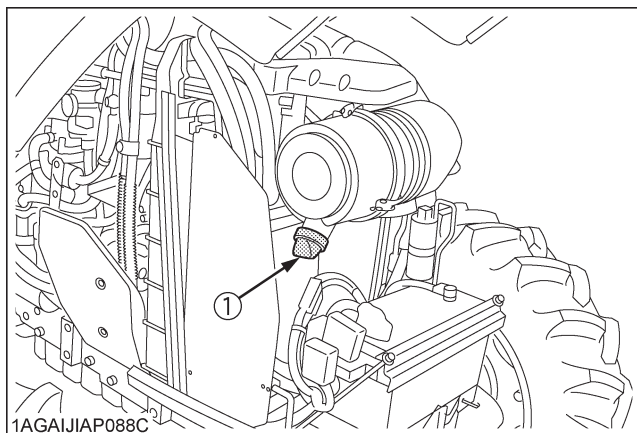

(1) Evacuator valve

■Checking Dust Indicator

There is a dust indicator on the air cleaner body. If the red signal on the dust indicator is visible, clean the element immediately. (See "Cleaning Air Cleaner Primary Element" in "EVERY 100 HOURS" in "PERIODIC SERVICE" section.) Reset the red signal by pushing a "RESET" button after cleaning.

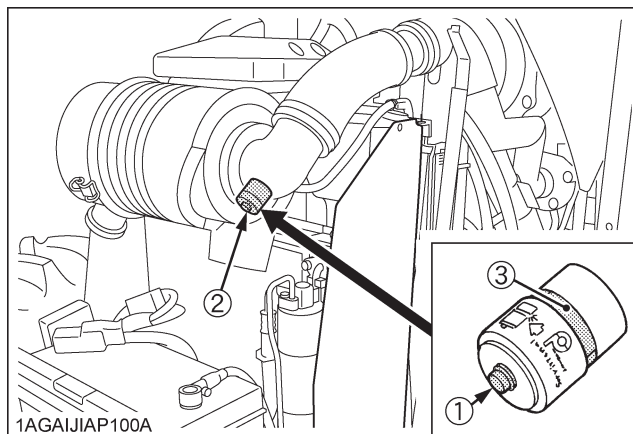

(1) "RESET" button

(2) Dust indicator

(3) Red signal


■Cleaning Grill, Radiator Screen, Oil Cooler and Battery Mount**WARNING**

To avoid personal injury or death:

- Be sure to stop the engine before removing the screen.
- The condenser and receiver become hot while the air conditioner is running. Before checking or cleaning them, wait until they cool down enough.

◆ Opening the panel

1. Detach the side cover.
2. To open the panel, pull its front outward.
3. To close the panel, push it inward to get locked and attach the side cover.

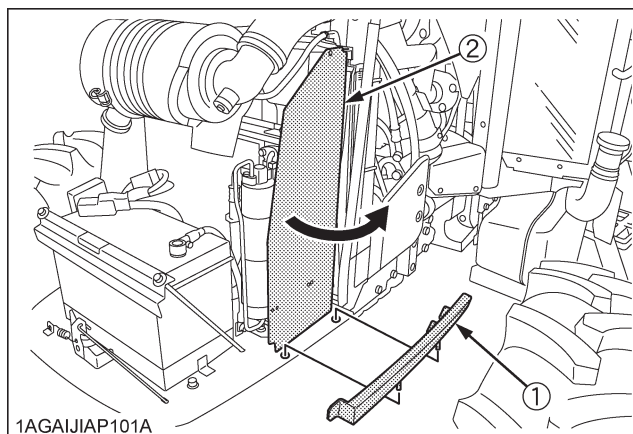


(1) Side cover

(2) Panel

◆ Detaching the panel


1. Raise the panel until pin (A) clears the hole, and take out the panel.
2. Attaching the panel is performed vice versa.

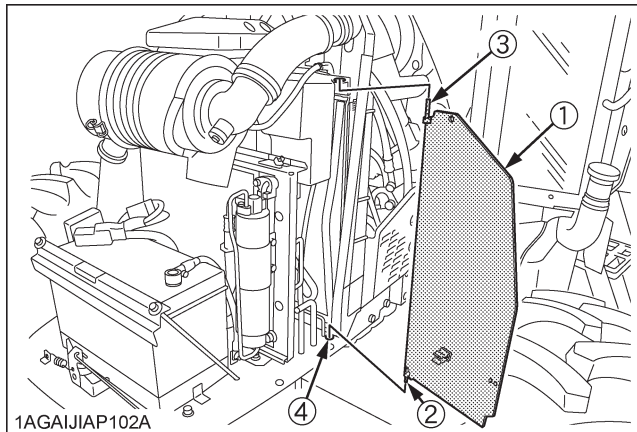

- (1) Panel
(2) Pin (A)
(3) Pin (B)
(4) Hole

◆ Sliding the air conditioner condenser

1. Loosen the wing nut.
2. Hold the handle, slide the air conditioner condenser assembly toward yourself.

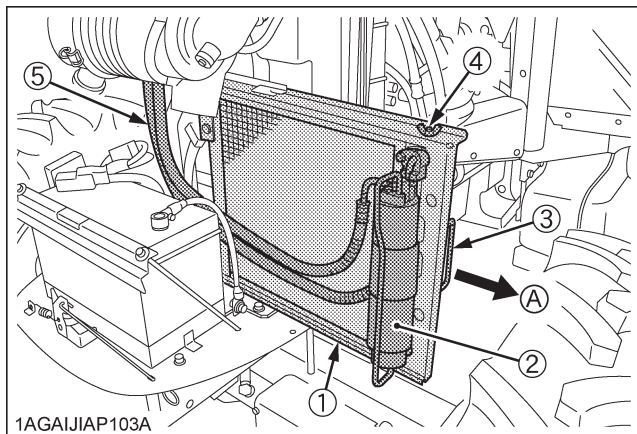

- (1) Condenser
(2) Receiver
(3) Handle
(4) Wing nut
(5) Air conditioner hose



(A) "PULL"

IMPORTANT :

- Do not hold the air conditioner receiver or the air conditioner pipes when sliding out the condenser for cleaning.

◆ Cleaning

1. Check front grill to be sure it is clean from debris.
2. Detach the radiator screen and remove all foreign materials.
3. Check oil cooler and battery mount to be sure they are clean from debris.

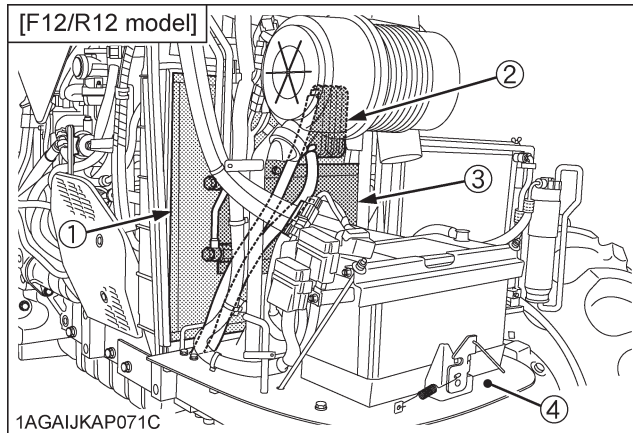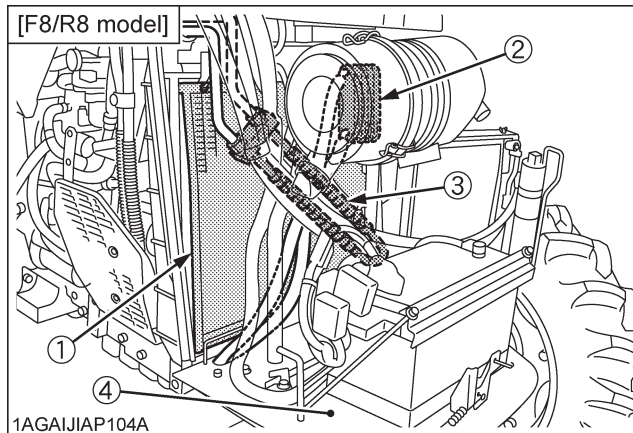

- (1) Radiator screen
(2) Fuel cooler
(3) Oil cooler
(4) Battery mount

IMPORTANT :

- Grill and screen must be clean from debris to prevent engine from overheating and to allow good air intake for air cleaner.

■ Cleaning Air Conditioner Condenser Screen




WARNING

To avoid personal injury or death:

- Be sure to stop the engine before removing the screen.
- The condenser and receiver become hot while the air conditioner is running. Before checking or cleaning them, wait until they cool down enough.

1. Loosen the wing nut.
2. Hold the handle, slide the air conditioner condenser assembly toward yourself.
3. Detach the air conditioner condenser screen and remove all foreign materials.

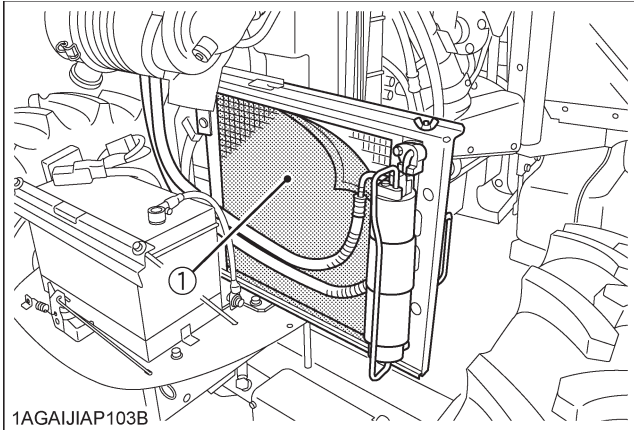

(1) Air conditioner condenser screen

■Checking DPF Muffler




WARNING

To avoid personal injury or death:

- Before checking or cleaning the DPF muffler, stop the engine and wait until it cools down enough.

Check the DPF muffler and its surroundings for build-up of anything flammable. Otherwise a fire may result.

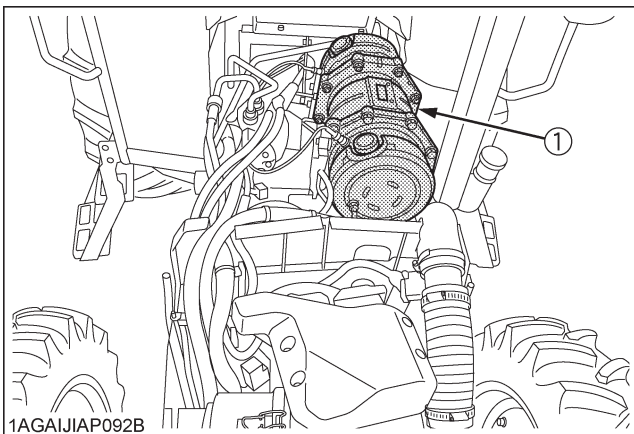

(1) DPF muffler

■Checking Brake Pedal



WARNING

To avoid personal injury or death:

- Be sure brake pedals have equal adjustment when using locked together. Incorrect or unequal brake pedal adjustment can cause the tractor to swerve or roll-over.

1. Inspect the brake pedals for free travel, and smooth operation.
2. Adjust if incorrect measurement is found: (See "Adjusting Brake Pedal" in "EVERY 100 HOURS" in "PERIODIC SERVICE" section.)

■Checking Gauges, Meter and Easy Checker(TM)

1. Inspect the instrument panel for broken gauge(s), meter(s) and Easy Checker(TM) lamps.
2. Replace if broken.

■Checking Head Light, Turn Signal / Hazard Light etc.

1. Inspect the lights for broken bulbs and lenses.
2. Replace if broken.

■Checking Seat Belt

1. Always check condition of seat belt attaching hardware before operating tractor.
2. Replace if damaged.

■Checking Movable Parts

If any of the movable parts, such as levers and pedals, is not smoothly moved because of rust or sticky material, do not attempt to force it into motion.

In the above case, remove the rust or the sticky material, and apply oil or grease on the relevant spot.

Otherwise, the machine may get damaged.

EVERY 50 HOURS

■ Checking Engine Start System



WARNING

To avoid personal injury or death:

- Do not allow anyone near the tractor while testing.
- If the tractor does not pass the test, do not operate the tractor.

◆ Preparation before testing.

1. Place all control levers in the "NEUTRAL" position.
2. Set the parking brake and stop the engine.

◆ Test: Switch for the shuttle shift lever.

1. Follow the instruction of "PARKING THE TRACTOR". (See "PARKING THE TRACTOR" in "SAFE OPERATION" section.)
2. Sit on the operator's seat.
3. Shift the shuttle shift lever to the forward or reverse position.
4. Depress the clutch pedal fully.
5. Disengage the PTO clutch control switch or lever.
6. Turn the key to "START" position.
7. The engine must not crank.
8. If it cranks, consult your local KUBOTA Dealer for this service.

◆ Test: Switch for the PTO clutch control switch or lever.

1. Follow the instruction of "PARKING THE TRACTOR". (See "PARKING THE TRACTOR" in "SAFE OPERATION" section.)
2. Sit on the operator's seat.
3. Engage the PTO clutch control switch or lever.
4. Depress the clutch pedal fully.
5. Shift the shuttle shift lever to the neutral position.
6. Turn the key to "START" position.
7. The engine must not crank.
8. If it cranks, consult your local KUBOTA Dealer for this service.

◆ Test: Checking Operator Presence Control (O.P.C.) System.

1. Follow the instruction of "PARKING THE TRACTOR". (See "PARKING THE TRACTOR" in "SAFE OPERATION" section.)
2. Make sure the PTO drive shaft is disconnected from the tractor.
3. Sit on the operator's seat.
4. Start the engine.
5. Engage the PTO clutch control switch or lever. The PTO should begin to rotate. Disengage the PTO clutch control switch or lever.
6. While lifting yourself from the seat, engage the PTO clutch control switch or lever.


- (1) The PTO should begin to rotate and a buzzer should sound.
 - (2) Disengage the PTO clutch control switch or lever.
 - (3) If the buzzer does not sound, shut off the engine and consult your local KUBOTA Dealer for immediate servicing of the PTO OPC.
7. If the PTO OPC is operating properly, shut off the engine, and reconnect the implement drive shaft to the PTO. Restart the engine per the available instructions.



WARNING

To avoid personal injury or death:

- Before checking the PTO OPC, make sure that the PTO drive shaft should be disconnected from the tractor.
- If the buzzer does not sound during the PTO OPC check procedure, shut off engine and consult your local KUBOTA Dealer for immediate servicing of the PTO OPC.
- The unit should not be operated until servicing is completed.

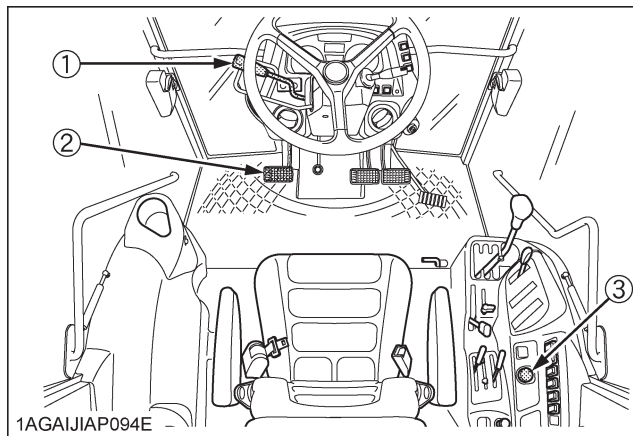

(1) Shuttle shift lever

(2) Clutch pedal

(3) PTO clutch control switch

■ Checking Wheel Bolt Torque




WARNING

To avoid personal injury or death:

- Never operate tractor with a loose rim, wheel, or axle.
- Any time bolts and nuts are loosened, retighten to specified torque.
- Check all bolts and nuts frequently and keep them tight.

Check wheel bolts and nuts regularly especially when new. If they are loose, tighten them.


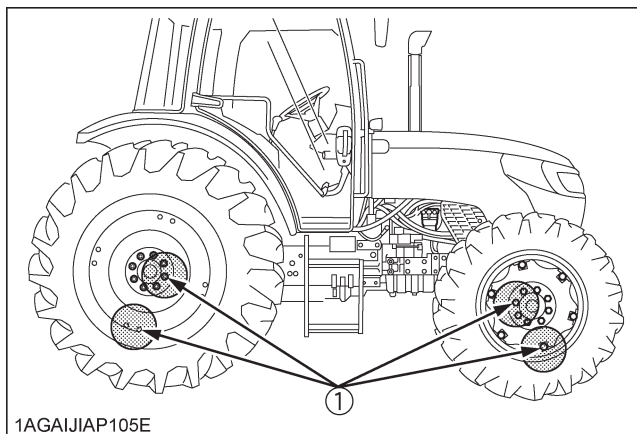


(1) Wheel bolts

(See "WHEEL ADJUSTMENT" in "TIRES, WHEELS AND BALLAST" section.)

■ Checking Tie-rod Dust Cover

1. Check to see that dust covers are not damaged.
2. If dust covers are damaged, consult local KUBOTA Dealer for this service.

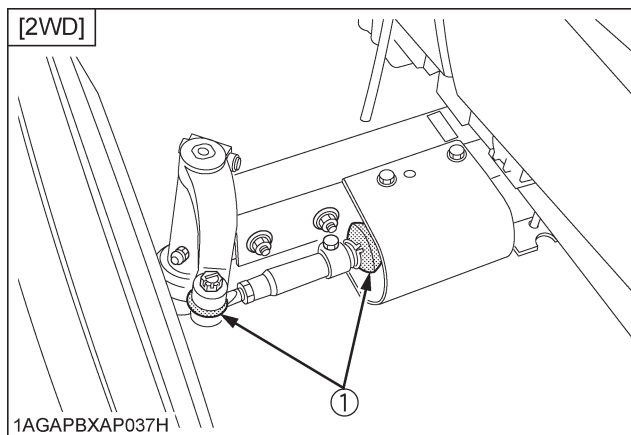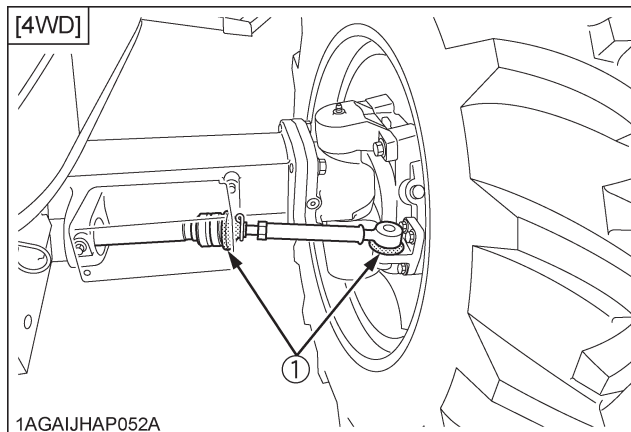

(1) Dust cover

IMPORTANT :


- If dust covers are cracked, water and dust invade into tie-rod and it will be early wear.

EVERY 100 HOURS


■ Lubricating Grease Fittings

Apply a small amount of multipurpose grease to the following points every 100 hours:


If you operated the machine in extremely wet and muddy conditions, lubricate grease fittings more often.

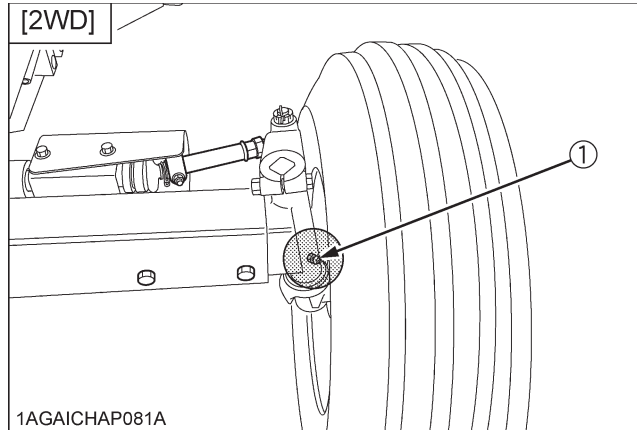


(1) Grease fitting (Knuckle shaft) [RH, LH]

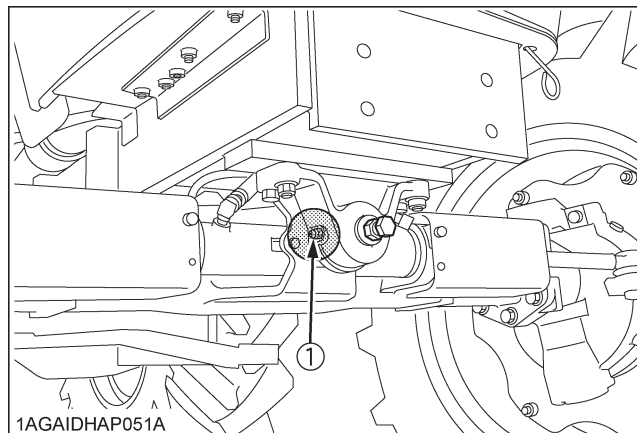


(1) Grease fitting (Front axle support)

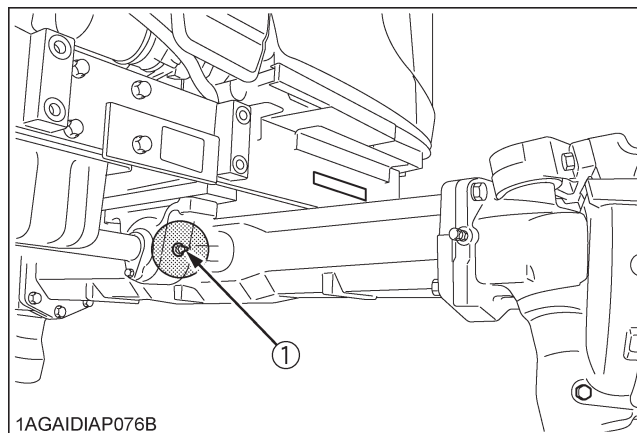


(1) Grease fitting (Front axle support)

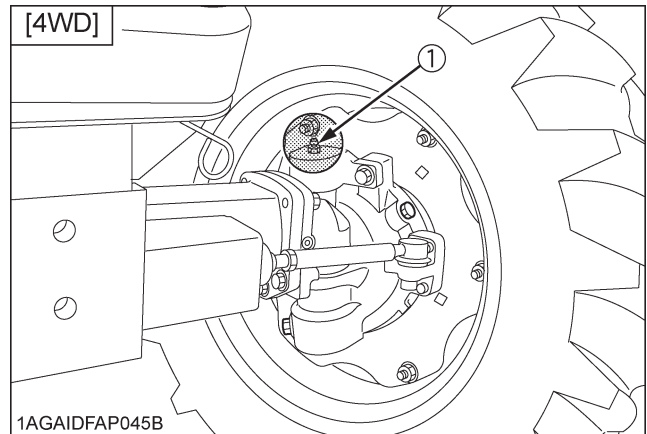


(1) Grease fitting (Front axle gear case support) [RH, LH]

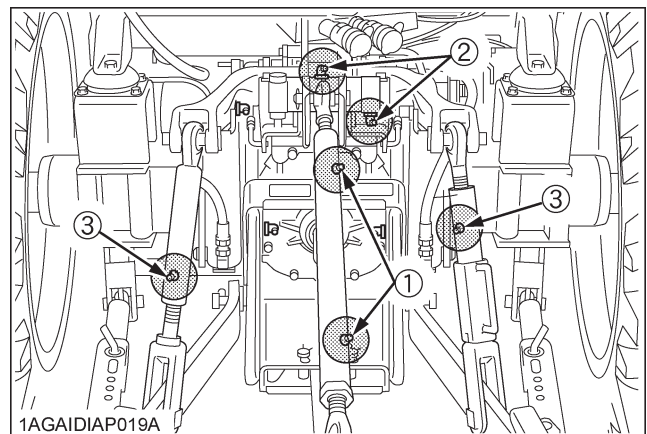


(1) Grease fitting (Top link)
(2) Grease fitting (Top link bracket)
(3) Grease fitting (Lifting rod)

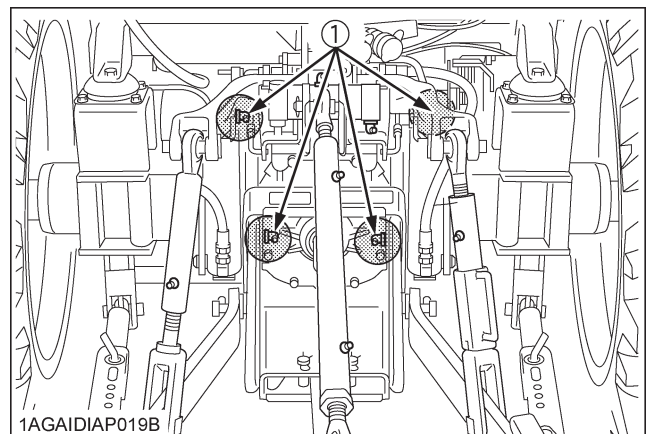

(1) Grease fitting (Hydraulic lift cylinders pin)

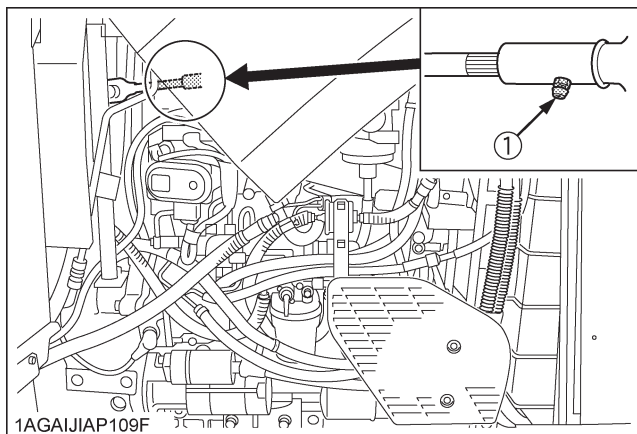

(1) Grease fitting (Steering joint shaft)

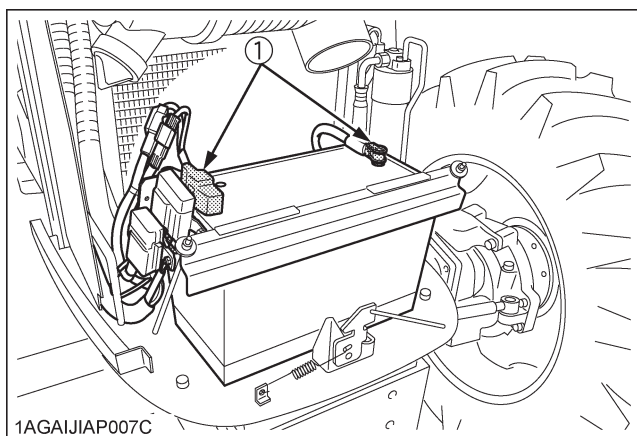

(1) Battery terminals

■ Cleaning Air Cleaner Primary Element


NOTE :

- If the air conditioner condenser is pulled out when cleaning the air cleaner, the air cleaner cover can be detached and attached easily.
(See "Cleaning Radiator Screen" in "DAILY CHECK" in "PERIODIC SERVICE" section.)

1. Remove the air cleaner cover and primary element.
2. Clean the primary element:
 - (1) When dry dust adheres to the element, blow compressed air from the inside, turning the element. Pressure of compressed air must be under 205 kPa (2.1 kgf/cm², 30 psi).
 - (2) When carbon or oil adheres to the element, soak the element in detergent for 15 minutes then wash it several times in water, rinse with clean water and dry it naturally. After element is fully dried, inspect inside of the element with a light and check if it is damaged or not.
3. Replace air cleaner primary element:
Once every 1000 hours or yearly, whichever comes first.

NOTE :

- Check to see if the evacuator valve is blocked with dust.

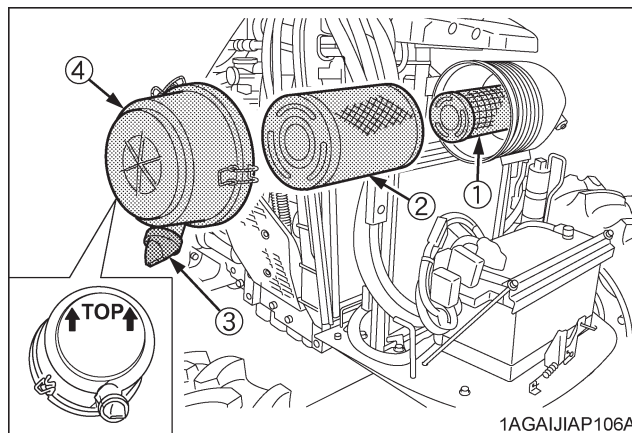

- (1) Secondary (safety) element
- (2) Primary element
- (3) Evacuator valve
- (4) Cover

IMPORTANT :

- The air cleaner uses a dry element, never apply oil.
- Do not run the engine with filter element removed.
- Be sure to refit the cover with the arrow ↑ (on the rear of cover) upright. If the cover is improperly fitted, evacuator valve will not function and dust will adhere to the element.
- Do not touch the secondary element except in cases where replacing is required.
(See "Replacing Air Cleaner Secondary Element" in "EVERY 1000 HOURS or 1 YEAR" in "PERIODIC SERVICE" section.)

◆ Evacuator Valve

Open the evacuator valve once a week under ordinary conditions - or daily when used in a dusty place - to get rid of large particles of dust and dirt.

■ Adjusting Fan / Air-conditioner Belt Tension



WARNING

To avoid personal injury or death:


- Be sure to stop the engine before checking belt tension.

Proper fan belt tension	A deflection of between 11 to 12 mm (0.43 to 0.47 in.) when the belt is pressed (98 N [10 kgf, 22.1 lbf]) in the middle of the span.
-------------------------	--

1. Stop the engine and remove the key.
2. Apply moderate thumb pressure to belt between pulleys.
3. If tension is incorrect, loosen the tension pulley nut and lock nut. And turn counterclockwise the tension bolt until the deflection of the belt falls within acceptable limits.
4. Replace fan belt if it is damaged.

IMPORTANT :

- Make sure that the V-belt tension is as specified as shown in the table above after tightening the tension pulley mounting nut.

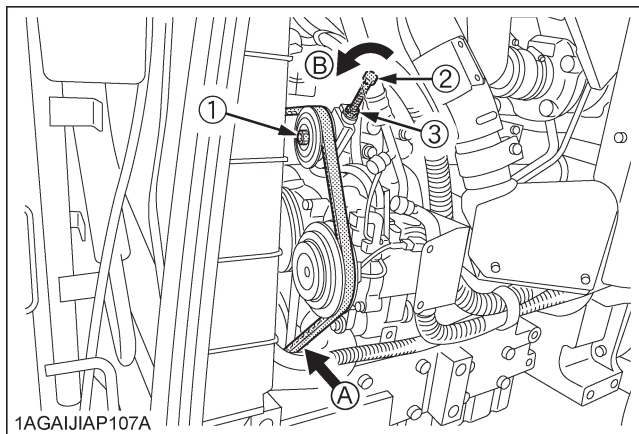

- (1) Tension pulley nut
(2) Tension bolt
(3) Lock nut

- (A) Check the belt tension
(B) To tighten

■ Adjusting Alternator Belt Tension




WARNING

To avoid personal injury or death:

- Be sure to stop the engine before checking belt tension.

Proper alternator belt tension	A deflection of between 10 to 12 mm (0.39 to 0.47 in.) when the belt is pressed in the middle of the span.
--------------------------------	--

1. Stop the engine and remove the key.
2. Apply moderate thumb pressure to belt between pulleys.
3. If tension is incorrect, loosen the alternator mounting bolts and, using a lever placed between the alternator and the engine block, pull the alternator out until the deflection of the belt falls within acceptable limits.
4. Replace alternator belt if it is damaged.

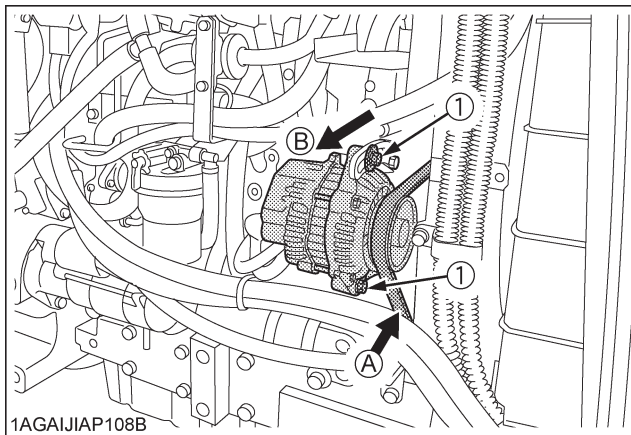

- (1) Bolt

- (A) Check the belt tension
(B) To tighten

■ Adjusting Brake Pedal

[F8/R8 model]




WARNING

To avoid personal injury or death:

- Stop the engine and chock the wheels before checking brake pedal.

Proper brake pedal free travel	40 to 45 mm (1.6 to 1.8 in.) on the pedal
	Keep the free travel in the right and left brake pedals equal.

1. Release the parking brake.
2. Slightly depress the brake pedals and measure free travel at the top of pedal stroke.
3. If adjustment is needed, loosen the lock nut and turn the turnbuckle to adjust the rod length within acceptable limits.
4. Retighten the lock nut.

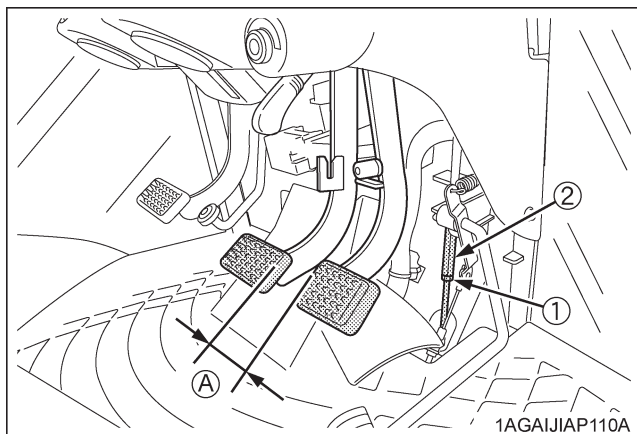

(1) Lock nut
(2) Turnbuckle

(A) "FREE TRAVEL"

■ Adjusting Brake Pedal

[F12/R12 model]



WARNING


To avoid personal injury or death:

- Stop the engine and chock the wheels before checking brake pedal.
- To prevent uneven braking, the specification must be within the recommended limit. If found out of the specifications, contact your local KUBOTA Dealer for adjusting the brakes.

◆ Checking the brake pedal free travel

Proper brake pedal free travel	7 to 14 mm (0.3 to 0.6 in.) on the pedal
	Keep the free travel in the right and left brake pedals equal.

1. Set the parking brake.
2. Slightly depress the brake pedals and measure free travel at the top of pedal stroke.

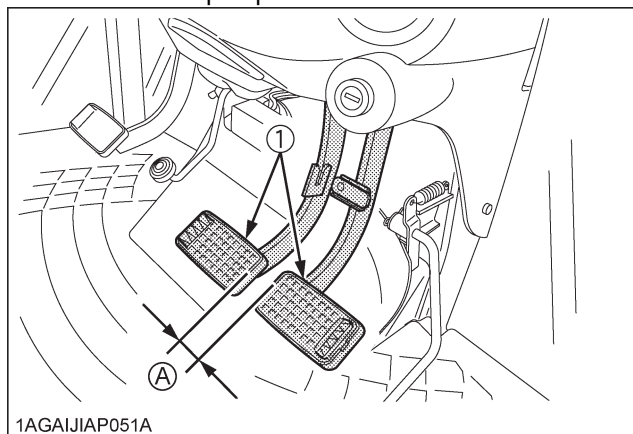

(1) Brake pedals

(A) "FREE TRAVEL"


NOTE :

- Brake pedals should be equal when depressed.

◆ Checking the brake pedal stroke

Pedal stroke	Less than 100 mm (3.9 in.) at each pedal
--------------	--

1. Disengage the brake pedal lock.
2. Depress the brake pedal several times.
3. Step on the right-hand pedal and measure the level difference (pedal stroke) between this pedal and the left-hand pedal.
4. Do the same for the left-hand pedal.

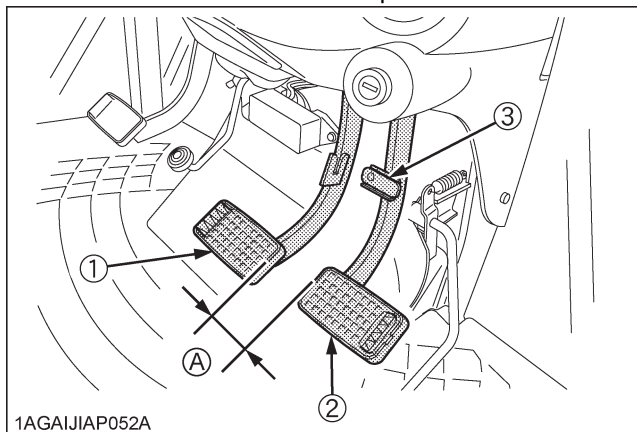

- (1) Brake pedal (LH) (A) "PEDAL STROKE"
 (2) Brake pedal (RH)
 (3) Brake pedal lock

◆ Checking the equalizer working level (anti-imbalance device)

1. Gently step on both brake pedals at once.
2. Further step on the right-hand pedal (the left-hand pedal slightly raises itself) and measure the level difference between the pedals.
3. Do the same for the left-hand pedal.

Equalizer working level	Level difference of over 5 mm (0.2 in.) between both pedals
-------------------------	---

■ Checking Gear Locked Parking Brake [F12/R12 model]



WARNING

To avoid personal injury or death:

- Do not dismount the tractor while checking the parking brake.

Confirm the tractor (tractor unit only) can surely be parked on the slope of about 15 degrees (Slope that rises by 2.7 meters every 10 meters).

If the tractor moves, consult your local KUBOTA Dealer. Always engage the parking brake before dismounting the tractor.

■ Checking Battery Condition



DANGER

To avoid the possibility of battery explosion:

For the refillable type battery, follow the instructions below.

- Do not use or charge the refillable type battery if the fluid level is below the LOWER (lower limit level) mark. Otherwise, the battery component parts may prematurely deteriorate, which may shorten the battery's service life or cause an explosion. Check the fluid level regularly and add distilled water as required so that the fluid level is between the UPPER and LOWER levels.



WARNING

To avoid personal injury or death:


- Never remove the battery cap while the engine is running.
- Keep electrolyte away from eyes, hands and clothes. If you are splattered with it, wash it away completely with water immediately and get medical attention.
- Keep open sparks and flames away from the battery at all times. Hydrogen gas mixed with oxygen becomes very explosive.
- Wear eye protection and rubber gloves when working around battery.

The factory-installed battery is of non-refillable type. If the indicator turns white, do not charge the battery but replace it with new one.

Mishandling the battery shortens the service life and adds to maintenance costs.

The original battery is maintenance free, but needs some servicing.

If the battery is weak, the engine will be difficult to start and the lights will be dim. It is important to check the battery periodically.

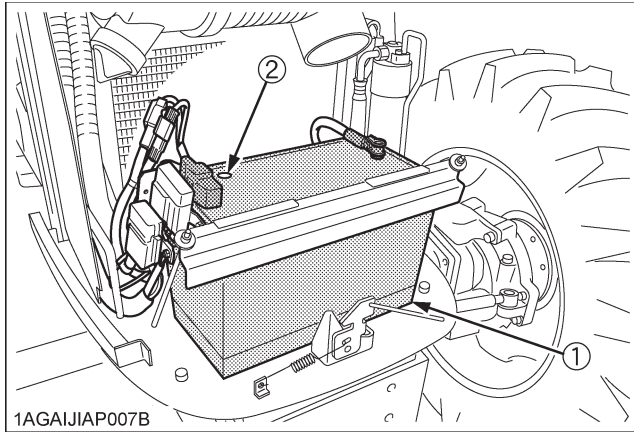

(1) Battery
(2) Indicator

◆ How to read the indicator

Check the battery condition by reading the indicator.

State of indicator display	
Green	Specific gravity of electrolyte and quality of electrolyte are both in good condition.
Black	Needs charging battery.
White	Needs replacing battery.


◆ Battery Charging



WARNING

To avoid personal injury or death:

- When the battery is being activated, hydrogen and oxygen gases in the battery are extremely explosive. Keep open sparks and flames away from the battery at all times, especially when charging the battery.
- When charging the battery, ensure the vent caps are securely in place. (if equipped)
- When disconnecting the cable from the battery, start with the negative terminal first. When connecting the cable to the battery, start with the positive terminal first.
- Never check battery charge by placing a metal object across the posts.
Use a voltmeter or hydrometer.

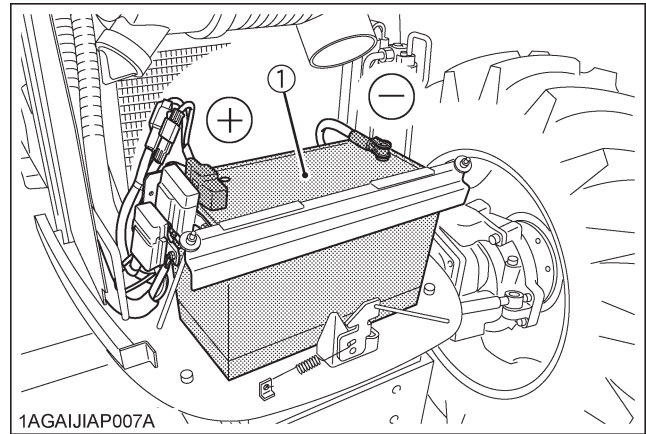

(1) Battery

1. To slow charge the battery, connect the battery positive terminal to the charger positive terminal and the negative to the negative, then recharge in the standard fashion.
2. A boost charge is only for emergencies. It will partially charge the battery at a high rate and in a short time. When using a boost-charged battery, it is necessary to recharge the battery as early as possible. Failure to do this will shorten the battery's service life.
3. The battery is charged if the indicator display turns green from black.
4. When exchanging an old battery for a new one, use battery of equal specification shown in **TABLE 1**.

Table 1

Battery Type	Volts (V)	Capacity at 5H.R(A.H)
GP31(105E41R)	12	85.3

Reserve Capacity (min)	Cold Cranking Amps	Normal Charging Rate (A)
160	900	11

◆ Direction for Storage


1. When storing the tractor for long periods of time, remove the battery from tractor, adjust the electrolyte to the proper level and store in a dry place out of direct sunlight.
2. The battery self-discharges while it is stored. Recharge it once every 3 months in hot seasons and once every 6 months in cold seasons.

EVERY 200 HOURS

■ Adjusting Toe-in

	Proper toe-in
4WD	2 to 8 mm (0.08 to 0.31 in.)
2WD	1 to 5 mm (0.04 to 0.2 in.)


1. Park tractor on a flat place.
2. Turn steering wheel so front wheels are in the straight ahead position.
3. Lower the implement, lock the park brake and stop the engine.
4. Measure distance between tire beads at front of tire, at hub height.
5. Measure distance between tire beads at rear of tire, at hub height.
6. Front distance should be shorter than rear distance. If not, adjust tie rod length.

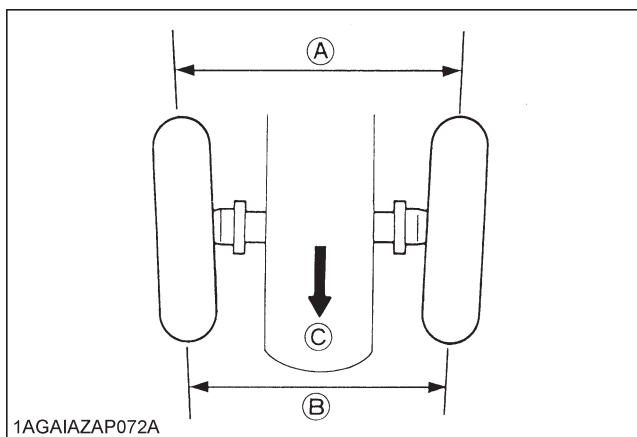


- (A) Wheel - to - wheel distance at rear
 (B) Wheel - to - wheel distance at front
 (C) "FRONT"

◆ Adjusting procedures

1. Detach the snap ring.
2. Loosen the tie-rod nut.
3. Turn the tie-rod joint to adjust the rod length until the proper toe-in measurement is obtained.
4. Retighten the tie-rod nut.
5. Attach the snap ring of the tie-rod joint.

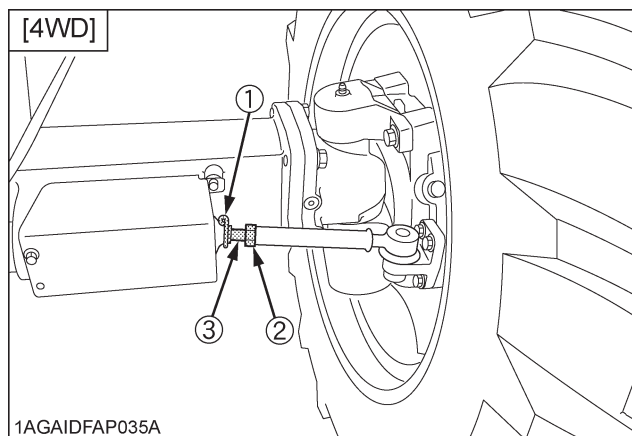


- (1) Snap ring
 (2) Tie-rod nut
 (167 to 196 N-m, 17 to 20 kgf-m, 123.2 to 144.6 lbf-ft)
 (3) Tie-rod joint

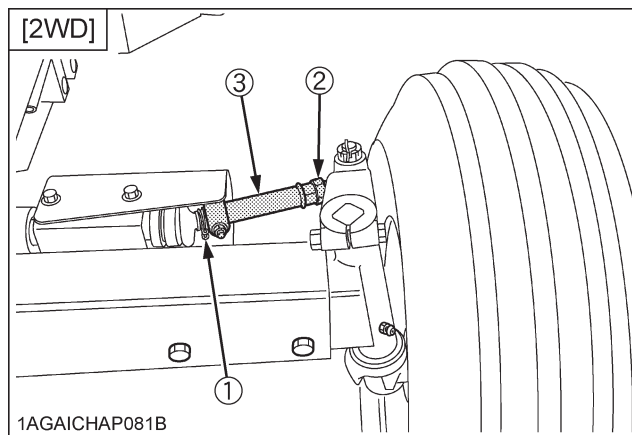

- (1) Snap ring
 (2) Tie-rod nut
 (167 to 196 N-m, 17 to 20 kgf-m, 123.2 to 144.6 lbf-ft)
 (3) Tie-rod joint

Draining Fuel Tank Water

Loosen the drain plug at the bottom of the fuel tank to let sediments, impurities and water out of the tank. Finally tighten up the plug.

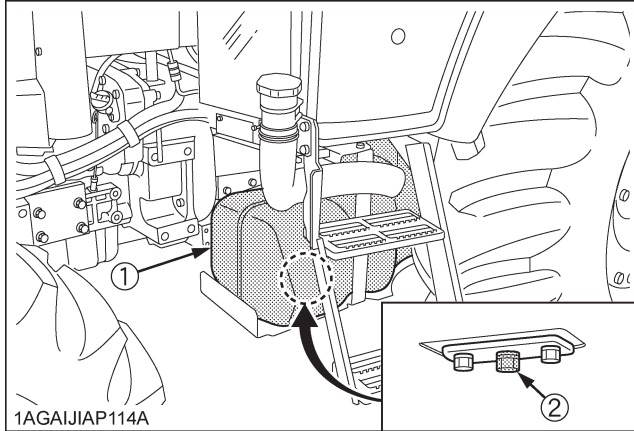


- (1) Fuel Tank (Left)
- (2) Drain plug

IMPORTANT :

- If the fuel contains impurities, such as water, drain the fuel tank at shorter intervals.
- Drain the fuel tank before operating the tractor after a long period of storage.
- The fuel tank is made of plastic. Be careful not to overtighten the bolts.

Cleaning Inner Air Filter


Remove the knob bolts and pull out filter. Blow air from the direction opposite to the filter's normal air flow. Pressure of compressed air must be under 205 kPa (2.1 kgf/cm², 30 psi).

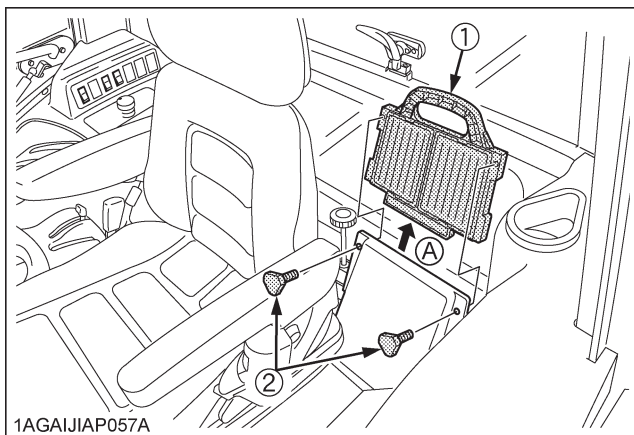

- (1) Inner air filter
- (2) Knob bolts
- (A) "PULL OUT"

Cleaning Fresh Air Filter

Remove the knob bolts and pull out filter.

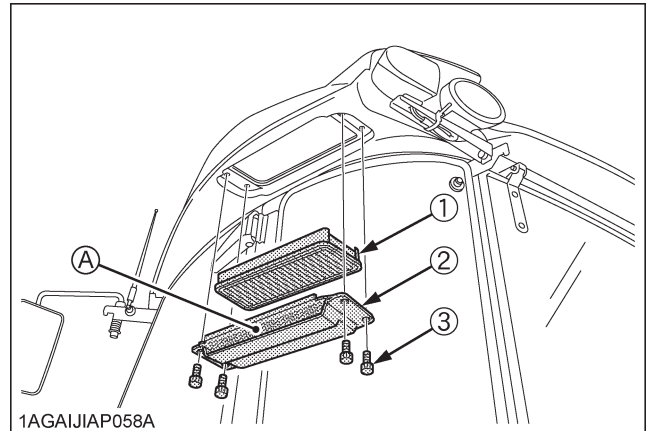

- (1) Fresh air filter
- (2) Cover
- (3) Knob bolt
- (A) Air inlet port

NOTE :


- Attach the filter and cover as the illustration above.

Cleaning the air filter

- Normal use
Blow air from the opposite direction to the filter's normal air flow.
Pressure of compressed air must be under 205 kPa (2.1 kgf/cm², 30 psi).

IMPORTANT :

- Do not hit the filter. If the filter becomes deformed, dust may enter into the air-conditioner, which may cause damage and malfunction.

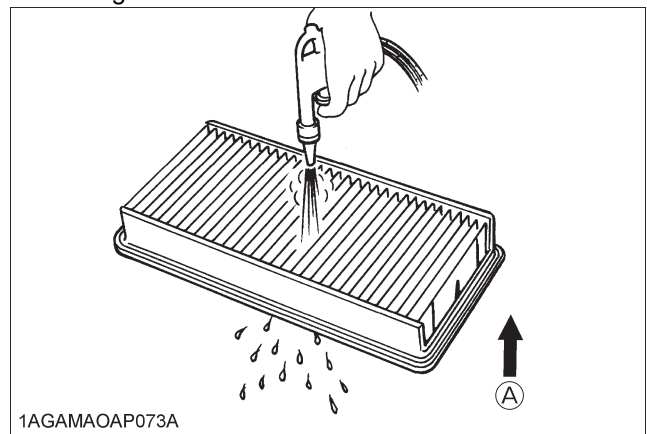

- (A) "AIR CONDITIONER AIRFLOW"

NOTE :


- If the filter is very dirty:
Dip the filter in lukewarm water with mild dish washing detergent.
Move it up and down as well as left and right to loosen dirt. Rinse the filter with clean water and let it air-dry.

IMPORTANT :

- Do not use gasoline, thinner or similar chemicals to clean the filter as damage to the filter may occur.
- It may also cause an unpleasant odor in the CAB when the system is used next.

■Checking Air Conditioner Condenser

Detach the air conditioner condenser screen and check air conditioner condenser to be sure it is clean of debris.

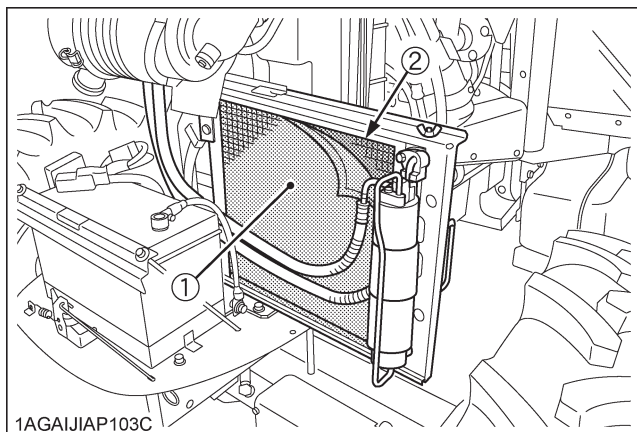


- (1) Air conditioner condenser screen
(2) Air conditioner condenser

◆ Sliding the air conditioner condenser**WARNING**

To avoid personal injury or death:

- Be sure to stop the engine before removing the screen.
- The condenser and receiver become hot while the air conditioner is running. Before checking or cleaning them, wait until they cool down enough.

1. Loosen the wing nut.
2. Hold the handle, slide the air conditioner condenser assembly toward yourself.

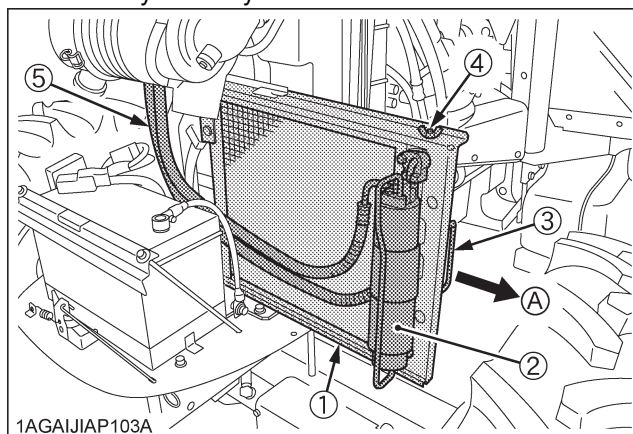

- (1) Condenser
(2) Receiver
(3) Handle
(4) Wing nut
(5) Air conditioner hose

(A) "PULL"

IMPORTANT :


- Do not hold the air conditioner receiver or the air conditioner pipes when sliding out the condenser for cleaning.

EVERY 400 HOURS

■Cleaning Water Separator


This job should not be done in the field, but in a clean place.

1. Close the fuel shutoff-valve.
2. Unscrew the cup and remove it, then rinse the inside with kerosene.
3. Take out the element and dip it in the kerosene to rinse.
4. After cleaning, reassemble the water separator, keeping out dust and dirt.
5. Bleed the fuel system.
(See "SERVICE AS REQUIRED" in "PERIODIC SERVICE" section.)

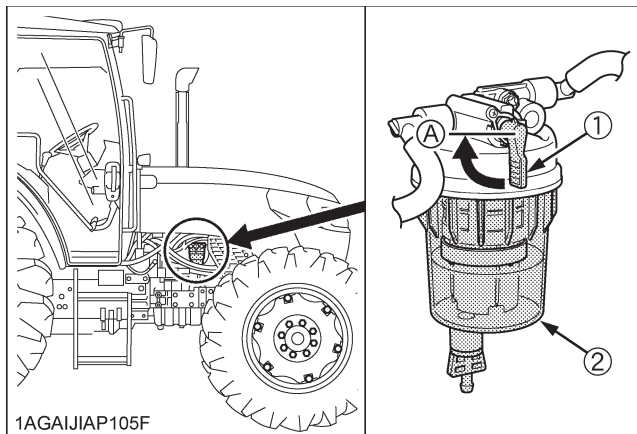

(1) Fuel shutoff-valve
(2) Cup

(A) "CLOSE"

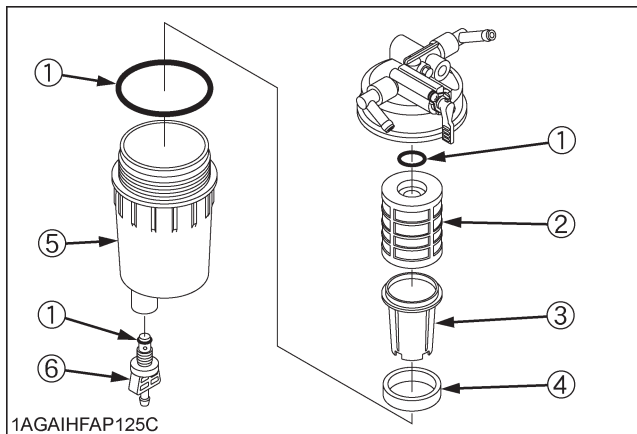


(1) O ring
(2) Element
(3) Element cup
(4) Red float
(5) Cup
(6) Drain plug

IMPORTANT :

- If the water separator and/or fuel filter is not well maintained, the supply pump and injector may be damaged earlier than expected.

■Lubricating Grease Fitting [2WD Model]

Detach the cover, and apply bearing grease.

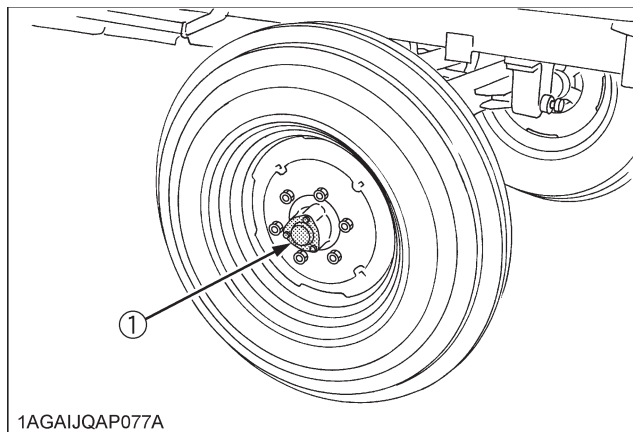

(1) Front wheel hub cover

EVERY 500 HOURS or 1 YEAR

Be sure to do the following servicing once every 500 hours or yearly, whichever comes first.

■ Changing Engine Oil



WARNING

To avoid personal injury or death:


- Be sure to stop the engine before changing the oil.
- Allow engine to cool down sufficiently, oil can be hot and can burn.

1. To drain the used oil, remove the drain plug at the bottom of the engine and drain the oil completely into the oil pan.
2. After draining reinstall the drain plug.
3. Fill with the new oil up to the upper notch on the dipstick.
(See "LUBRICANTS, FUEL AND COOLANT" in "MAINTENANCE" section.)


Oil capacity with filter	12 L (12.7 U.S.qts.)
--------------------------	----------------------

IMPORTANT :

- Use DPF-compatible oil (CJ-4) for the engine.

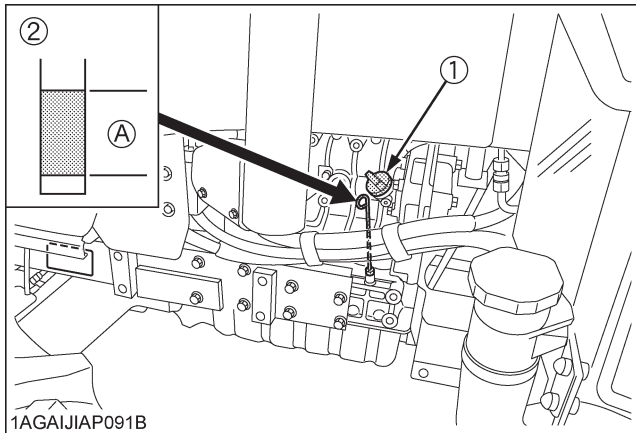

- (1) Oil inlet (A) Oil level is acceptable within this range
(2) Dipstick

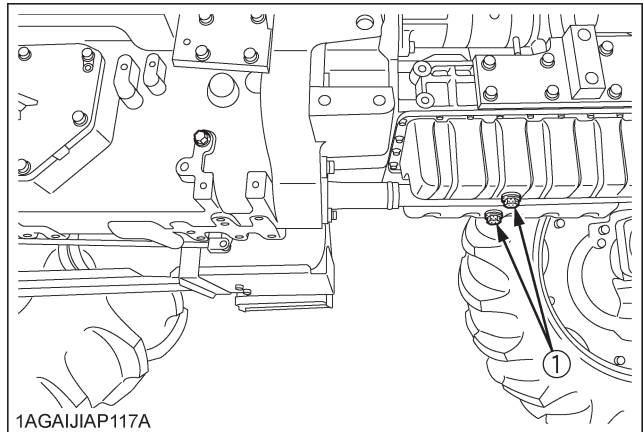

(1) Drain plug

EVERY 500 HOURS

■ Replacing Engine Oil Filter




WARNING

To avoid personal injury or death:

- Be sure to stop the engine before replacing the oil filter cartridge.
- Allow engine to cool down sufficiently, oil can be hot and can burn.

1. Remove the oil filter.
2. Put a film of clean engine oil on the rubber seal of the new filter.
3. Tighten the filter quickly until it contacts the mounting surface.
Tighten filter by hand an additional 1/2 turn only.
4. After the new filter has been replaced, the engine oil normally decreases a little. Make sure that the engine oil does not leak through the seal and be sure to check the oil level on the dipstick. Then, replenish the engine oil up to the prescribed level.

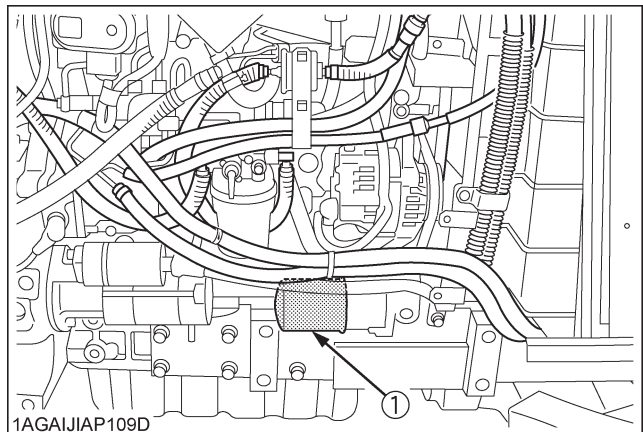


(1) Engine oil filter

IMPORTANT :

- To prevent serious damage to the engine, use only a KUBOTA genuine filter.

■ Replacing Fuel Filter

1. Remove the fuel filter.
2. Put a film of clean fuel on rubber seal of new filter.
3. Tighten the filter quickly until it contacts the mounting surface.
Tighten filter by hand an additional 1/2 turn only.
4. Bleed the fuel system.
(See "Bleeding Fuel System" in "SERVICE AS REQUIRED" in "PERIODIC SERVICE" section.)

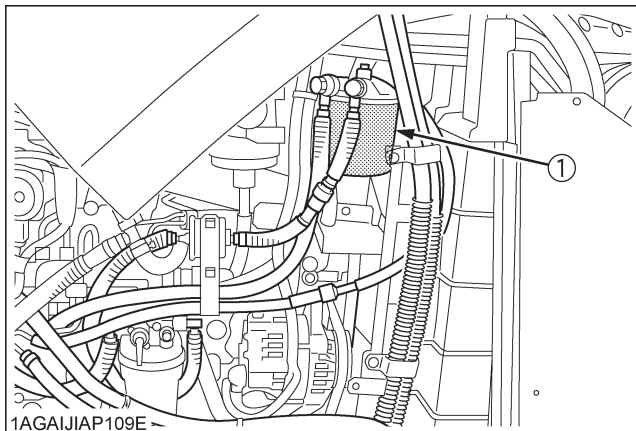


(1) Fuel filter

■ Replacing Hydraulic Oil Filter**◆ Cleaning Magnetic Filter****WARNING**

To avoid personal injury or death:


- Be sure to stop the engine before changing the oil filter cartridge.
- Allow engine to cool down sufficiently, oil can be hot and can burn.

1. Remove the drain plug at the bottom of the transmission case and drain the oil completely into an oil pan.
2. After draining reinstall the drain plug.

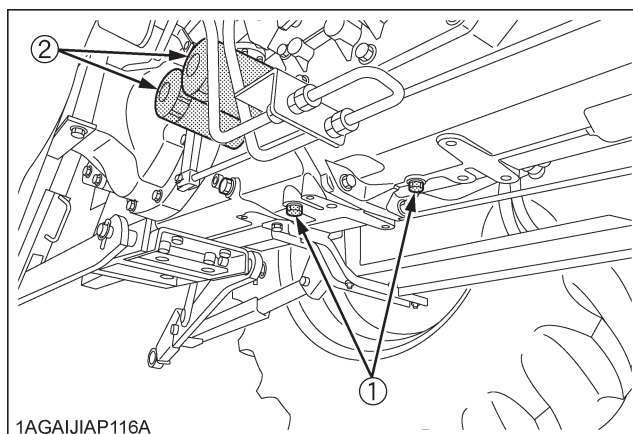

(1) Drain plug
(2) Hydraulic oil filter


3. Remove the 2 oil filters.
4. Wipe off metal filings from the magnetic filter with a clean rag.

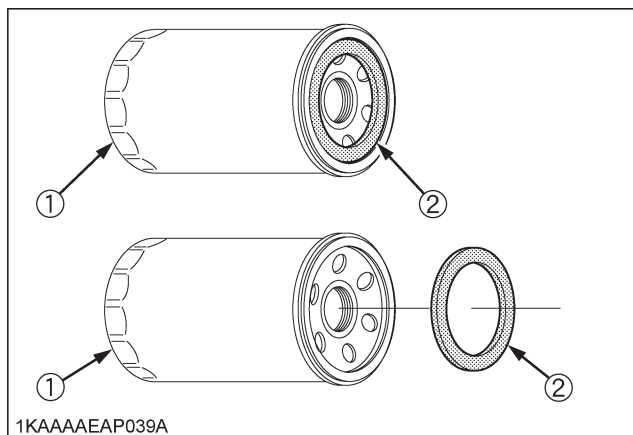

(1) Hydraulic oil filter
(2) Magnetic filter (Wipe off metal filings)

5. Put a film of clean transmission oil on the rubber seal of the new filters.

6. Tighten the filter quickly until it contacts the mounting surface.
Tighten filter by hand an additional 1/2 turn only.
7. After the new filters have been replaced, fill the transmission oil up to the upper notch on the dipstick.

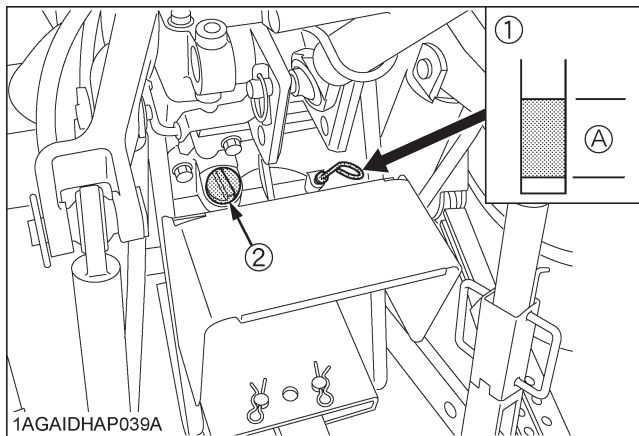

(1) Dipstick (A) Oil level is acceptable within this range
(2) Oil inlet


8. After running the engine for a few minutes, stop the engine and check the oil level again, add oil to the prescribed level.
9. Make sure that the transmission fluid doesn't leak pass the seal on the filter.

IMPORTANT :

- To prevent serious damage to the hydraulic system, use only a KUBOTA genuine filter.

■ Checking Power Steering Line



1. Check to see that all lines and hose clamps are tight and not damaged.
2. If the hoses and clamps are found to be worn or damaged, replace or repair them at once.

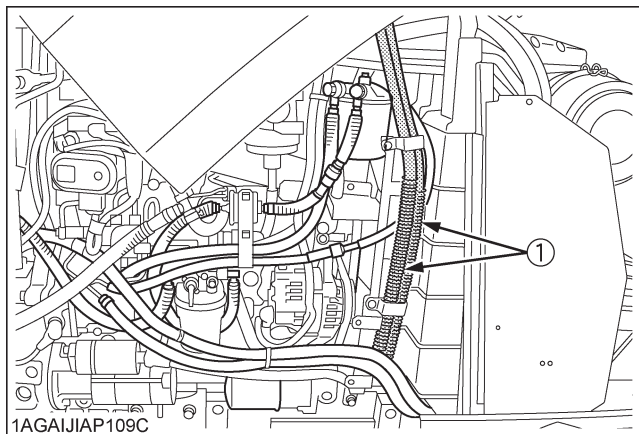

(1) Power steering pressure hoses

■ Checking Radiator Hose and Clamp



1. If the hose clamps are loose or water leaks, tighten the bands securely.
2. If the hoses are found to be swollen, hardened or cracked, replace the hoses and tighten the hose clamps securely.

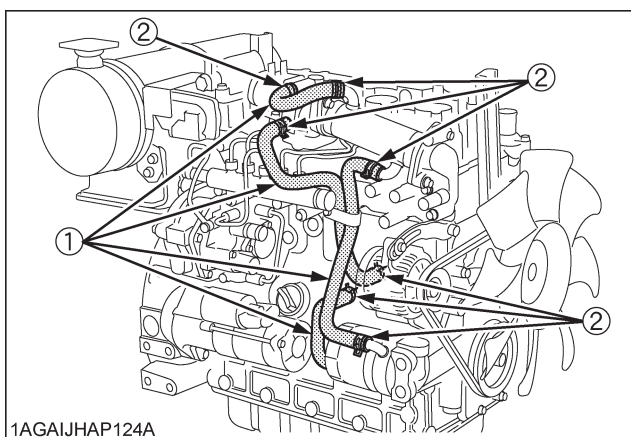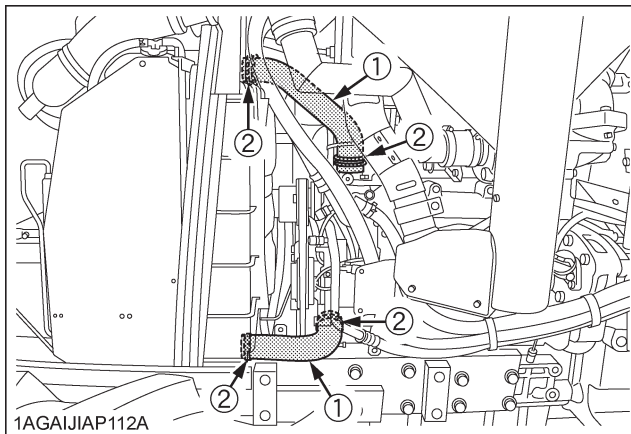

(1) Radiator hoses
(2) Hose clamps

■Checking Fuel Line

1. Check to see that all lines and hose clamps are tight and not damaged.
2. If the hoses and the clamps are found to be worn or damaged, replace or repair them at once.

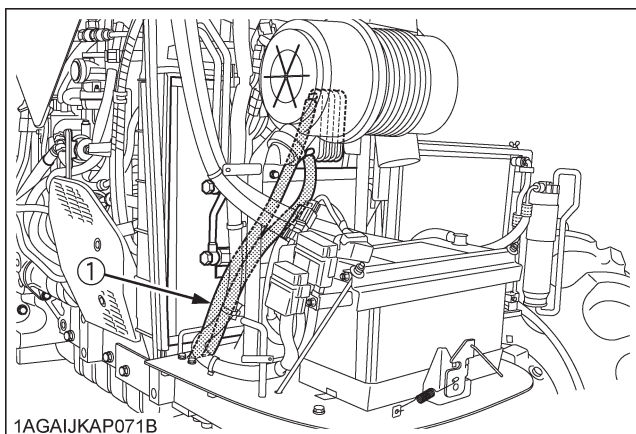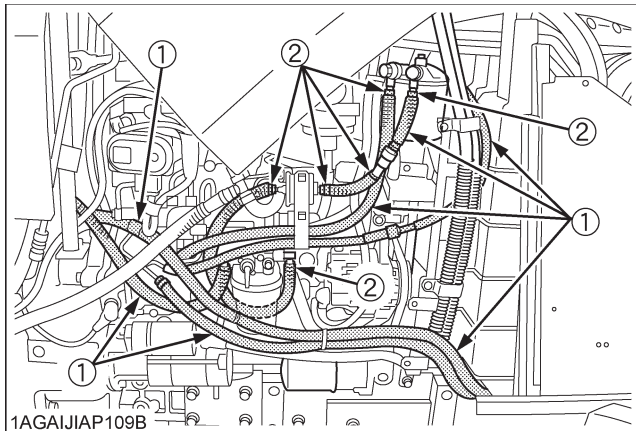


- (1) Fuel lines
(2) Clamp bands

NOTE :

- If the fuel line is removed, be sure to properly bleed the fuel system.
(See "Bleeding Fuel System" in "SERVICE AS REQUIRED" in "PERIODIC SERVICE" section.)

■Checking Intake Air Line


1. Check to see that the hoses and the hose clamps are tight and not damaged.
2. If the hoses and the clamps are found to be worn or damaged, replace or repair them at once.

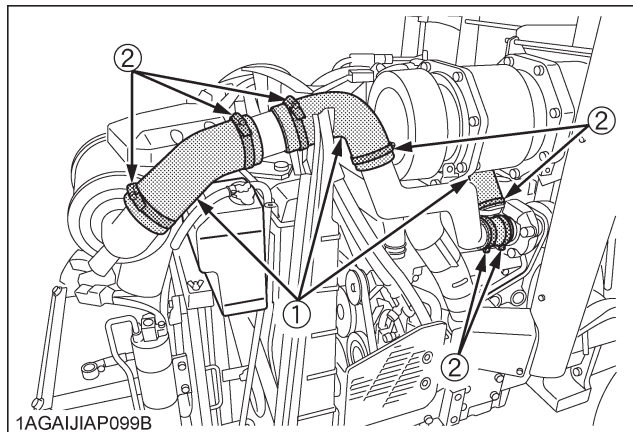

- (1) Hose
(2) Hose clamps

■Checking Lift Cylinder Hose

1. Check to see that the hoses and the hose clamps are tight and not damaged.
2. If the hoses and clamps are found to be worn or damaged, replace or repair them at once.

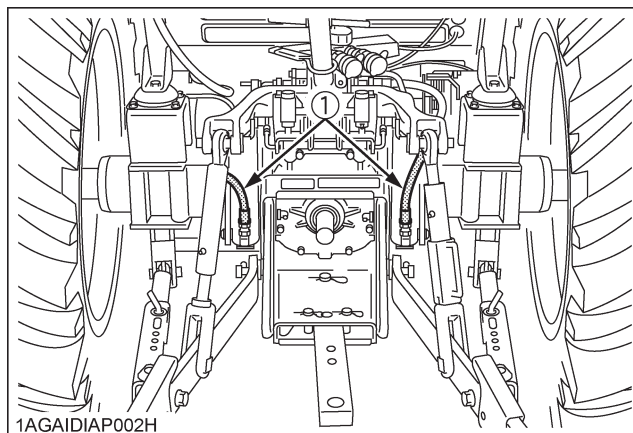

- (1) Lift cylinder hoses

■Checking Air Conditioner Pipe and Hose

1. Check to see that all lines and hose clamps are tight and not damaged.
2. If the hoses and clamps are found to be worn or damaged, consult your local KUBOTA Dealer for this service.


EVERY 600 HOURS

■ Adjusting Front Axle Pivot

If the front axle pivot pin adjustment is not correct, front wheel vibration can occur causing vibration in the steering wheel.

◆ Adjusting procedure

Loosen the lock nut, screw-in the adjusting screw until seated, then tighten the screw with an additional 1/6 turn. Re-tighten the lock nut.

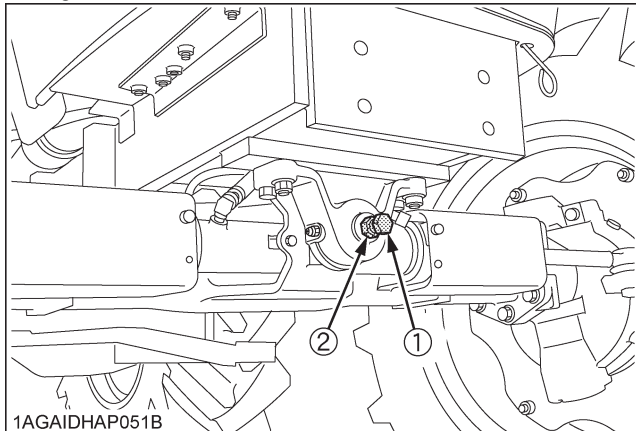

(1) Adjusting screw
(2) Lock nut

EVERY 1000 HOURS

■ Changing Transmission Fluid




WARNING

To avoid personal injury or death:


- Allow engine to cool down sufficiently, oil can be hot and can burn.

1. To drain the used oil, remove the drain plug at the bottom of the transmission case and drain the oil completely into the oil pan.
2. After draining reinstall the drain plug.
3. Fill with the new KUBOTA SUPER UDT fluid up to the upper notch on the dipstick.
(See "LUBRICANTS, FUEL AND COOLANT" in "MAINTENANCE" section.)
4. After running the engine for a few minutes, stop it and check the oil level again; add oil to prescribed level.

Oil capacity	56 L (59.2 U.S.qts.)
--------------	----------------------

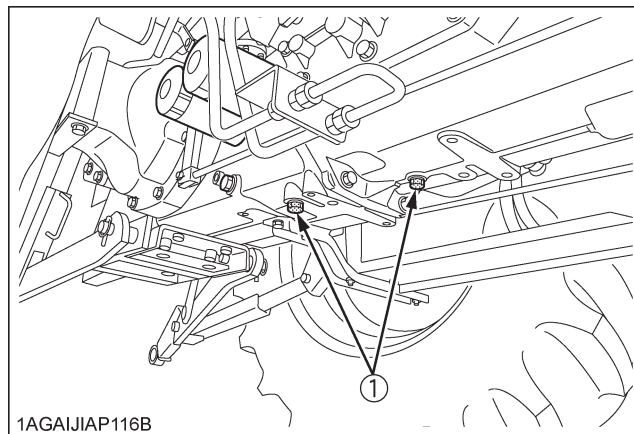

(1) Drain plug

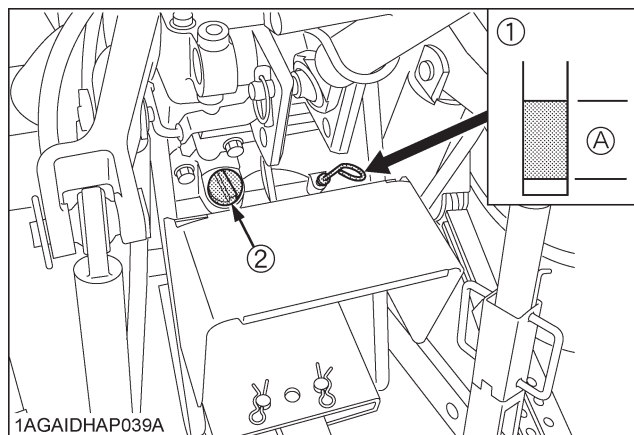

(1) Dipstick
(2) Oil inlet

(A) Oil level is acceptable within this range.

IMPORTANT :

- Do not operate the tractor immediately after changing the transmission fluid.
Run the engine at medium speed for a few minutes to prevent damage to the transmission.

■ Changing Front Axle Gear Case Oil and Front Differential Case Oil


IMPORTANT :

- Park the tractor on flat ground when performing an inspection. The proper amount of oil cannot be filled if the machine is tilted.
- Remove only the plugs that are specified in the following instructions.
- If the front tires are making it difficult to refill with oil at the front axle gear case, remove both front tires.
- Make sure to follow the instructions about the location (RH or LH side) where the procedure takes place. Otherwise, it may be impossible to refill with oil completely.

NOTE :


- Right-hand (RH) and left-hand (LH) sides are determined by facing in the direction of forward travel.

1. Remove the drain plugs located on the LH side and RH side of the axle gear case, then drain the oil into an oil pan.
2. Remove the filling plugs located on the LH side and RH side of the axle gear case.

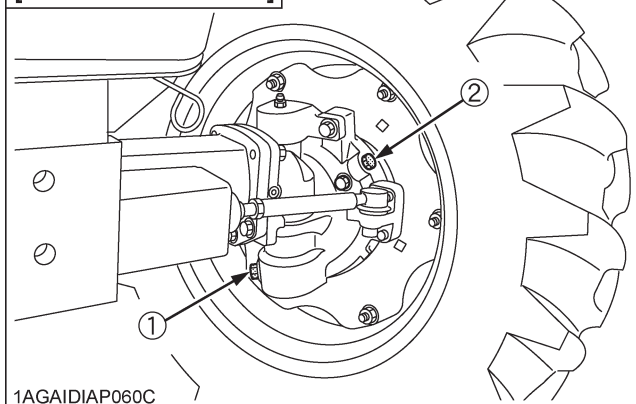[Front Axle Gear Case]


- (1) Drain port with drain plug (both RH and LH sides)
- (2) Filling port with filling plug (both RH and LH sides)

3. Remove the check plug and filling plug from the front differential case.

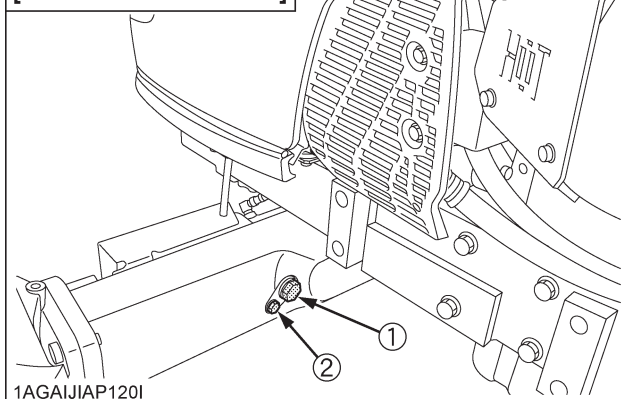[Front Differential Case]


- (1) Filling port with filling plug
- (2) Check port with check plug

4. Wait until the oil stops draining from the drain ports.
5. Reinstall the drain plugs for both LH side and RH side of the axle gear case.
6. Fill with 3.5 L of new oil from the filling port on the LH side of the front axle gear case. If the oil starts overflowing from the filling port, wait several minutes and then continue to refill with oil.

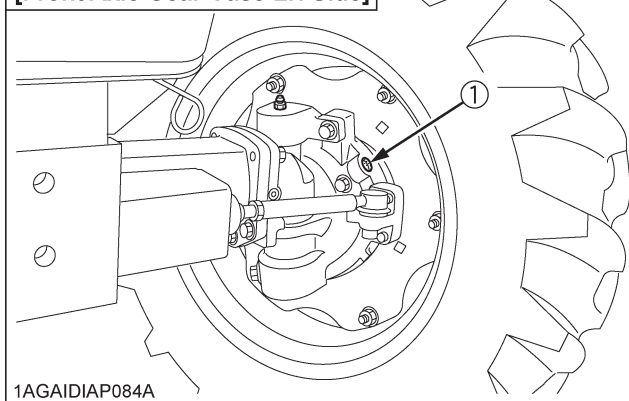[Front Axle Gear Case LH Side]


- (1) Filling port

7. Fill with new oil from the filling port on the RH side of the front axle gear case. If the oil starts overflowing from the filling port, wait several minutes and then continue to refill with oil.

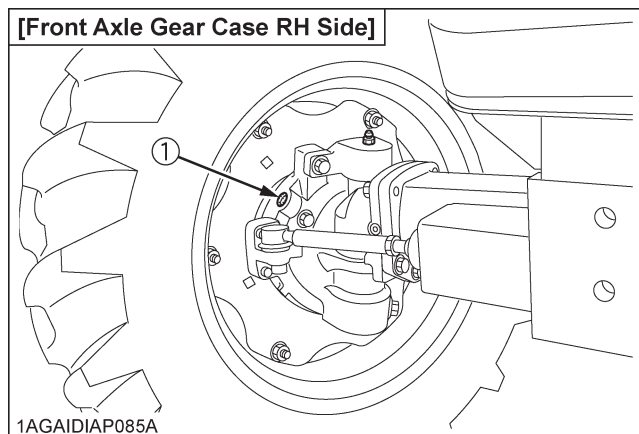

(1) Filling port

8. After oil starts overflowing from the check port of the front differential case, stop adding oil. Use an oil pan to catch the oil coming out from the check port.
9. Wait until the oil stops coming out from the check port.

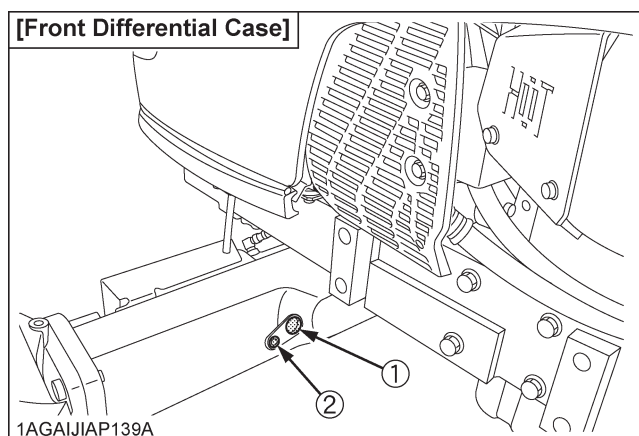

(1) Filling port

(2) Check port

NOTE :

- Keep the filling ports on the RH and LH sides of the front axle gear case open, and keep the filling port of the differential case open.
- It may take around 30 minutes for the oil to stop coming out from the check port.
- If the check plug is reinstalled before the oil stops coming out of the check port, it may cause overfilling and then result in an oil leak from the breather hose.

10. After oil stops coming out from the check port of the front differential case, reinstall the check plug.
11. Add another 1 liter of oil from the filling port on the RH side of the front axle gear case.

12. Reinstall the filling plugs for the RH side and LH side of the front axle gear case, and reinstall the filling plug for the front differential case.

	Oil capacity
Front axle gear case (LH side and RH side)	3.5 L (3.7 U.S.qts.) for each side
Front differential case	5.5 L (5.8 U.S.qts.)

NOTE :

- The oil inside the front axle case cannot be completely emptied through the drain ports.
- Use the specified oil amounts only as a reference.

■ Adjusting Engine Valve Clearance

Consult your local KUBOTA Dealer for this service.

EVERY 1000 HOURS or 1 YEAR

Be sure to do the following servicing once every 1 000 hours or yearly, whichever comes first.

■ Replacing Air Cleaner Primary Element and Secondary Element

(See "Cleaning Air Cleaner Primary Element" in "EVERY 100 HOURS" in "PERIODIC SERVICE" section.)

■ Checking Exhaust Manifold

Consult your local KUBOTA Dealer for this service.

EVERY 1500 HOURS

■Cleaning Fuel Injector Nozzle Tip

Consult your local KUBOTA Dealer for this service.

■Replacing Oil Separator Element




WARNING


To avoid personal injury or death:

- Be sure to stop the engine before replacing the oil separator element.

1. Remove the cover and take out the element. Wipe off oil and the carbon in the case with a clean rag.
2. Fit a new oil separator element.
3. Tighten the cover.

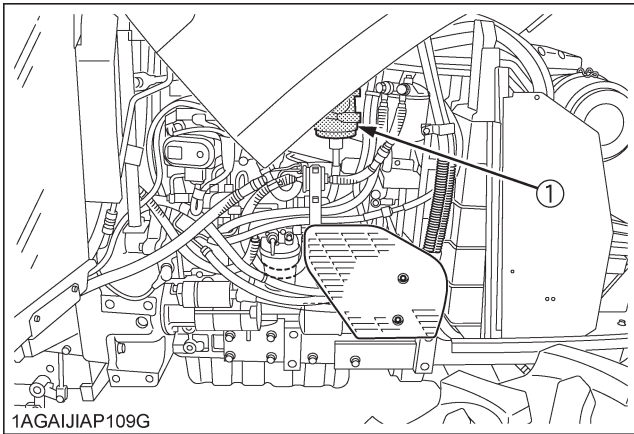

(1) Oil separator

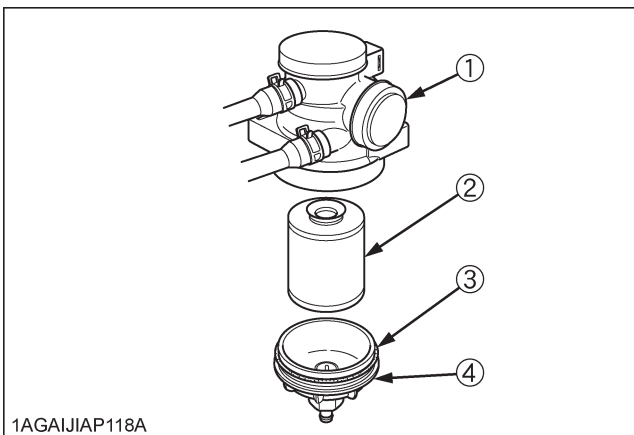

- (1) Body
(2) Oil separator element
(3) Gasket
(4) Cover

■Checking and Cleaning EGR Cooler

Consult your local KUBOTA Dealer for this service.

EVERY 2000 HOURS or 2 YEARS

Be sure to do the following servicing once every 2 000 hours or biennially, whichever comes first.

■Flushing Cooling System and Changing Coolant




WARNING

To avoid personal injury or death:


- Do not remove radiator cap while coolant is hot. When cool, slowly rotate cap to the first stop and allow sufficient time for excess pressure to escape before removing the cap completely.

1. Stop the engine, remove the key and let it cool down.
2. To drain the coolant, open the radiator drain plug and remove radiator cap. The radiator cap must be removed to completely drain the coolant.
3. After all coolant is drained, reinstall the drain plug.
4. Fill with clean soft water and cooling system cleaner.
5. Follow directions of the cleaner instruction.
6. After flushing, fill with clean soft water and anti-freeze until the coolant level is just below the radiator cap. Install the radiator cap securely.
7. Fill with coolant up to the "FULL" mark of recovery tank.
8. Start and operate the engine for few minutes.
9. Stop the engine, remove the key and let cool.
10. Check coolant level of recovery tank and add coolant if necessary.
11. Properly dispose of used coolant.

Coolant capacity	8 L (8.5 U.S.qts.)
------------------	--------------------

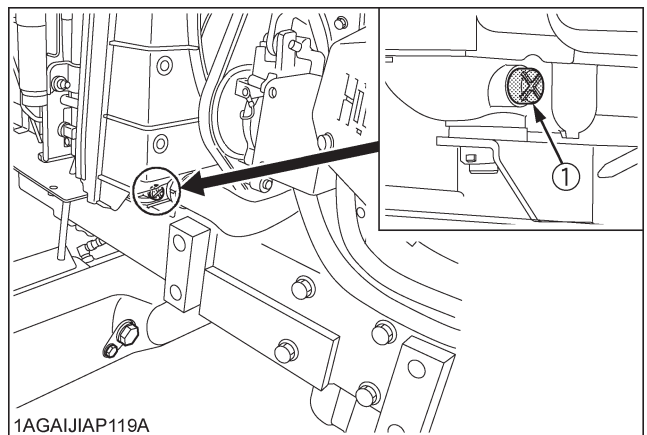

(1) Drain plug ((+) Plus screwdriver)

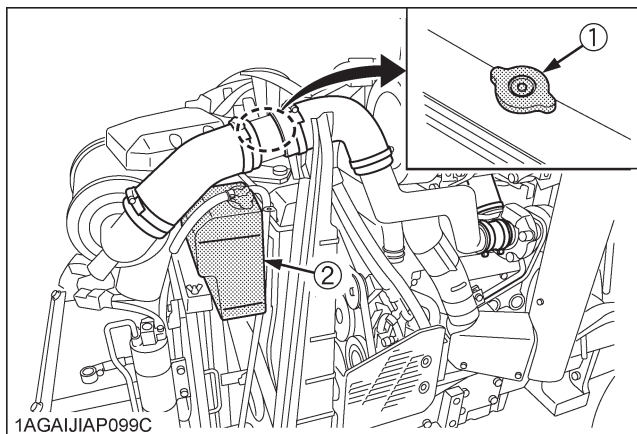

(1) Radiator cap
(2) Recovery tank

IMPORTANT :

- Do not start engine without coolant.
- Use clean, fresh soft water and anti-freeze to fill the radiator and recovery tank.
- When mixing the anti-freeze with water, the anti-freeze mixing ratio is 50%.
- Securely tighten radiator cap. If the cap is loose or improperly fitted, water may leak out and the engine could overheat.

NOTE :

- On cab type machines, coolant circulates through the heater. This means that one more liter or so of coolant is required.

In changing coolant, pour coolant up to the filler port of the recovery tank. Turn ON the heater (shift the temperature control lever toward WARM), and run the engine for a while in order to warm coolant. Then stop the engine.

When coolant has cooled down, some of the coolant in the recovery tank is sucked. Now the recovery tank is appropriately filled with coolant.

■ Anti-Freeze



WARNING

To avoid personal injury or death:

- When using anti-freeze, put on some protection such as rubber gloves (Anti-freeze contains poison).
- If it is swallowed, seek immediate medical help. Do NOT make a person throw up unless told to do so by poison control or a health care professional. Use standard first aid and CPR for signs of shock or cardiac arrest. Call your local Poison Control Center or your local emergency number for further assistance.
- When anti-freeze comes in contact with the skin or clothing, wash it off immediately.
- Do not mix different types of Anti-freeze. The mixture can produce chemical reaction causing harmful substances.
- Anti-freeze is extremely flammable and explosive under certain conditions. Keep fire and children away from anti-freeze.
- When draining fluids from the engine, place some container underneath the engine body.
- Do not pour waste onto the ground, down a drain, or into any water source.
- Also, observe the relevant environmental protection regulations when disposing of anti-freeze.

Always use a 50/50 mix of long-life coolant and clean soft water in KUBOTA engines.

Consult your local KUBOTA Dealer concerning coolant for extreme conditions.

1. Long-life coolant (hereafter LLC) comes in several types. Use ethylene glycol (EG) type for this engine.
2. Before employing LLC-mixed cooling water, fill the radiator with fresh water and empty it again. Repeat this procedure 2 or 3 times to clean up the inside.
3. Mixing the LLC
Premix 50% LLC with 50% clean soft water. When mixing, stir it up well, and then fill into the radiator.
4. The procedure for the mixing of water and anti-freeze differs according to the make of the anti-freeze and the ambient temperature. Refer to SAE J1034 standard, more specifically also to SAE J814c.

Vol % Anti-freeze	Freezing Point	Boiling Point*
	℃	℃
50	-37	108

- * At 1.013×10^5 Pa (760 mmHg) pressure (atmospheric).

A higher boiling point is obtained by using a radiator pressure cap which permits the development of pressure within the cooling system.

5. Adding the LLC
 - (1) Add only water if the mixture reduces in amount by evaporation.
 - (2) If there is a mixture leak, add the LLC of the same manufacturer and type in the same mixture percentage.
 - * Never add any long-life coolant of different manufacturer. (Different brands may have different additive components, and the engine may fail to perform as specified.)
6. When the LLC is mixed, do not employ any radiator cleaning agent. The LLC contains anticorrosive agent. If mixed with the cleaning agent, sludge may build up, adversely affecting the engine parts.
7. KUBOTA's genuine long-life coolant has a service life of 2 years. Be sure to change the coolant every 2 000 hours or every 2 years whichever comes faster.

NOTE :

- The above data represent industry standards that necessitate a minimum glycol content in the concentrated anti-freeze.

■Cleaning Master Cylinder Filter

[F12/R12 model]

Consult your local KUBOTA Dealer for this service.

EVERY 3000 HOURS

■Checking Turbocharger

Consult your local KUBOTA Dealer for this service.

■Checking Supply Pump

Consult your local KUBOTA Dealer for this service.

■Checking and Cleaning EGR System

Consult your local KUBOTA Dealer for this service.

■Cleaning DPF Muffler

◆ Removal of ash

The longer the DPF operates, the more ash (burnt residue) is collected in the filter. Too much ash build-up adversely affects the DPF performance. Consult your local KUBOTA Dealer to clean the filter.

IMPORTANT :

- The DPF needs cleaning with a specific cleaning device. Do not clean the DPF by disassembling, and attempt by yourself, consult your local KUBOTA Dealer.

EVERY 3 TO 4 MONTHS

■Rustproofing when in Storage

While the tractor is in storage, run the engine at idle as a rustproofing operation for 5 to 10 minutes every 3 to 4 months.

EVERY 1 YEAR

■Checking CAB Isolation Cushion

Check the cushion for any breakage or fatigue. Replace them if they are deteriorated.

■Checking DPF Related Pipe

Consult your local KUBOTA Dealer for this service.

EVERY 2 YEARS

■Replacing PCV (Positive Crankcase Ventilation) Valve Hose

Consult your local KUBOTA Dealer for this service.

■Replacing DPF Related Rubber Pipe

Consult your local KUBOTA Dealer for this service.

■Replacing EGR Cooler Hose

Consult your local KUBOTA Dealer for this service.

■Replacing Boost Sensor Hose

Consult your local KUBOTA Dealer for this service.

■Checking Oil Separator Related Rubber Pipe

Consult your local KUBOTA Dealer for this service.

■Checking Power Steering Hose

Consult your local KUBOTA Dealer for this service.

■Checking Radiator Hose (Water pipes)

Consult your local KUBOTA Dealer for this service.

■Checking Fuel Hose

Consult your local KUBOTA Dealer for this service.

■Checking Intake Air Line

Consult your local KUBOTA Dealer for this service.

■Checking Lift Cylinder Hose

Consult your local KUBOTA Dealer for this service.

■Checking Air Conditioner Hose

Consult your local KUBOTA Dealer for this service.

EVERY 4 YEARS**■Replacing Master Cylinder Kit**

[F12/R12 model]

Consult your local KUBOTA Dealer for this service.

■Replacing Equalizer Kit

[F12/R12 model]

Consult your local KUBOTA Dealer for this service.

■Replacing Brake Seal 1 and 2

[F12/R12 model]

Consult your local KUBOTA Dealer for this service.


SERVICE AS REQUIRED**■Bleeding Fuel System**

Air must be removed:

1. When the fuel filter or lines are removed.
2. When water is drained from water separator.
3. When tank is completely empty.
4. After the tractor has not been used for a long period of time.

◆ Bleeding procedure is as follows:

1. Fill the fuel tank with fuel, and open the fuel shutoff-valve.

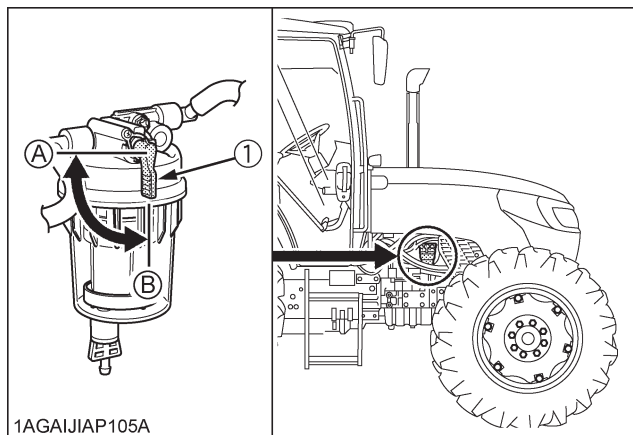

(1) Fuel shutoff-valve


(A) "CLOSE"

(B) "OPEN"

2. Turn ON and OFF the key switch repeatedly 10 times or so at the following intervals. This lets the air out of the fuel line.

(1) Key switch ON time: 30 seconds

(2) Key switch OFF time: 15 seconds

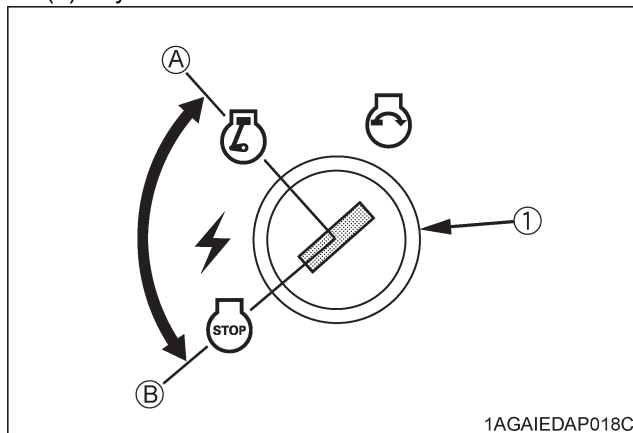

(1) Key switch

(A) "ON"

(B) "OFF"

3. Set the hand throttle lever at the maximum speed position, turn the key switch to start the engine and then reset the throttle lever at the mid speed (around 1500 rpm) position.

If engine doesn't start, try it several times at 30 second intervals.

IMPORTANT :

- Do not hold key switch at engine start position for more than 10 seconds continuously. If more engine cranking is needed, try again after 30 seconds.
4. Accelerate the engine to remove the small portion of air left in the fuel system.
 5. If air still remains and the engine stops, repeat the above steps.

■Bleeding Brake System**[F12/R12 model]**


Consult your local KUBOTA Dealer for this service.

■Draining Clutch Housing Water

The tractor is equipped with a drain plug under the clutch housing.

After operating in rain, snow or if the tractor has been washed, water may get into the clutch housing.

Remove the drain plug and drain the water, then install the plug again.

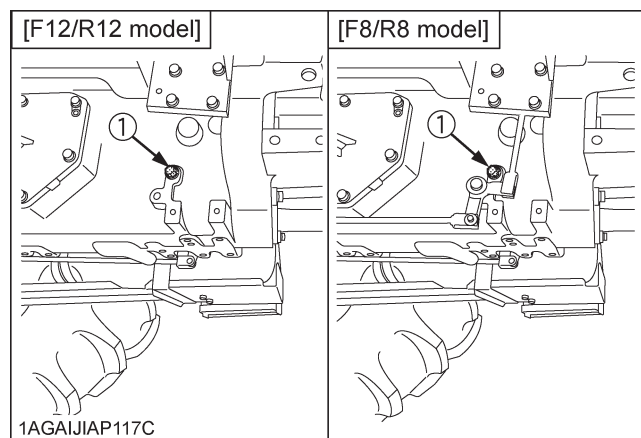

(1) Water drain plug

■Replacing Fuse




The tractor electrical system is protected from potential damage by fuses.

A blown fuse indicates that there is an overload or short somewhere in the electrical system.


If any of the fuses should blow, replace with a new one of the same capacity.

IMPORTANT :

- Before replacing a blown fuse, determine why the fuse blew and make any necessary repairs. Failure to follow this procedure may result in serious damage to the tractor electrical system. Refer to the "TROUBLESHOOTING" section of this manual or your local KUBOTA Dealer for specific information dealing with electrical problems.

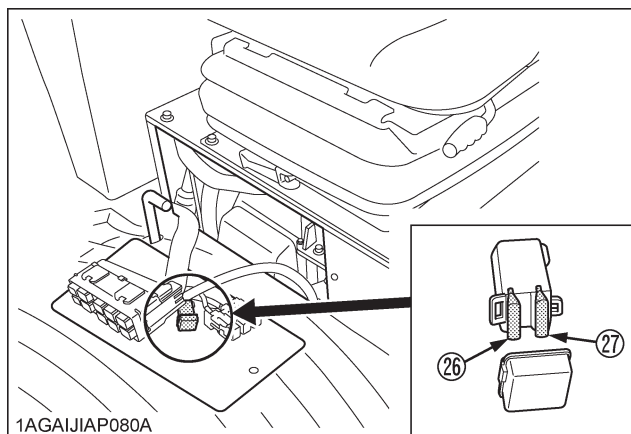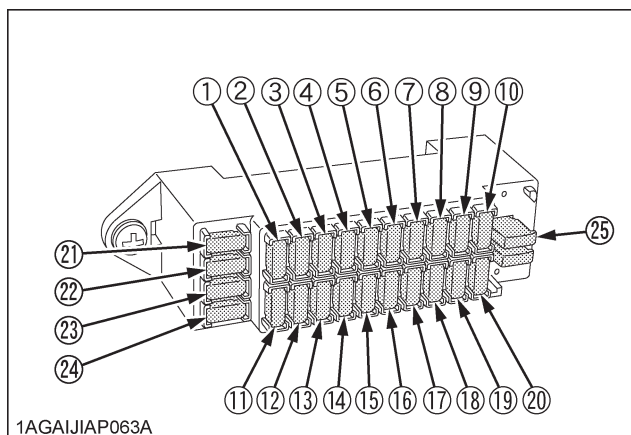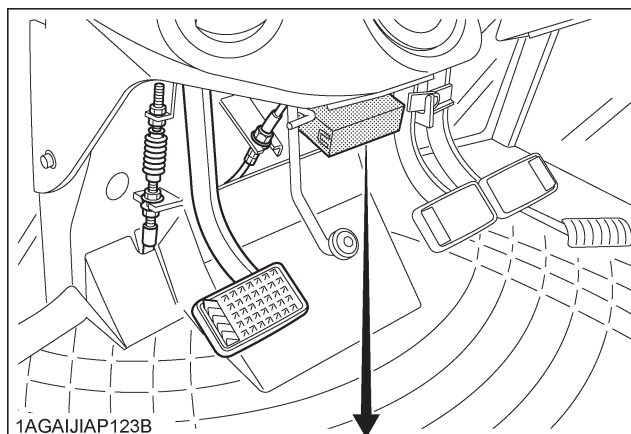



Fuse No.	Capacity (A)	Protected circuit
(1)	5	Radio
(2)	5	Air Conditioner (Control)
(3)	15	Wiper
(4)	10	Alternator, PTO, Engine
(5)	5	Meter
(6)	10	Turn Signal, Stop Lamp
(7)	10	Back Up (Meter)
(8)	20	Head Light
(9)	20	Flasher (Hazard)
(10)	5	Back Up (ECU)
(11)	15	Work Light (Rear)
(12)	15	Work Light (Front)
(13)	15	Cigarette Lighter
(14)	30	Air Conditioner (Fan Motor)
(15)	10	Air Conditioner (Compressor)
(16)	20	Work Light (Front Side)
(17)	5	Transmission Control
(18)	15	Loader Plug
(19)	15	ECU
(20)	5	Starter Relay
(21)	5	Spare Fuse
(22)	10	Spare Fuse
(23)	15	Spare Fuse
(24)	20	Spare Fuse
(25)	Fuse Puller	
(26)	20	Rear Window Defogger
(27)	20	Side Window Defogger

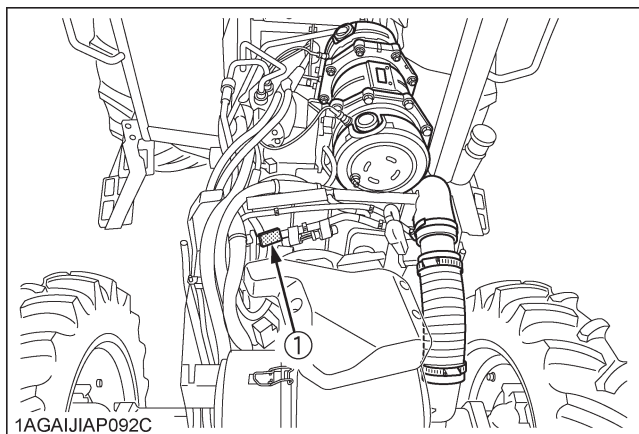

(1) Fuse (10A): CRS POWER

■Replacing Slow-Blow Fuses

The slow-blow fuses are intended to protect the electrical cabling. If any of them has blown out, be sure to pinpoint the cause. Never use any substitute, use only a KUBOTA genuine part.

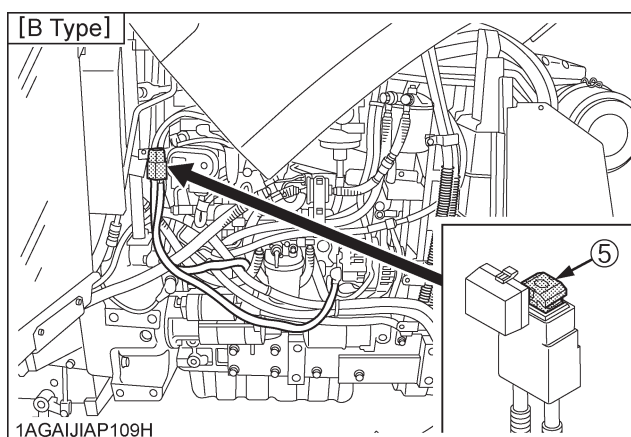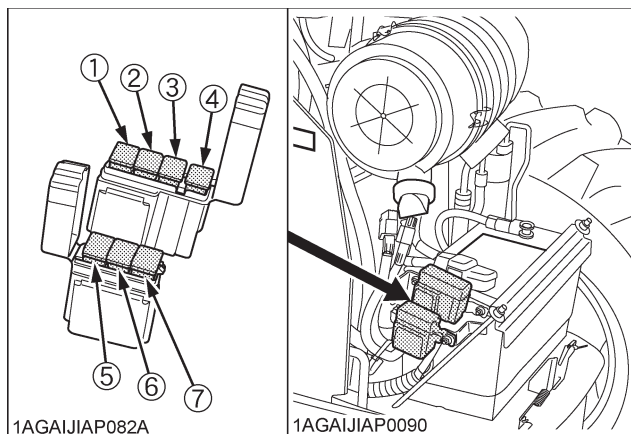

No.	Capacity	Protected circuit	Type
1	30A	Electrical outlet	Bolt fixed
2	30A	Work light	
3	50A	Engine glow	Non Bolt fixed
4	50A	Starter, Air conditioner	
5	100A	Charge	Bolt fixed
	140A	Charge [B type only]	
6	50A	Head lamp, Hazard	
7	30A	Main key switch	


◆ Replacement procedure

[Non bolt fixed slow-blow fuse:]

1. Disconnect the negative cord of the battery.
2. Pull out the fuse from the fuse box.
3. Replace with a new one of the same capacity.

[Bolt fixed slow-blow fuse:]

Consult your local KUBOTA Dealer for this service.

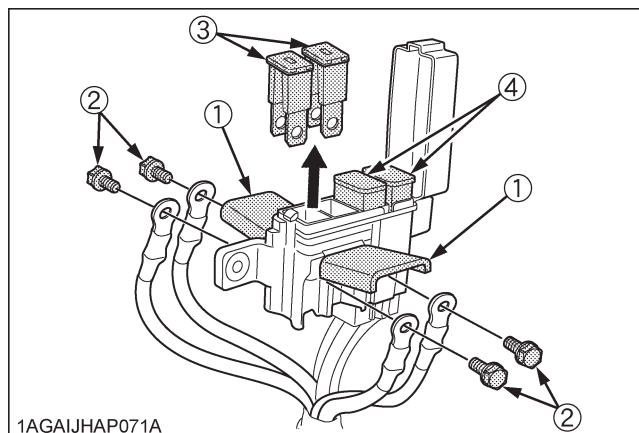

1AGAIJHAP071A

- (1) Fuse box
(2) Bolt
(3) Bolt fixed slow-blow fuse
(4) Non bolt fixed slow-blow fuse

■ Replacing Light Bulb

Light	Capacity
Head light	12 V, 55 / 60 W (H4)
Hazard light	12 V, 21 W
Turn signal	12 V, 21 W
Tail light	12 V, 5 W
Work light (for outer roof)	12 V, 55 W
Front work light	12 V, 21 W
Dome light (Room lamp)	12 V, 5 W

■ Replacing Head Lamp




CAUTION

To avoid personal injury:

- Be careful not to drop the bulb, hit anything against the lamp, apply excess force, and get the lamp scratched. If broken, glass may cause injury. Pay more attention to halogen lamps in particular, which have high pressure inside.
- Before replacing the lamp, be sure to turn off the light and wait until the bulb cools down, otherwise, you may get burned.

1. While pushing the right and left lock buttons, pull and remove the electrical connector.
2. Remove the rubber boot.
3. Remove the clamping fixture and take out the bulb.
4. Replace with a new bulb and reinstall the head lamp assembly in the reverse order.

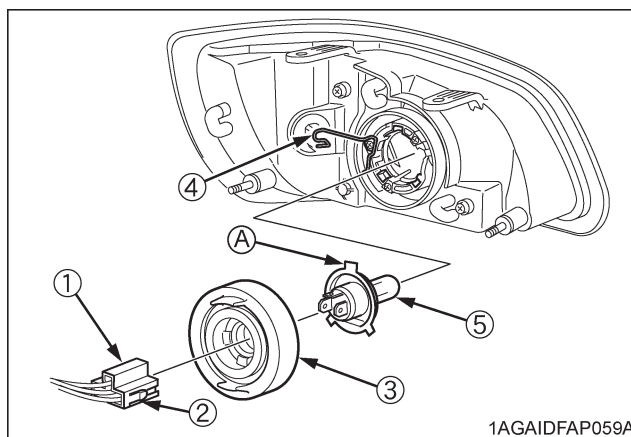


1AGAIIDFAP059A

- (1) Electrical connector (A) "Base's wider projection to face upward"
(2) Lock buttons
(3) Rubber boot
(4) Clamping fixture
(5) Bulb

IMPORTANT :

- Be sure to use a new bulb of the specified wattage.
- Never touch the bulb surface (glass) with bare hands. Fingerprints, for example, may break the bulb.


■ Lubricating Points

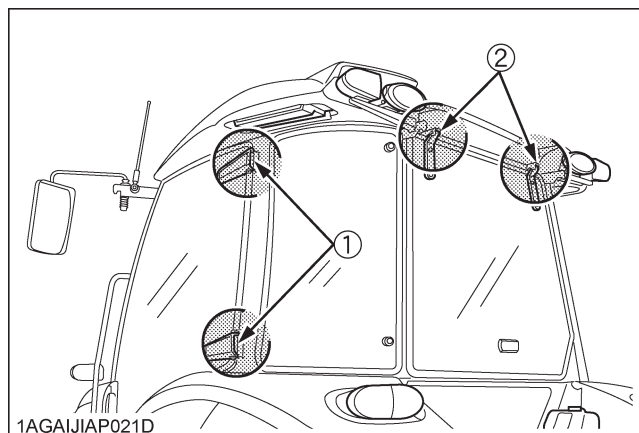

- (1) Door hinge
(2) Rear window hinge

■ Adding Washer Liquid

Add a proper amount of automobile washer liquid.

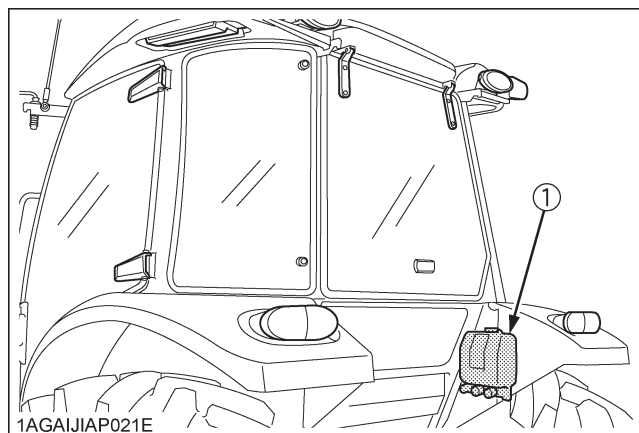

- (1) Washer liquid tank

Washer tank capacity	1.3 L (1.4 U.S.qts.)
----------------------	----------------------

■ Checking the Amount of Refrigerant (gas)



WARNING

To avoid personal injury or death:

- Liquid contact with eyes or skin may cause frostbite.
- In the event of a leakage, wear safety goggles. Escaping refrigerant can cause severe injuries to eyes.
- In contact with a flame, R134a refrigerant gives a toxic gas.

- Do not disconnect any part of the refrigeration circuit of the air conditioning system. Consult your local KUBOTA Dealer for assistance and service.


A shortage of refrigerant impairs the air-conditioner performance. Check the following points. If it is indicated that the amount of refrigerant is extremely low, ask your dealer to inspect and charge.

◆ Checking procedure


1. Run the air-conditioner in the following conditions.

- Engine speed: About 1500 rpm
- Temperature control dial: Maximum cooling position
- Fan switch: Highest blow (HI)
- Air-conditioner switch: ON

2. Look into the sight glass to see if the refrigerant is flowing through its circuit.

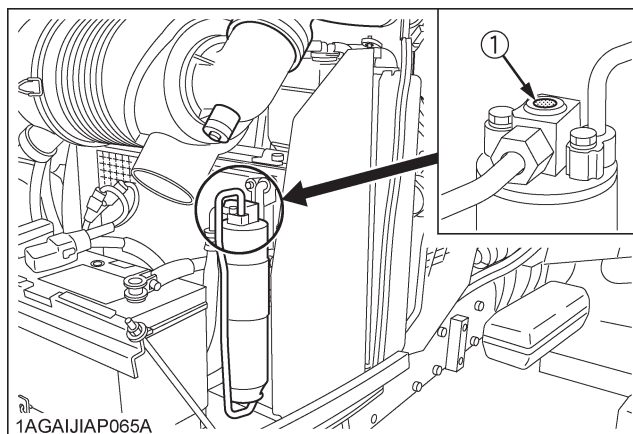

- (1) Sight glass

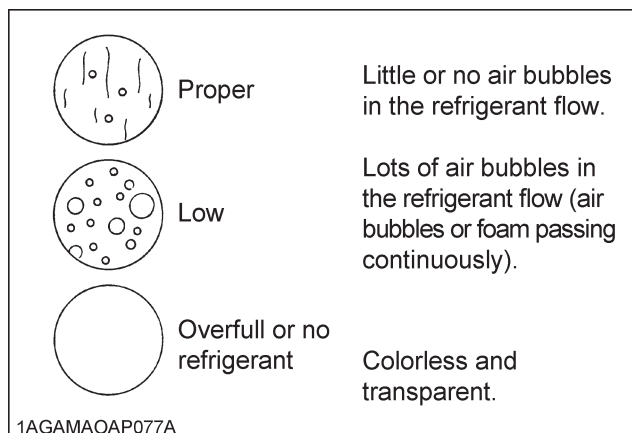

IMPORTANT :

- Charge only with R134a not R12 refrigerant (gas).

STORAGE



WARNING

To avoid personal injury or death:

- Do not clean the machine while the engine is running.
- To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building without proper ventilation.
- When storing, remove the key from the key switch to avoid unauthorized persons from operating the tractor and getting injured.

TRACTOR STORAGE

If you intend to store your tractor for an extended period of time, follow the procedures outlined below.

These procedures will insure that the tractor is ready to operate with minimum preparation when it is removed from storage.

1. Check the bolts and nuts for looseness, and tighten if necessary.
2. Apply grease to tractor areas where bare metal will rust also to pivot areas.
3. Detach the weights from the tractor body.
4. Inflate the tires to a pressure a little higher than usual.
5. Change the engine oil and run the engine to circulate oil throughout the engine block and internal moving parts for about 5 minutes.
While the tractor is in storage, run the engine at idle as a rustproofing operation for 5 to 10 minutes every 3 to 4 months.
6. Keep the PTO clutch control switch or lever at "DISENGAGE" position while tractor is stored for a long period of time.
7. With all implements lowered to the ground, coat any exposed hydraulic cylinder piston rods with grease.
8. Remove the battery from the tractor. Store the battery following the battery storage procedures.
(See "Checking Battery Condition" in "EVERY 100 HOURS" in "PERIODIC SERVICE" section.)
9. Keep the tractor in a dry place where the tractor is sheltered from the elements. Cover the tractor.
10. Store the tractor indoors in a dry area that is protected from sunlight and excessive heat. If the tractor must be stored outdoors, cover it with a waterproof tarpaulin.
Jack the tractor up and place blocks under the front and rear axles so that all 4 tires are off the ground. Keep the tires out of direct sunlight and extreme heat.
11. Keep the fuel tank full. Otherwise, water droplets may form and will cause a fuel system failure.

IMPORTANT :

- When washing the tractor, be sure to stop the engine. Allow sufficient time for the engine to cool before washing.
- Cover the tractor after the muffler and the engine have cooled down.

REMOVING THE TRACTOR FROM STORAGE

1. Check the tire air pressure and inflate the tires if they are low.
2. Jack the tractor up and remove the support blocks from under the front and rear axles.
3. Install the battery. Before installing the battery, be sure it is fully charged.
4. Check the fan belt tension.
5. Check all fluid levels (engine oil, transmission/hydraulic oil, engine coolant and any attached implements).
6. Start the engine. Observe all gauges. If all gauges are functioning properly and reading normal, move the tractor outside. Once outside, park the tractor and let the engine idle for at least 5 minutes. Shut the engine off and walk around tractor and make a visual inspection looking for evidence of oil or water leaks.
7. With the engine fully warmed up, release the parking brake and test the brakes for proper adjustment as you move forward. Adjust the brakes as necessary.

TROUBLESHOOTING

ENGINE TROUBLESHOOTING

If something is wrong with the engine, refer to the table below for the cause and its corrective measure.

Trouble		Cause	Countermeasure
Engine is difficult to start or won't start.		No fuel flow.	Check the fuel tank and the fuel filter. Replace filter if necessary.
		Air or water is in the fuel system.	- Check to see if the fuel line coupler bolt and nut are tight. - Bleed the fuel system (See "Bleeding Fuel System" in "SERVICE AS REQUIRED" in "PERIODIC SERVICE" section.)
		In winter, oil viscosity increases, and engine revolution is slow.	- Use oils of different viscosities, depending on ambient temperatures. - Use engine block heater (Optional)
		Battery becomes weak and the engine does not turn over quick enough.	- Clean battery cables & terminals. - Charge the battery. - In cold weather, always remove the battery from the engine, charge and store it indoors. Install it on the tractor only when the tractor is going to be used.
		Intake air heater system trouble.	- Check to see if the slow blow fuse of the intake air heater blows. - Check to see if the intake air heater functions in cold weather.
Insufficient engine power.		- Insufficient or dirty fuel. - The air cleaner is clogged.	- Check the fuel system. - Clean or replace the element.
Engine stops suddenly.		Insufficient fuel.	- Refuel. - Bleed the fuel system if necessary.
Exhaust fumes are colored.	Black	- Fuel quality is poor. - Too much oil. - The air cleaner is clogged.	- Change the fuel and fuel filter. - Check the proper amount of oil. - Clean or replace the element.
	Blue white	- The inside of exhaust muffler is damp with fuel. - Injection nozzle trouble. - Fuel quality is poor.	- Check to see if the intake air heater functions in cold weather. - Heat the muffler by applying load to the engine. - Check the injection nozzle. - Change the fuel and fuel filter.
Engine overheats		Engine overloaded	Shift to lower gear or reduce load.
		Low coolant level	Fill cooling system to the correct level; check radiator and hoses for loose connections or leaks.
		Loose or damaged fan belt	Adjust or replace fan belt.
		Dirty radiator core or grille screens	Remove all trash.
		Coolant flow route corroded	Flush cooling system.


If you have any questions, contact your local KUBOTA Dealer.

Trouble	Operator's action
Engine not overheated, but engine warning indicator on.	Stop the engine and get it restarted. If the engine fails to restart or the indicator stays on, immediately contact your local KUBOTA dealer. If the warning indicator lights up, the following phenomena may appear depending on the engine's trouble spot. ● The engine stops unexpectedly. ● The engine fails to start or gets interrupted just after start. ● The engine output is not enough. ● The engine output is enough, but the warning indicator stays on.

If you have any questions, contact your local KUBOTA Dealer.

POWERTRAIN TROUBLE SHOOTING

If something is wrong with the powertrain, the master system warning indicator starts blinking and the error code shown below is displayed on the liquid crystal display, indicating the location of the trouble. If an error code appears, immediately contact your local KUBOTA Dealer for repairs.

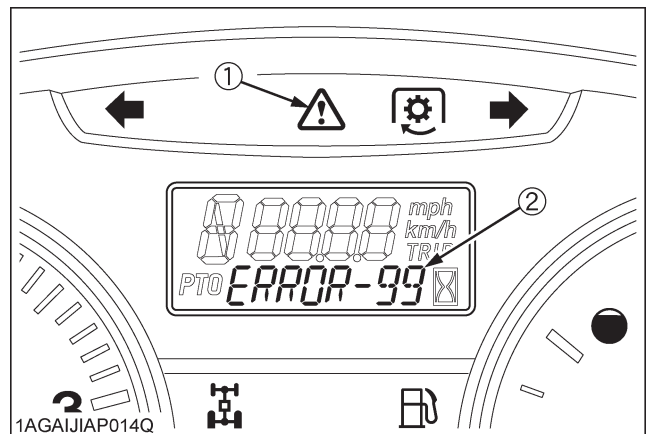

(1) Master system warning indicator

(2) Error code

Displayed error code	Trouble	Remarks	Operator's action
ERROR-1	Acceleration sensor (main) trouble		Contact your local KUBOTA Dealer.
ERROR-2	Acceleration sensor (sub) trouble		
ERROR-3	Acceleration sensor main/sub phase shifting trouble		
ERROR-11	PTO relay trouble		
ERROR-12	4-wheel-drive solenoid trouble		
ERROR-21	Range gear shift (Hi) switch trouble		
ERROR-22	Range gear shift (6th) switch trouble		
ERROR-23	Shuttle rotating sensor or switch(*1) trouble	*1: Range gear shift (Hi) switch and Range gear shift (6th) switch	
ERROR-24	Machine speed sensor or switch(*1) trouble		
ERROR-25	DPF regeneration malfunction trouble		
ERROR-60	Analog reference supply voltage +5V trouble		
ERROR-63	Acceleration & engine adjustment trouble		
ERROR-99	Communication trouble		
Eng NG	Engine communication trouble	Engine trouble, etc.	
ECU NG	ECU communication trouble	ECU trouble, etc.	

OPTIONS


Consult your local KUBOTA Dealer for further details.

- Engine Block Heater
For extremely cold weather starting
- Front end weights and bracket
For front ballast
- Rear Wheel Weights
For rear ballast
- Rear Cast Iron Disk
- Creep Speed Kit
- 72" Wide Axle
- Grille guard
- Double Acting Remote Hydraulic Control Valve with Detents and Self-Cancelling
- Double Acting Remote Hydraulic Control Valve with Float Position
- Clevis for Drawbar
- 540 / 540E rpm PTO Speed Kit
- Front Work Light kit for 4 lights
High visibility for night work
- Defogger Kit
- 100A Alternator Kit
- Rear Window Wiper Kit with Washer
- Radio with CD player

MOUNTING THE SUPPORT PLATE


■ Installation Procedures

1. Insert the support plate through the CD player mounting opening of the inner roof.

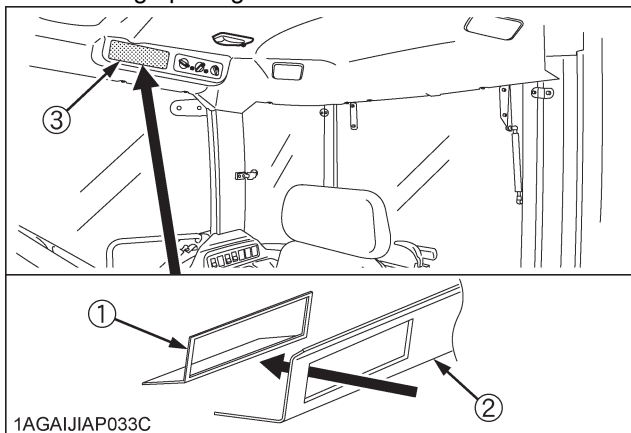


- (1) Support plate
(2) Inner roof
(3) CD player mounting opening

2. Insert the mounting collar into the inner roof and support plate.

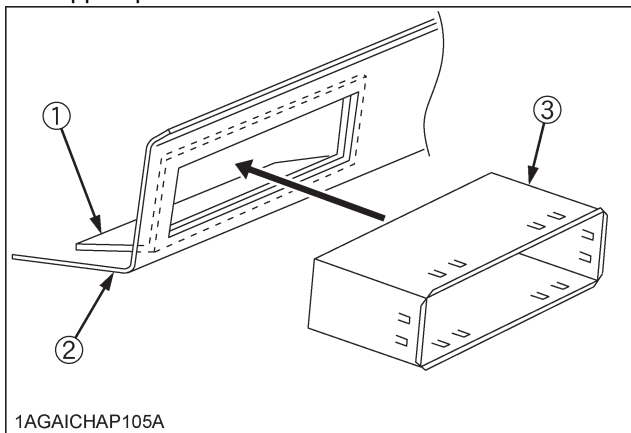


- (1) Support plate
(2) Inner roof
(3) Mounting collar

3. Bend the mounting tabs of the mounting collar out with a screwdriver.

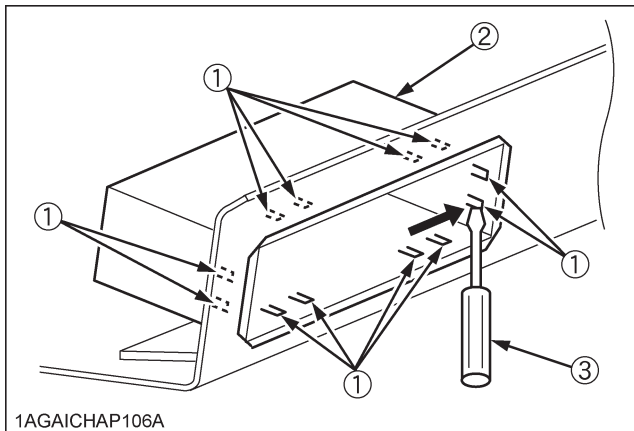



- (1) Mounting tabs
(2) Mounting collar
(3) Screwdriver

4. Connect the antenna lead to the CD player.
5. Connect the power connector to the CAB wire harness.

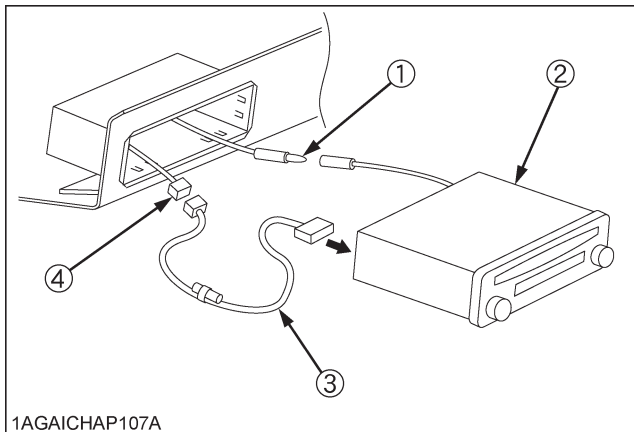

- (1) Antenna lead
(2) CD player
(3) Power connector
(4) CAB wire harness

6. Insert the CD player into the mounting collar and push it in until "click" is heard. (The CD player is secured to the mounting collar by the side tabs.)

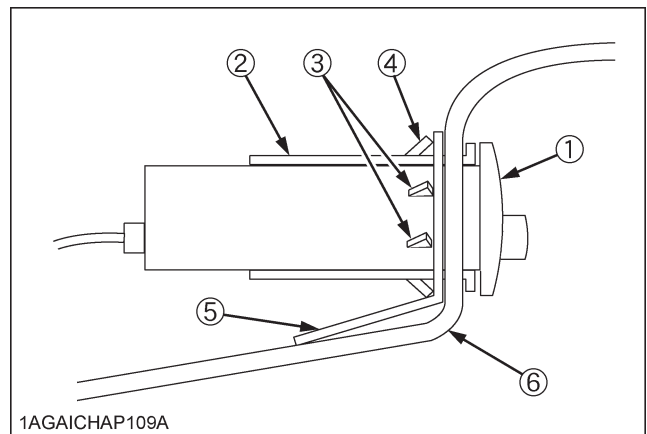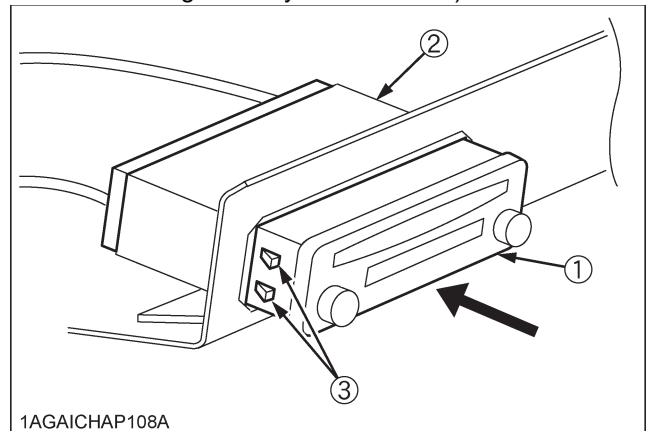

- (1) CD player
(2) Mounting collar
(3) Side tabs
(4) Mounting tabs
(5) Support plate
(6) Inner roof

APPENDICES

INDEX

3-point Hitch Lowering Speed	58
4WD Switch.....	34
Air Cleaner Primary Element.....	95
Air Cleaner Primary Element and Secondary Element.....	110
Air Conditioner Condenser.....	102
Air Conditioner Condenser Screen.....	90
Air Conditioner Hose	114
Air Conditioner Pipe and Hose.....	107
Air Control Vent.....	72
Airflow.....	72
Alternator Belt Tension.....	96
Amount of Refrigerant (gas).....	118
Anti-Freeze.....	112
Battery Condition.....	98
Biodiesel Fuel (BDF)	83
Block Heater (if equipped).....	23
Boost Sensor Hose	113
Brake Pedal.....	91
Brake Pedal.....	97
Brake Pedal.....	97
Brake Pedals (Right and Left)	28
Brake Pedals (Right and Left)	29
Brake Seal 1 and 2.....	114
Brake System.....	115
CAB Isolation Cushion	113
Category 1 & 2	51
Checking and Refueling	86
Clutch Housing Water	115
Clutch Pedal.....	30
Constant RPM Management Control	43
Control Panel.....	73
Coolant Level	88
Coolant Temperature Gauge.....	37
Creep Speed (if equipped)	32
Diesel Particulate Filter (DPF) Muffler.....	12
Differential Lock.....	44
Directions for Use of Power Steering	45
Display Mode.....	38
Do not Operate the Tractor at Full Speed for the First 50 Hours.....	25
Dome Light.....	70
Door.....	69
DPF Muffler	91
DPF Muffler	113
DPF Regeneration Process.....	13
DPF Related Pipe.....	113

DPF Related Rubber Pipe	113
Draft Control	57
Draft Stopper	52
Draft Stopper	56
Drawbar	52
Drawbar Length	54
Dual Tires	61
Dust Indicator	89
Easy Checker(TM).....	35
EGR Cooler	111
EGR Cooler Hose.....	113
EGR System.....	113
Electrical Outlet	76
Emergency Exit	70
Engine Oil	104
Engine Oil Filter.....	104
Engine Oil Level	87
Engine Start System.....	92
Engine Valve Clearance	110
Entering the Travel Speed Coefficient.....	42
Equalizer Kit	114
Evacuator Valve	89
Exhaust Manifold	110
Fan / Air-conditioner Belt Tension	96
Float Control	57
Flushing Cooling System and Changing Coolant	111
Foot Throttle	34
Fresh Air Filter	101
Front Axle Gear Case Oil and Front Differential Case Oil	109
Front Axle Pivot	108
Front Ballast	67
Front Wheel Drive Lever.....	33
Front Wheels (with 2-wheel drive)	62
Front Wheels (with 4-wheel drive)	63
Front Wiper / Washer Switch	71
Front Work Light	71
Fuel Filter.....	105
Fuel Gauge.....	36
Fuel Hose	114
Fuel Injector Nozzle Tip.....	111
Fuel Line.....	107
Fuel System.....	114
Fuel Tank Water	101
Fuse.....	115
Gauges, Meter and Easy Checker(TM).....	91
Gear Locked Parking Brake	98

Grill, Radiator Screen,		PTO Gear Shift Lever	48
Oil Cooler and Battery Mount.....	89	PTO Shaft Cover and Shaft Cap	49
Hand Throttle Lever.....	34	PTO Speed Display Mode Switching.....	41
Handling Points	13	PTO Speed Limiter	48
Head Lamp.....	117	Radiator Hose (Water pipes)	114
Head Light, Turn Signal / Hazard Light etc.	91	Radiator Hose and Clamp	106
Holes of Lower Links	51	Range Gear Shift Lever	32
Hood.....	85	Rear Ballast.....	67
Horn Button	28	Rear Wheels.....	65
Hydraulic Control Unit Use Reference Chart..	60	Rear Window	69
Hydraulic Oil Filter	105	Rear Wiper / Washer Switch (if equipped).....	71
Hydraulic-Shuttle Shift Lever.....	32	Rear Work Light.....	71
Immediately Stop the Engine if:.....	35	Regeneration Operating Procedure.....	14
Inflation Pressure	61	Regeneration Operating Procedure.....	16
Inner Air Filter.....	101	Remote Control Valve	58
Installation Procedures.....	122	Remote Control Valve Coupler	88
Intake Air Line	107	Remote Control Valve Coupler	
Intake Air Line	114	Connecting and Disconnecting	59
LCD Monitor Message.....	49	Remote Control Valve Lever	58
Lift Cylinder Hose.....	107	Rustproofing when in Storage	113
Lift Cylinder Hose.....	114	Seat Belt	26
Lifting Rod (Left).....	52	Seat Belt	91
Lifting Rod (Right)	53	Side Cover.....	86
Light Bulb	117	Side Window.....	70
Light Switch.....	27	Slow-Blow Fuses	116
Lubricating Grease Fitting [2WD Model]	103	Stopping	35
Lubricating Grease Fittings	94	Supply Pump	113
Lubricating Oil for New Tractors.....	25	Swing Drawbar	55
Lubricating Points.....	118	Tachometer	37
Main Gear Shift Lever	32	Telescopic Lower Links	54
Master Cylinder Filter	113	Telescopic Stabilizers	53
Master Cylinder Kit.....	114	Tie-rod Dust Cover	93
Mixed Control	57	Tilt Steering Adjustment	27
Movable Parts	91	Tips on Diesel Particulate Filter (DPF)	
Oil Separator Element.....	111	Regeneration	19
Oil Separator Related Rubber Pipe.....	113	Toe-in	100
Opening the Door.....	69	Top Link.....	53
Operating on Slopes and Rough Terrain.....	45	Top Link Mounting Holes.....	51
Operating the Tractor on a Road.....	45	Trailer Electrical Outlet	46
Operation.....	74	Transmission Fluid	108
Operator's Seat	25	Transmission Fluid Level.....	88
Parking	43	Transport the Tractor Safely.....	45
Parking	44	Travel Speed Limiter	32
Parking Brake.....	35	Turbocharger	113
PCV (Positive Crankcase Ventilation) Valve		Turn Signal / Hazard Light Switch	27
Hose	113	Walk Around Inspection.....	86
PM Warning Level and Required Procedures	15	Washer Liquid.....	118
PM Warning Level and Required Procedures	17	Water Separator	87
Position Control	57	Water Separator	103
Power Steering Hose	114	Wheel Bolt Torque.....	93
Power Steering Line	106	Wipers in Cold Season	71
PTO Clutch Control Switch.....	47	Work Light Switch.....	70