

Kubota

- U.S.A. : **KUBOTA TRACTOR CORPORATION**
1000 Kubota Drive, Grapevine, TX 76051
Telephone : 888-4KUBOTA
- Canada : **KUBOTA CANADA LTD.**
5900 14th Avenue, Markham, Ontario, L3S 4K4, Canada
Telephone : (905)294-7477
- France : **KUBOTA EUROPE S.A.S**
19-25, Rue Jules Vercey, Z.I. BP88, 95101 Argenteuil Cedex, France
Telephone : (33)1-3426-3434
- Italy : **KUBOTA EUROPE S.A.S Italy Branch**
Via Grandi, 29 20068 Peschiera Borrome (MI) Italy
Telephone : (39)02-51650377
- Germany : **KUBOTA BAUMASCHINEN GmbH**
Steinhauser str. 100, 66482 Zweibrücken Rheinlandpfalz Germany
Telephone : (49)6332-4870100
- U.K. : **KUBOTA (U.K.) LTD.**
Dormer Road, Thame, Oxfordshire, OX9 3UN, U.K.
Telephone : (44)1844-214500
- Australia : **KUBOTA AUSTRALIA PTY LTD.**
25-29 Permas Way, Truganina, VIC 3029, Australia
Telephone : (61)-3-9394-4400
- Malaysia : **KUBOTA MALAYSIA SDN. BHD.**
No.3 Jalan Sepadu 25/123 Taman Perindustrian Axis,
Seksyen 25, 40400 Shah Alam, Selangor Darul Ehsan Malaysia
Telephone : (60)3-736-1388
- Philippines : **KUBOTA PHILIPPINES, INC.**
232 Quirino Highway, Baesa, Quezon City 1106, Philippines
Telephone : (63)2-422-3500
- Taiwan : **SHIN TAIWAN AGRICULTURAL MACHINERY CO., LTD.**
16, Fengping 2nd Rd, Taliiao Shiang Kaohsiung 83107, Taiwan R.O.C.
Telephone : (886)7-702-2333
- Thailand : **SIAM KUBOTA CORPORATION CO., LTD.**
101/19-24 Moo 20, Navanakorn Industrial Estate, Tambon Khlongnueng, Amphur Khlongluang,
Pathumthani 12120, THAILAND
Telephone : (66)2-909-0300
- Japan : **KUBOTA Corporation**
Farm & Industrial Machinery International Operations Headquarters
2-47, Shikitsuhigashi 1-chome, Naniwa-ku, Osaka, Japan 556-8601


English (U.S.A.)
Code No. RC358-8125-1

OPERATOR'S MANUAL


KUBOTA EXCAVATOR

Super Series

MODEL **KX** 71-3

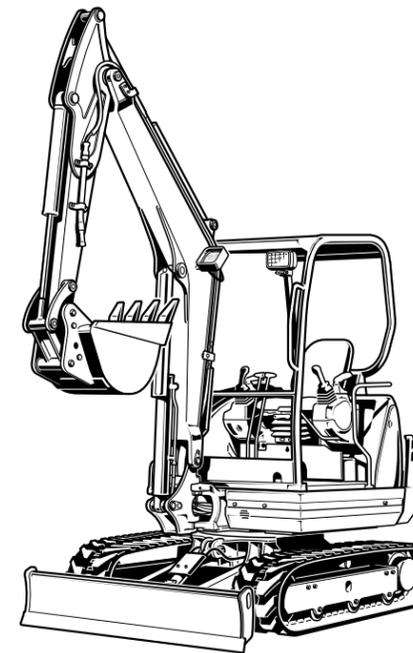

1BAAAAAP0670

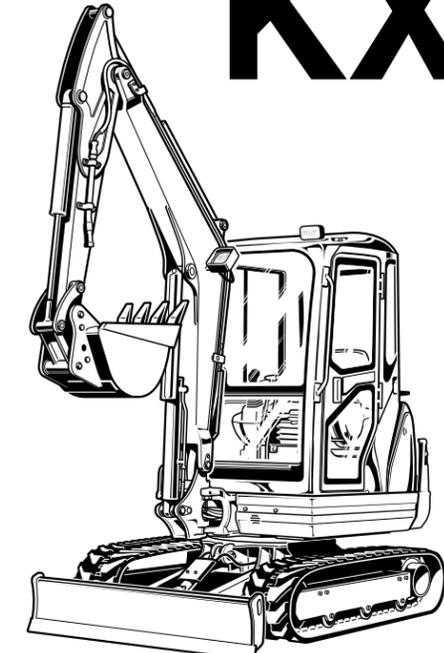

1BAAAAAP0010

K
X
7
1
-
3

READ AND SAVE THIS MANUAL

ABBREVIATION LIST

Abbreviations	Definitions
AI	Auto Idle
API	American Petroleum Institute
ASTM	American Society for Testing and Materials, USA
CECE	Committee for European Construction Equipment
DIN	Deutsches Institut für Normung, GERMANY (German Institute for Standardization)
EN	European Standard
FRONT	Front means the direction towards the boom and dozer
Hi	High speed
ISO	International Organization for Standardization
JIS	Japanese Industry Standard
L	Volume (Liter)
L/min	Liter per minute
Lo	Low speed
MIL	Military Standard
OPG	Operator Protective Guards
OSHA	Occupational Safety and Health Administration
rpm	Revolutions Per Minute
ROPS	Roll-Over Protective Structure
SAE	Society of Automotive Engineers, USA
TPSS	Two Pattern Selection System

California Proposition 65

WARNING

Engine exhaust, some of its constituents, certain vehicle components and fluids, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

IMPORTANT

The engine in this machine is not equipped by the manufacturer with a standard spark arrester. It is a violation of California Public Resource Code Section 4442 to Use or operate this engine on or near any forest-covered, brush-covered land, or grass-covered land unless the exhaust system is equipped with a working spark arrester meeting state laws. Other states or federal areas may have similar laws.

Canadian Electromagnetic Compatibility (EMC):
This machine complies with Industry Canada ICES-002.

GENERAL SYMBOLS

The instruments and operation elements have been marked with a series of symbols in order to simplify the operation of your excavator. These symbols are listed below with the respective descriptions.

	Safety alert Symbol		Boom swing (left)
	Warning lamp "Fuel level too low"		Boom swing (right)
	System lamp		Dozer raise
	Warning lamp "Engine Oil pressure"		Dozer lower
	Warning lamp "Battery charge"		Operation direction of control lever
	Warning lamp "Auto Idle (AI) Lamp"		Operation direction of control lever
	Indicator lamp "Glow"		Read operator's manual
	Working light switch		Engine stop control lamp
	Horn		Lock
	Wiper/Washer switch		Unlock
	Diesel		Reducing / Increasing track width
	Hydraulic fluid		
	Gear oil		
	Grease		
	Fast		
	Slow		
	Excavator - Overhead movement toward the front		
	Excavator - Overhead movement toward the rear		
	Boom raise		
	Boom lower		
	Arm out		
	Arm in		
	Bucket crowd		
	Bucket dump		

FOREWORD

You are now the proud owner of a KUBOTA Excavator. This excavator is a product of KUBOTA quality engineering and manufacturing. It is made of fine materials and under a rigid quality control system. It will give you long, satisfactory service. To obtain the best use of your excavator, please read this manual carefully. It will help you become familiar with the operation of the excavator and contains many helpful hints about excavator maintenance. It is KUBOTA's policy to utilize as quickly as possible every advance in our research. The immediate use of new techniques in the manufacture of products may cause some small parts of this manual to be outdated. KUBOTA distributors and dealers will have the most up-to-date information. Please do not hesitate to consult with them.

SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.



DANGER : Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING : Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION : Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

IMPORTANT : Indicates that equipment or property damage could result if instructions are not followed.

NOTE : Gives helpful information.

CONTENTS

▲SAFE OPERATION	▲-1
DEALER SERVICE.....	1
TECHNICAL DATA.....	3
DESCRIPTION OF MACHINE PARTS.....	4
INSTRUMENT PANEL AND CONTROL ELEMENTS.....	5
CABIN TYPE MACHINE	7
Wiper Switch.....	7
Interior Lamp.....	7
Heater Switch	7
Opening/Closing of CAB Door	8
Opening/Closing of Front CAB Window.....	9
Emergency Hammer.....	9
Control Pedals and Levers	10
CHECKS BEFORE START	11
DAILY CHECKS.....	11
OPERATION OF THE ENGINE.....	12
STARTING THE ENGINE	12
Display Selector Switch	13
Battery Charge Lamp.....	15
Engine Oil Pressure Warning Lamp	15
Glow Lamp.....	16
LCD for Normal Operation.....	16
LCD for Warning.....	17
Warning Lamp	18
Checkpoints after Starting the Engine	18
STARTING THE ENGINE UNDER COLD CONDITIONS.....	19
STOPPING THE ENGINE.....	19
Engine Stop Lever	19
STARTING WITH AN AUXILIARY BATTERY	20
Observe Following Guidelines when Starting with an Auxiliary Battery.....	20
EXCAVATOR OPERATION	21
RUNNING-IN OF THE NEW EXCAVATOR.....	21
Do not Work with Full Engine Rpm's or Full Loads during the First 50 Working Hours..	21
Oil Change in the Run-in Stage.....	21
Seat Belt.....	21
STARTING	21
Operator's Seat.....	21
Lock Lever	22
Working Light Switch	22
Travel Buzzer (Option).....	22
DRIVING	23
Drive Levers (Right,Left).....	24
Travel Speed Switch.....	24

URNS	25
Pivot Turn	25
Spin Turn	26
UP AND DOWNHILL DRIVING	27
OPERATION OF THE DOZER	27
TWO PATTERN SELECTION SYSTEM (TPSS)	28
Pattern Change.....	28
OPERATION OF THE BOOM.....	29
OPERATION OF THE ARM.....	29
OPERATION OF THE BUCKET	30
UNIT SWING AND BOOM SWING OPERATION.....	30
Unit Swing Operation.....	30
Boom Swing Operation.....	30
AUXILIARY PORT OPERATION	31
Selecting the Action Modes	31
AUX Port Handling Procedure.....	32
Setting the Maximum Flow Volume	33
HOW TO RELEASE PRESSURE TRAPPED IN THE HYDRAULIC SYSTEM.....	37
PARKING ON A SLOPE	38
IMPORTANT INFORMATION ON EXCAVATOR OPERATION	38
PUTTING THE FRONT PARTS TO THE GROUND.....	38
TRANSPORTING THE EXCAVATOR ON A VEHICLE.....	39
LIFTING OF THE EXCAVATOR.....	41
MAINTENANCE.....	43
MAINTENANCE INTERVALS	43
OPENING AND CLOSING OF PARTS.....	45
Opening and Closing of the Fuel Tank Cap.....	45
Opening/Closing of the Engine Hood	45
Where to store the Grease Gun (Option).....	46
Where to keep Operator's Manual.....	46
DAILY CHECKS.....	46
Checking Coolant Level.....	46
Checking Fuel Level	47
Checking Engine Oil Level.....	47
Checking Hydraulic Oil Level.....	48
Lubrication Points	49
Check Fan Belt.....	50
Checking Radiator and Oil Cooler	50
Checking Washer Liquid (only for CAB type)	50
Checking and Cleaning Engine and Electrical Wiring.....	50
Washing Whole Machine.....	50
REGULAR CHECKS AND MAINTENANCE WORK	51
EVERY 50 SERVICE HOURS	51
Draining the Water from the Fuel Tank.....	51
Draining Water Separator.....	51
Greasing Swing Bearing Teeth.....	51
Battery	52
Battery Charging.....	53
EVERY 200 SERVICE HOURS	53

Checking Fan Belt Tension.....	53
Checking Radiator Hoses and Clamps.....	54
Inspection and Cleaning Air Filter Element.....	54
Greasing Swing Bearing.....	54
Air Filter Maintenance.....	55
Checking Fuel Line and Intake Air Line.....	55
EVERY 500 SERVICE HOURS.....	56
Changing Engine Oil (Change the engine oil every 500 hours, or every 1 year in the case that service hour is less than 500 hours).....	56
Replacing Engine Oil Filter Cartridge (Replace the engine oil filter every 500 hours, or every 1 year in the case that service hour is less than 500 hours).....	56
Drive Unit Oil Change (First Oil Change of the 100 hours).....	57
Replacing Fuel Filter Cartridge.....	57
Replacing Hydraulic Return Filter Element (First replacement after 250 service hours).....	57
EVERY 800 SERVICE HOURS.....	58
Checking Engine Valve Clearance.....	58
EVERY 1000 SERVICE HOURS.....	58
Hydraulic Oil Check for Machines with Hydraulic Breakers.....	58
Hydraulic Oil Change (Including Replacing Suction Filter in Hydraulic Tank).....	58
Replacing Hydraulic Pilot Filter Element.....	59
EVERY 1000 SERVICE HOURS OR ONCE A YEAR.....	60
Replacing Air Filter Element.....	60
EVERY 1500 SERVICE HOURS.....	60
Checking Fuel Injection Nozzle (Injection Pressure).....	60
EVERY 2000 SERVICE HOURS.....	60
Changing Front Idler and Track Roller Oil.....	60
Checking Alternator and Starter Motor.....	60
EVERY 3000 SERVICE HOURS.....	60
Checking Injection Pump.....	60
ANNUAL SERVICE.....	60
Electrical Wiring and Fuses.....	60
BIENNIAL SERVICING.....	60
Replacing Radiator Hoses and Hose Clamps.....	60
Changing Radiator Coolant.....	61
Replacing Fuel Hoses and Hose Clamps.....	62
Replacing Intake Air line.....	62
OTHER ADJUSTMENTS AND REPLACEMENTS.....	63
PURGING FUEL SYSTEM.....	63
ADJUSTMENT OF TRACKS.....	63
Rubber Tracks.....	63
Special Information when Using Rubber Tracks.....	64
Steel Tracks.....	64
CHANGING THE BUCKET.....	65
FUSES.....	66
Replacing Fuses.....	66
Fuse Capacities and Circuits.....	66
Slow Blow Fuse.....	66
Auxiliary Electric.....	66
TROUBLESHOOTING.....	67
KUBOTA I.C.S. NAVIGATION LIST OF ERROR CODE.....	69

OPERATION UNDER COLD WEATHER CONDITIONS	74
PREPARATION FOR OPERATION IN COLD WEATHER.....	74
PROCEDURE AFTER DONE WORK.....	74
LONG STORAGE	75
RECOMMENDED OILS.....	77
BIODIESEL FUEL (BDF)	79
APPENDICES.....	81
MAIN DIMENSIONS	81
LIFTING CAPACITY	82



SAFE OPERATION

The best insurance against accidents is to abide by the safety regulations.

Read and understand this manual carefully before operating the excavator.

Every user, however experienced, should carefully read and understand this manual and those of the attachments and accessories before taking the excavator into operation. The owner is obliged to inform the operators of these instructions in detail.


Keep this manual in the pocket under the seat.

1. BEFORE OPERATION

1. Make yourself acquainted with the excavator and be aware of its limits. Read the operating instructions carefully before starting the excavator.
2. Obey the danger, warning and caution labels on the machine.
3. For your safety, a ROPS/OPG (Top Guard Level I) with a seat belt is installed by KUBOTA.
 - ROPS: Roll-Over Protective Structure
 - OPG (Top Guard Level I): Operator Protective Guards of Top Guard Level I


OPG (Top Guard Level I) in accordance with ISO10262 is equivalent in definition to FOPS (Falling Object Protective Structure).

Always use the seat belt when the machine is equipped with a ROPS/OPG (Top Guard Level I). Do not modify structural members of ROPS by welding, drilling, bending, grinding or cutting, as this may weaken the structure. If any component is damaged, replace it. Do not attempt repairs. If ROPS is loosened or removed for any reason, make sure all parts are reinstalled correctly. Tighten mounting bolts to proper torque.
4. The seat belt must be inspected regularly and replaced if damaged.

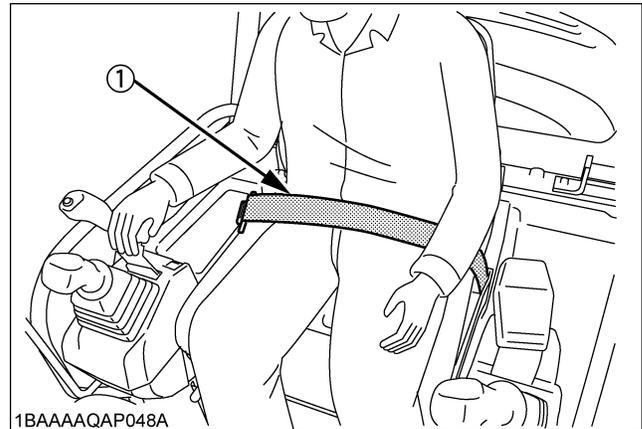

(1) Seat belt


5. Always sit in the operator's seat when starting engine or operating levers or controls.
6. Study control lever pattern A and pattern B. Then choose the one which is most familiar. Familiarize yourself with the pattern selected by operation slowly at low engine speed.
 - Engage the lever lock to prevent accidental pattern change.

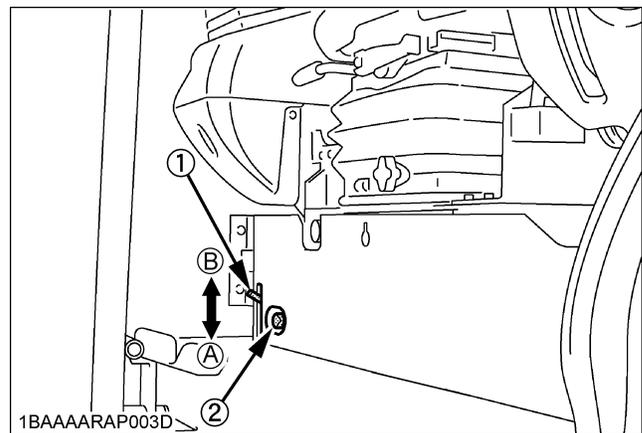


(1) Pattern selector lever
(Two Pattern Selection System: TPSS)
(2) Lever lock knob

▲-2 SAFE OPERATION

7. Do not operate the excavator while under the influence of alcohol, medication, controlled substances or while fatigued.
8. Check the surroundings carefully before using the excavator or when attachments are being attached.
 - Pay attention to the overhead clearance with electric wires.

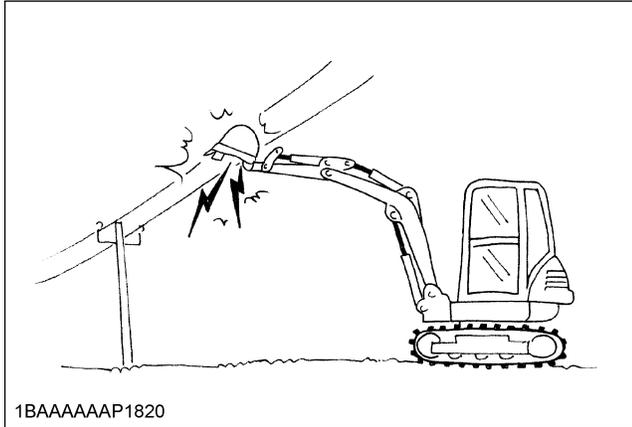


- Check for pipes and buried cables before digging.
- Check for hidden holes, hindrances, soft underground, and overhangs.

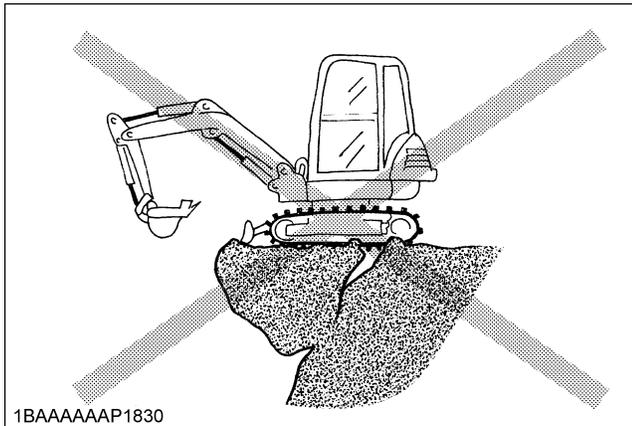

- During excavator use, do not allow any persons within the working range.
9. Do not allow other persons to use the machine before having informed him on the exact operation and work instructions, and be assured that the operator's manual has been read and completely understood.

10. Do not wear baggy, torn or oversized clothing when working with the excavator. Clothing can get caught in rotating parts or control elements which can cause accidents or injuries. Wear adequate safety clothing, e.g. safety helmet, safety shoes, eye protection, ear protection, working gloves, etc., as necessary and as prescribed by law or statutes.

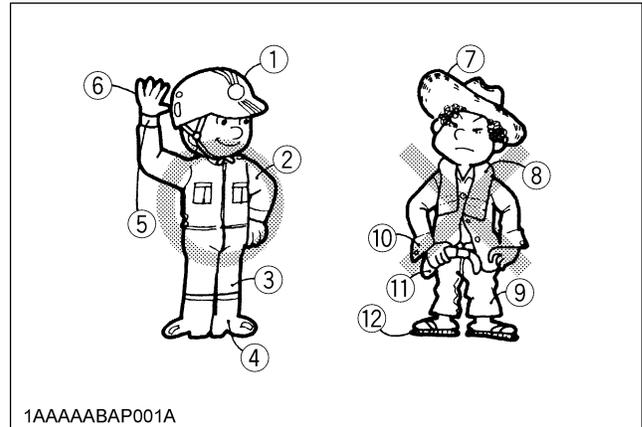


- | | |
|---------------------------|-------------------------------|
| (1) Helmet | (7) Straw hat |
| (2) Clothing fit for work | (8) Towel |
| (3) Tight seams | (9) Baggy trousers |
| (4) Good grip footwear | (10) Loose cuffs of the shirt |
| (5) Well fitting cuffs | (11) Baggy shirt |
| (6) Working gloves | (12) Rubber sandals |


11. Do not allow passengers to ride on any part of the excavator at anytime. The operator must remain in the excavator seat during operation.
12. Check mechanical parts for correct adjustments and wear.
13. Keep your excavator clean. Heavy soiling, grease, dust and grass can cause fires, accidents or injuries.
14. Use only KUBOTA authorized attachments.
15. Before starting the excavator, be absolutely sure that the excavator has been filled with fuel, lubricated, greased and undergone all necessary maintenance.
16. Do not modify the excavator, otherwise it could lead to unforeseen safety problems.
17. Do not hammer anything that is above the operator's seat level. Objects may fall into the operator station of mini-excavator from front.
18. Make sure attachments, particularly those utilizing quick attach systems, are securely mounted.

2. STARTING OF THE EXCAVATOR

1. Get into and out of the machine safely. Always face the machine and use 3 point contact with machine. Always use handrails and available steps and keep yourself well balanced. Do not hold any of the control levers and switches. Do not jump on or off the machine, whether stationary or in motion.
2. Start and control the excavator only from the operator's seat. The driver should not lean out of his seat when the engine is running.
3. Before starting the engine, make sure that lock levers are in position "Lock" and all control levers and pedals are in their neutral positions and the seat belt is fastened correctly and the area around the excavator is clear.
Before starting the engine, make sure that the control levers, travel lever, pedals and other control elements are not stuck and can be moved smoothly. If stuck, for example, a lever may fail to return, possibly putting you in danger. If anything wrong is found, immediately pinpoint the cause and correct it.
4. Make sure that the dozer blade is in front of you. (The dozer must be raised.) If the levers are activated with the dozer blade at the rear, the tracks will move in the opposite direction of the drive levers.

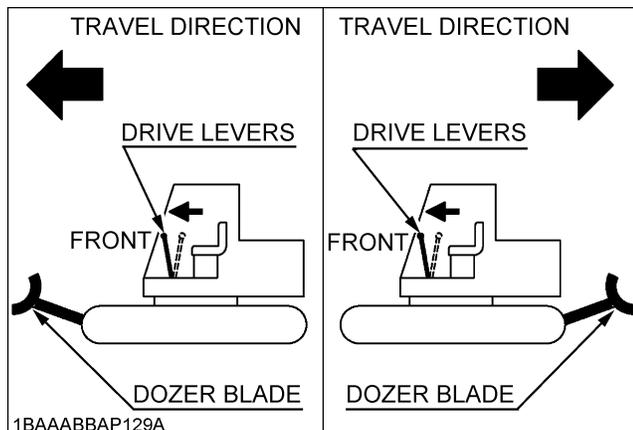

5. Do not operate or idle engine in a non-ventilated area. Carbon monoxide gas is colorless, odorless, and deadly.

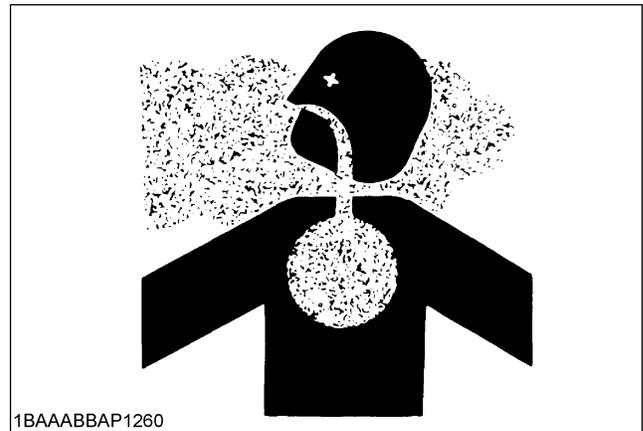

6. Keep all safety equipment and covers in place. Replace damaged or missing safety devices.
7. Do not operate the excavator while putting out the hands and the body from the windows. Do not touch the control levers and the pedals from outside the cab during the engine running.
8. Precautions against tipping over. Keep away from steep slopes and embankments. Do not swing the bucket downhill. Lower the dozer during digging. Keep the bucket as low as possible while driving uphill. Turn slowly on slopes (at reduced speed). Do not place the excavator near the edges of trenches and banks, as the earth can give away due to the weight of the excavator.
ALLOWABLE CLIMBING ANGLE : 36 % (20 deg.)
ALLOWABLE ANGLE IN CASE OF CROSSING SIDEWAY : 27 % (15 deg.)
9. Watch out at all times for the area to which the excavator is being moved. Pay attention to any hindrances.
10. Keep enough distance from trench and bank edges.

◆ Safety for children

Tragedy can occur if the operator is not alert to the presence of children. Children generally are attracted to machines and the work they do.

1. Never assume that children will remain where you last saw them.
2. Keep children out of the work area and under the watchful eye of another responsible adult.
3. Be alert and shut your machine down if children enter the work area.
4. Never carry children on your machine. There is not a safe place for them to ride. They may fall off and be run over or interfere with your control of the machine.
5. Never allow children to operate the machine even under adult supervision.
6. Never allow children to play on the machine or on the attachments.
7. Use extra caution when backing up. Look behind and down to make sure the area clear before moving.
8. When parking your machine, if at all possible, park on a firm, flat and level surface; if not, park across a slope. Lower the bucket and dozer to the ground, remove the key, place the control lock levers in the locked position from the ignition and lock the cab door (if equipped), before you leave.


◆ Avoiding crystalline silica (quartz) dust

To avoid serious injury or death from silica dust:

Avoid exposure to dust containing crystalline silica particles.

This dust can cause serious injury to the lungs (silicosis). Because crystalline silica is a basic component of sand and granite, many activities at construction sites produce dust containing crystalline silica.

Trenching, sawing and boring of material containing crystalline silica can produce dust containing crystalline silica.

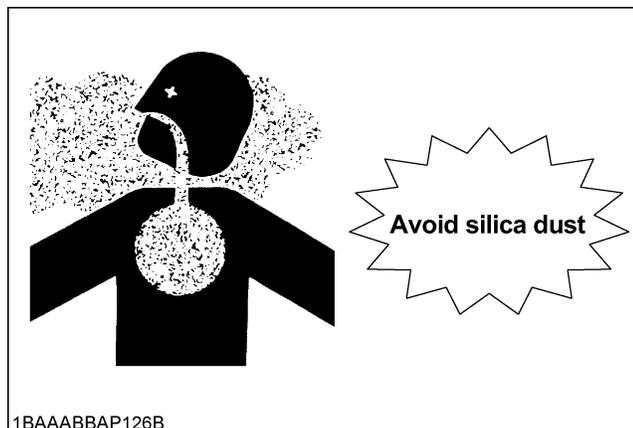

1BAAABBAP126B



If dust which contains crystalline silica is present, there are guidelines which should be followed:

1. Be aware of the potential health effects of crystalline silica and that smoking may add to the damage.
2. Be aware of and follow OSHA (or other local, State or Federal) guidelines for exposure to airborne crystalline silica.
3. Know the work operations where exposure to crystalline silica may occur.
4. Participate in air monitoring or training programs offered by the employer.
5. Be aware of and use optional equipment controls such as water sprays, local exhaust ventilation, and enclosed cabs with positive pressure air conditioning if the machine has such equipment. Otherwise respirators shall be worn.
6. Where respirators are required, wear a respirator approved for protection against crystalline silica containing dust. Do not alter the respirator in any way. Workers who use tight-fitting respirators cannot have beards/mustaches which interfere with the respirator seal to the face.
7. If possible, change into disposable or washable work clothes at the work site; shower and change into clean clothing before leaving the work site.
8. Do not eat, drink, use tobacco products, or apply cosmetics in areas where there is dust containing crystalline silica.
9. Store food, drink and personal belongings away from the work area.
10. Wash hands and face before eating, drinking, smoking, or applying cosmetics after leaving the exposure area.

3. AFTER OPERATION

Before leaving the machine,

- Park the excavator on a firm, flat and level surface.
- Lower the attachments and the dozer blade to the ground.
- Stop the engine.
- Release pressure trapped in the hydraulic system.
- Lock all control levers.
- Remove the key.

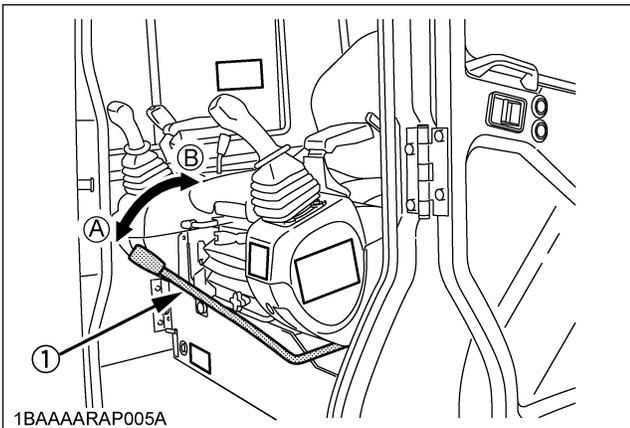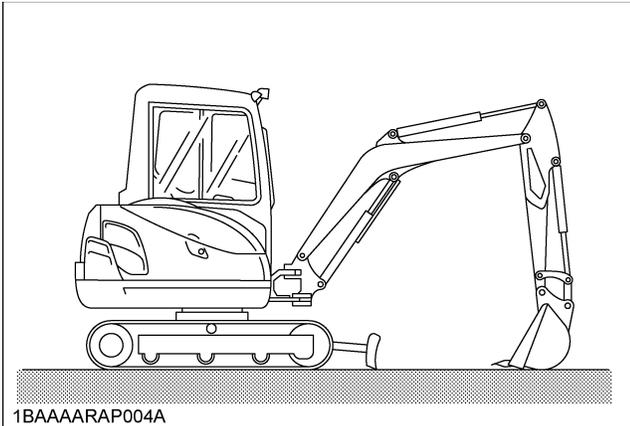


(1) Pilot control lock lever

(A) "Unlock"
(B) "Lock"

4. SAFE LOADING AND TRANSPORT OF THE EXCAVATOR

1. Observe all regulations concerning the transport of excavators on public roads.
2. Use adequately long and robust ramps when loading on the machine. (for details see "TRANSPORTING THE EXCAVATOR ON A VEHICLE")
3. Do not change the running direction and to avoid a tipping over, do not try to swing the attachment crosswise to the loading ramps.
4. Lower the attachment on the loading bed and release the pressure from the hydraulic system.
After loading the excavator on the truck, block the tracks with blocks and cable down the excavator.

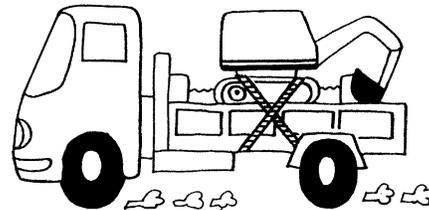

5. Avoid abrupt braking of the vehicle with the excavator loaded. Sudden braking cause the excavator to move and may cause a serious accident.
6. If the excavator is to tow another machine, make sure the load is smaller than the strength of the hook, tow chain or cable.

Max. drawbar pull at coupling hook	70450 N (15838 lbf, 7184 kgf)
Max. vertical load at coupling hook	7210 N (1621 lbf, 735 kgf)

7. Do not use hooks on the roof of canopy or CAB for lifting the excavator.

5. MAINTENANCE


Before doing maintenance work on the excavator, place the machine on even solid ground, lower the attachments to the ground, stop the engine and remove the key. When dismantling hydraulic parts, make sure that the hydraulic oil has cooled down sufficiently to avoid burns.

Start maintenance work carefully, e.g. loosen plug slowly so that oil will not squirt out.

1. Before doing work on the engine, the exhaust system, the radiator and the hydraulics, let the excavator cool down sufficiently.
2. Turn off the engine at all times when filling with fuel. Avoid spilling and over-filling of fuel.


▲-6 SAFE OPERATION

3. Smoking is prohibited while refueling or handling the battery. Keep sparks and fire away from the fuel tank and battery. Flammable gases escape from the battery, especially during charging.
4. Do not use or charge the refillable type battery if the fluid level is below the LOWER (lower limit level) mark. Otherwise, the battery component parts may be prematurely deteriorated, which may shorten the battery's service life or cause an explosion. Check the fluid level regularly and add distilled water as required so that the fluid level is between the UPPER and LOWER levels.
5. Read and follow the directions "STARTING WITH AN AUXILIARY BATTERY" in "OPERATION OF THE ENGINE", when starting with an auxiliary battery.
6. Keep a first-aid box and a fire extinguisher at hand at all times.
7. Do not open the radiator cap before the radiator has cooled down sufficiently
First loosen the cap to the first stop and allow the system enough time to release the remaining pressure. Then loosen the cap completely.
8. To avoid short-circuiting the battery, always remove the ground cable first and attach the positive cable first.
9. Leaking hydraulic fluid has enough pressure to penetrate the skin and cause serious injuries. Leakages from pin holes can be totally invisible. Do not use hands for checking for leaks. Always use a piece of wood or cardboard. It is strongly recommended to use a face mask or eye protection. Should injuries occur with leaking hydraulic fluid, contact a doctor immediately. This fluid can cause gangrene or serious allergic reactions.

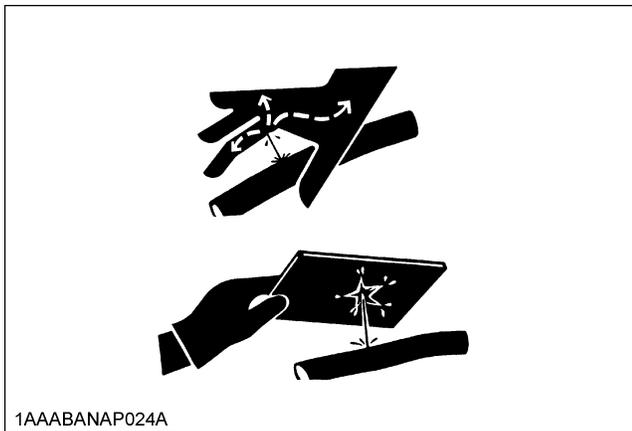


10. To avoid environmental damage from acid and heavy metals, do not throw the battery away.
11. Observe all laws and regulations concerning the disposal of used oil, coolants, solvents, hydraulic fluids, battery acids and batteries.
12. To avoid fire, do not heat the hydraulic components (tanks, pipes, hoses, cylinders) before they have been drained and washed.

13. Use a face mask or eye protection to protect the eyes and respiratory system against dust and other foreign particles.

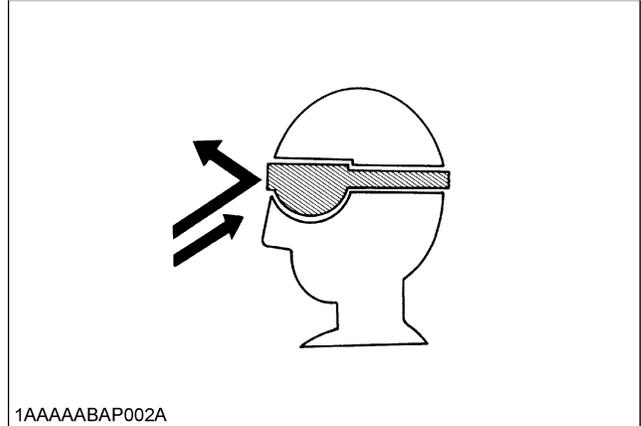

14. Securely support excavator with stands or suitable blocking before working underneath. For your safety, do not work under any hydraulically supported devices. They can settle, suddenly leak down, or be accidentally lowered.
15. Do not dismantle the spring of the track tensioner. If dismantling is necessary, contact your KUBOTA dealer where the machine was purchased, or competent service shop. The assembly must be done according to the work shop manual of KUBOTA (W.S.M.) for the product involved.
16. When lifting the machine itself with an attachment, place a safety block or safety post to prevent the machine from turning over. Keep the lock lever for attachment control in the "LOCK" position.

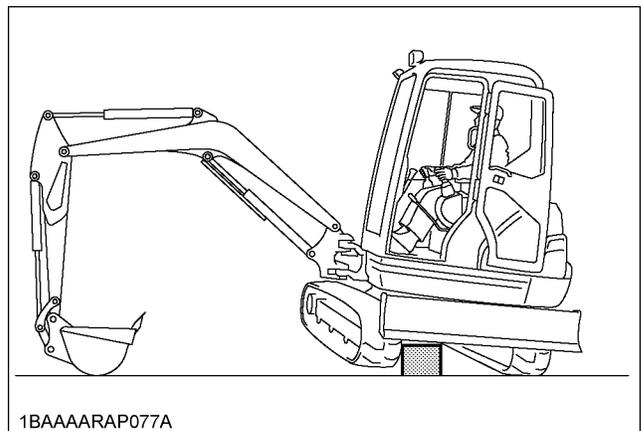

17. KUBOTA uses no parts which are lined with asbestos. Do not use these kind of parts even if they are available and can be installed.
18. Fire prevention
Excavator and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcing or sparks.

The following fire prevention guidelines will help to keep your equipment up and running efficiently and keep the risk of fire to a minimum.

- Blow off all accumulated debris near hot engine exhaust components such as turbocharger and exhaust manifold as well as exhaust pipes and muffler more frequently when working in severe conditions.
- Clean out all accumulated flammable debris such as leaves, straw, pine needles, branches, bark, small wood chips and any other combustible materials from inside the machine belly pans or lower unit structures as well as from area in proximity to the engine.
- Inspect all fuel lines and hydraulic hoses for wear or for deterioration. Replace them immediately if they begin to leak.
- Examine electrical wiring and connectors frequently for damage. Repair any wires that are loose or frayed before operating the machine. Clean all electrical connections and tighten all electrical connections as necessary.
- Inspect the exhaust system daily for any signs of leakage. Check for broken pipes and muffler and also for loose or missing bolts, nuts and clamps. If any exhaust leaks or fractured parts are found, repairs must be completed prior to operation.
- Always keep a multipurpose fire extinguisher on or near the machine. Be familiar with the operation of the fire extinguisher.

6. DANGER, WARNING AND CAUTION LABELS

(1) Code No. RC418-5728-4

CAUTION	TO AVOID PERSONAL INJURY:
	<ol style="list-style-type: none"> 1. Read and understand operator's manual before attempting to start or operate the excavator. 2. Before starting engine, make sure all control levers are in neutral and the operating area is clear of all bystanders. 3. Never allow passengers on any part of the excavator while operating. 4. Know your work area before starting operation. <ul style="list-style-type: none"> ● Check underground lines and cables. ● Stay off slopes too steep for safe operation. ● Check overhead clearance with electric wires. ● Check for hidden holes, obstacles or drop-offs and overhangs. 5. Make sure all shields are in place and securely fastened. 6. Before dismounting from the machine, lower all attachment to the ground, stop the engine and remove the key. 7. Damaged ROPS must be replaced, not repaired or revised.
IMPORTANT	Never use boom, dipper, or bucket to hammer or beat sideways. Excavator is not intended for these usages.

1BAAAAQAP0780


(3) Code No. RC418-5733-5

DANGER

TO AVOID SERIOUS INJURY OR DEATH: Check overhead clearance with electric wires.


1BAAAAQAP0800

(2) Code No. RC418-5727-4

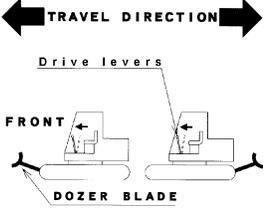WARNING			
	TO AVOID PERSONAL INJURY OR DEATH: Before moving the excavator, KNOW THE LOCATION OF THE DOZER BLADE. The excavator will travel in the direction of the dozer blade when drive levers are moved away from the operator.		DO NOT OPERATE WITHOUT ROPS. YOU COULD BE CRUSHED. USE SEAT BELT

1BAAAAQAP0790

(4) Code No. RD809-5738-2

WARNING

ATTACHMENT IMPACT HAZARD KEEP ATTACHMENT AWAY FROM CAB AND MACHINE. FAILURE TO DO SO MAY RESULT IN SEVERE INJURIES OR DEATH OR DAMAGE TO THE BOOM/CYLINDER, HYDRAULIC HOSES OR THE CAB.


1BAAAARAP1000

(5) Code No. 6C300-4744-1


WARNING
Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrester may be required. The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.

1AGAIHFAP069A


[Canopy]

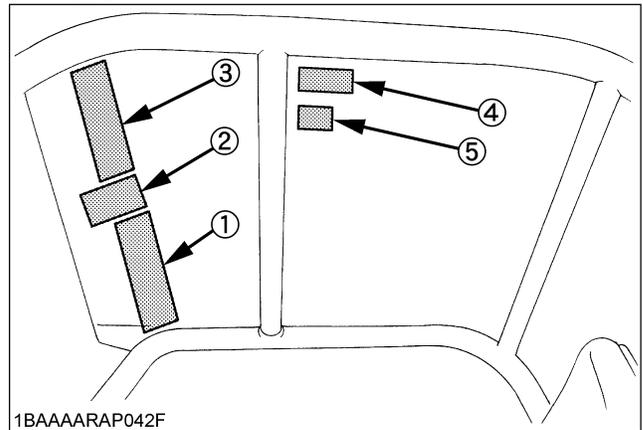


[CAB]

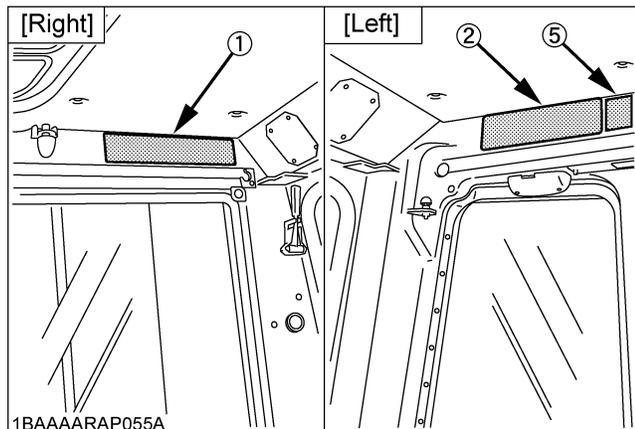

[CAB]

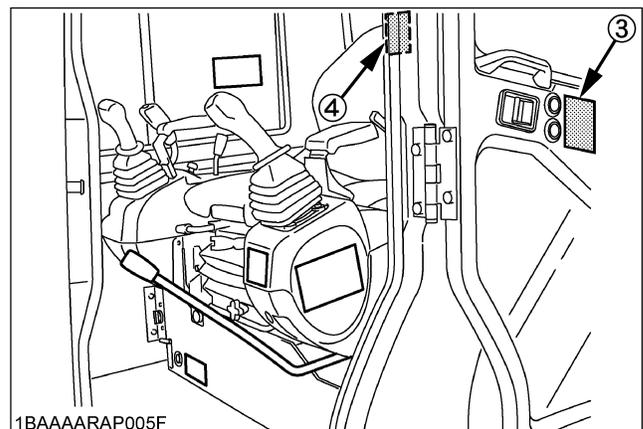

(1) Code No. RC108-5765-2 [CAB]

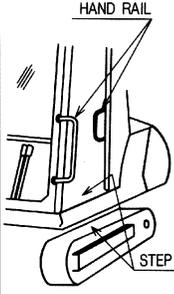


CAUTION

TO AVOID PERSONAL INJURY: MOUNT AND DISMOUNT SAFELY WHEN ENTERING OR LEAVING THE OPERATOR'S COMPARTMENT.

1. Maintain a three-point contact with the steps and handrails.
2. Face the machine.
3. Never jump on or off the machine.
4. Never attempt to mount or dismount a moving machine.
5. Never use control levers as handles.

1BAAAARAP0440

(1) Code No. RD118-5763-1 [Canopy]

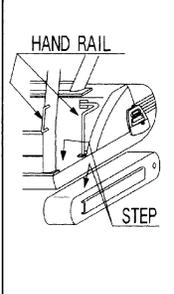


CAUTION

TO AVOID PERSONAL INJURY: MOUNT AND DISMOUNT SAFELY WHEN ENTERING OR LEAVING THE OPERATOR'S COMPARTMENT.

1. Maintain a three-point contact with the steps and handrails.
2. Face the machine.
3. Never jump on or off the machine.
4. Never attempt to mount or dismount a moving machine.
5. Never use control levers as handles.

1BAAGAAAP0160

(2) Code No. RC418-5732-3




CAUTION

TO AVOID PERSONAL INJURY:

1. Study control lever pattern A and pattern B. Then choose the one which is most familiar.
2. Position the pattern selector lever in either the lowered position (pattern A) or the upward position (pattern B).
3. Engage lever lock to prevent accidental pattern change.
4. Familiarize yourself with the pattern selected by operating slowly.

1BAAAAP0330

(3) Code No. RC418-5753-2

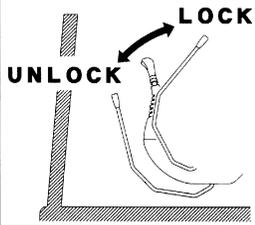

CAUTION

TO AVOID PERSONAL INJURY: Lock control lever before leaving compartment.

1BAAAARAP0450

(4) Code No. RC108-5718-1



DANGER

TO AVOID PERSONAL INJURY OR DEATH FROM A MACHINE RUNAWAY.

1. Do not start engine by shorting across starter terminals.
2. Start engine only from operator's seat.

1BAAAQAP0910

(5) Code No. RC348-5728-2

CAUTION

TO AVOID PERSONAL INJURY:

1. Due to the nature of the pilot operated hydraulic system, it is not possible to relief pressure by stroking the control levers with the engine off. Therefore, extra caution is required when disconnecting hydraulic component.
2. Escaping hydraulic fluid under pressure has sufficient force to penetrate the skin causing serious personal injury. When disconnecting lines, be sure to carefully loosen the connections to relieve all pressure. Before applying pressure to the system, make sure all connections are tight and that lines, pipes, and hoses are not damaged.
3. Fluid escaping from pinholes may be invisible. Use a piece of cardboard or wood to search for suspected leaks do not use hands. Use safety goggles or other eye protections.
4. If injured by escaping fluid, see a medical doctor, who understands the injury, at once. Serious infection or reaction will result if proper medical treatment is not administered immediately. This fluid can produce gangrene or severe allergic reactions.

1BAAEUAP021E

(6) Code No. TC650-6597-1

California Proposition 65

WARNING

Engine exhaust, some of its constituents, certain vehicle components and fluids, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

1BCAAAAP4560


(7) Code No. 3B791-9870-1

WARNING


TO AVOID EXPOSURE TO DUST CONTAINING SILICA PARTICLES:

- This dust can cause serious injury to the lungs under some exposure levels.
- Be aware of and follow the OSHA (or other regulatory body) guidelines for exposure to airborne crystalline silica.
- To meet OSHA silica guidelines, use appropriate Personal Protective Equipment and dust abatement systems, such as waterspray systems.

1AGAIJHAP174A

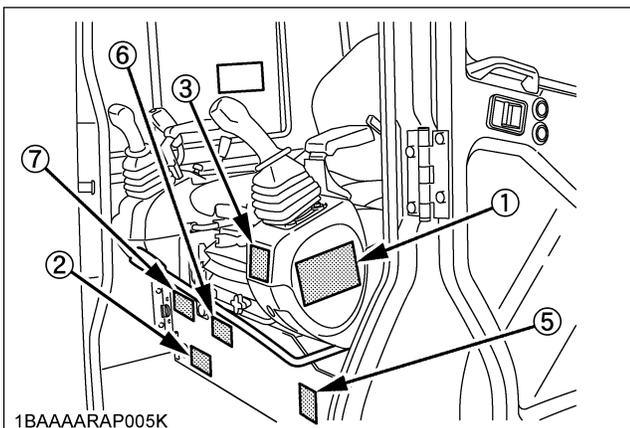

1BAAAARAP005K

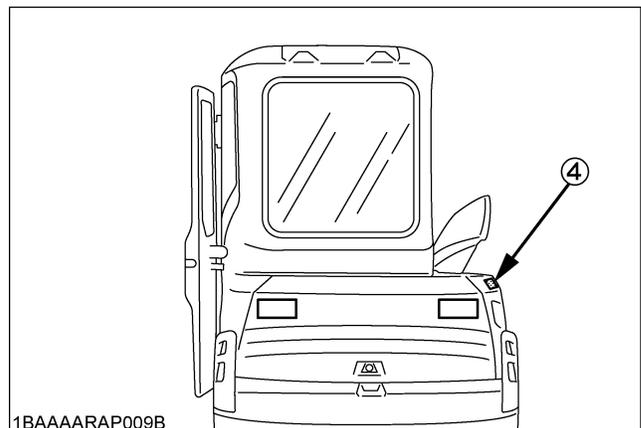

1BAAAARAP009B


▲-10 SAFE OPERATION

- (1) Code No. RC418-5737-5
Keep away from fan and belt.



1BAAE BBAP0020

- (2) Code No. RC418-5738-2
Do not touch hot parts
such as exhaust etc.

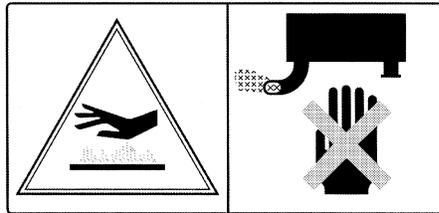


1BAAAAKAP0350

- (3) Code No. RD568-5754-1



1BAAAAQAP0890

- (4) Code No. RD358-5736-1
Diesel fuel only No fire

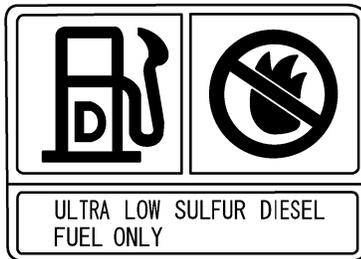

1BAAGAAAP1810

- (5) Code No. 6C040-5559-1


DANGER EXPLOSIVE GASES
Cigarettes, flames or sparks could cause battery to explode. Always shield eyes and face from battery. Do not charge or use booster cables or adjust post connections without proper instruction and training.
KEEP VENT CAPS TIGHT AND LEVEL
POISON CAUSES SEVERE BURNS
Contains sulfuric acid. Avoid contact with skin, eyes or clothing. In event of accident flush with water and call a physician immediately.
KEEP OUT OF REACH OF CHILDREN

1BAAAAQAP0960


- (6) Code No. RA028-5835-1

⚠ WARNING :
Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

1BAAABYAP2730

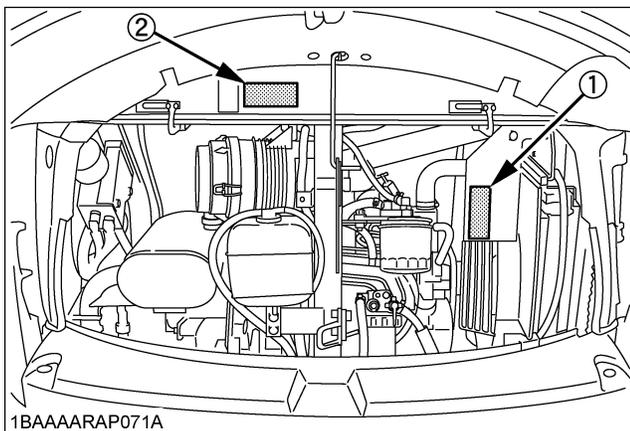


1BAAAA RAP071A

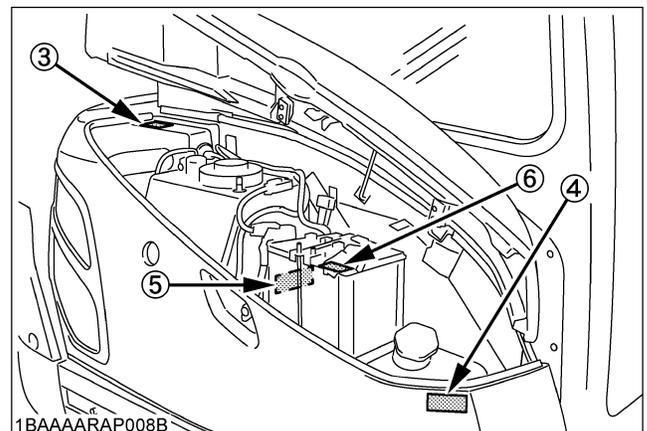


1BAAAA RAP008B

- (1) Code No. RC788-5727-2
Do not allow any persons within the working range.

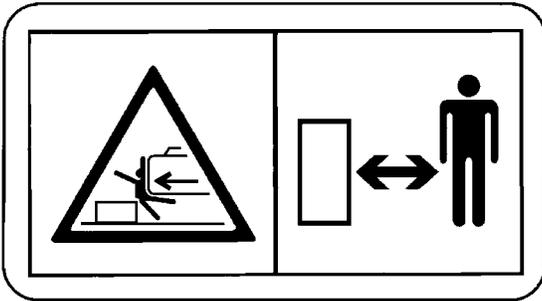

1BAAEA JAP069A


- (3) Code No. RB456-5795-1 [Both sides]

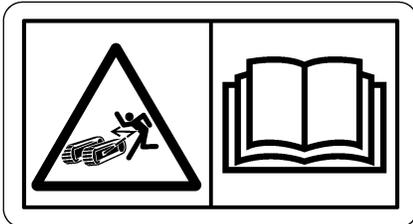

1BAAACDAP2740

- (6) Code No. RC108-5714-1
CAUTION
TO AVOID PERSONAL INJURY
NEVER OPEN BEFORE
STOPPING ENGINE

1BAAGAAP0260

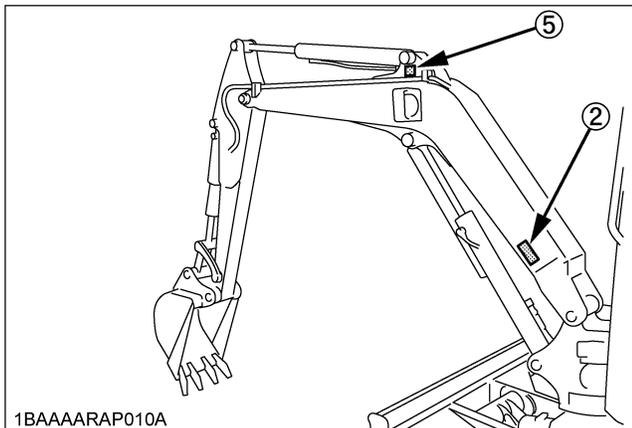


1BAAAARAP010A

- (2) Code No. 68328-5735-1 [Both sides]




1BAAAQAP0930

- (4) Code No. RD118-5737-1

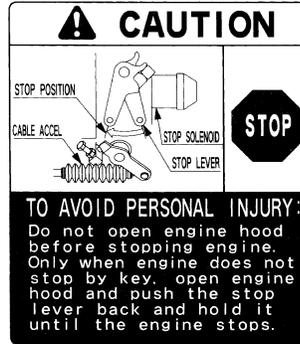


1BAAAARAP062E


- (5) Code No. RC108-5796-1
[Both sides]

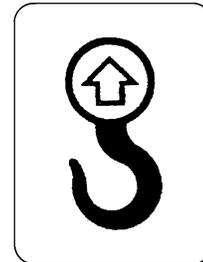

1BAAAQAP0940

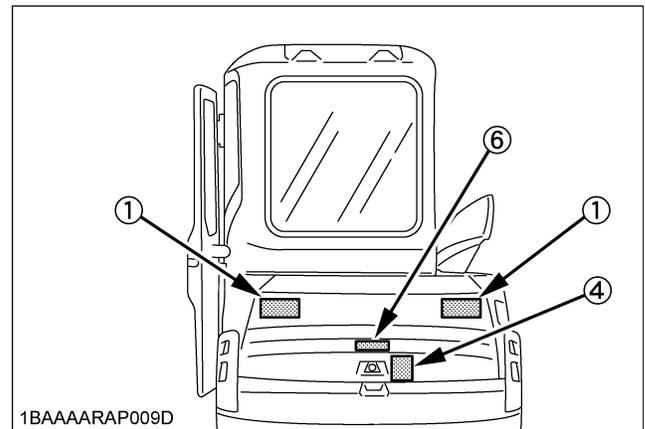

1BAAAARAP009D

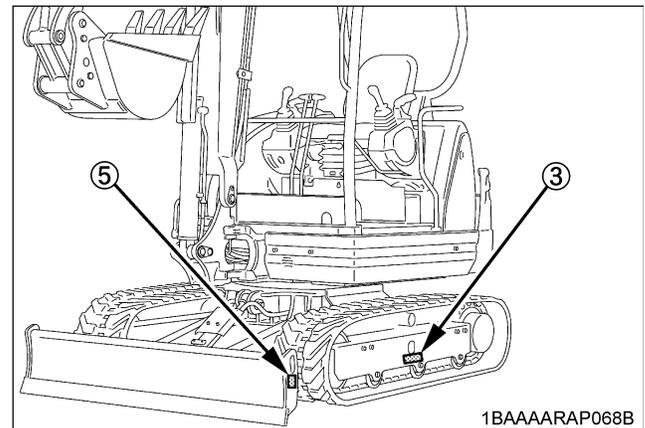

1BAAAARAP068B

▲-12 SAFE OPERATION


(1) Code No. RC348-5747-3

▲ WARNING

TO AVOID PERSONAL INJURY OR DEATH:

- Do not move raised load over people.
- It is forbidden to lift loads greater than those values mentioned in the lifting capacity tables.
- The values mentioned in the table are valid only on even, hard grounds. When lifting on soft ground, the machine can tilt over due to the fact that the load is concentrated only on one side of the machine.
- The table values are calculated at the end of the arm without the bucket. In order to find the allowable loads for machines with bucket, the bucket weight must be subtracted from the values in the table.



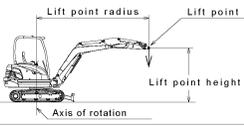

1. The lifting capacities are based on ISO 10567 and do not exceed 75 % of the static tilt load of the machine or 87 % of the hydraulic lifting capacity of the machine.
2. The strokes are as follows.
 - 1) The load point corresponds to the front bolt part of the arm.
 - 2) The machine positions are (i) over-front (Blade down), (ii) over-front (Blade up), and (iii) over-side.
 - 3) The operating cylinder is the boom cylinder.
3. The bucket of the excavator, the hook, the sling and other lifting accessories are taken into consideration for the loads.

LIFT POINT HEIGHT (ft)	LIFTING CAPACITY OVER-FRONT BLADE DOWN Unit=1000 lbs.				LIFTING CAPACITY OVER-FRONT BLADE UP Unit=1000 lbs.				LIFTING CAPACITY OVER-SIDE Unit=1000 lbs.			
	LIFT POINT RADIUS (ft)				LIFT POINT RADIUS (ft)				LIFT POINT RADIUS (ft)			
	4	6	8	12	4	6	8	12	4	6	8	12
10												
8				0.80				0.80				0.80
6			1.10	0.85			1.10	0.85			1.10	0.78
4			1.47	0.93			1.47	0.87			1.38	0.76
GL 2			1.76	1.00			1.54	0.85			1.31	0.74
0	1.98	1.87	1.04		1.98	1.51	0.84		1.98	1.28	0.73	
-2	2.15	2.75	1.83	1.01	2.15	2.43	1.50	0.84	2.15	1.99	1.27	0.73
-4	3.44	2.37	1.63		3.44	2.37	1.51		3.44	2.02	1.29	
-6	2.88	1.70	1.19		2.88	1.70	1.19		2.88	1.70	1.19	

Machine with ROPS canopy and rubber crawler, without bucket


1BAAAARAP064E


(2) Code No. RC348-5748-3

▲ WARNING

TO AVOID PERSONAL INJURY OR DEATH:

- Do not move raised load over people.
- It is forbidden to lift loads greater than those values mentioned in the lifting capacity tables.
- The values mentioned in the table are valid only on even, hard grounds. When lifting on soft ground, the machine can tilt over due to the fact that the load is concentrated only on one side of the machine.
- The table values are calculated at the end of the arm without the bucket. In order to find the allowable loads for machines with bucket, the bucket weight must be subtracted from the values in the table.




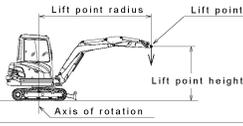


1. The lifting capacities are based on ISO 10567 and do not exceed 75 % of the static tilt load of the machine or 87 % of the hydraulic lifting capacity of the machine.
2. The strokes are as follows.
 - 1) The load point corresponds to the front bolt part of the arm.
 - 2) The machine positions are (i) over-front (Blade down), (ii) over-front (Blade up), and (iii) over-side.
 - 3) The operating cylinder is the boom cylinder.
3. The bucket of the excavator, the hook, the sling and other lifting accessories are taken into consideration for the loads.

LIFT POINT HEIGHT (ft)	LIFTING CAPACITY OVER-FRONT BLADE DOWN Unit=1000 lbs.				LIFTING CAPACITY OVER-FRONT BLADE UP Unit=1000 lbs.				LIFTING CAPACITY OVER-SIDE Unit=1000 lbs.			
	LIFT POINT RADIUS (ft)				LIFT POINT RADIUS (ft)				LIFT POINT RADIUS (ft)			
	4	6	8	12	4	6	8	12	4	6	8	12
10												
8				0.78				0.78				0.78
6			1.07	0.83			1.07	0.83			1.07	0.80
4			1.43	0.90			1.43	0.90			1.41	0.78
GL 2			1.71	0.98			1.58	0.88			1.35	0.76
0	1.93	1.83	1.02		1.93	1.55	0.86		1.93	1.32	0.75	
-2	2.09	2.68	1.78	0.99	2.09	2.48	1.54	0.86	2.09	2.04	1.31	0.75
-4	3.39	2.30	1.59		3.35	2.30	1.55		3.35	2.07	1.32	
-6	2.79	1.66	1.16		2.79	1.66	1.16		2.79	1.66	1.16	

Machine with ROPS cab and rubber crawler, without bucket

1BAAAARAP065E

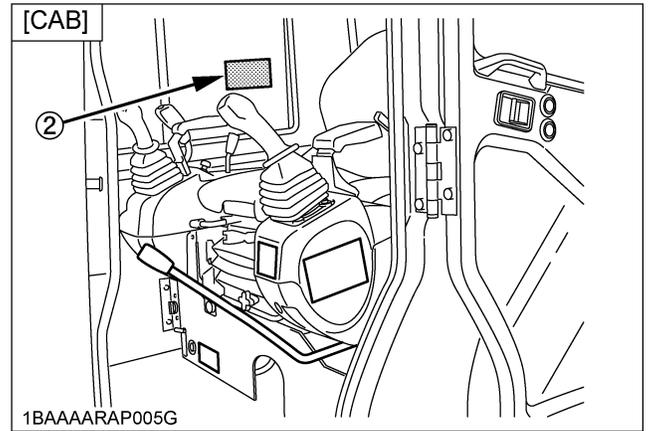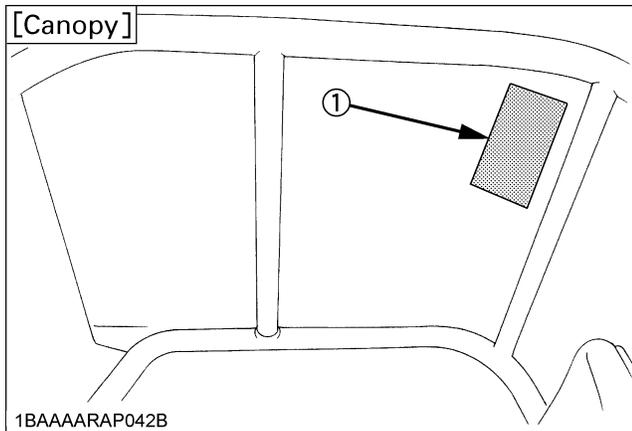

7. CARE OF DANGER, WARNING AND CAUTION LABELS

1. Keep danger, warning and caution labels clean and free from obstructing material.
2. Clean danger, warning and caution labels with soap and water, and dry with a soft cloth.
3. Replace damaged or missing danger, warning and caution labels with new labels from your KUBOTA dealer.
4. If a component with danger, warning and caution label(s) affixed is replaced with new part, make sure new label(s) is (are) attached in the same location(s) as the replaced component.
5. Mount new danger, warning and caution labels by applying on a clean dry surface and pressing any bubbles to outside edge.

DEALER SERVICE

Your KUBOTA dealer is always ready to help so that your excavator offers the best performance. After having carefully read these instructions, you will realize that much of the routine maintenance can be done by yourself. Your KUBOTA dealer is responsible for servicing and the delivery of spare parts. When ordering spare parts from your KUBOTA dealer, always mention the product identification number of the excavator and the serial number of the engine.

Note these numbers right away in the supplied lines.

Excavator Product identification number	
Dealer's name (To be filled in through the owner)	
Date of purchase	

	Model	Serial No.
Engine		


◆ **Warranty policy**

This product is warranted under the KUBOTA Limited Express Warranty, a copy of which may be obtained from your selling dealer. No warranty shall, however, apply if the product has not been handled according to the instruction given in the Operator's Manual even it is within the warranty period.



The Product(s) described in this Operator's Manual are designed and manufactured only for the country in which they are initially wholesaled by KUBOTA or one of its affiliated companies. Neither KUBOTA Corporation nor its affiliated companies provide warranty for any Product which is re-sold or retailed in any country other than the country for which the Product(s) were designed or manufactured.


◆ **Scrapping the product and its procedure**

To put the product out of service, correctly follow the local rules and regulations of the country or territory where you reside. If you have questions, consult your local KUBOTA Dealer.

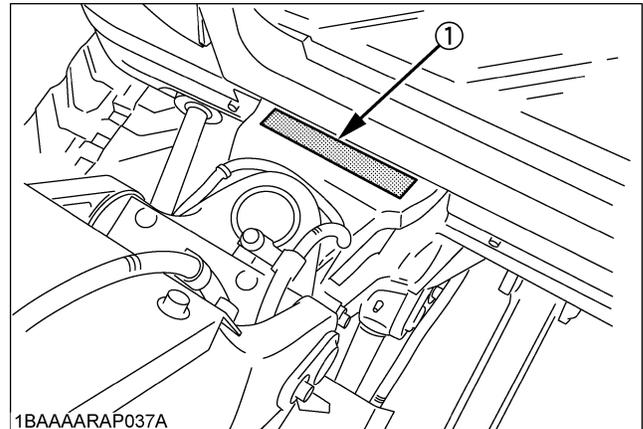

(1) Product identification number

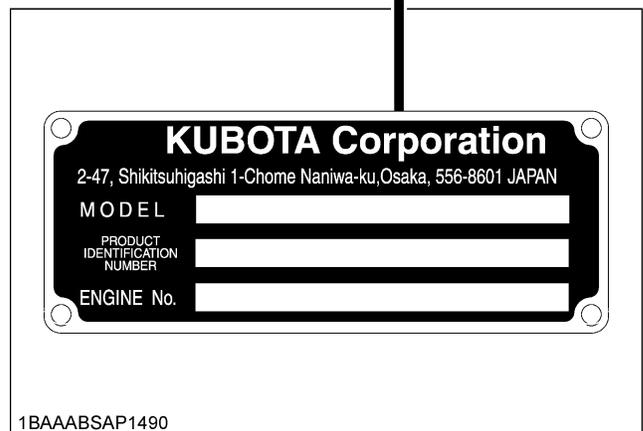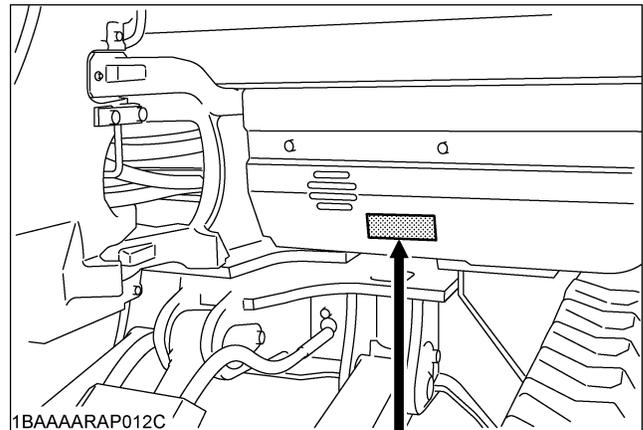

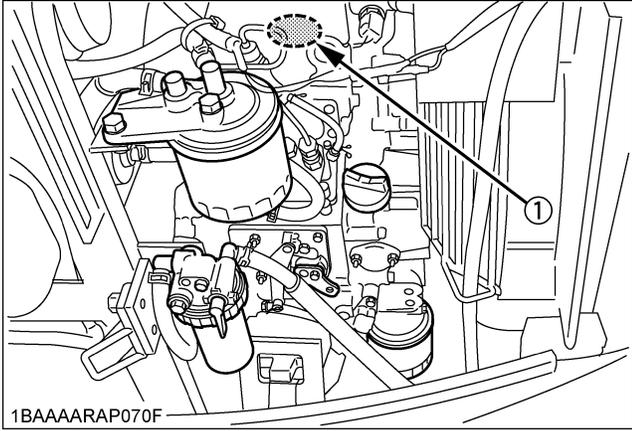

(1) Engine serial No.


TECHNICAL DATA

		KUBOTA EXCAVATOR		
Model name		KX71-3		
Type		Canopy	Cabin	
Operating weight (including operator's) kg (lbs.)		2855 (6295)	2965 (6540)	
Engine	Type	Water cooled 4 cycle diesel engine with 4 cylinder		
	Model name	KUBOTA V1505-E4-BH-1		
	Total displacement cc (cu.in)	1498 (91.4)		
	Engine power	SAE gross kW (HP)	18.2 (24.4)	
		Net kW (HP)	17.2 (23.1)	
	Rated speed rpm	2250		
Low idle speed rpm	1050 to 1150	1250 to 1350		
Performance	Unit swing speed rpm	9.4		
	Travel speed	Fast km/h (mph)	4.5 (2.8)	
		Slow km/h (mph)	2.6 (1.6)	
	Ground pressure (With operator)	kPa (kgf/cm ²) [psi]	27.0 (0.28) [4.19]	28.0 (0.29) [4.34]
		Climbing angle % (deg)	*36 (20)	
Angle in case of crossing slope % (deg)	*27 (15)			
Dozer	Width X Height mm (in.)	1500 x 300 (59.1 x 11.8)		
Boom swing angle	Left rad (deg)	1.40 (80)		
	Right rad (deg)	1.05 (60)		
Pressure connection for attachments	Max. displacement (Theoretical) L (US gal)/ min	50.6 (13.4)		
	Max. pressure Mpa (kgf/cm ²) [psi]	20.6 (210) [2987]		
Fuel tank capacity	L (US gal)	45 (11.9)		

NOTE :


- Above dimensions are based on the machine with rubber tracks and JPN bucket.
JPN = made in Japan
- Specifications subject to change without notice.
- * With unloaded digging bucket.
- * Firm compacted soil.
- * Operators must exercise extra caution and follow instructions in the operator's manual.
- * Worse condition or heavier attachment to the above will decrease climbing angle.

DESCRIPTION OF MACHINE PARTS

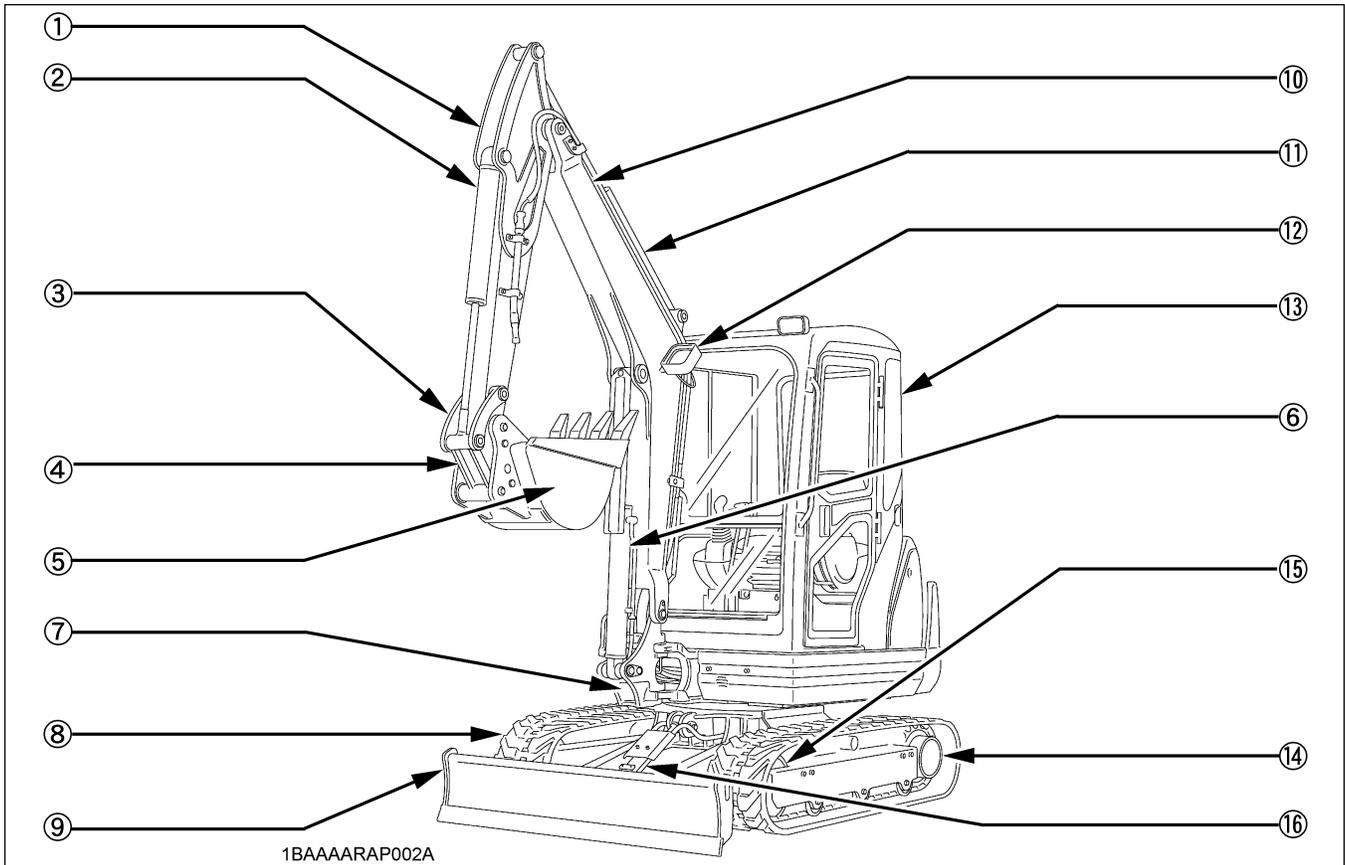


DEPICTED CONTENTS

- (1) Arm
- (2) Bucket cylinder
- (3) Bucket link 2 and 3
- (4) Bucket link 1
- (5) Bucket
- (6) Boom cylinder
- (7) Swing bracket
- (8) Track
- (9) Dozer blade
- (10) Boom
- (11) Arm cylinder
- (12) Working light
- (13) Cabin
- (14) Drive sprocket
- (15) Front idler
- (16) Dozer cylinder
- (17) Canopy
- (18) Working light (option)

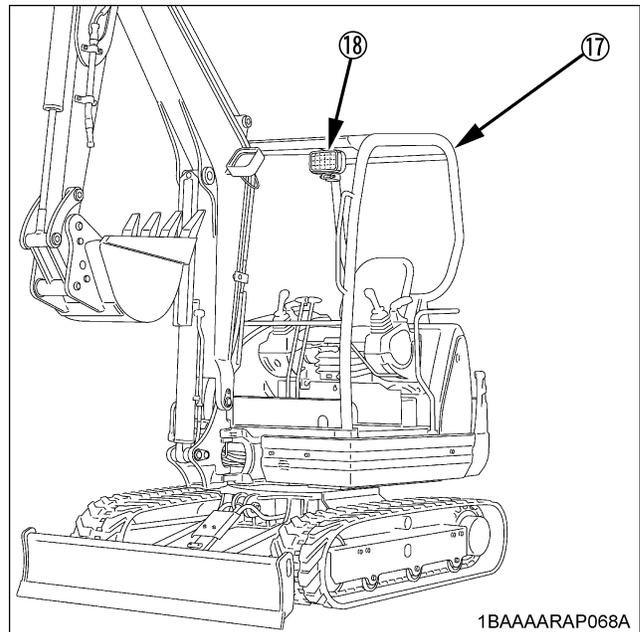


INSTRUMENT PANEL AND CONTROL ELEMENTS


■ Instrument Panel, Switch

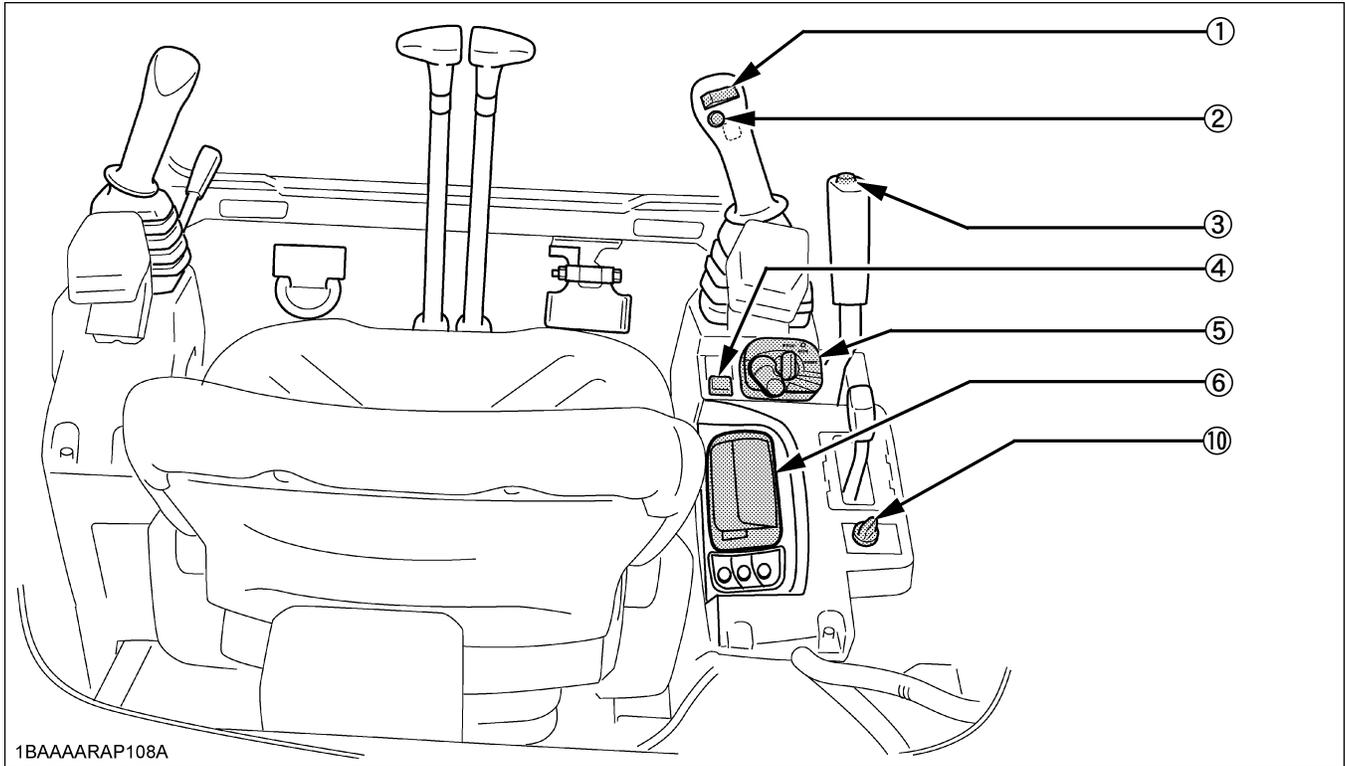

1BAAAARAP108A

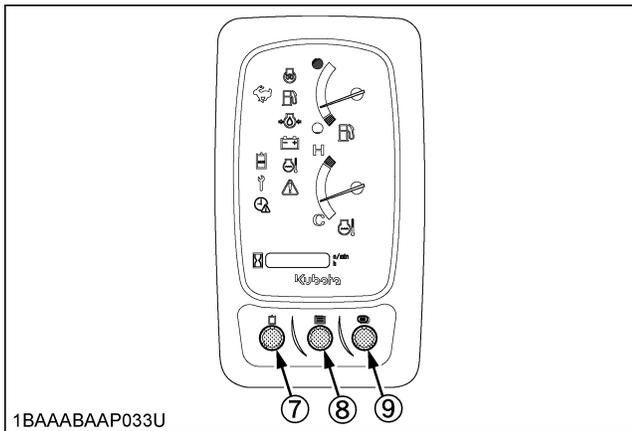

1BAAABAAP033U

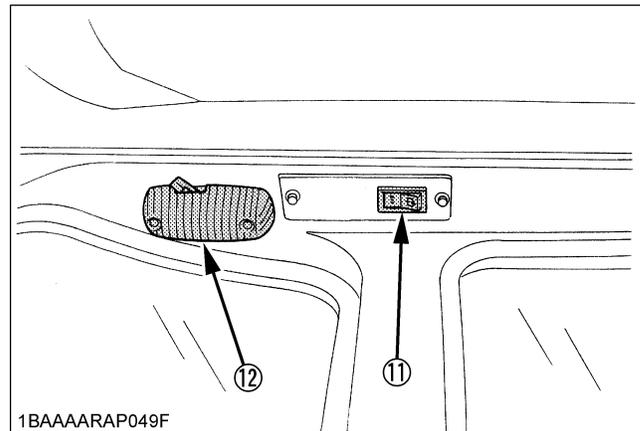


1BAAAARAP049F

DEPICTED CONTENTS

- | | |
|----------------------------|-----------------------------|
| (1) Service port switch | (9) Display selector switch |
| (2) Horn switch | (switch 3) |
| (3) Travel speed switch | (10) Heater switch |
| (4) Working light switch | (CAB type only) |
| (5) Starter switch | (11) Wiper / Washer switch |
| (6) LCD | (CAB type only) |
| (7) Aux port enable switch | (12) Interior lamp |
| (switch 1) | (CAB type only) |
| (8) User setting switch | |
| (switch 2) | |

■ Instrument Panel

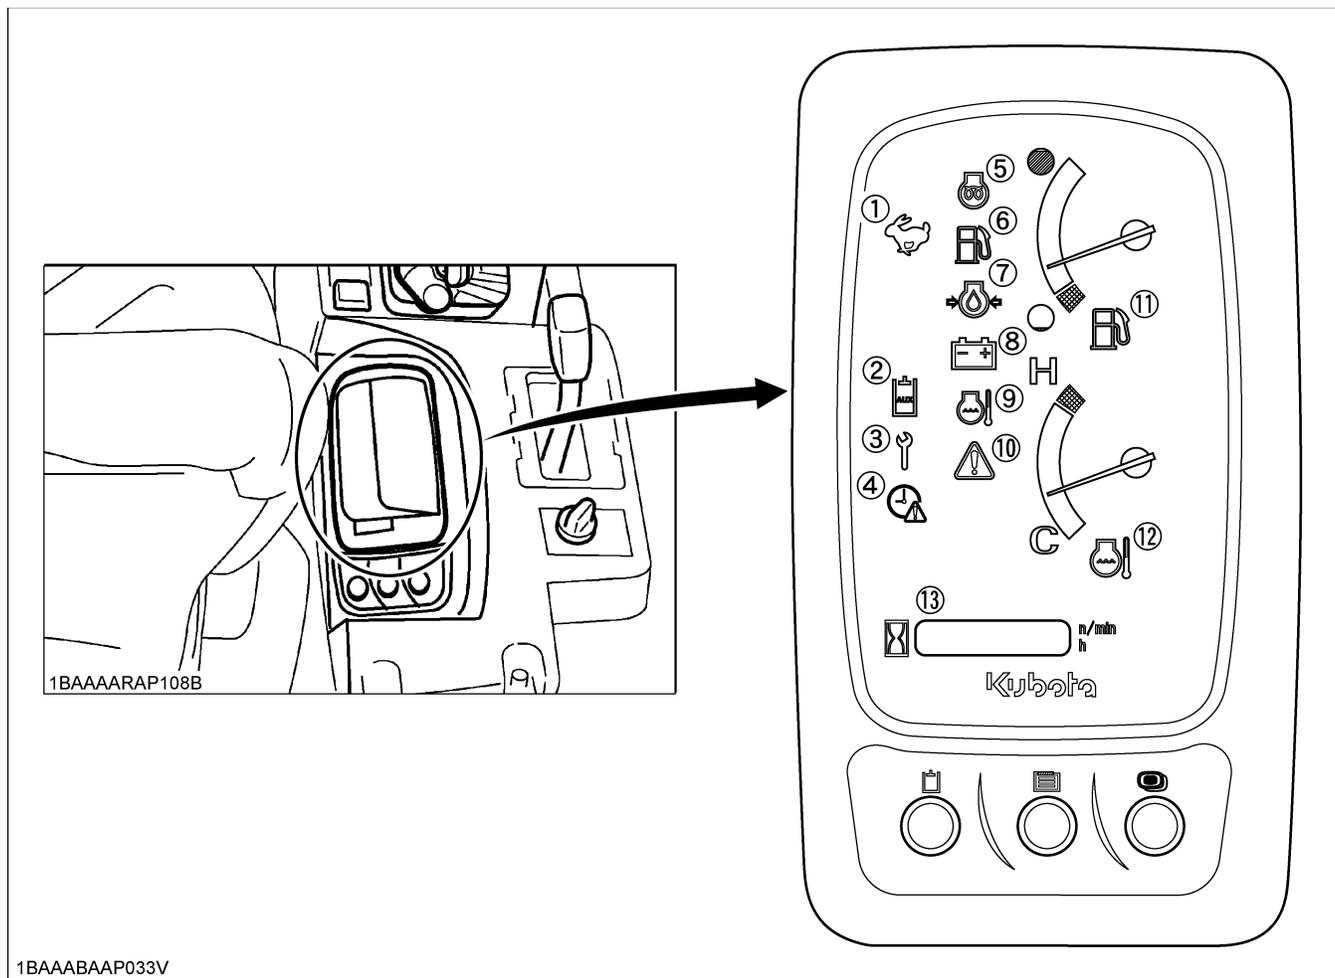

DEPICTED CONTENTS


- | | |
|--------------------------------------|--------------------------------------|
| (1) Speed indicator light | (8) Battery charge lamp |
| (2) Aux operation lamp | (9) Coolant temperature warning lamp |
| (3) Periodic check lamp | (10) Warning lamp |
| (4) Clock setting request lamp | (11) Fuel gauge |
| (5) Glow lamp | (12) Coolant temperature gauge |
| (6) Remaining fuel warning lamp | (13) LCD |
| (7) Engine oil pressure warning lamp | |

CABIN TYPE MACHINE

■ Wiper Switch

To move the wiper, turn on the switch for the wiper when the starter key in position "RUN". A further push on the switch will activate the washer system. Even when the wiper switch is in position "OFF", the washer switch functions if it is pressed.


- Do not activate the washer switch if the tank for the cleaning fluid is empty; the pump can be damaged.
- Do not activate the wiper switch if the window is dry. In this case, make sure that cleaning fluid is applied to the pane before activating the wiper.
- In frosty conditions, make sure that the wiper blade is not frozen to the glass before switching-on. The motor can be damaged if the wiper system is used under such conditions.

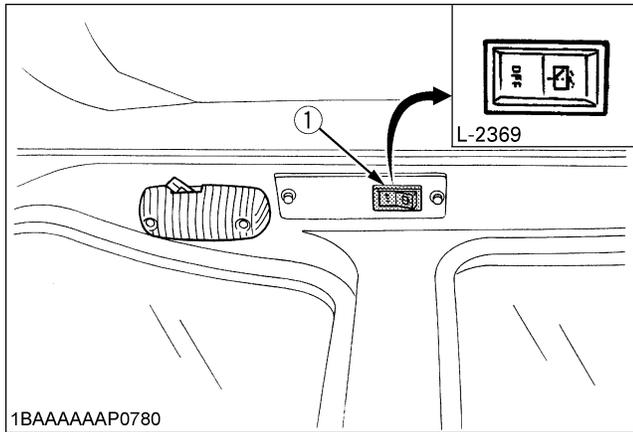

(1) Wiper switch

■ Interior Lamp

To turn on the interior lamp, set the starter switch to the "RUN" and then the interior lamp switch to the "ON" positions, respectively.

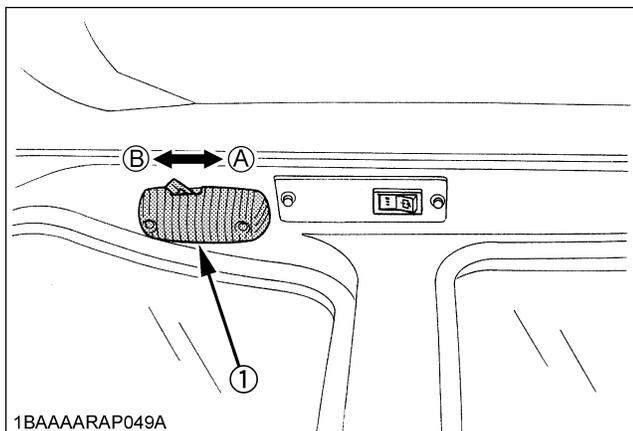


(1) Interior lamp

(A) "ON" (B) "OFF"

■ Heater Switch

Turn the starter switch to position "RUN" and turn the heater switch clockwise, the heater fan will be activated and the cabin will start to warm up. The heater has two positions - "Low" and "High"-.

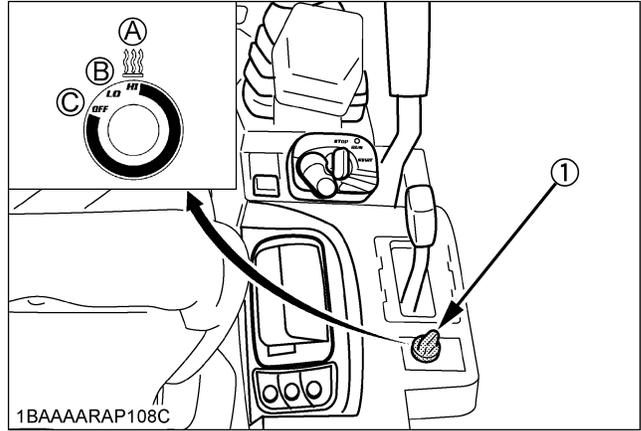


(1) Heater switch

(A) Pos. "High"

(B) Pos. "Low"


(C) Pos. "Off"

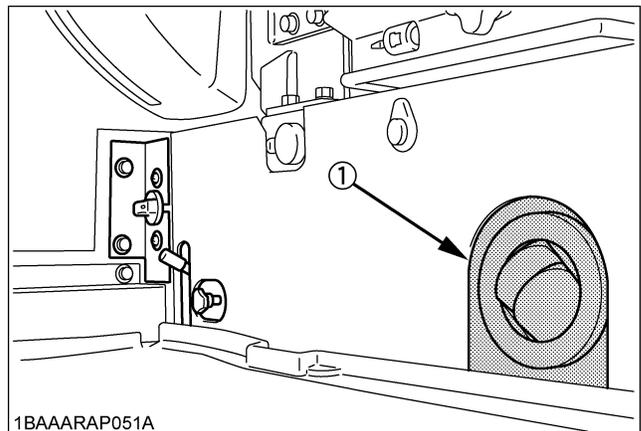

(1) Heater outlet

IMPORTANT :

- During summer, turn the heater valve clockwise to close the valve.

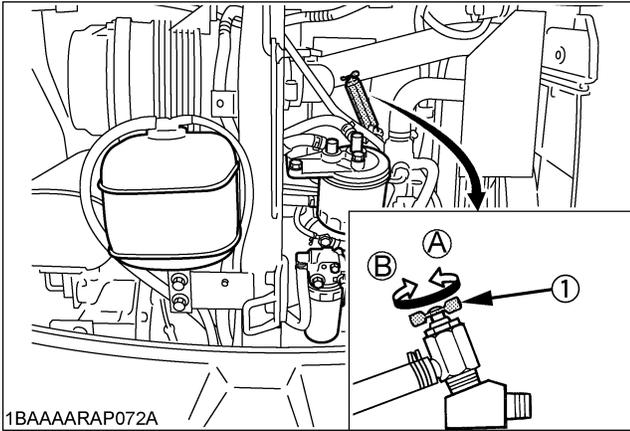


1BAAAAARAP072A

- (1) Valve
 (A) "Open"
 (B) "Close"

◆ **Recirculation / Fresh Air Selection knob**

- **FRESH AIR:** Set the knob to the  position, and fresh air will flow into the CAB. This is helpful when you work in a dusty conditions or if the glass windows get foggy.
- **RECIRCULATION:** Set the knob to the  position, and the in-CAB air will be recirculated. This is useful for heating the CAB quickly or keeping it extra warm.

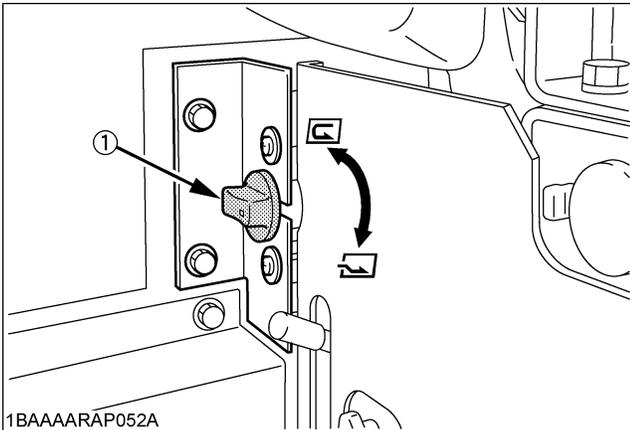

1BAAAAARAP052A


- (1) Recirculation/
 fresh air selection knob
 "FRESH AIR"
 "RECIRCULATION"

NOTE :

- When heating, do not keep the knob at the "RECIRCULATION" position for a long time. The windshield easily gets foggy.
- While working in a dusty conditions, keep the knob at the "FRESH AIR" position. This increases the pressure in the CAB, which helps prevent dust from coming into the CAB.


■ **Opening/Closing of CAB Door**

1. Unlock the CAB door and pull the knob. Open the CAB door fully until fixed into place.
2. To close the CAB door, push the release lever down and close the door.

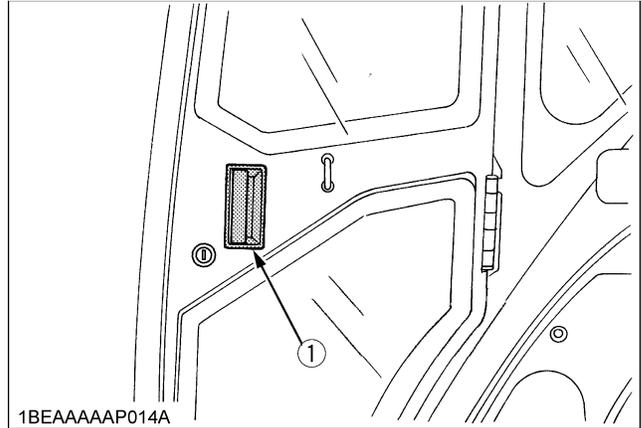

1BEAAAAAP014A

- (1) Door knob

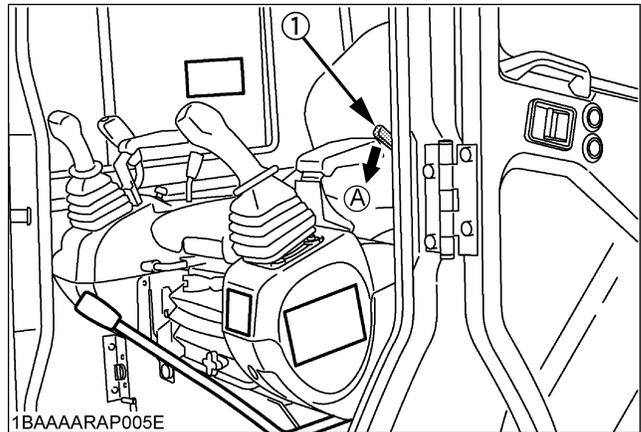

1BAAAAARAP005E

- (1) Release lever
 (A) Down

3. When leaving the excavator, always lock the door.

Opening/Closing of Front CAB Window


CAUTION

To avoid personal injury:

- Keep hands and feet away from the area between front window and CAB frame. Otherwise the operator risks serious injuries by pinching or crushing.
- Other persons should stay away when opening the window.


To open and close the front window, take the steps below.

1. Release the lock levers on the top of the front window.

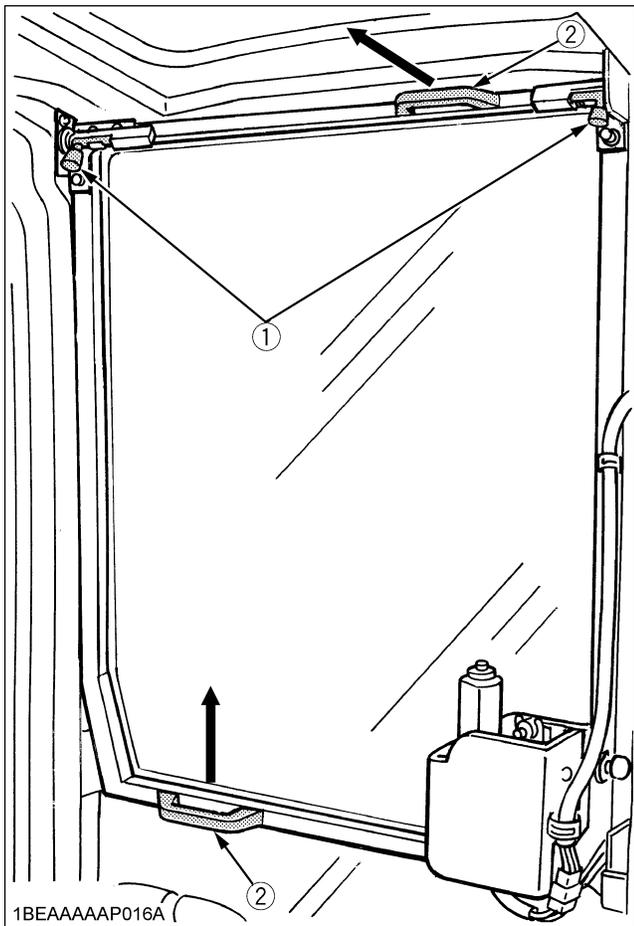

- (1) Lock levers (2) Grip
2. Hold the top and bottom grips tightly with both hands. Pull the top grip slightly upward and toward yourself to let the windshield slide inward.

3. Pull the windshield all the way to the rubber at the back of the CAB. Tighten up the lock levers.

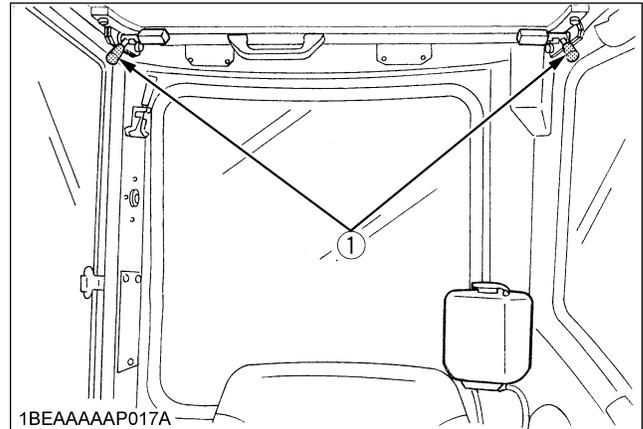

(1) Lock lever

4. To close the window, take the reverse steps 3, 2 and 1.


Emergency Hammer

CAUTION

To avoid personal injury:


- When breaking the window pane, close your eyes and cover them with an arm.

Emergency hammer is for breaking window pane to escape urgently away from excavator as a result of window railing or locking mechanism failure.

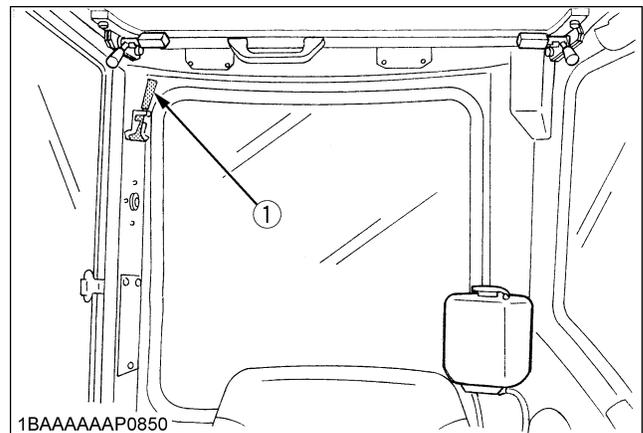

(1) Emergency hammer

■ Control Pedals and Levers

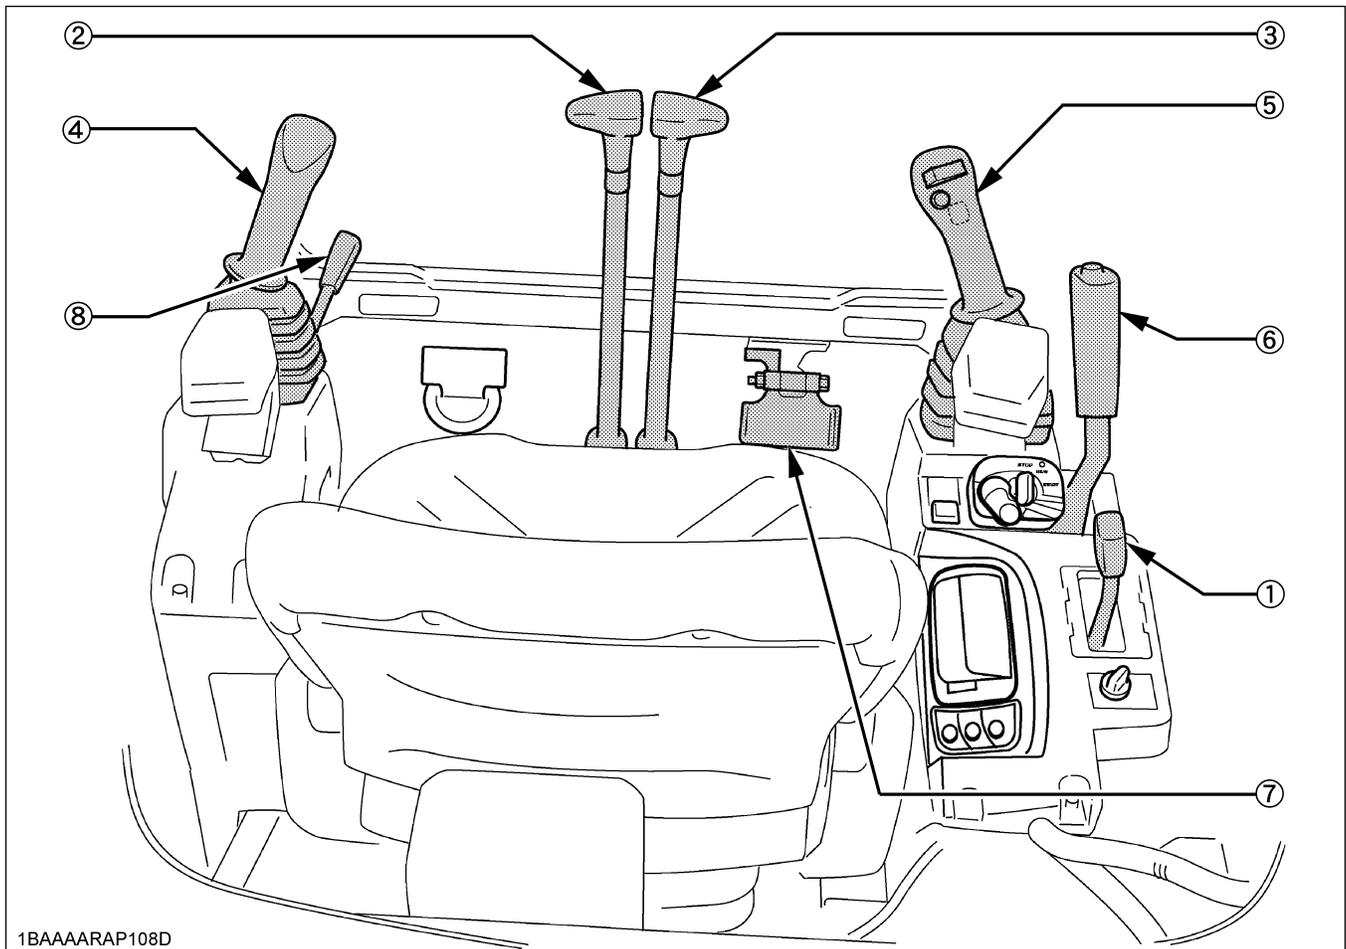

1BAAAARAP108D

DEPICTED CONTENTS

- (1) Throttle lever
- (2) Drive lever (left)
- (3) Drive lever (right)
- (4) Control lever for front attachments (left)
- (5) Control lever for front attachments (right)
- (6) Dozer control lever
- (7) Boom swing pedal
- (8) Lock lever

IMPORTANT :

- When the lock lever pulled up prevents inadvertent machine movement.

CHECKS BEFORE START

DAILY CHECKS

In order to avoid damage, it is important to check the condition of the excavator before starting.



CAUTION

To avoid personal injury:

- Do maintenance work on the excavator only on level ground with the engine off and the pilot control lock lever in the "LOCKED" position.

Checks

Go around the excavator and check for visual damage and wear.

Check coolant level. (See regular check points in the chapter on maintenance.)

Check fuel level.

Check engine oil level.

Check hydraulic fluid level.

Check air filter for clogging.

Check all grease points.

Check all control lamps, indicators, tachometer and hour meter.

Check the light system.

Check the seat belt and the ROPS / OPG (Top Guard Level I) safety device.

Check the condition of the safety and warning labels.

(See "DANGER, WARNING AND CAUTION LABELS" in "SAFE OPERATION".)


OPERATION OF THE ENGINE



CAUTION

To avoid personal injury:

- Read "SAFE OPERATION" at the beginning of this operator's manual.
- Obey the danger, warning and caution labels on the excavator.
- To avoid the danger of exhaust fume poisoning, do not operate the machine in a closed building without proper ventilation.
- Always start the engine from the operator's seat. Do not start the engine while standing next to the excavator. Before starting the engine, sound the horn to get the attention of persons standing nearby.

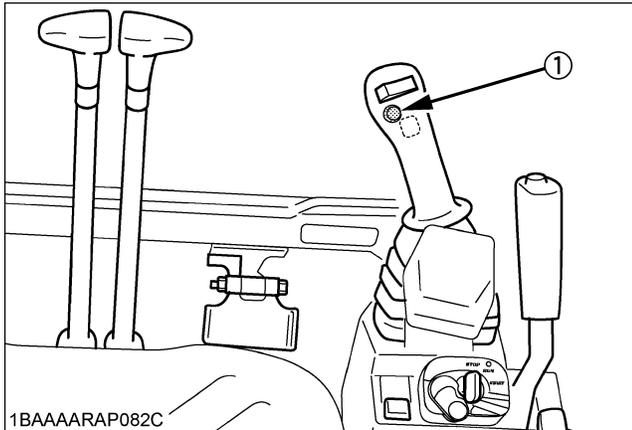

(1) Horn switch

IMPORTANT :

- Do not use starting fluid or ether.
- In order not to overload the battery and starter, avoid engaging the starter more than 10 sec.
- When engine does not start in 10 sec., please wait 20 sec. or more, before attempting to restart.

STARTING THE ENGINE




CAUTION

To avoid personal injury:

- The operator should not depend solely on the warning lamps, but should always conduct the routine checks (see "MAINTENANCE").


Start the engine in the following manner:

1. Before starting the engine, make sure that all control levers are in the neutral positions.

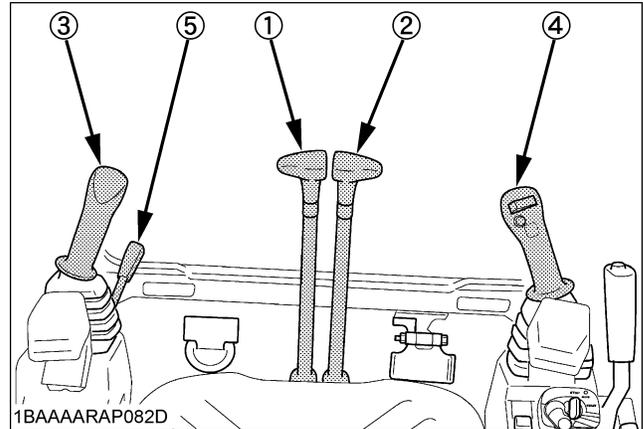

- (1) Drive lever (left)
- (2) Drive lever (right)
- (3) Attachment control lever (left)
- (4) Attachment control lever (right)
- (5) Lock lever

2. Pull the lock levers all the way back. (lock position)
 - Put the throttle lever towards
3. Insert the key into the starter switch and turn it to the position "Run". The glow lamp indicator will light up while the engine is preheated and will go out automatically after preheating is finished.

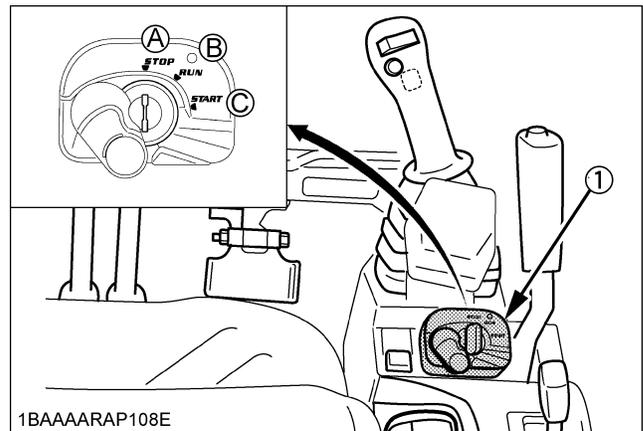



- (1) Starter switch
- (A) "STOP"
- (B) "RUN"
- (C) "START"

4. Turn the key to the position "START" and release after the engine has started.
5. Check if oil lamp and charge lamp have gone out. Should a warning lamp still be lit up, stop the engine then remove the key and check for the cause.

■ Display Selector Switch

Press the display selector switch while the engine is running. The LCD meter display will change from one indication mode to the other.

Change the three-mode display according to your jobs.

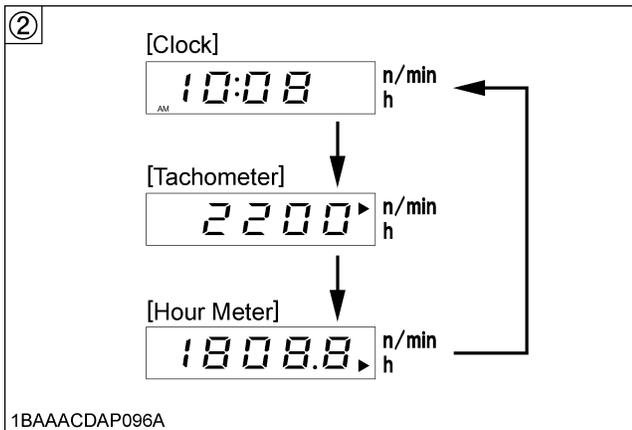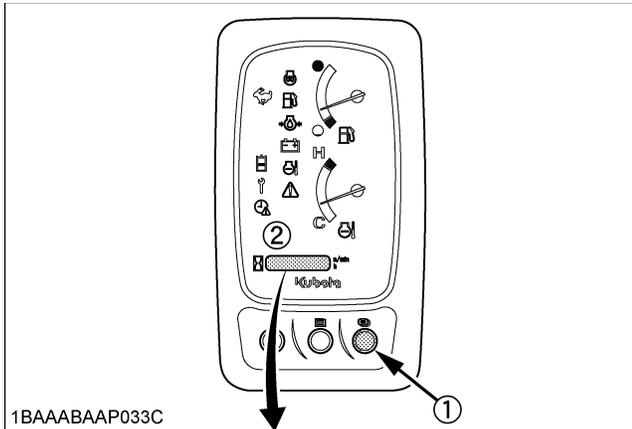

- (1) Display selector switch
- (2) LCD


NOTE :

- With the starter key at the "STOP" position, press the electronic meter's display selector switch, and the LCD shows the hour meter for 10 seconds.

◆ Setting the clock

[Selecting the clock setting mode]


1. Turn the starter key to the position "RUN".

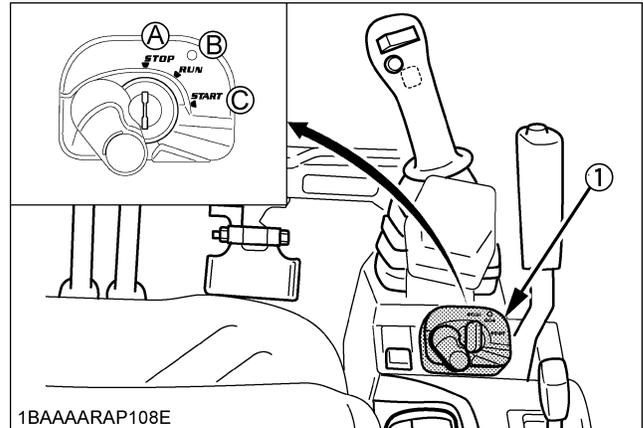

- (1) Starter switch

- (A) "STOP"
- (B) "RUN"
- (C) "START"

2. Press the user setting switch (switch 2 (1)).
3. Select the clock setting mode by pressing the display selector switch (switch 3 (2)) and the clock setting request lamp "⌚" on the instrument panel lights up.

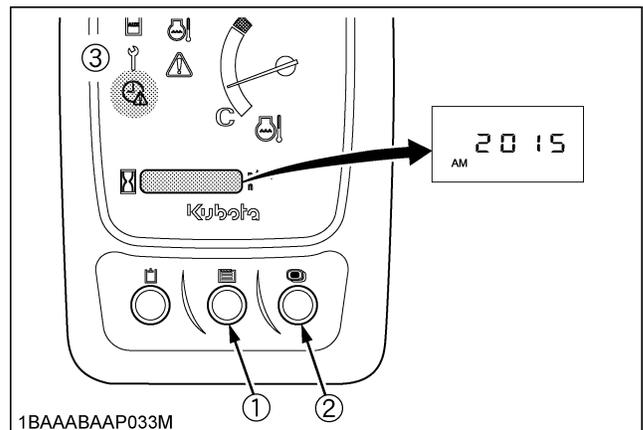


- (1) User setting switch (switch 2)
- (2) Display selector switch (switch 3)
- (3) Clock setting request lamp

NOTE :

- Press switch 3 (2) for a long time and the year, month, day, hour and minute will be selected in this order.

[Setting the year]

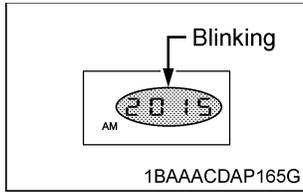


Press switch 2 (1) and the numeric setting will be smaller.
Press switch 3 (2) and the numeric setting will be larger.

Switch 2	Switch 3
2015	2017
↓	↑
2014	2016
↓	↑
2013	2015

NOTE :

- While setting the clock, the clock setting request lamp on the instrument panel is blinking.


[Setting the month]

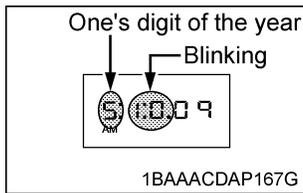

Press switch 2 and the numeric setting will be smaller.
Press switch 3 and the numeric setting will be larger.

Switch 2	Switch 3
10	12
↓	↑
9	11
↓	↑
8	10

[Setting the day]

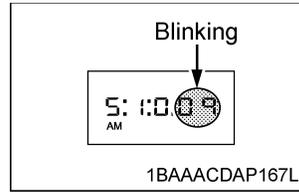


Press switch 2 and the numeric setting will be smaller.
Press switch 3 and the numeric setting will be larger.


Switch 2	Switch 3
09	11
↓	↑
08	10
↓	↑
07	09

[Changing the AM/PM system to the 24-hour system]

Select the AM/PM system or 24-hour system by pressing switch 3.

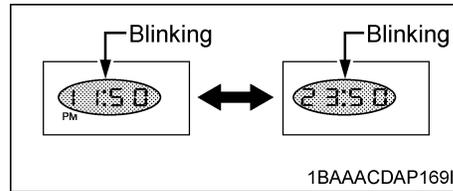


[Setting the hour]

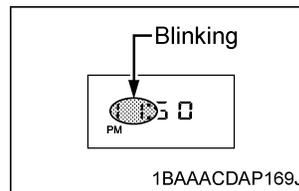

Press switch 2 and the numeric setting will be smaller.
Press switch 3 and the numeric setting will be larger.

Switch 2	Switch 3
11	13 (or 01)
↓	↑
10	12
↓	↑
9	11

[Setting the minute]

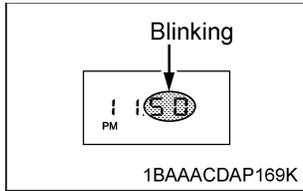

Press switch 2 and the numeric setting will be smaller.
Press switch 3 and the numeric setting will be larger.

Switch 2	Switch 3
50	52
↓	↑
49	51
↓	↑
48	50

If switch 3 is pressed for a long time, the new settings will be made.

NOTE :


- If the battery is disconnected, the clock setting request lamp "Ⓜ" (yellow) will blink for requesting the setting the clock.

■ Battery Charge Lamp

This warning lamp lights up if the charging system fails while the engine is running. When the starter switch is turned "ON" with the engine off, the lamp lights up, and when the engine gets started, the lamp goes out.

NOTE :

- If there is disconnection or failure in the charging system when the key is turned to "RUN", the following symbol will appear.

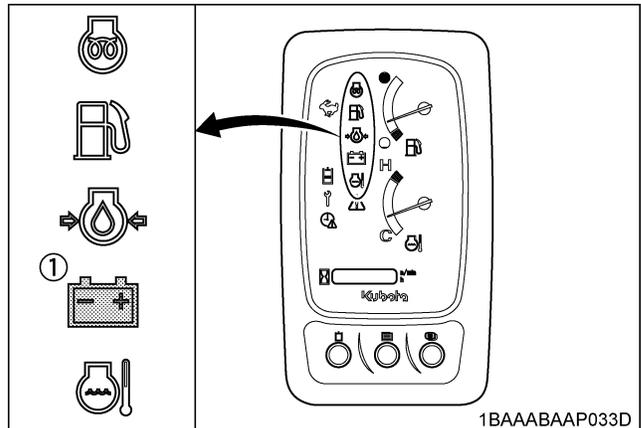


(1) Battery charge lamp

■ Engine Oil Pressure Warning Lamp

The engine oil pressure warning lamp lights up due to failure of the lubricating system with the engine running. When the starter switch is turned "ON" with the engine off, this lamp lights up, and when the engine starts, the lamp goes out. If the lamp stays on with the engine running, stop the engine and check the engine oil level.

NOTE :

- If there is disconnection, failure or breakdown in the lubricating system when the key is turned to "RUN", the following symbol will appear.

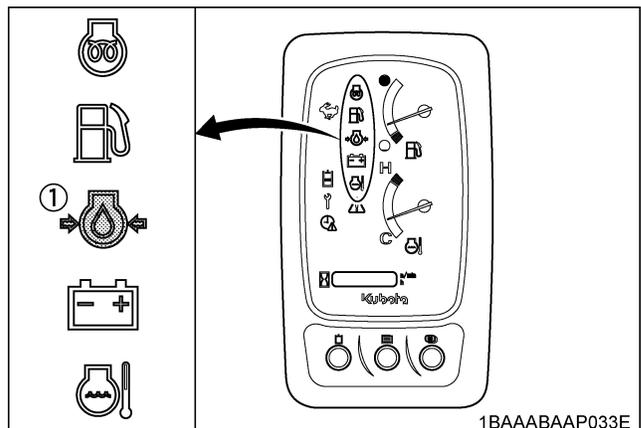


(1) Engine oil pressure warning lamp

■ Glow Lamp

With the starter key at the "RUN" position, the engine's preheat status is indicated.

NOTE :

- When the starter switch is turned to the "RUN" position, the engine will be preheated for a given period of time and the indicator will turn on.
- The above indication appears momentarily when the engine is started, but it does not indicate trouble. (This is because the oil charge sensor output fluctuates when the engine is started.)
- The following symbol appears momentarily as the engine starts. This is not an error.

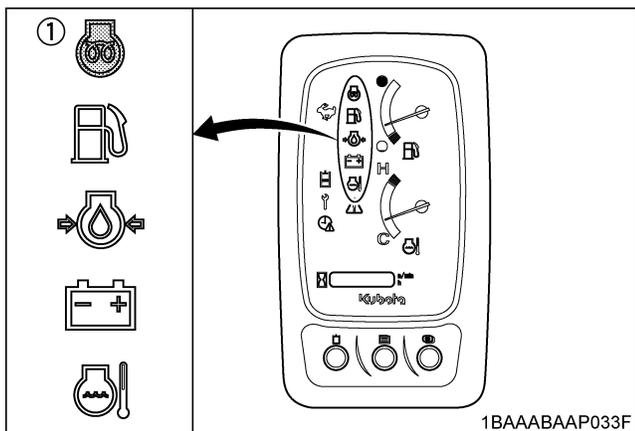

(1) Glow lamp

■ LCD for Normal Operation

◆ Fuel gauge




WARNING

To avoid personal injury or death:

- Before adding fuel, be sure to stop the engine.
- Be sure to keep open flame away from the machine. Otherwise a fire may result.

If the fuel in the tank goes below the prescribed level, the warning lamp will flash.

If this should happen during operation, refuel as soon as possible.

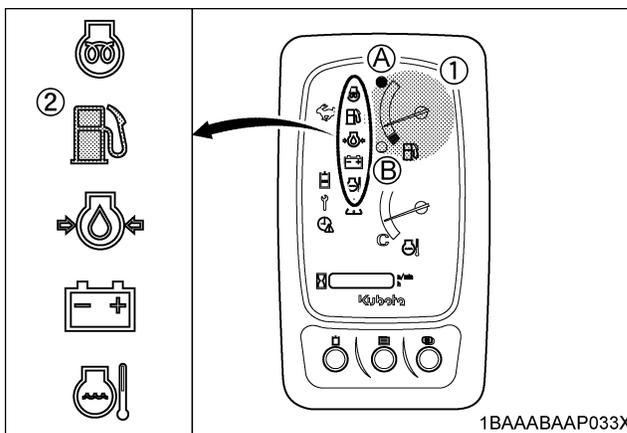

(1) Fuel gauge (A) "FULL"
 (2) Remaining fuel warning lamp (B) "EMPTY"

IMPORTANT :

- If the fuel gauge indicator is near the "○", add fuel as soon as possible. If the indicator is near "○" and the machine operates on a slope, the engine may run out of fuel.

NOTE :

- To open the fuel cap, keep the starter key inserted.

◆ Coolant Temperature Gauge




WARNING

To avoid personal injury or death:

- Do not open the radiator cap during or just after operation. Hot coolant may gush out and scald you. Wait for the coolant to cool down before opening the cap.

With the starter key at the "RUN" position, the cooling water temperature is indicated.

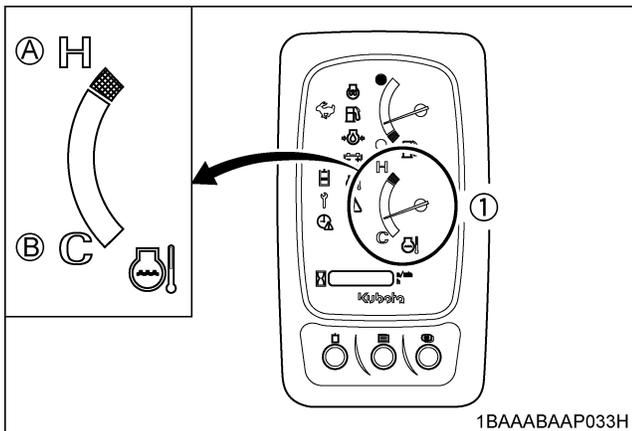

(1) Coolant temperature gauge (A) "HOT" (B) "COOL"

◆ Hour-meter

Indicates the total operating hours of the machine.

How the indicator works

- The meter advances one hour after an hour of operation regardless of the engine rpm.



1BAAACDAP097A

◆ Engine tachometer

Indicates the current rpm of the engine.



1BAAACDAP098A


NOTE :

- The LCD may be illegible when viewed from a certain angle. This is not a display failure.

■ LCD for Warning

◆ Engine oil pressure warning lamp

The engine oil pressure warning lamp lights up due to failure of the lubricating system with the engine running. When the starter key is turned to "RUN" position with the engine off, this engine oil pressure lamp lights up, warning lamp blinks and when the engine starts, the lamps go out. If the lamp stays on with the engine running, stop the engine and check the engine oil level.

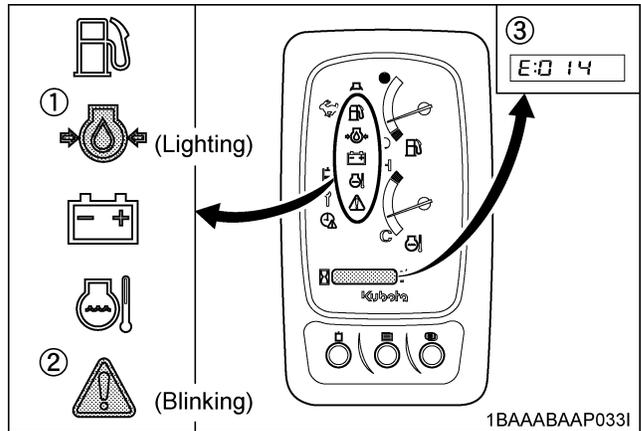


(1) Engine oil pressure lamp
(2) Warning lamp (red)
(3) Error code

◆ Battery charge lamp

This battery charge lamp lights up if the charging system fails with the engine running.

When the starter key is turned to "RUN" position with the engine off, the battery charge lamp lights up, warning lamp blinks and when the engine starts, the lamps go out. If the lamp stays on with the engine running, stop the engine and check the V-belt.

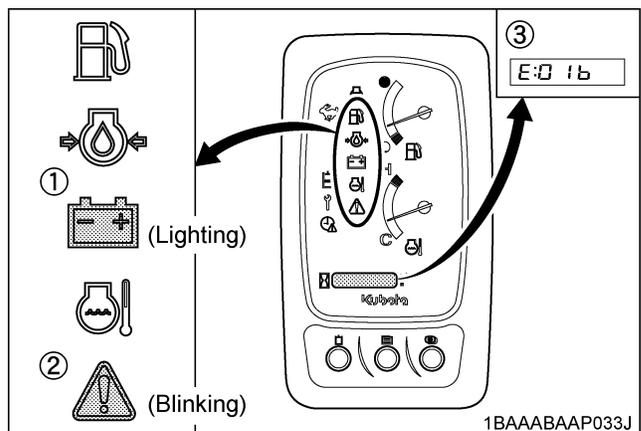

(1) Battery charge lamp
(2) Warning lamp (red)
(3) Error code

■ Warning Lamp


The warning lamp is used to indicate broken wire, short-circuit, fuel shortage and other problems.

IMPORTANT :

- Do not just look at the meter, but also carry out the inspection and correction accordingly.

NOTE :


- The warning lamp starts flashing in red if a serious problem occurs. If the system gets in warning signal, the warning lamp starts flashing in yellow.
- Warnings and errors are displayed and an alarm buzzer beeps.
- Let your KUBOTA dealer inform you of details concerning care and maintenance.

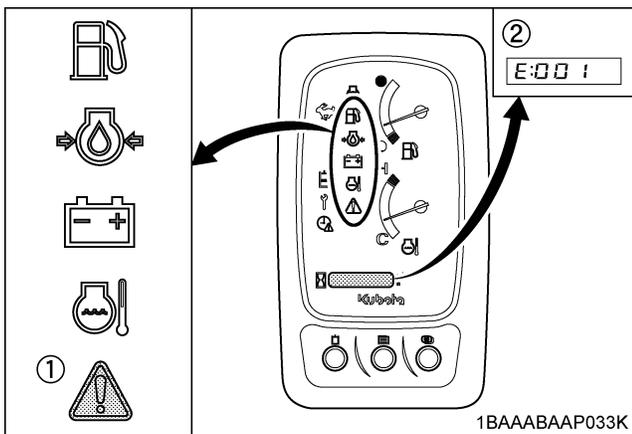

- (1) Warning lamp
- (2) Error code

◆ Overheat warning

If the water temperature has risen too high, the water temperature warning lamp lights up and the following error code (E:015) gets displayed.

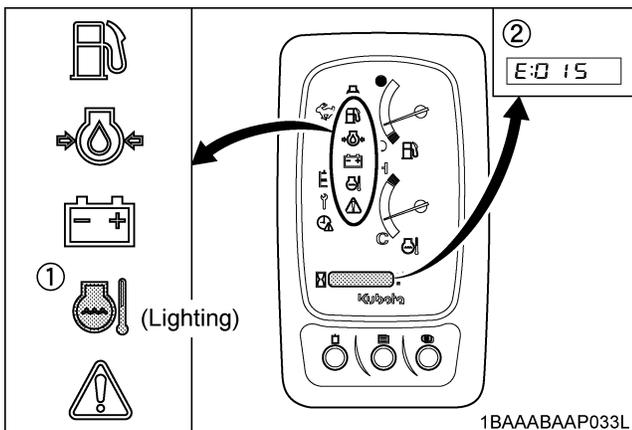

- (1) Water temperature warning lamp
- (2) Error code

With the error code displayed, take the procedure below.

1. Bring the machine to a stop on a safe place. (Get the engine unloaded.)

2. Do not yet stop the engine, but allow it to run idle unloaded for 5 minutes or so. Then stop the engine.
3. Keep yourself away enough from the machine for another 10 minutes or while the engine is emitting steam.
4. Make sure there is no risk of getting burned. Then remove the cause of overheat, referring to "TROUBLESHOOTING". Finally get the engine restarted.

■ Checkpoints after Starting the Engine

After starting the engine, but before starting operation, check the following points:

1. Put the throttle lever down and let the engine idle for approx. five minutes. This allows the engine lubricant to warm up and penetrate every part of the engine.

NOTE :

- This idling is usually called "Warm-up".
2. Once the engine has warmed up, check:
 - the warning lamp "Engine oil pressure" has gone out.
 - the warning lamp "Battery charge" goes out when engine speed is increased.
 - the color of the exhaust is normal and no abnormal noises or vibrations are heard or felt.
 - no fluid is leaking from pipes or hoses.

◆ Should any following conditions occur, stop the engine immediately.

- The engine rpm's increases or decreases suddenly.
- Sudden abnormal noises are heard.
- Exhaust is black.
- Warning lamp for engine oil lights up during operation.

IMPORTANT :

- In these cases, the excavator must be checked and serviced by your local the KUBOTA dealer.

STARTING THE ENGINE UNDER COLD CONDITIONS



CAUTION

To avoid personal injury:

- Make sure that the pilot control lock lever is in the "LOCKED" position during warm up.

Start the engine in the following manner;

1. Pull the pilot control lock levers all the way back (lock position).
2. Turn the starter switch to the position "RUN" (glow position) and keep until the indicator lamp has gone out.
3. Move the starter switch to the position "START" to crank and start engine.
4. Release the starter switch after the engine has started; it will automatically return to the position "RUN".

IMPORTANT :

- Let the engine warm up after start-up for approx. 10 minutes under no load conditions. If the hydraulic fluid temperature is too low, the operation will be affected. Do not operate the excavator under full load until the engine has sufficiently warmed up.

STOPPING THE ENGINE



WARNING

To avoid personal injury or death:

- Do not keep the bucket or dozer in the lifted position, as a person could accidentally touch the levers and cause serious accidents.

1. After returning the engine to idle, turn the key to "STOP".
2. Remove the key.

■ Engine Stop Lever





CAUTION

To avoid personal injury:

- Keep hands away from rotating parts.

The engine stops when the key is turned off. If the engine does not stop, open the engine hood and push the stop lever back and hold it until the engine stops.

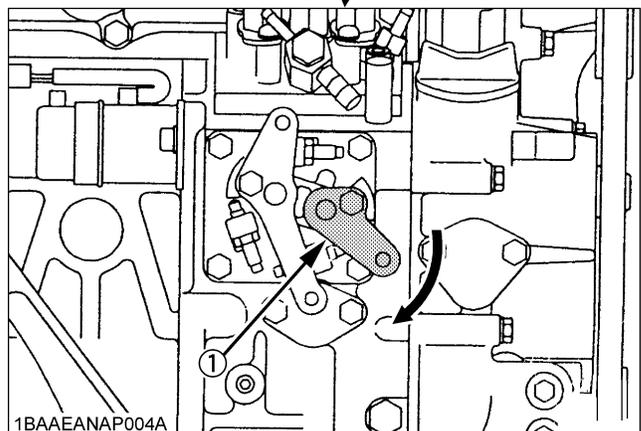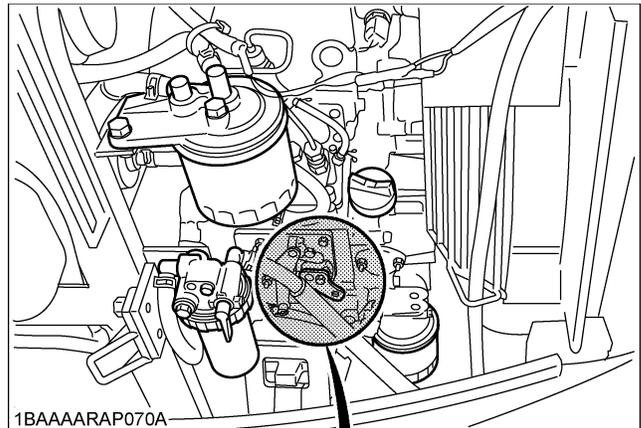

(1) Stop lever

STARTING WITH AN AUXILIARY BATTERY



CAUTION


To avoid personal injury:

- Battery gases can explode. Do not smoke and keep sparks and flames away.
- Do not start the engine with an auxiliary battery if excavator battery is frozen.
- Do not connect the black jumper cable to the negative (-) terminal of the excavator battery.

■ Observe Following Guidelines when Starting with an Auxiliary Battery

1. Bring the helping machine with the same battery voltage as near as possible to the excavator. THE MACHINES MUST NOT COME IN CONTACT WITH EACH OTHER.
2. Bring the levers and pedal of both vehicles in the neutral position and put the lock lever in the "Lock" position.
3. Wear eye protection and rubber gloves.
4. Ensure the vent caps are securely in place (if equipped).
5. Cover the battery opening with a cloth. Make sure that the cloth does not touch the battery terminals.
6. Connect the terminal of the red jumper cable with the plus (+) terminal of the low battery and connect the other end of the cable to the plus (+) terminal of the auxiliary battery.
7. Connect the black negative cable to the minus (-) terminal of the auxiliary battery.
8. Connect the other end of the black cable (coming from the auxiliary battery) to the excavator frame as far away as possible from the low battery.
9. Start the engine of the helping machine and let it run for a while. Start the excavator with the low battery.
10. Disconnect the jumper cables in the reverse sequence (Steps 8, 7, 6).

11. Remove the cloth and replace the vent caps.

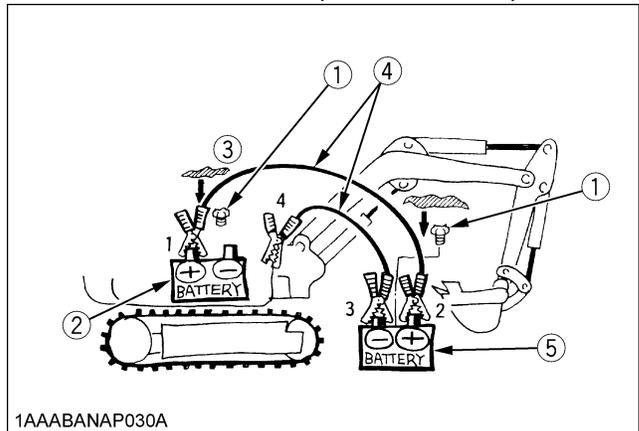

- (1) Lay a damp rag over the vent caps
- (2) Low battery
- (3) Put a cloth over the battery openings
- (4) Jumper cables
- (5) Auxiliary battery

IMPORTANT :

- This excavator has a negative (-) ground 12 Volt starting system.
- Only use the same voltage when using an auxiliary battery.
- Using a higher voltage will cause serious damage to the electrical system. When using an auxiliary battery, only the compatible (same) voltage is permissible.

EXCAVATOR OPERATION

RUNNING-IN OF THE NEW EXCAVATOR

The operation and care of the new excavator influences its life span. Your new excavator has been carefully checked and tested before leaving the factory. In spite of this, all movable components must run-in during the first 50 work hours. Do not work with full rpm's and full loads during this period. It is most important to run-in your excavator properly in order to achieve its full performance and longevity. During the running-in, the following points should be adhered to in all cases.

■ Do not Work with Full Engine Rpm's or Full Loads during the First 50 Working Hours

- Let the engine warm up sufficiently in the cold season.
- Do not let the engine rev-up more than necessary.

■ Oil Change in the Run-in Stage

The lubrication oil plays a specific and important role during the run-in phase of the excavator. The numerous movable parts are not yet run-in, so many fine metal particles are generated and cause damage and shorten the life of many components. Pay attention to the oil-change intervals and complete them sooner than later. See "REGULAR CHECKS AND MAINTENANCE WORK" section for more details on the oil-change intervals.


■ Seat Belt



WARNING

To avoid personal injury or death:

- Always use the seat belt with a ROPS/OPG (Top Guard Level I) protection structure. Adjust the seat to the optimal position and buckle up.

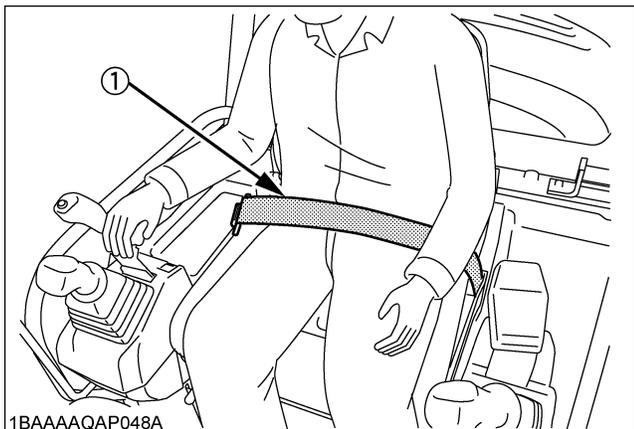

1BAAAQAP048A

(1) Seat belt

STARTING

1. Adjusting the Operator's Position.


■ Operator's Seat



CAUTION

To avoid personal injury:

- Make sure that the seat is completely secured after each adjustment.
- Do not allow any person other than the driver to ride on the excavator.

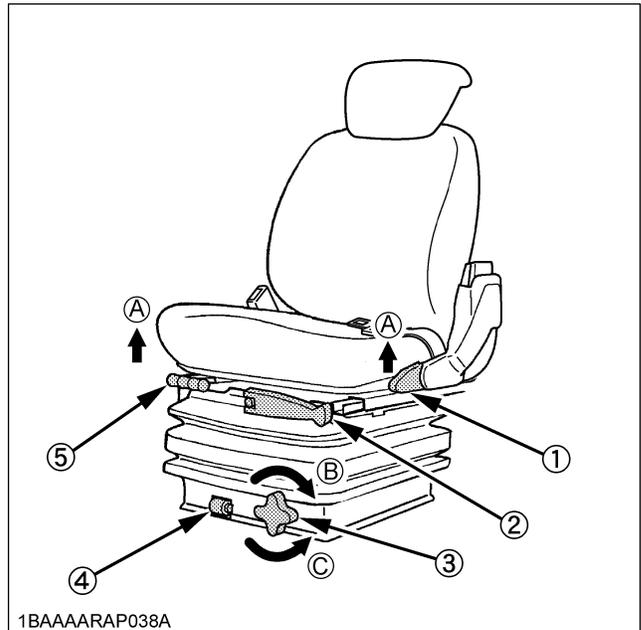

1BAAAARAP038A

- | | |
|---------------------------------|---------------------------|
| (1) Backrest tilt adjust knob | (A) "UNLOCK" |
| (2) Weight adjust lever | (B) "TO INCREASE TENSION" |
| (3) Height adjust knob | (C) "TO DECREASE TENSION" |
| (4) Weight and height indicator | |
| (5) Travel adjust lever | |

◆ Travel adjustment

Pull the travel adjust lever and slide the seat backward or forward, as required. The seat will lock in position when the lever is released.

◆ Weight adjustment

Turn the weight adjust lever to achieve the optimum suspension setting.

◆ Tilt adjustment

Pull the backrest tilt adjust lever and move the backrest to the desired angle.

◆ **Height adjustment**

Pull up with your hands the seat pan in front of seat belt to the desired height of the three available positions.

Once it has reached the highest level, it will return to the lowest level.

2. **After starting the engine, bring the pilot control lock lever into the "UNLOCK" position to use drive lever or attachment control lever.**

■ **Lock Lever**




CAUTION

To avoid personal injury:

- To avoid injuries, check safety features all around the excavator.

NOTE :

- With the lever lock pulled down, the engine fails to start.

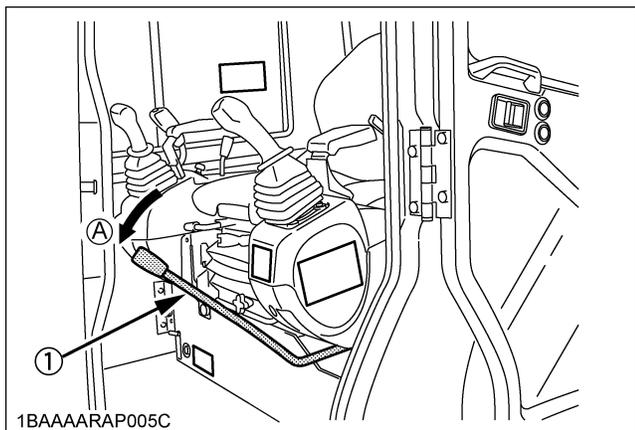


1BAAAARAP005C

(1) Lock lever (Unload lever) (A) "Unlock"

■ **Working Light Switch**

When the starter switch is in position "RUN", the light(s) can be switched on by pressing the switch.

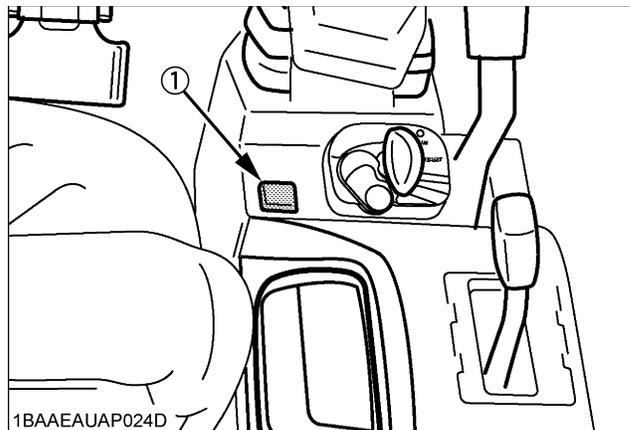

1BAAEUAP024D

(1) Working light switch

◆ **Night operation**



CAUTION

To avoid personal injury:

- Visibility is reduced in darkness, therefore the work light alone may not be enough. In which case, prepare additional stationary artificial lighting, observe safety rules as well as special regulations for night work.

■ **Travel Buzzer (Option)**

When you handle the drive levers, the buzzer sounds at the same time or before the excavator starts to run.


DRIVING




WARNING

To avoid personal injury or death:

- Before starting the engine, make sure that no one is near the excavator.
- Before operating the excavator, check the track direction. (Front idler and dozer blade to the front of the excavator).

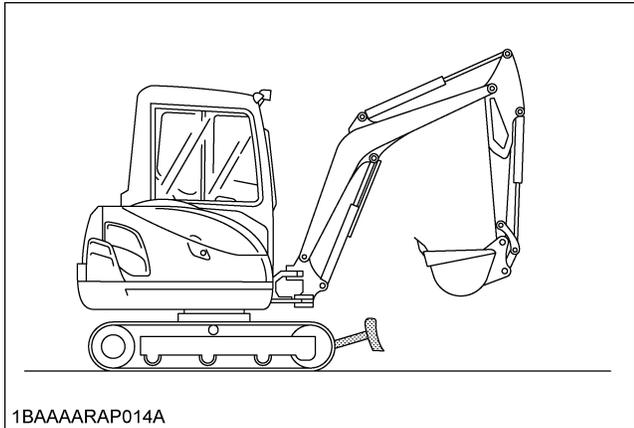


- Use extra caution when traveling across a slope or working sideways on a slope.

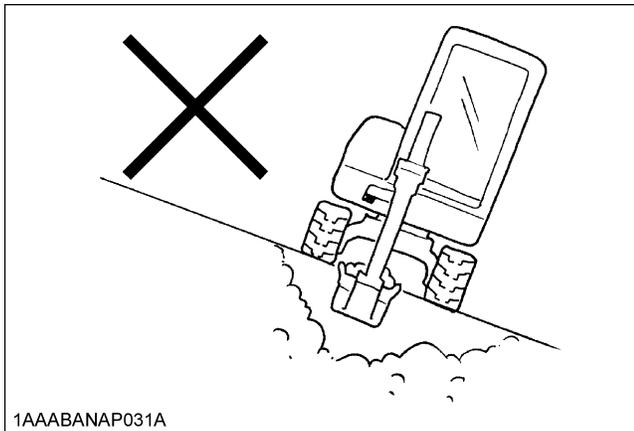


- Take precautions against tipping over. Stay away from steep slopes and embankments. Do not swing the bucket downhill. Lower the dozer blade when digging. Keep the bucket as low as possible while driving uphill. Turn slowly on slopes (at reduced speed). Do not place the excavator near the edges of trenches and banks, as the earth can give away due to the weight of the excavator.
ALLOWABLE CLIMBING ANGLE : 36 % (20 deg.)
ALLOWABLE ANGLE CROSS : 27 % (15 deg.)


- Recommended technique for working on a slope.

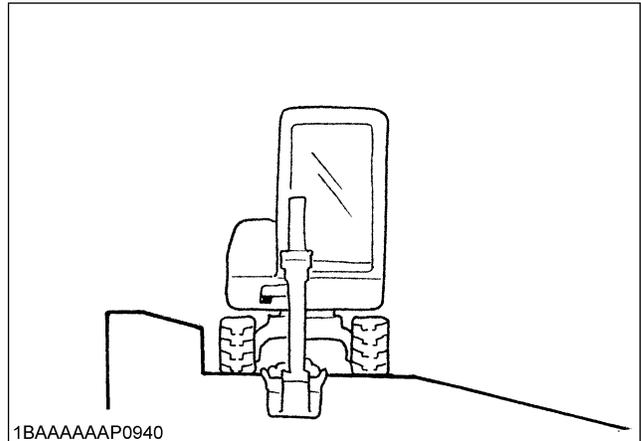

1. Adjust the engine speed from idling to an intermediate speed.
2. Unlock the lock levers and pull in the bucket and hold the bucket about 20 to 40 cm (8 to 16 in.) above the ground.

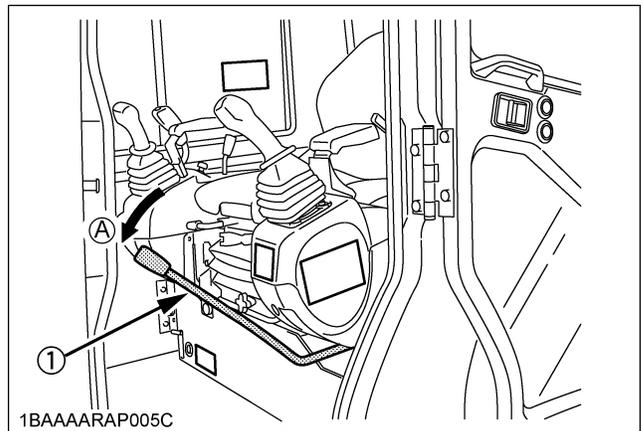


(1) Lock lever (A) "Unlock"

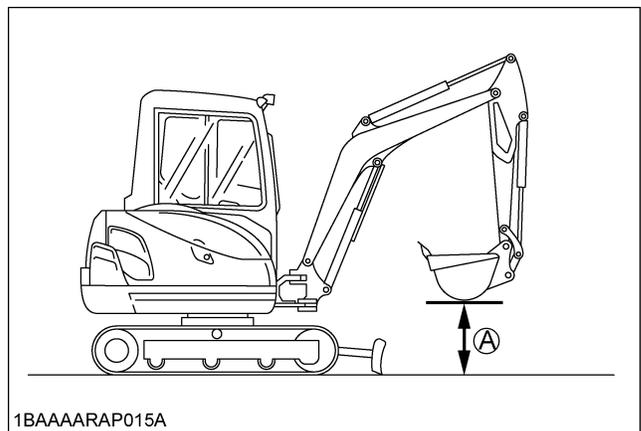

(A) 20 to 40 cm (8 to 16 in.)

3. Activate the dozer control lever to raise the dozer.

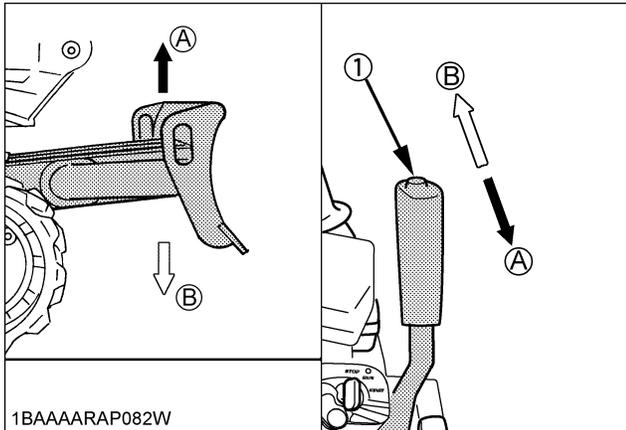

1BAAAAAP082W

- (1) Dozer control lever
- (2) Dozer

- (A) "Raise"
- (B) "Lower"

■ Drive Levers (Right, Left)




WARNING

To avoid personal injury or death:

- If the swing frame has been turn 180 deg, i.e. the dozer in relation to the operator's seat is "behind", then the travel direction is opposite to the drive direction of the levers (when activating the drive lever forward, the machine, in relation to the operator's seat, will move backward).

Pushing the drive lever forwards, moves the excavator forwards, and vice-versa. The front of the excavator is the side where the dozer is located; the drive sprocket is in the rear of the excavator.

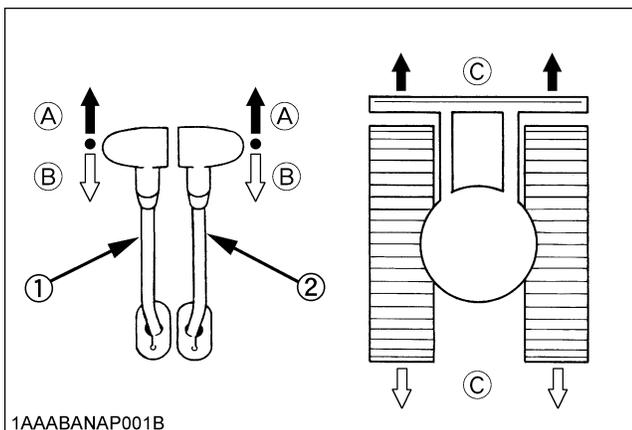

1AAABANAP001B

- (1) Drive lever (left)
- (2) Drive lever (right)


- (A) "Forward"
- (B) "Backward"
- (C) "Straight"

■ Travel Speed Switch


Travel speed will increase when this switch is pushed down.

Switching the dual travel speed:

1. Press the travel speed switch. The buzzer beeps and the travel speed changes from first speed to second. The  symbol lights up.
2. Press the travel speed switch again, and the buzzer beeps and the travel speed changes from second speed to first. The  symbol light goes out.

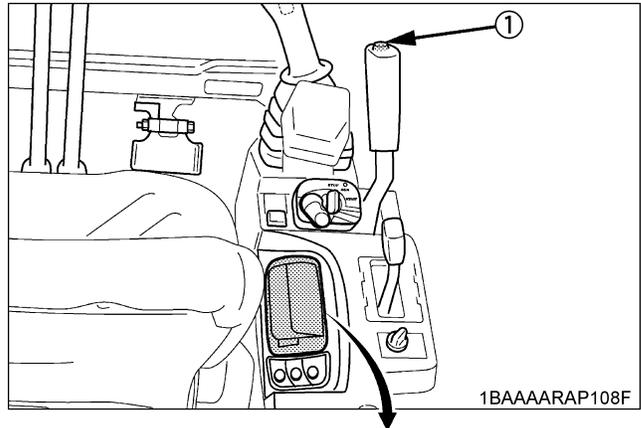

1BAAAAAP108F

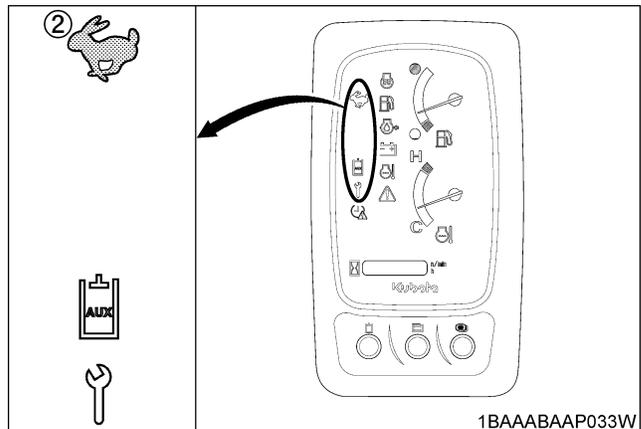

1BAAAAP033W


- (1) Travel speed switch
- (2) Speed indicator lamp

NOTE :

- When activating the travel speed switch, it must be pushed down completely.
- Each time the travel speed switch is pressed, the travel speed is switched between first and second.

IMPORTANT :

- Do not activate the travel speed switch when there is increased drive resistance (e.g. driving on inclines or on uneven grounds).
- If the tracks are clogged with sand or gravel while working on soft ground, lift up both tracks with the help of the boom, arm, dozer blade and bucket and let the track rotate to remove the sand and gravel.

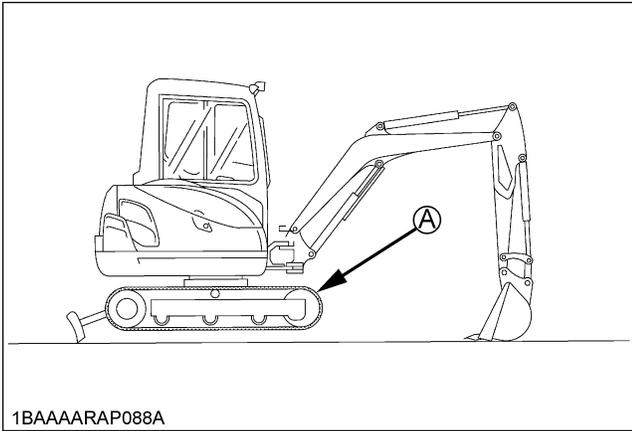

(A) "Rotate to remove sand and gravel"



DANGER

To avoid serious injury or death:

- Do not work under the machine in this condition.

TURNS



CAUTION

To avoid personal injury:

- Do not change direction on steep slopes, or the excavator could tip over.
- Before changing direction, beware of people in the work area.


Pivot Turn

NOTE :

- Movement as illustrated is done with the dozer blade in front of the operator.


Change of Direction while Travelling

1. While travelling forward, bring the left drive lever into the neutral position; the excavator will turn in the direction of the arrow of the illustration below.

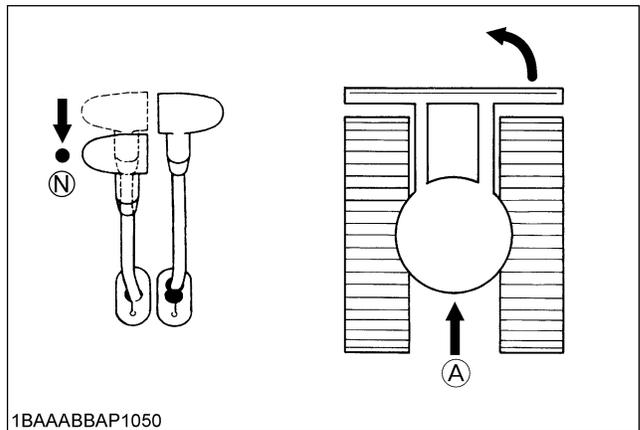

(A) "Travelling forward" (N) "Neutral position"


2. While travelling backward, bring the left drive lever into the neutral position; the excavator will turn in the direction of the arrow of the illustration below.

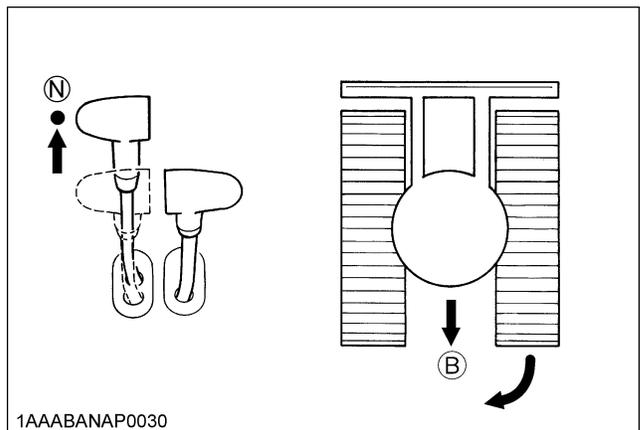


(B) "Travelling backward" (N) "Neutral position"

◆ **Change of Direction while Stationary**

1. Push the left drive lever forward; the excavator will turn in the direction of the arrow of the illustration below.

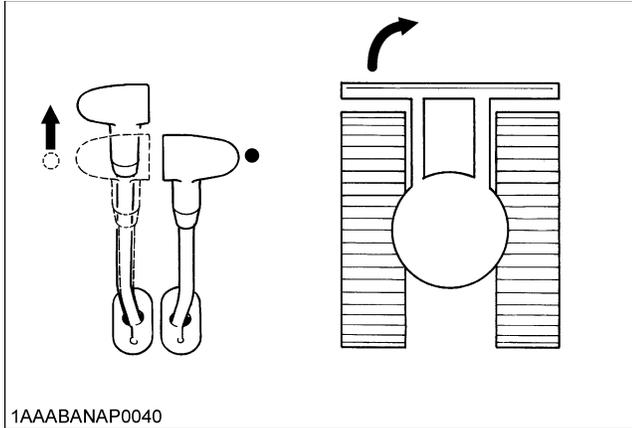


2. Pull the left drive lever backward; the excavator will turn in the direction of the arrow of the illustration below.

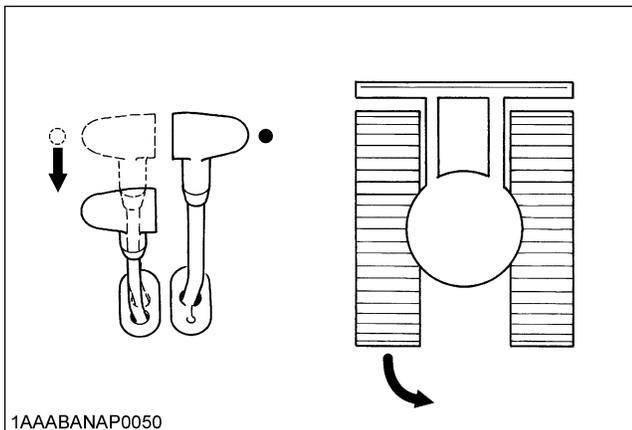


■ **Spin Turn**

When both drive levers are activated in the opposite directions, both tracks will rotate with the same speed but in opposite directions. The center of rotation is the center of the excavator.

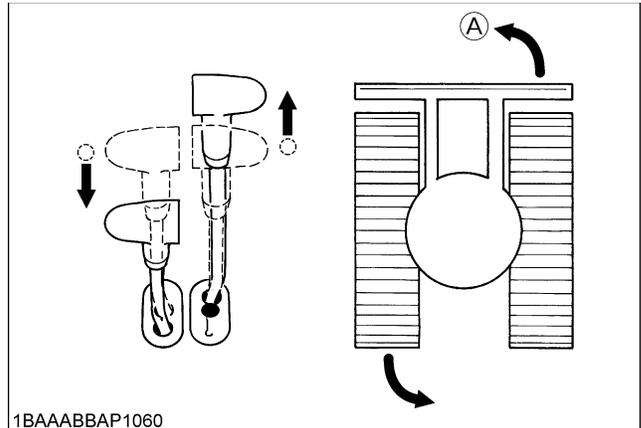

(A) "Left spin turn"

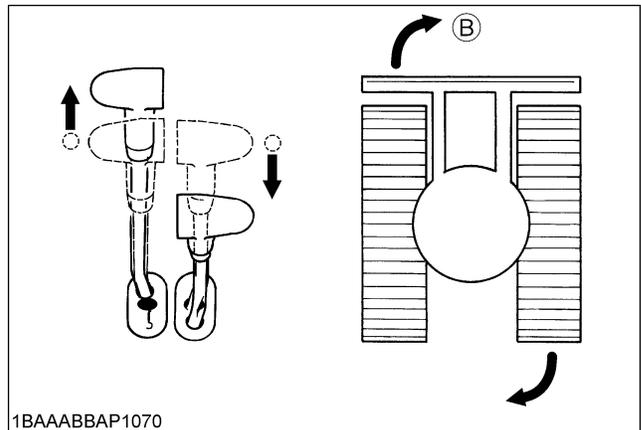

(A) "Right spin turn"

UP AND DOWNHILL DRIVING




CAUTION

To avoid personal injury:

- When travelling up or down a slope, use extra caution and follow the instructions below.


While traveling uphill, keep the lower edge of the bucket approx. 20 to 40 cm (8 to 16 in.) above the ground. Although the KUBOTA excavator will not slip easily because of the tracks, it is safer to let the bucket slide over the ground while traveling downhill. Always choose slow speed for uphill and downhill traveling.

[UPHILL TRAVELING]

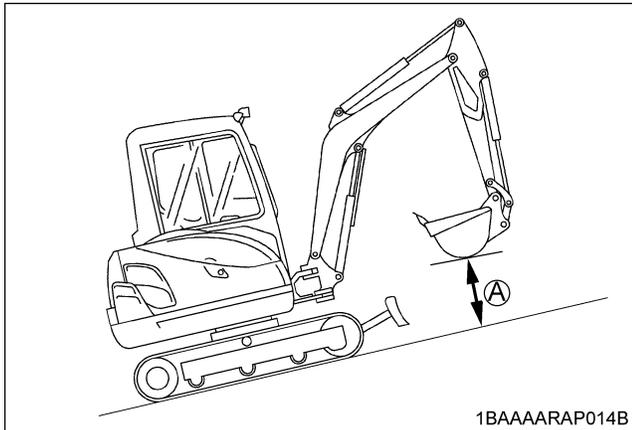


(A) 20 to 40 cm (8 to 16 in.)

[DOWNHILL TRAVELING]

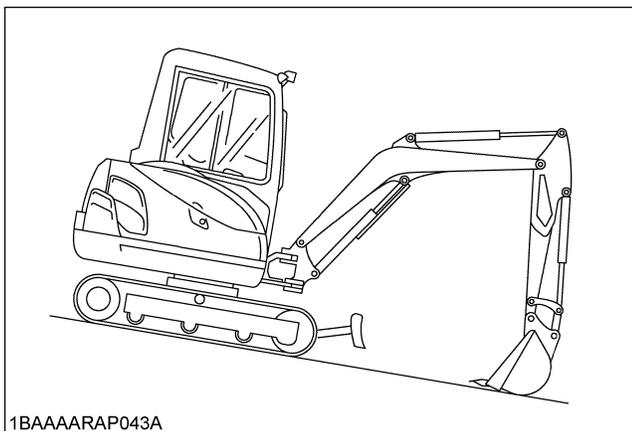

OPERATION OF THE DOZER

1. To raise the dozer, set Dozer and Track selection lever in position of Dozer and pull back the control lever. Pushing the control lever forwards, lowers the dozer.

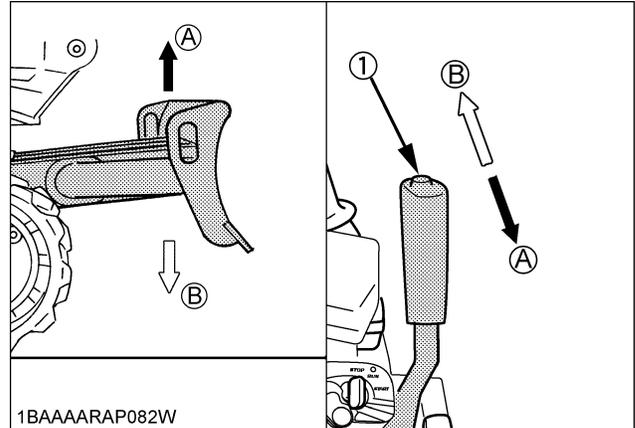

(1) Dozer control lever

(A) "Raise"
(B) "Lower"

2. While undertaking earth moving work, control both drive levers with the left hand and the dozer control lever with the right hand.

TWO PATTERN SELECTION SYSTEM (TPSS)




CAUTION

To avoid personal injury:


- Study control lever pattern A and pattern B. Then choose the one which is most familiar
- Position the pattern selector lever (located on the right side of operator's seat) in either the lower position (pattern A) or the upper position (pattern B).
- Engage the lock lever to prevent accidental pattern change.
- Familiarize yourself with the pattern selected by operating slowly.

■ Pattern Change

1. Loosen the lever lock knob (2) and slide it to the direction (a), and position the pattern selector lever (1) to the desired position.
2. Slide the lever lock knob (2) to the direction (b) and tighten it.

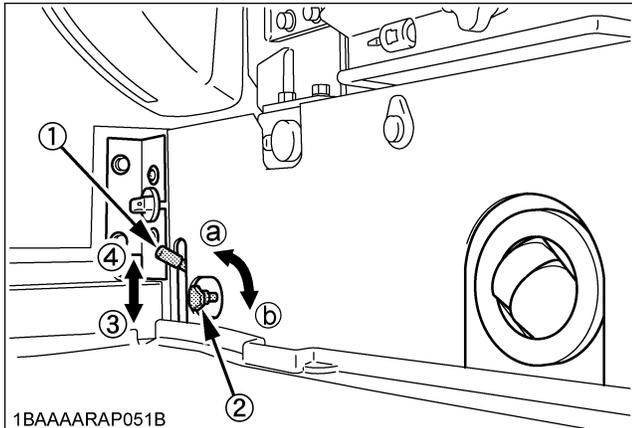

- (1) Pattern selector lever
(Two Pattern Selection System: TPSS)
- (2) Lever lock knob
- (3) Pattern A
- (4) Pattern B

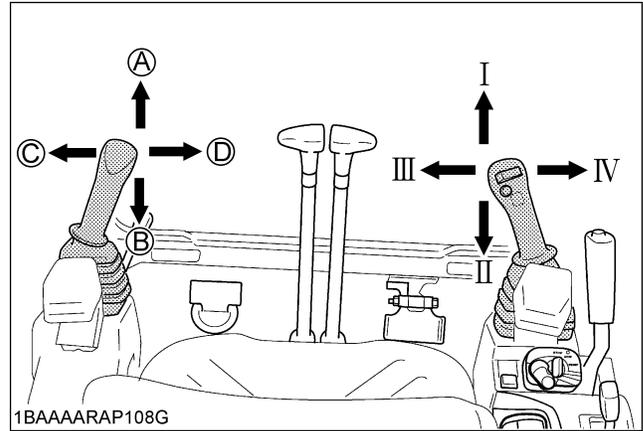



Lever Position		Pattern A	Pattern B
Attachment Control Lever (Left)	A	Boom down	Arm up
	B	Boom up	Arm crowd
	C	Swing left	Swing left
	D	Swing right	Swing right
Attachment Control Lever (Right)	I	Arm up	Boom down
	II	Arm crowd	Boom up
	III	Bucket crowd	Bucket crowd
	IV	Bucket dump	Bucket dump

OPERATION OF THE BOOM

To raise the boom, pull the attachment control lever back. The boom is equipped with a cushion cylinder which helps prevent excavated material in the bucket from falling out. Low hydraulic oil temperature, (e.g. after starting the engine in cold weather) the cushioning function will be effected for a short period of time (approx. 3 to 5 seconds). This condition results from the viscosity of the hydraulic oil and is not a sign of malfunction.

The cushion cylinder will operate normally as the oil warms up.

To lower the boom, push the attachment control lever forward.

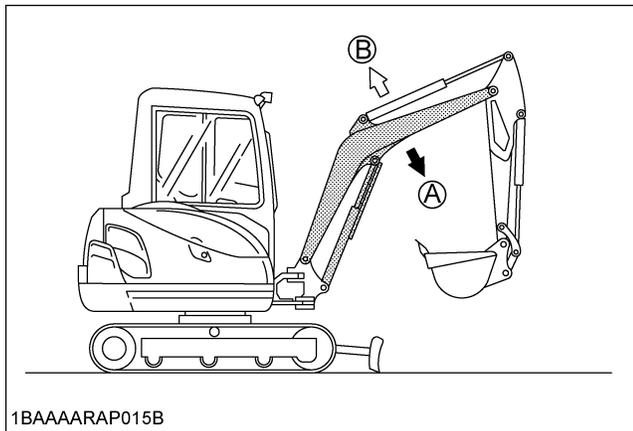
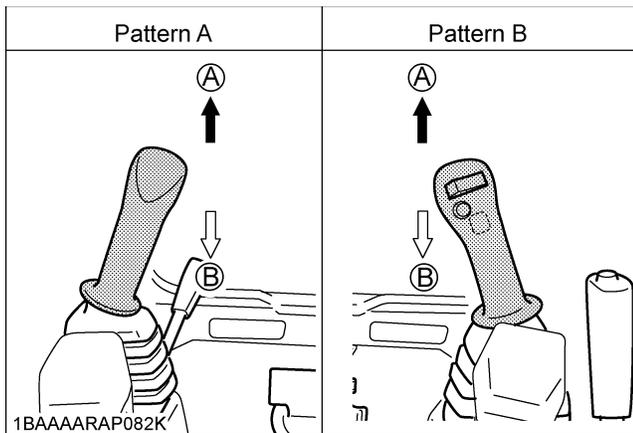


OPERATION OF THE ARM

Pull back the attachment control lever and the arm will be pulled in. To move the arm out, push the control lever towards the front.

NOTE :

- When pulling in the arm, the movement may stop for a short moment when the arm is in its vertical position. This is caused by the combined load of the arm and bucket moving the cylinder piston away from the hydraulic flow causing a delay in the cylinder action, until the flow catches up with cylinder piston. This is a characteristic of the hydraulic system and is no sign of a malfunction.

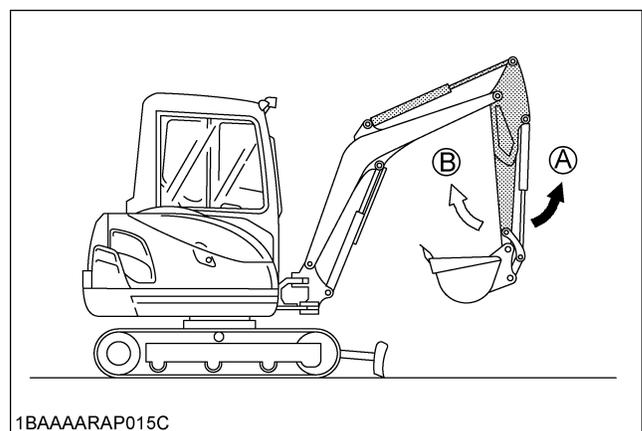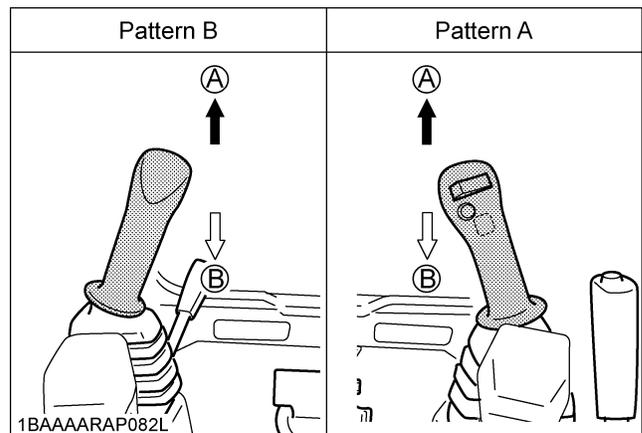


IMPORTANT :

- When lowering the boom, make sure that it does not hit the dozer and that the bucket teeth do not touch the dozer.

OPERATION OF THE BUCKET

To dig using the bucket, move the right attachment control lever from the neutral position leftward. Moving the control lever rightward moves the bucket outwards and empties its contents.

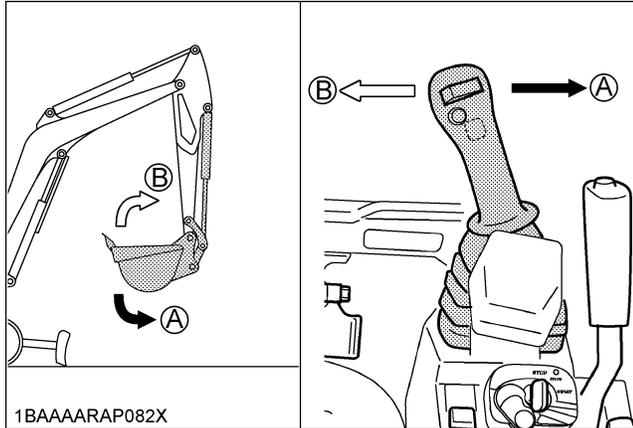

UNIT SWING AND BOOM SWING OPERATION


CAUTION

To avoid personal injury:

- When working in groups, always let the others know what you are going to do before you do it.
- Keep others away from the machine working area.
- Be sure to lock the boom swing pedal when the boom swing function is not used.


Unit Swing Operation

1. Move the control lever to the left and the upper structure will turn to the left.
2. Move the control lever to the right and the upper structure will turn to the right.

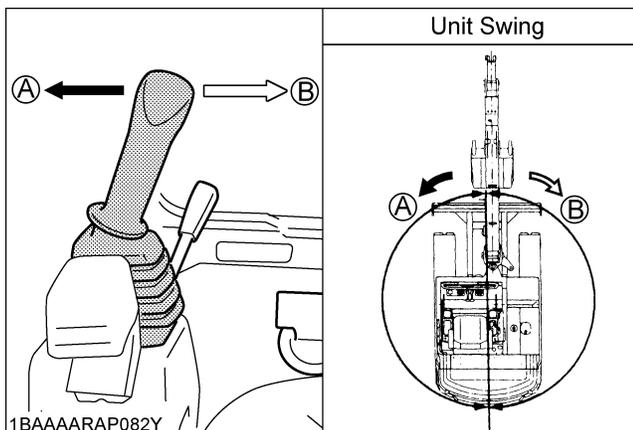

Boom Swing Operation

1. Flip the pedal lock up to unlock the pedal.
2. Step on the left side of the pedal to swing the boom to the left.
3. Step on the right side of the pedal to swing the boom to the right.

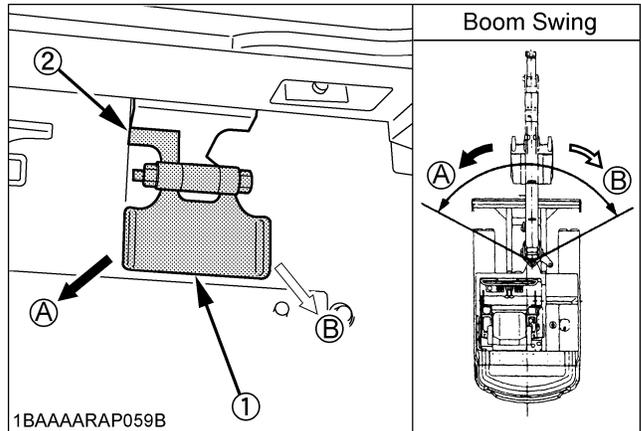

- (1) Boom swing pedal
- (2) Pedal lock

IMPORTANT :


- Do not operate the left attachment control lever abruptly from right to left (or vice versa). Because the low of inertia cause high impact load on the swing gear and the swing motor, shortening the life of the excavator.

AUXILIARY PORT OPERATION

The auxiliary port enable switch is used to operate hydraulic attachment such as hammers.


■ Selecting the Action Modes

The AUX port has been factory-set to four action modes. You can select one of them. Up to six action modes can be preset. Each time the AUX port enable switch (switch 1) is pressed, the action modes change over one after another. And the icon and action mode number on the screen change accordingly.

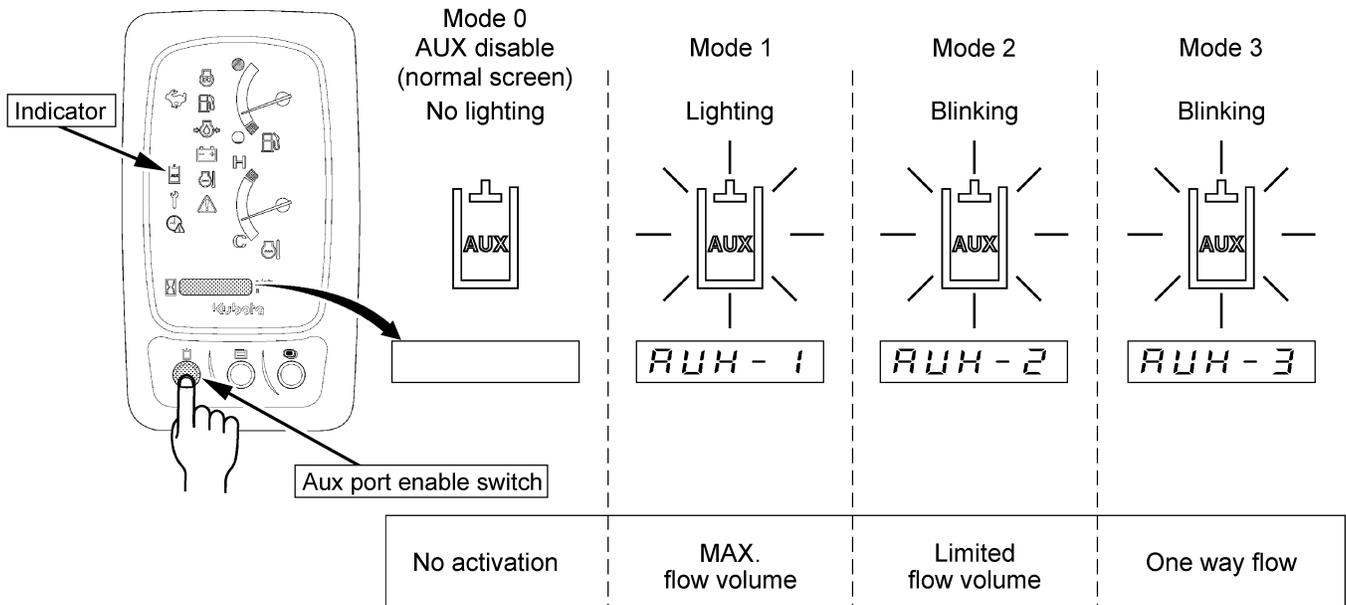

● Checking the setting volume

Pressing the switch 3 when the action mode number "AUX-1" is displayed on the screen, the screen will vary per second.

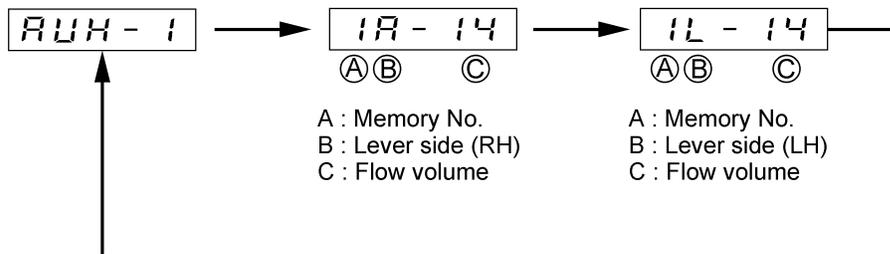


1BAAABAAP0350

NOTE :

- When turning the starter key to the "RUN" position, the action mode will return to the last action mode used.


■AUX Port Handling Procedure

1. Turn the starter key to the "RUN" position.
Let the engine warm up after start-up for approx. 10 minutes under no load conditions.

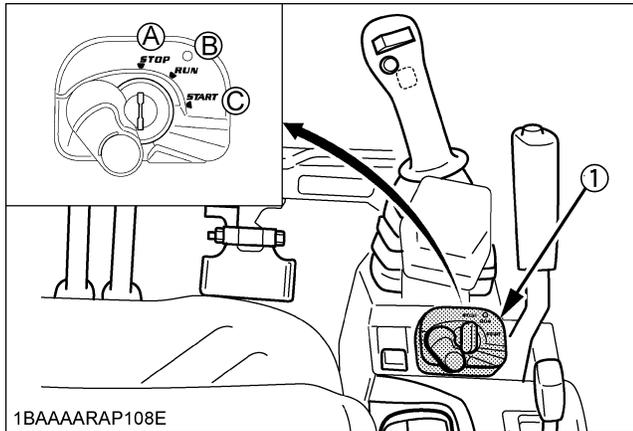

- (1) Starter switch
- (A) "STOP"
(B) "RUN"
(C) "START"

2. Push the AUX port enable switch (switch 1).

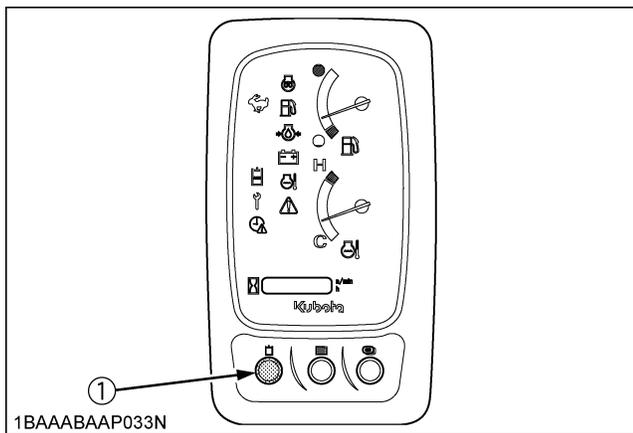


- (1) AUX port enable switch (Switch 1)

NOTE :


- If the pilot control lock lever is not at the "LOCK" position, up this lever to the "LOCK" position first and then press the AUX port enable switch (switch 1).

3. Lower the pilot control lock lever (UNLOCK).

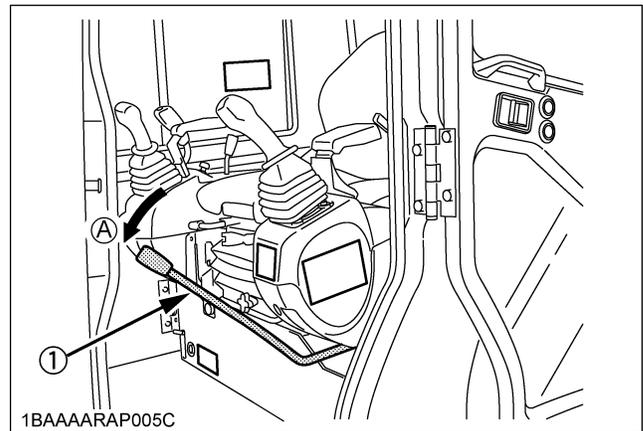

- (1) Pilot control lock lever (A) "UNLOCK"


4. Move the AUX proportional switch of the right attachment control lever to the right to send oil to the AUX port 1.
Move the AUX proportional switch to the left to send oil to the AUX port 2.

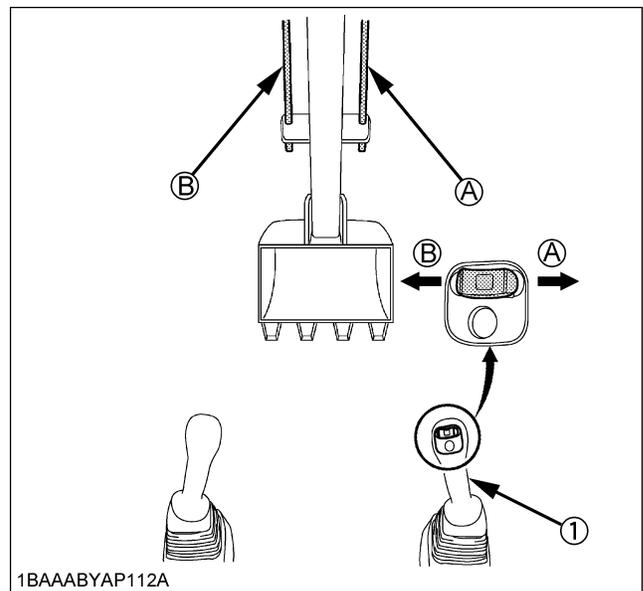

- (1) Attachment control lever (right) (A) "Port 1"
(B) "Port 2"

◆ **One way hold**

Press the one way hold switch of the right attachment control lever, and the oil continues to flow through the AUX port 2. Press this switch again or move the AUX port knob, and the oil flow is interrupted.

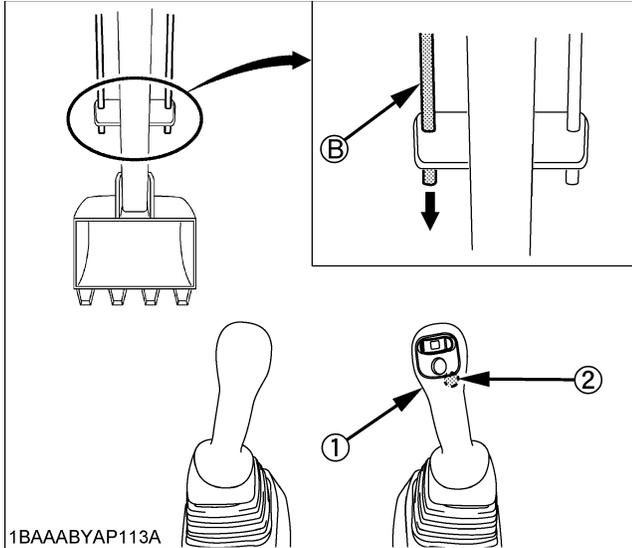


(1) Attachment control lever (right) (2) One way hold switch (right) (B) "AUX port 2"

■ **Setting the Maximum Flow Volume**

The AUX port has been factory-set to three action modes 1, 2 and 3. The action modes 4 and 5 can also be preset.


◆ **How to make the settings**

1. With the starter key at the "RUN" position, press the user setting switch (switch 2).

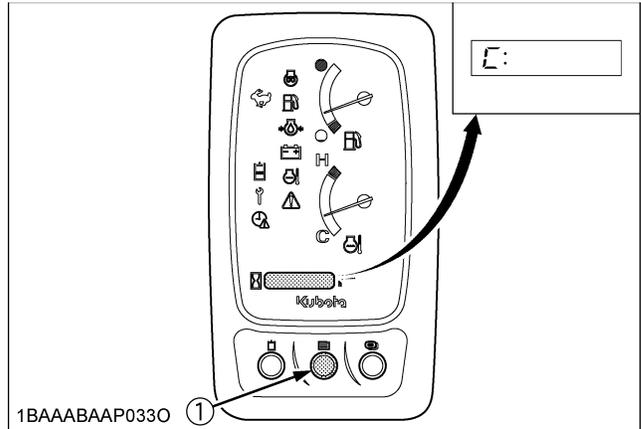


(1) User setting switch (switch 2)

2. Choose the AUX setting mode by pressing the switch 3.

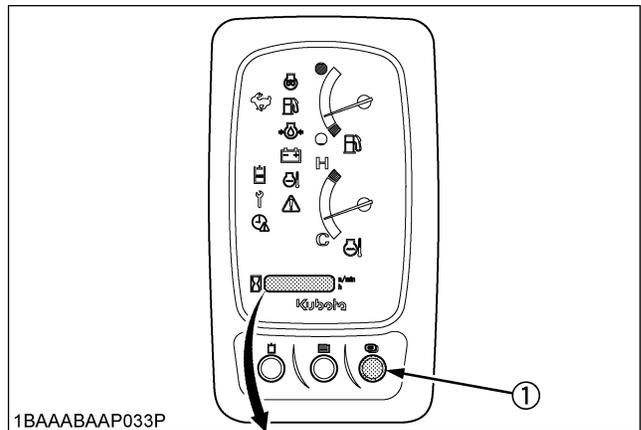



1BAAABAAP033P

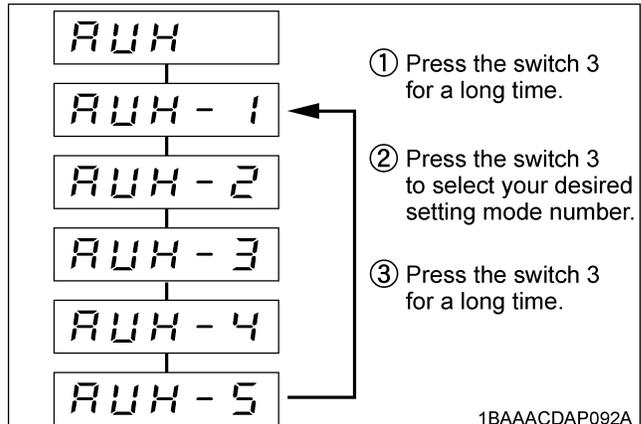

1BAAACDAP092A


(1) Switch 3

- After setting the mode, press the switch 2 to increase the volume or press the switch 3 to decrease the volume.

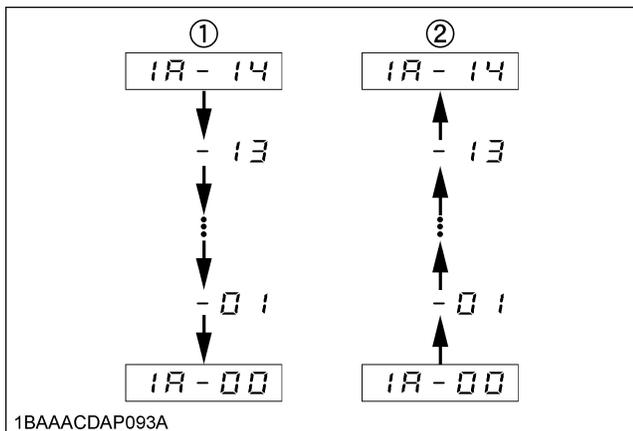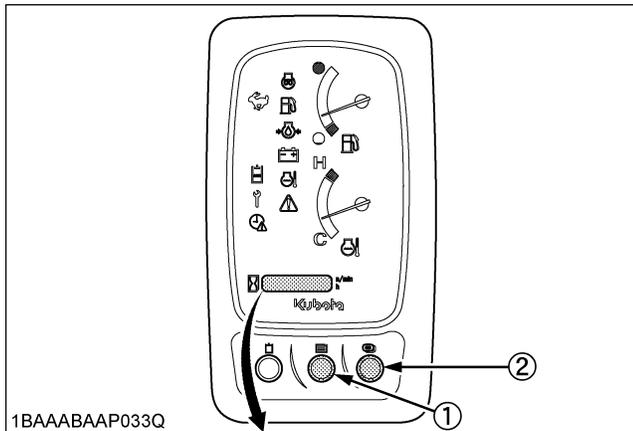

- Switch 2 (to increase the volume)
- Switch 3 (to decrease the volume)

- Press the switch 3 for a long time to go to the next port and make the settings for this port.

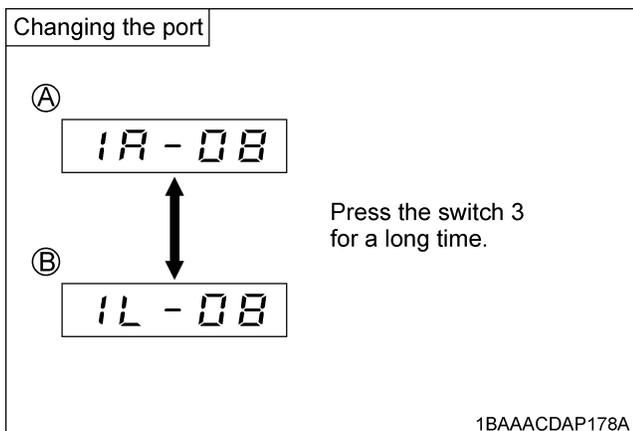

- Press the switch 2 for a long time to go back to step 2 to make settings for the next action mode. When all the settings of all the action modes have been made, press the switch 3 for a long time to return to step 1 and press the switch 2 to return to the normal screen.


NOTE :

- In an action mode each volumes are set to zero, such action mode is skipped even if selected.

Take an example of the following settings:

- Action mode 1 : 1R-14, 1L-14
- Action mode 2 : 1R-14, 1L-00
- Action mode 3 : 1R-00, 1L-00
- Action mode 4 : 1R-00, 1L-00
- Action mode 5 : 1R-00, 1L-00

Each time the AUX port enable switch (switch 1) is pressed, the display changes from action mode 1, action mode 2 to normal mode in this order.

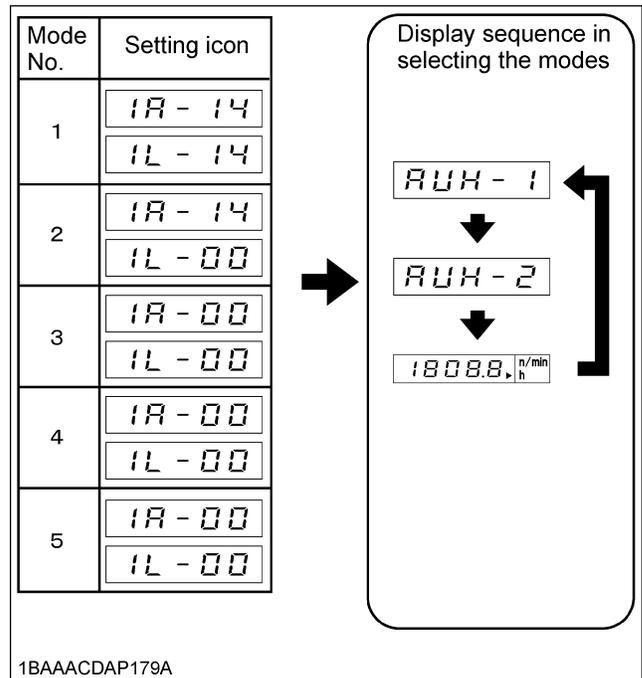

◆ **AUX port MAX. Flow volume**

MAX. flow volume (Theoretical L (US gal)/min)	50.6 (13.4)
MAX. pressure MPa (kgf/cm ²) [psi]	20.6 (210) [2987]


IMPORTANT :

- When the AUX port is not used for a long period, dirt particles can settle in the lower part of the AUX port lines. When the plugs on the AUX port lines are removed to connect attachments, drain approx. 100 cc (3.4 oz) of oil before making connections.

NOTE :

- Suppose that the same attachment is mounted on another machine. Even if the same limit setting is made, the same speed cannot be achieved. Make an optimum setting on each machine.
- The AUX port speed fluctuates by getting an attachment relieved at the limited flow volume. Determine the limit level with combined operations of attachments in mind.


AUX port (RH and LH) maximum flow volume setting (flow chart)

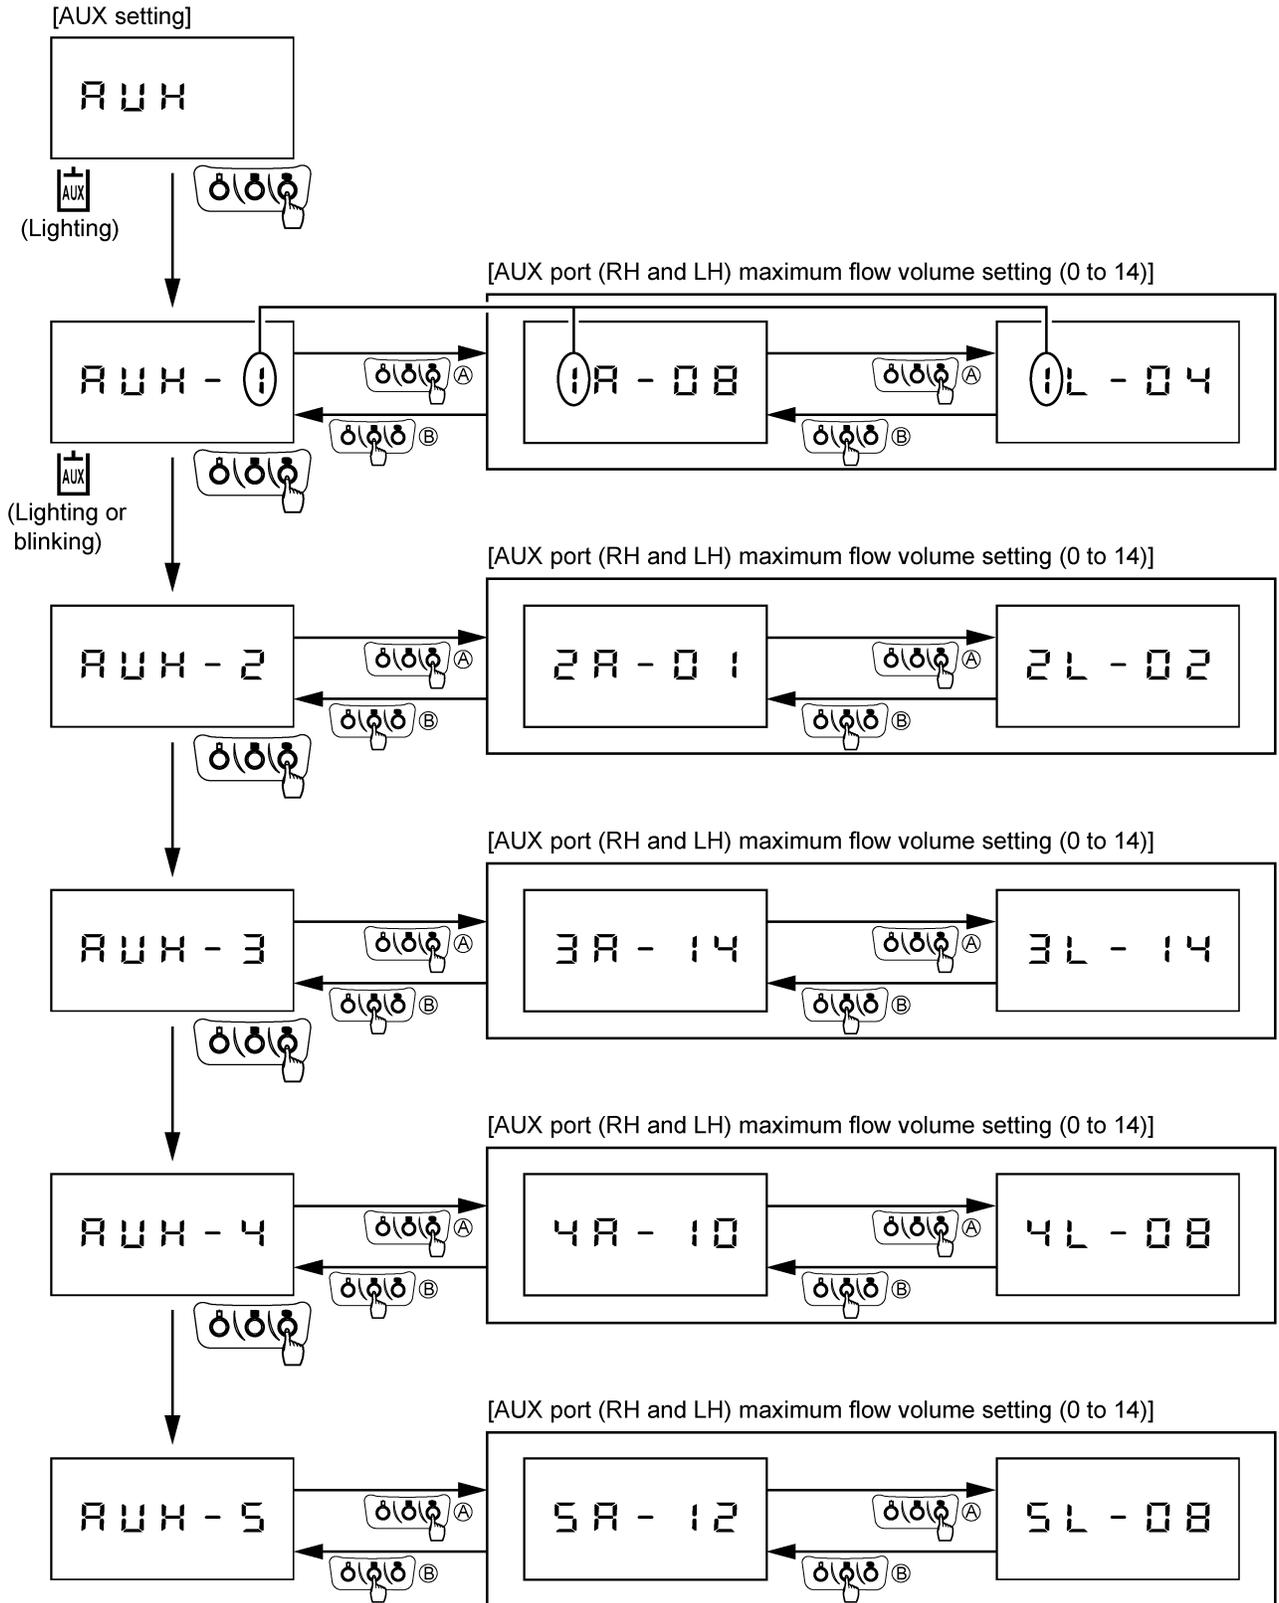

(A) "Push the switch 3 for a long time."
 (B) "Push the switch 2 for a long time."

HOW TO RELEASE PRESSURE TRAPPED IN THE HYDRAULIC SYSTEM

1. Lower the attachments and the blade down to the ground.
2. Turn the key to "STOP" position and shut off the engine.
3. After stopping the engine, turn the key to "RUN" position.
4. Set the pilot control lock lever to "UNLOCK" position.

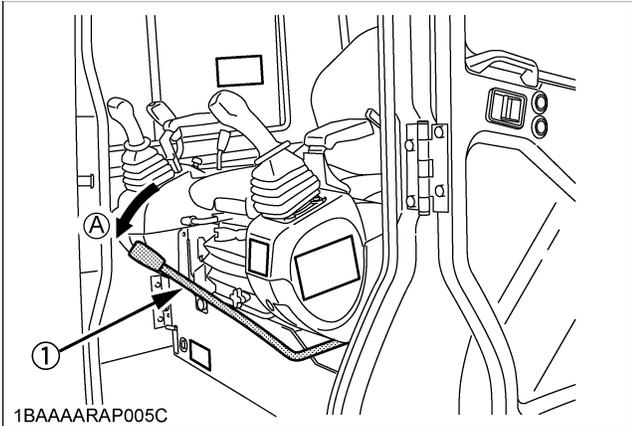


(1) Pilot control lock lever (A) "UNLOCK"

5. Move the operating lever to release pressure in the hydraulic system.

[How to release pressure trapped in the AUX port]


1. Perform the above operations of 1 to 4.
2. Turn "ON" the AUX port enable switch.

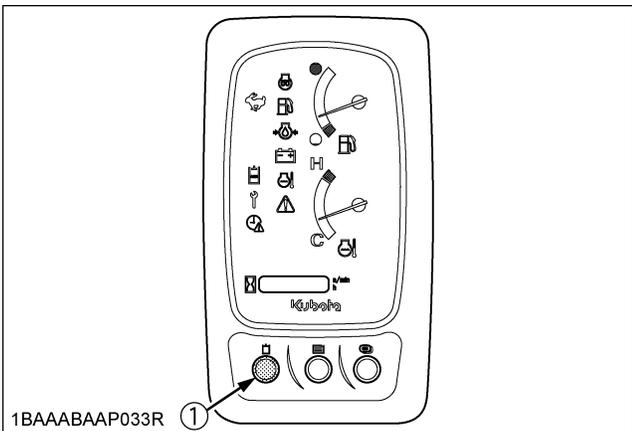

(1) AUX port enable switch (Switch 1)

3. Make sure that the flow volume in all the AUX ports is not minimized.


If the pressure is removed after minimizing the flow volume in the AUX port, release pressure is not removed completely and the hose coupler may be unable to connect and disconnect.

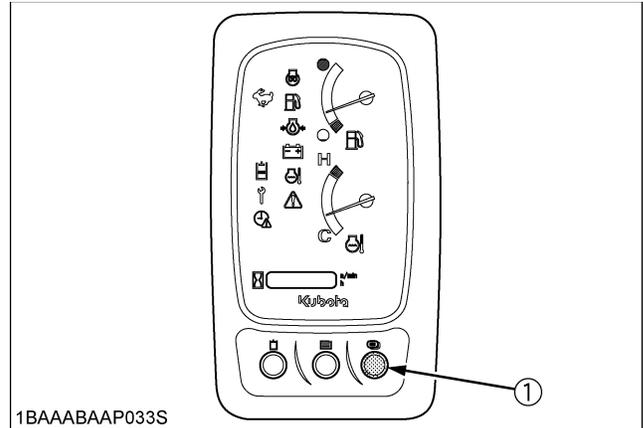

(1) Switch 3

● Checking the setting volume

Pressing the switch 3 when the action mode number "AUX-1" is displayed on the screen, the screen will vary second.

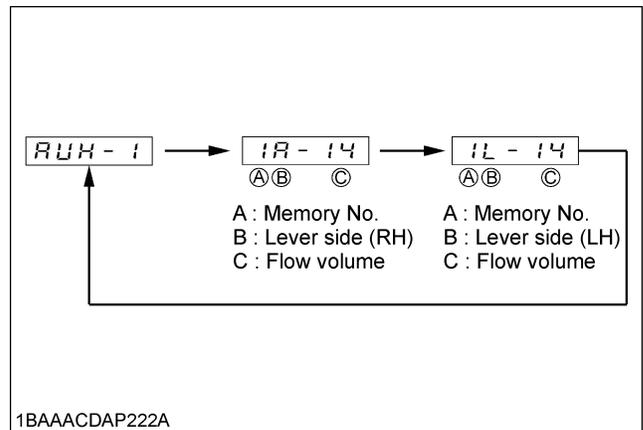

4. Move the AUX port knob mounted to the operating lever to the right and left to release pressure in the AUX port.

NOTE :

- There are two types of machine, one has the AUX port knobs mounted to the right operating lever, the other has the foot pedal.
Make choice according to the type of machine.


PARKING ON A SLOPE



WARNING

To avoid personal injury or death:

- When the excavator is parked or left unattended on a slope, be sure to put the tip of the bucket into the ground and place all control levers in neutral position, then brace the tracks with chocks.

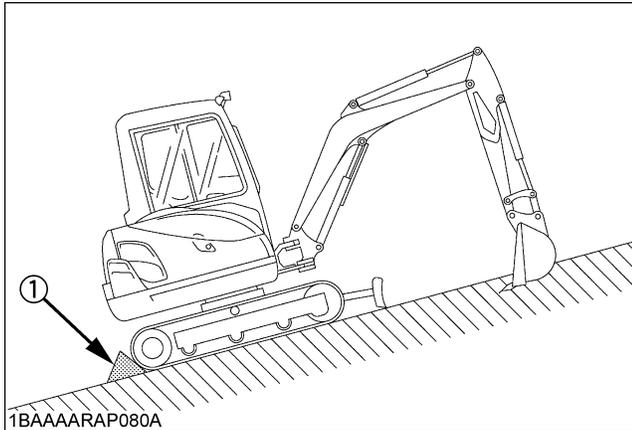

(1) Chock

IMPORTANT INFORMATION ON EXCAVATOR OPERATION

- Do not try to crush concrete or boulders using side swings with the bucket. Also avoid using side sweeps of the bucket to move earth piles.
- Under all circumstances avoid the following operations:
 - Excavation using the gravitational impact of the machine.
 - Compacting of gravel or soil using the dropping action of the bucket.
 - Excavation using the traveling power of the machine.
- Do not try to drop or shake off soil adhering to the bucket in the manner given in the points below. This can cause damage to the machine. Adhering soil can be shaken off when the bucket is being emptied by moving the bucket out to the maximum stroke of the cylinder. Should this not suffice, swing out the arm as far as possible and operate the bucket back and forth.
- Do not hit the dozer with the boom cylinder! Make sure that the boom cylinder does not hit the dozer when doing deep excavation. If necessary swing around so that the dozer is in the back of the machine.
- Pay attention when pulling in the bucket! When pulling in the bucket (for driving or transportation) avoid hitting the dozer.

- Avoid collisions! When moving the excavator, pay attention that the dozer does not collide with obstructions such as boulders, etc. Such collisions shorten the life of the dozer and the cylinder substantially.
- Support the machine correctly! When stabilizing the machine with the dozer, lower the dozer to engage the full width on the ground.
- If the water or mud level reaches higher than the top of the tracks, the swivel bearing, swivel motor gear and ring gear may be exposed to mud, water and other foreign objects. The excavator must be properly pressure washed after each use.
 - Thoroughly clean the area around the swivel bearing, swivel motor gear and ring gear to remove foreign objects.
 - Inspect the swivel motor oil sump (if equipped) for water contamination. If water is present, refer to operator's manual for lubricant replacement procedure.
 - Refer to operator's manual for proper swivel bearing, swivel motor gear and ring gear lubrication procedures.
 - Reinstall any protective covering if removed earlier.

PUTTING THE FRONT PARTS TO THE GROUND



CAUTION

To avoid personal injury:

- Do not get near the machine when the front part is not on the ground.

Within about a minute after stopping the engine, the front parts can be put to the ground without restarting the engine.

Unlock the lock lever for attachment control while having turned on the starter switch and push the control lever (right).


TRANSPORTING THE EXCAVATOR ON A VEHICLE



DANGER

To avoid personal injury or death:

- No directional changes should be made when the excavator is on the ramp. Should a change of direction be necessary, drive off the ramp completely and make the turn.
- When driving forwards or backwards onto the vehicle, or when swinging the upper body, make sure that neither the CAB or the gates of the vehicle will be damaged.

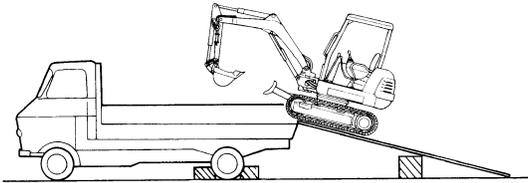

1AAABANAP008A

- When the excavator reaches the point between the ramps and the bed, halt and then move very slowly until the excavator reaches the horizontal position.
- Move the excavator onto the vehicle only with the arm completely pulled in.
- Do not jack up the machine using its boom to load or unload the excavator from the vehicle. Doing this is dangerous. Otherwise the CAB of the vehicle could be damaged when swinging around the upper body.
- Make sure the ramps are of sufficient capacity and securely connected to the vehicle to safely support the machine throughout the loading / unloading operation.

■ Transporting on a truck



WARNING


To avoid personal injury or death:

- After loading the machine on the truck, lower the bucket and dozer onto the truck bed.

Prepare a platform to load or unload the excavator.


Take following steps when using ramps.

1. Apply the parking brakes of the vehicle, and block the drive wheels from both sides.

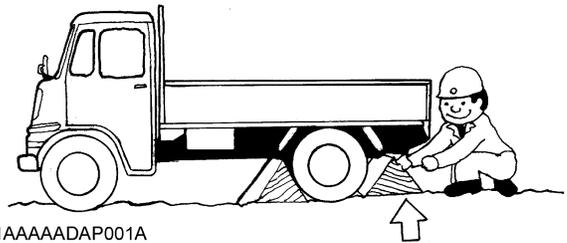


1AAAAADAP001A

2. Use mounting brackets to secure the ramp properly. Connect the ramps directly to the bed.

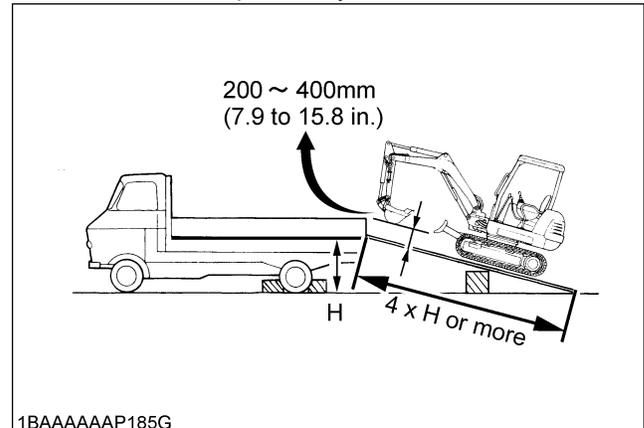


1BAAAAAAP185G

3. For additional safety, use blocks or supports under the ramps and the bed.

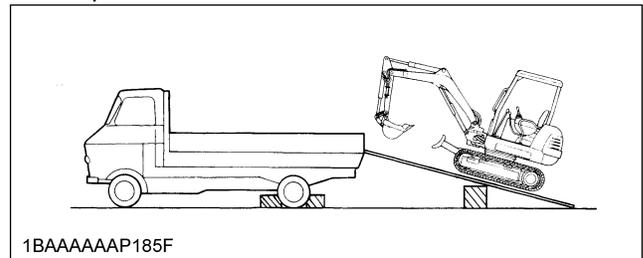

1BAAAAAAP185F

4. Align the ramps and the tracks and then drive the excavator slowly up the ramps . After ensuring that the tracks are completely on the bed, swing the upper body around to the back of the vehicle.
5. Block the tracks and cable down the excavator with suitable chains and approved method (check appropriate state regulation).

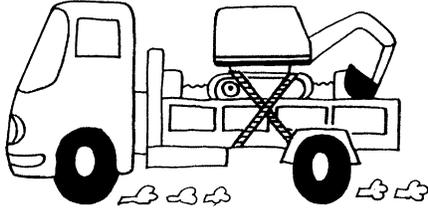

1AAABANAP032A

6. Before unloading, raise the dozer and bucket from the bed.

LIFTING OF THE EXCAVATOR



DANGER

To avoid serious injury or death:

- The correct instructions for safe handling are described here. Read these instructions carefully before moving the machine. Make sure that the operating personnel read the operator's manual carefully.

■ Basics when Lifting with Cables or Straps

1. The lifting and crane operation is to be undertaken according to the safe operation guidelines described.
2. The equipment used for lifting mentioned in these instructions are only given as reference, the standards concerning strength, control and other details are based on the respective applicable guidelines.

■ Safety Aspects when Lifting with Cables or Straps

Abide by following steps when lifting:

1. Do not lift loads that exceed the maximum load capacity of the crane.
2. Choose correct equipment suitable to the weight, size and form of the load.
3. First assess the center of gravity of the load, position the hook directly over the load and lift the load so that the center of gravity of the load is as low as possible.
4. The steel cables or straps must be fixed in the middle of the hook.
5. The load must be lifted vertically from the ground.
6. Do not enter the working area under suspended loads and do not move the load over people. The load must only be moved in an area where the balance can be easily maintained.

■ Lifting Procedure for the Excavator




WARNING

To avoid personal injury or death:

- Do not use the hooks on the roof of canopy and CAB for lifting the excavator.

◆ General guidelines for lifting

1. Lifting position. (see the following illustration.)
 - (1) Pull in the boom completely towards the CAB.
 - (2) Pull in the arm completely.
 - (3) Pull in the bucket completely.
 - (4) Adjust the swing angle to the center. (to bring the boom in a position parallel to the machine frame)
 - (5) Swing frame so that dozer blade is to the rear and frame is parallel with tracks.
 - (6) Raise the dozer blade fully.
2. Attaching the steel cables or straps.
 - (1) Always hook the excavator at three points. (one on the boom and left and right of the dozer)
 - (2) Always use a shackle on each lifting hole when attaching the cables or straps.
 - (3) Using protective material at all places where the cables or straps contact the machine.
 - (4) Keep the angle between the front and rear cables or straps within 60° (1.05 rad.) or less.

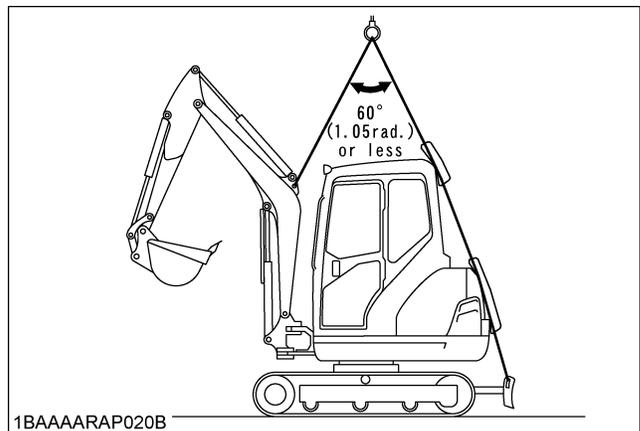


3. Tackle

The weights of the excavators and the recommended tackle for lifting these loads are mentioned in the following table. Choose components which meet or exceed the requirements of the table.

Excavator Weight*	2930 kg (6460 lbs)
Load / Cable	11050 N (2490 lbf)
Minimum Cable Diameter (Safety factor=6)	12.5 mm (0.5 in.) or more

*Excavator Weight: With CAB, and long arm.
Steel cable: 6 x 24

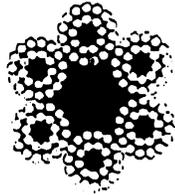

1AAABANAP034A

4. Lifting

- (1) Lift slowly and safely
- (2) Do not enter the excavator area when lifting.
- (3) Lift the excavator horizontally. (Modify cable or strap connections according to needs)


Maximum strength

for example : (JIS G 35 25) - "6 x24"

Diameter	zinc-plated	not zinc-plated
10 mm (3/8)	45.8 KN (10296 lbf)	49.3 KN (11083 lbf)
12.5 mm (1/2)	71.5 KN (16074 lbf)	77 KN (17310 lbf)
14 mm (9/16)	89.7 KN (20165 lbf)	96.6 KN (21717 lbf)
16 mm (5/8)	117 KN (26303 lbf)	126 KN (28326 lbf)
18 mm (45/64)	148 KN (33272 lbf)	160 KN (35969 lbf)

1. Boom side


Hook in the steel cable with a shackle into the lifting hole.

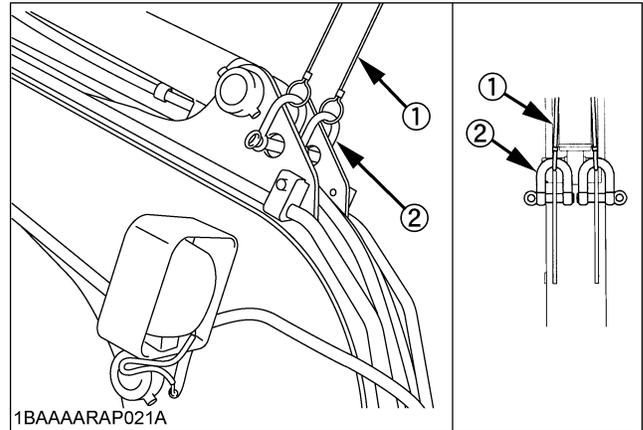

- (1) Steel cable
- (2) Shackle

2. Dozer side

Hook in the steel cable with a shackle into the lifting hole around the canopy.

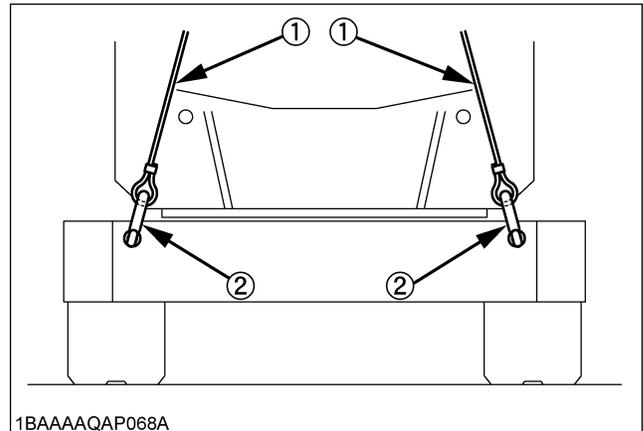

- (1) Steel cable
- (2) Shackle

MAINTENANCE

MAINTENANCE INTERVALS

No.	Check points		Measures	Hour meter indicator								Interval	Ref. page			
				50	100	150	200	250	300	350	400					450
1	Coolant		check	Daily check									46			
			change										every 2 years	61		
2	Fuel		check	Daily check									47			
3	Engine oil		check	Daily check									47			
			change										every 500 hrs	56		
4	Hydraulic oil		check	Daily check									48			
			change										every 1000 hrs	58	*1	
5	Lubrication points		-	Daily check									49			
6	Radiator and oil cooler		check	Daily check									50			
7	Washer liquid (CAB type)		check	Daily check									50			
8	Engine and electrical wiring		check	Daily check								every year	50			
9	Fuel tank, Water separator		drain	○	○	○	○	○	○	○	○	○	every 50 hrs	51,51		
10	Battery condition		check	○	○	○	○	○	○	○	○	○	every 50 hrs	52		
11	Greasing swing bearing teeth		-	○	○	○	○	○	○	○	○	○	every 50 hrs	51		
12	Fan belt tension		adjust				○				○		every 200 hrs	53		
13	Radiator hoses and clamps		check				○				○		every 200 hrs	54		
			replace										every 2 years	60		
14	Air filter element	Outer element	clean				○				○		every 200 hrs	54	*2	@
		Inner element	replace										every 1000 hrs	60	*2	
			replace											every 1000 hrs	60	
15	Greasing swing ball bearings		-				○				○		every 200 hrs	54		
16	Fuel filter cartridge		replace										every 500 hrs	57		@
17	Engine oil filter		replace										every 500 hrs	56		
18	Drive unit oil		change		●								every 500 hrs	57		
19	Hydraulic return filter element		replace					●					every 500 hrs	57		
20	Engine valve clearance		check										every 800 hrs	58	*4	
21	Hydraulic suction filter element		replace										every 1000 hrs	58		
22	Filter in the pilot hydraulic system		replace										every 1000 hrs	59		
23	Fuel injection nozzle (injection pressure)		check										every 1500 hrs	60	*4	@
24	Front idler and track roller oil		change										every 2000 hrs	60		
25	Alternator and starter motor		check										every 2000 hrs	60		
26	Injection pump		check										every 3000 hrs	60	*4	@
27	Radiator system		rinse										every 2 years	61		
28	Fuel line and Intake air line		check				○				○		every 200 hrs	55		@
			replace										every 2 years	62	*3	

* 500 thru 1000 continued to the following table.

No.	Check points		Measures	Hour meter indicator							Interval	Ref. page			
				500	550	600	650	700	750	800					1000
1	Coolant		check	Daily check								46			
			change									every 2 years	61		
2	Fuel		check	Daily check								47			
3	Engine oil		check	Daily check								47			
			change	○							○	every 500 hrs	56		
4	Hydraulic oil		check	Daily check								48			
			change								○	every 1000 hrs	58	*1	
5	Lubrication points		-	Daily check								49			
6	Radiator and oil cooler		check	Daily check								50			
7	Washer liquid (CAB type)		check	Daily check								50			
8	Engine and electrical wiring		check	Daily check							every year	50			
9	Fuel tank, Water separator		drain	○	○	○	○	○	○	○	○	every 50 hrs	51,51		
10	Battery condition		check	○	○	○	○	○	○	○	○	every 50 hrs	52		
11	Greasing swing bearing teeth		-	○	○	○	○	○	○	○	○	every 50 hrs	51		
12	Fan belt tension		adjust			○				○	○	every 200 hrs	53		
13	Radiator hoses and clamps		check			○				○	○	every 200 hrs	54		
			replace										every 2 years	60	
14	Air filter element	Outer element	clean			○				○	○	every 200 hrs	54	*2	@
		Inner element	replace								○	every 1000 hrs	60	*2	
			replace									○	every 1000 hrs	60	
15	Greasing swing ball bearings		-			○				○	○	every 200 hrs	54		
16	Fuel filter cartridge		replace	○							○	every 500 hrs	57		@
17	Engine oil filter		replace	○							○	every 500 hrs	56		
18	Drive unit oil		change			○						every 500 hrs	57		
19	Hydraulic return filter element		replace						○			every 500 hrs	57		
20	Engine valve clearance		check							○		every 800 hrs	58	*4	
21	Hydraulic suction filter element		replace								○	every 1000 hrs	58		
22	Filter in the pilot hydraulic system		replace								○	every 1000 hrs	59		
23	Fuel injection nozzle (injection pressure)		check									every 1500 hrs	60	*4	@
24	Front idler and track roller oil		change									every 2000 hrs	60		
25	Alternator and starter motor		check									every 2000 hrs	60		
26	Injection pump		check									every 3000 hrs	60	*4	@
27	Radiator system		rinse									every 2 years	61		
28	Fuel line and Intake air line		check			○				○	○	every 200 hrs	55		@
			replace										every 2 years	62	*3

IMPORTANT :

● First operation

*1 When using a hydraulic breaker, change hydraulic oil and return filter according to the table on "Hydraulic Oil Change (Including Exchange of the Suction Filter in the Hydraulic Tank)" under "EVERY 1000 SERVICE HOURS" in the chapter "REGULAR CHECKS AND MAINTENANCE WORK".

*2 Clean and replace the air filter more frequently if used under dusty conditions. When the filter is very dirty from dusty conditions, replace the filter.

*3 Replace only if necessary.

*4 Consult your local KUBOTA Dealer for this service.


● The items listed above (@ marked) are registered as emission related critical parts by KUBOTA in the U.S.EPA non-road emission regulation. As the engine owner, you are responsible for the performance of the required maintenance on the engine according to the above instruction. Please see the Warranty Statement in detail.

● When using biodiesel, be sure to check the maintenance requirements of biodiesel fuel as the intervals will change in some of the items.

OPENING AND CLOSING OF PARTS


■ Opening and Closing of the Fuel Tank Cap

1. To open the tank cover, insert the starter key and turn counterclockwise.

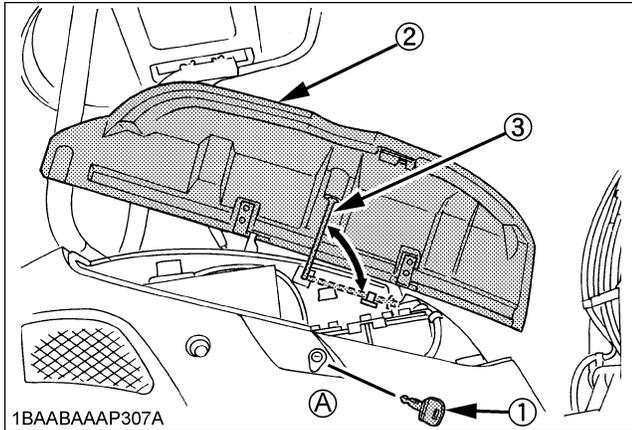

- (1) Key
 (2) Tank cover
 (3) Stay
 (A) Unlock

2. To close the tank cover, put it down and turn the starter key clockwise.

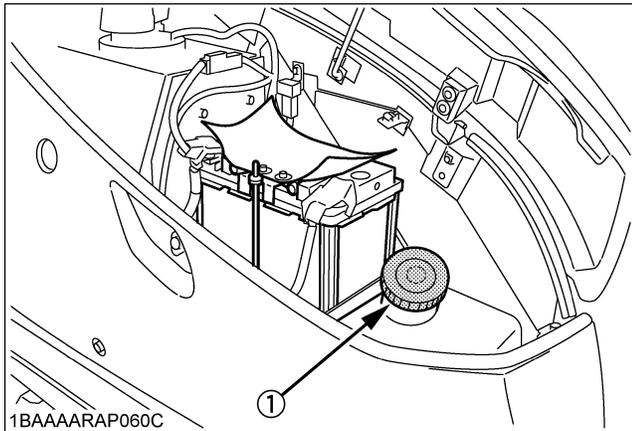

- (1) Fuel tank cap (Air vent is inside the cap)


■ Opening/Closing of the Engine Hood

⚠ CAUTION

To avoid personal injury:


- Do not open the engine hood with the engine running unless in an emergency.
- Do not touch the exhaust muffler or the exhaust pipe; serious burns can occur.

Insert the key into the key slot and turn it clockwise to open the hood. To close it, lower the hood and push it tightly. Turn the key counterclockwise to lock the hood.

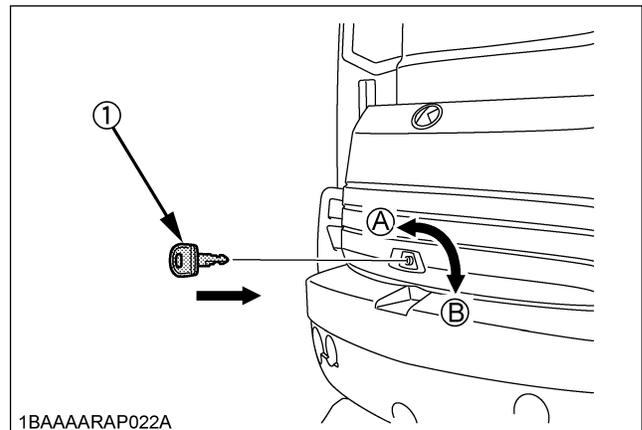


- (1) Key
 (A) "LOCK"
 (B) "UNLOCK"

■ Where to store the Grease Gun (Option)

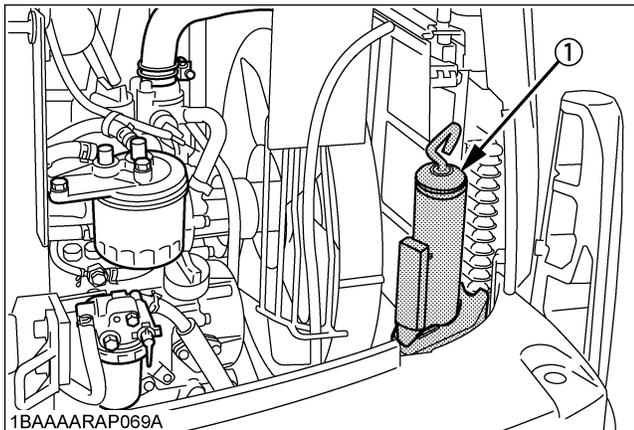

(1) Grease gun (Option)

■ Where to keep Operator's Manual

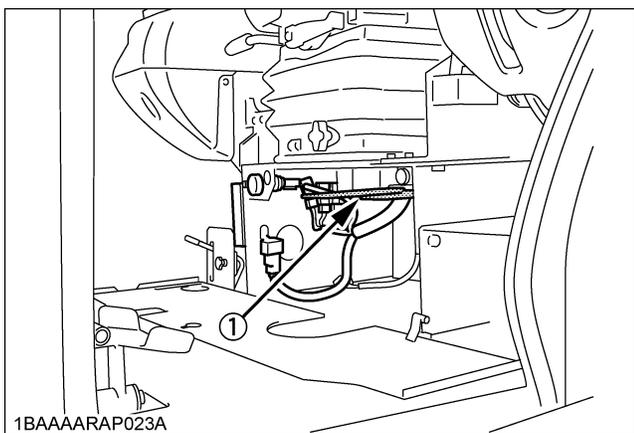

(1) Operator's manual storage

DAILY CHECKS



CAUTION

To avoid personal injury:

- Do not operate the excavator while putting out the hands and the body from the windows.
- Do not touch the control levers and the pedals from outside the cab during the engine running.

For your own safety and to assure the long life of your machine, a careful check should be made before each operation.

■ Checking Coolant Level




CAUTION

To avoid personal injury:

- Move the excavator to even ground.
- Make sure that the engine is turned off.
- Do not open the radiator cap right after the engine has been stopped; Serious burns can occur from contact with escaping hot coolant fluid.
- Check the coolant level in the recovery tank only after the engine has cooled down.
- Remove the radiator cap only if absolutely necessary.

1. Check to see that the coolant level is between the "FULL" and "LOW" marks of the recovery tank.
2. When the coolant level drops due to evaporation, add water only up to the full level.

In case of leakage, add anti-freeze and water in the specified mixing ratio up to the full level.
(See "Changing Radiator Coolant" in every 2 years maintenance.)

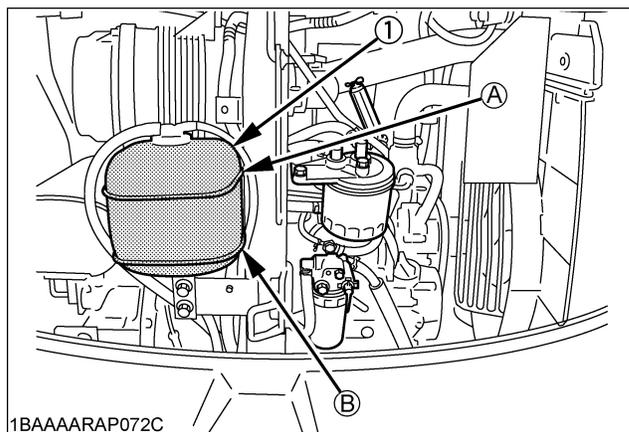

(1) Recovery tank

(A) "FULL"

(B) "LOW"

IMPORTANT :

- Do not fill the recovery tank over the "FULL" marking.
- Do not fill with dirty or salty water.

■Checking Fuel Level

CAUTION

To avoid personal injury:


- Stop the engine and remove the key before fuelling.
- Do not smoke while fuelling.

IMPORTANT :

- When temperatures are over -7°C (20°F), use No.2-D diesel fuel, when temperatures are under -7°C (20°F), use No.1-D diesel fuel or a blend of No.2 and No.1 diesel.
- Make sure that the fuel tank is not run empty. Air will enter the fuel system, and must be purged before restarting.
- See "PURGING OF THE FUEL SYSTEM" in "OTHER ADJUSTMENTS AND REPLACEMENTS"
- To prevent condensation (water) accumulations in the fuel tank, fill the fuel into the tank before parking overnight.

If the fuel in the tank goes below the prescribed level, the warning lamp will flash.


If this should happen during operation, refuel as soon as possible.

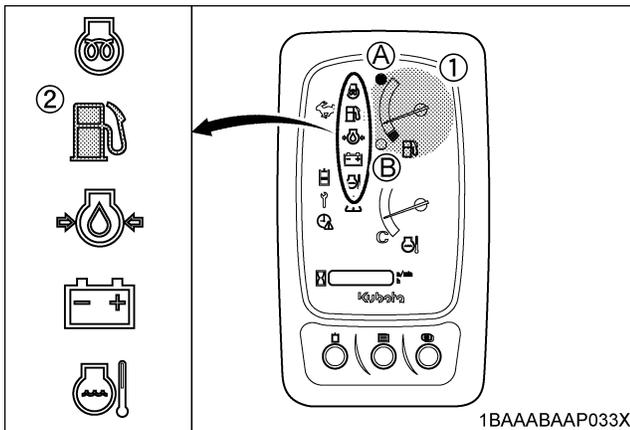

- (1) Fuel gauge
- (2) Remaining fuel warning lamp
- (A) "FULL"
- (B) "EMPTY"

Open the tank cap with the starter key, and add fuel.

- See "Opening and Closing of the Fuel Tank Cap" and "LCD for Normal Operation."

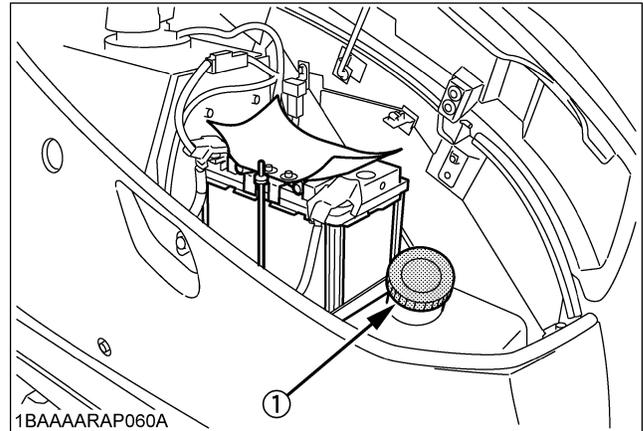

(1) Fuel tank cap

■Checking Engine Oil Level

CAUTION


To avoid personal injury:

- Stop the engine and remove the key before checking the oil level.


IMPORTANT :

- Use engine oil with the correct viscosity. (according to the outside temperature)
- After stopping the engine and remove the key, wait 5 minutes, then check oil level. (Excavator must be on level ground.)

Insert the engine oil dipstick fully into the respective port opening, remove again and check the oil level; if necessary fill with oil. The machine must be on level ground when checking the oil level.

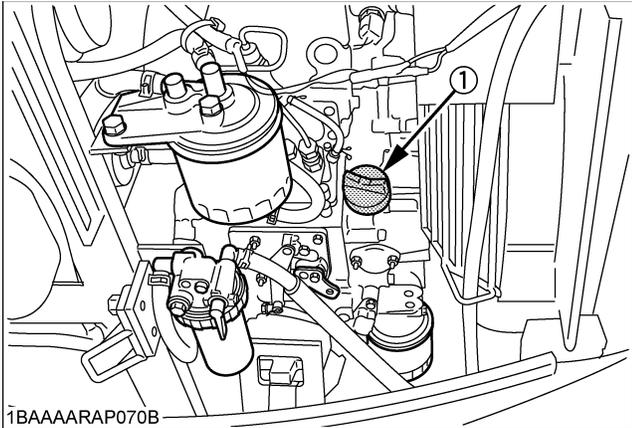

(1) Oil filling port

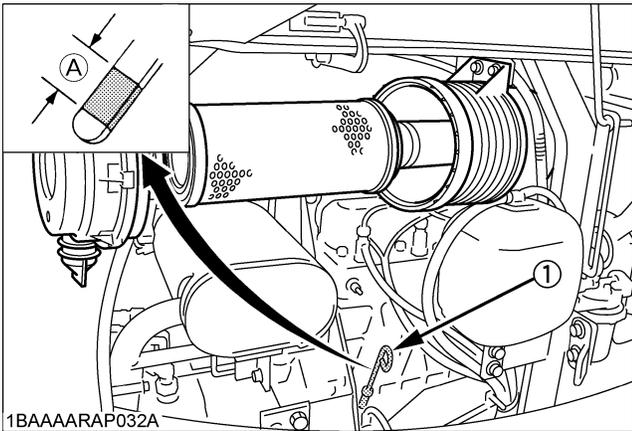

(1) Engine oil dipstick

(A) Required oil level range

■ Checking Hydraulic Oil Level



CAUTION


To avoid personal injury:

- Stop the engine and remove the key before checking the oil level.


IMPORTANT :

- Before filling oil, wipe away all sand and dust from around the oil port. Make sure to use an identical type of hydraulic fluid.
- The excavator has been filled with hydraulic fluid before delivery. See "RECOMMENDED OILS" section.
(Do not mix different oils.)

1. Park the excavator on a firm, flat and level surface. Lower the attachments and dozer blade to the ground and stop the engine.

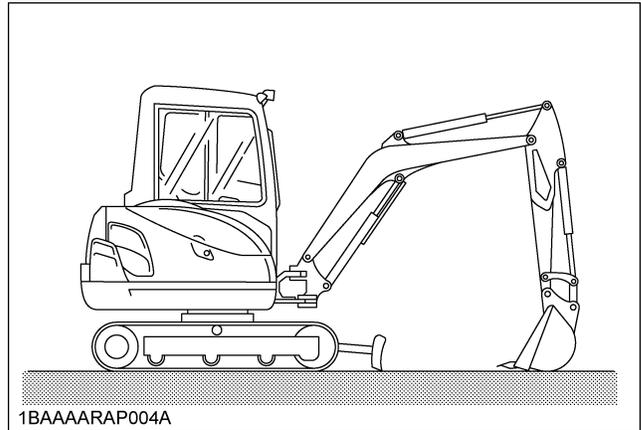

2. Check the oil level as to whether it lies on the center of the gauge at normal temperature (10 to 30°C (50 to 80°F)).
3. Enough oil is present if the oil level lies near the center of the gauge.
4. Should the oil level be too low, fill oil through the oil port before starting the engine. This step is important for the protection of the hydraulic system.

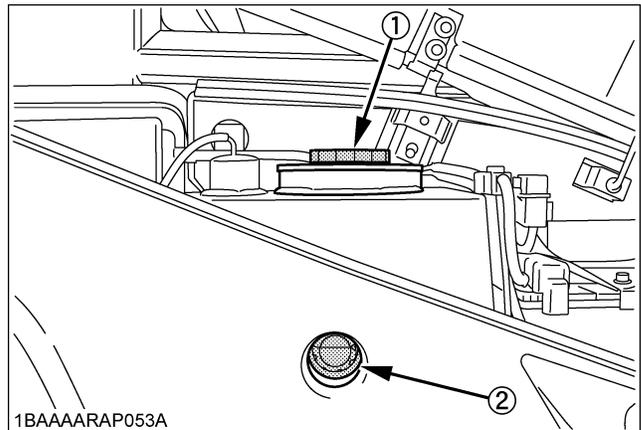

(1) Tank cap

(2) Gauge

■ Lubrication Points






CAUTION

To avoid personal injury:

- First lower all attachments to the ground then stop the engine and remove the key.
- While greasing, take caution not to step on the bucket teeth.
- When doing excavation work in water, generously grease the following points. After ending work, grease again.

Grease the marked grease fittings shown by arrows in the illustration below.

- | | | |
|-----|--|----------|
| 1. | Boom bottom linkage..... | 1 place |
| 2. | Arm bottom linkage..... | 1 place |
| 3. | Bucket link pin..... | 3 places |
| 4. | Boom cylinder pin and boss..... | 2 places |
| 5. | Arm cylinder boss..... | 2 places |
| 6. | Bucket cylinder boss..... | 1 place |
| 7. | Fixing pin between arm and bucket..... | 1 place |
| 8. | Boom swing fulcrum..... | 1 place |
| 9. | Swing cylinder bottom..... | 1 place |
| 10. | Swing pin..... | 2 places |
| 11. | Dozer cylinder boss..... | 2 places |
| 12. | Dozer linkage pin..... | 2 places |

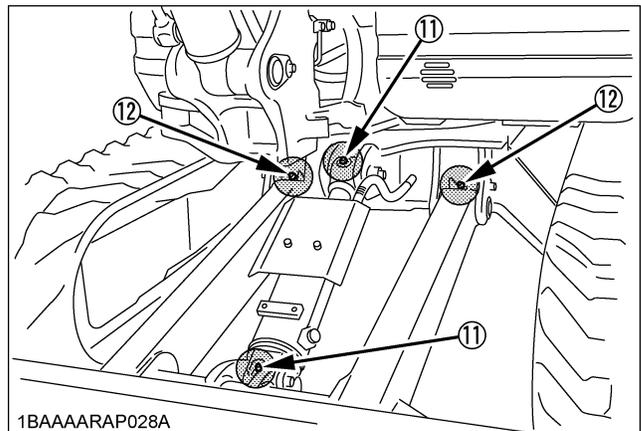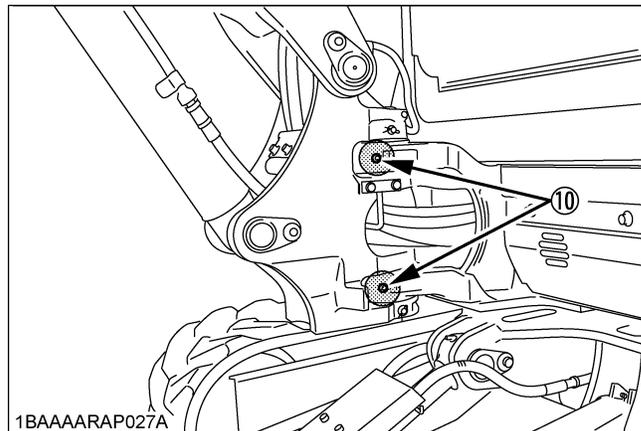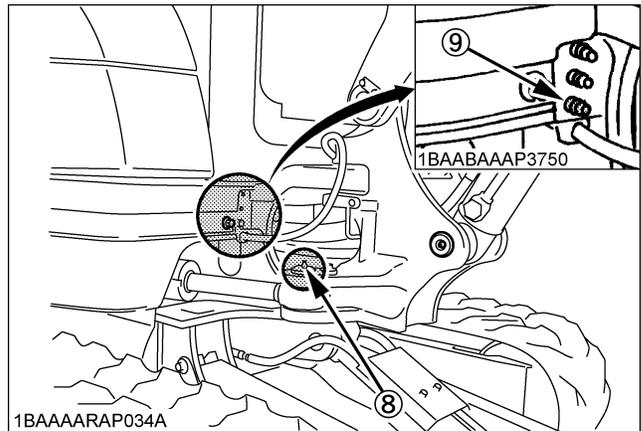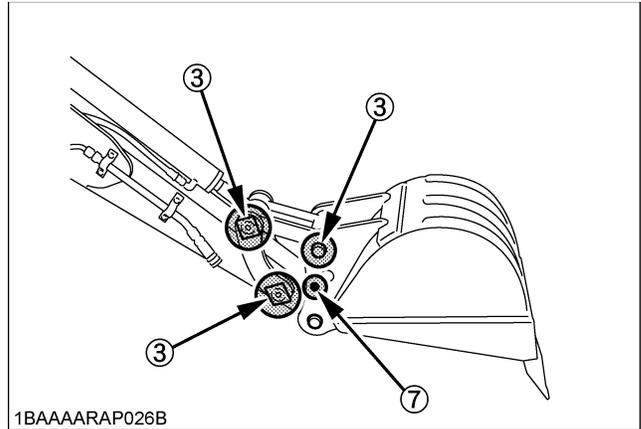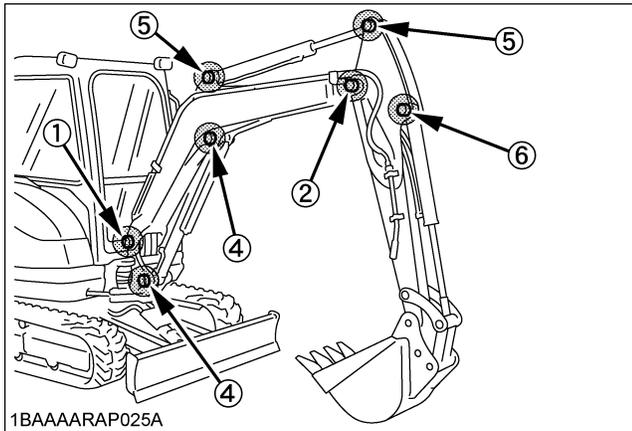

■ Check Fan Belt



CAUTION

To avoid personal injury:

- Stop the engine and remove the key before checking the fan belt.
- Check the fan belt for cracks and proper tension. (See "Checking Fan Belt Tension" in "REGULAR CHECKS AND MAINTENANCE WORK" section.)

■ Checking Radiator and Oil Cooler




CAUTION

To avoid personal injury:

- Always stop the engine and remove the key before checking the radiator.
- Wear eye protection when cleaning with compressed air.

1. Check if the fins and ribs are clogged. If so clean with compressed air or steam.
2. Check the rubber hoses for damage and replace if cracked or old. Check if the hose clamps are tight enough.

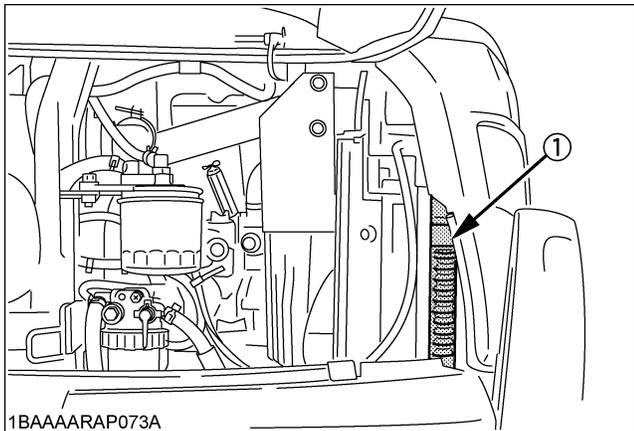

1BAAAARAP073A


(1) Oil cooler

IMPORTANT :

- Radiator and oil cooler fins and ribs must be clean in order not to overheat the engine and allow free flow of air through the cooling elements.
- Pressure of compressed air must be under 205 kPa (2.1 kgf.cm², 30 psi)

■ Checking Washer Liquid (only for CAB type)

If the windows washer is switched on with the washer liquid tank empty, the motor may be damaged. Always keep the tank filled.

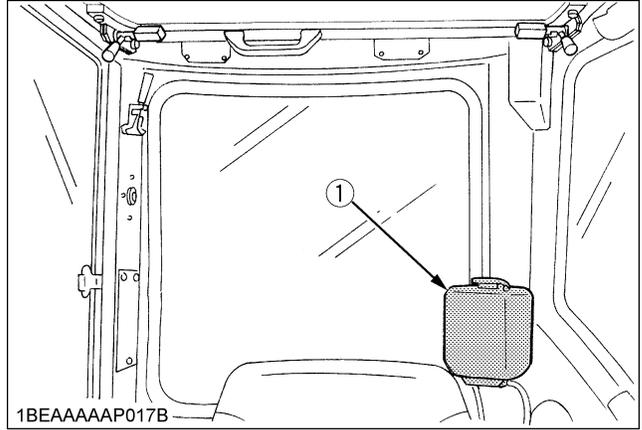

1BEAAAAP017B

(1) Washer liquid tank

■ Checking and Cleaning Engine and Electrical Wiring



CAUTION

To avoid personal injury:

- Always stop the engine and remove the key before cleaning the wiring, cables and engine.

Before starting, check whether flammable substances have gathered on the battery, the cables and wiring, the muffler or on the engine. Remove thoroughly. Check the electrical circuitry for disconnections, shorts or loose terminals.

■ Washing Whole Machine

IMPORTANT :

- Do not wash the excavator with the engine running. Water could enter the air filter and damage the engine. Make sure that the air filter is kept dry.
- Remove the mud before washing the machine.

REGULAR CHECKS AND MAINTENANCE WORK



CAUTION

To avoid personal injury:

- Do not operate the excavator while putting out the hands and the body from the windows.
- Do not touch the control levers and the pedals from outside the cab during the engine running.

EVERY 50 SERVICE HOURS

■ Draining the Water from the Fuel Tank




CAUTION

To avoid personal injury:

- Before draining the water from the fuel tank, be sure to stop the engine and remove the key.
- Do not smoke during inspection.


1. Remove the drain plug on the underside of the body and drain water.
2. Re-tighten the drain plug.

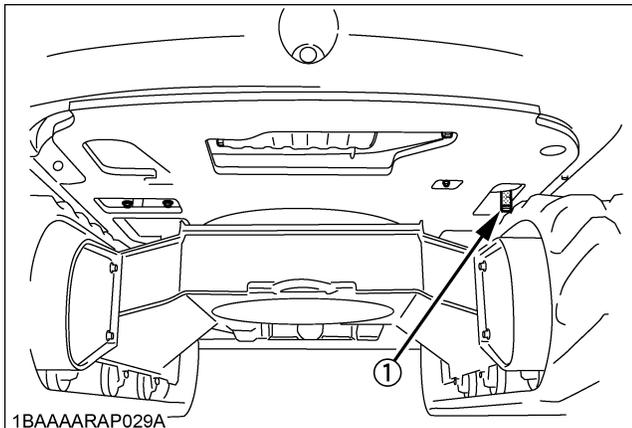

(1) Drain plug

■ Draining Water Separator


1. Open the hood.
2. When the separated water is being drained, the red float moves upwards. When the float reaches the line, close the shutoff-valve so that no fuel can run out. Now loosen the ring nut, and remove the cup and empty completely.
3. Finally, do not forget to open the shutoff-valve and close the hood.

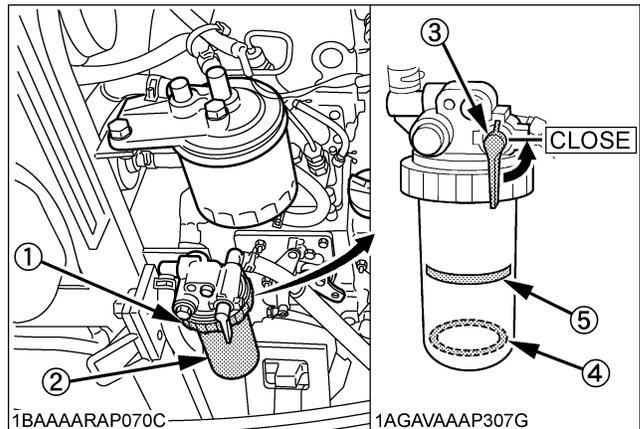

- | | |
|-------------------|-----------|
| (1) Ring nut | (4) Float |
| (2) Cup | (5) Line |
| (3) Shutoff-valve | |

■ Greasing Swing Bearing Teeth

1. Pump grease with grease gun through the grease fitting (at the right end side).
2. Grease at each 90° (1.58 rad.) position of the swing frame.
3. Fill with approx. 50g of grease (approx. 20 to 30 pumps with the grease gun at each position).

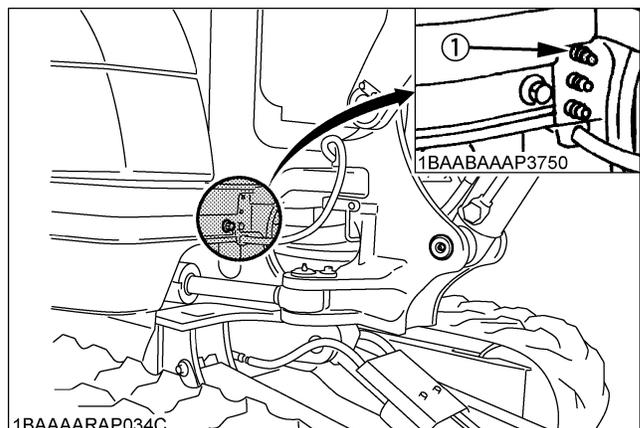

(1) Grease fitting

Battery



DANGER

To avoid the possibility of a battery explosion:
For refillable type battery, follow the instructions below.

- Do not use or charge the refillable type battery if the fluid level is below the LOWER (lower limit level) mark. Otherwise, the battery component parts may prematurely deteriorate, which may shorten the battery's service life or cause an explosion. Check the fluid level regularly and add distilled water as required so that the fluid level is between the UPPER and LOWER levels.




CAUTION


To avoid personal injury:

- Never remove the vent caps while the engine is running.
- Keep electrolyte away from eyes, hands and clothes. If you are splattered with it, wash it away completely with water immediately and get medical attention.
- Wear eye protection and rubber gloves when working around the battery.
- Before inspection or dismantling the battery, be sure to turn off the engine and turn the starter switch to the "OFF" position.
- When removing the battery, always disconnect the negative ground cable first. When installing a battery, always connect the ground cable last. This prevents a possible explosion caused by sparks.
- Always wear eye protection when working with the battery.

1. Remove the battery from the storage and check the battery fluid level and add distilled water if necessary. Open the side cover, check the battery fluid level and add distilled water if necessary.
2. Clean the battery caps (ventilation holes) also.

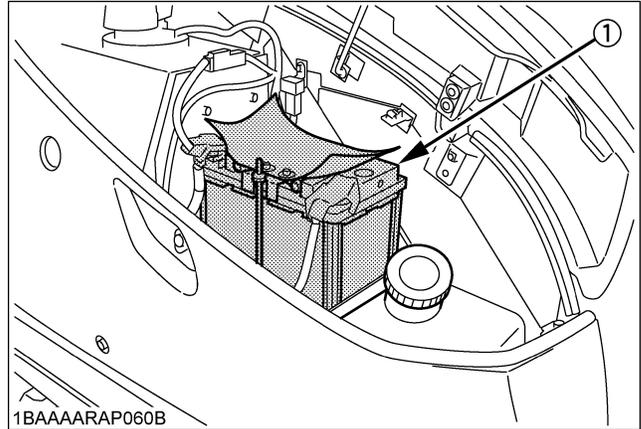

(1) Battery

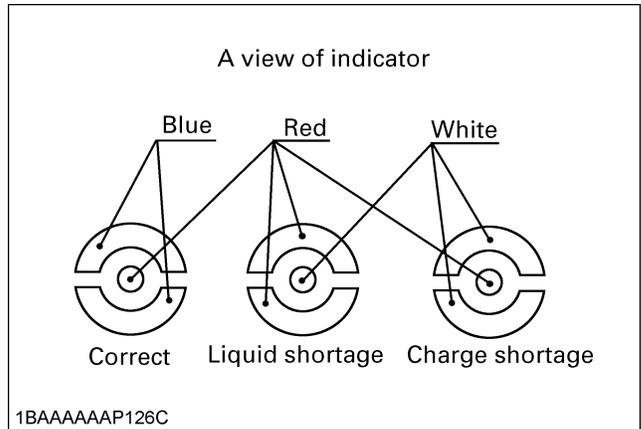

■ Battery Charging



CAUTION

To avoid personal injury:

- When the battery is being activated, hydrogen and oxygen gases in the battery are extremely explosive. Keep open sparks and flames away from the battery at all times, especially when charging the battery.
- When charging battery, make sure battery vent plugs are secured.
- When disconnecting the cable from the battery, start with the negative terminal first.
When connecting the cable to the battery, start with the positive terminal first.
- Do not check battery charge by placing a metal object across the terminals.
Use a voltmeter or hydrometer.

1. Make sure each electrolyte level is to the bottom of vent wells. If necessary, add distilled water in a well-ventilated area.
2. The water in the electrolyte evaporates during recharging. Liquid shortage damages the battery. Excess liquid spillage damages the excavator.
3. To slow charge the battery, connect the battery positive terminal to the charge positive terminal and the negative to the negative, then recharge in the standard fashion.
4. A boost charge is only for emergencies. It will partially charge the battery at a high rate and in a short time. When using a boost-charged battery, it is necessary to recharge the battery as early as possible. Failure to do this will shorten the battery's service life.
5. When the specific gravity of electrolyte falls between 1.27 and 1.29 charge has completed.
6. When exchanging an old battery for a new one, use a battery of equal specification.

EVERY 200 SERVICE HOURS

Do all 50 hour servicing at the same time.

■ Checking Fan Belt Tension

- ◆ Check and adjustment of the fan belt tension




CAUTION

To avoid personal injury:

- First stop the engine and remove the key.
- After servicing, make sure to replace the belt cover in its original position.

1. Press the fan belt down in the middle, with a force of approx. 7 kg (15.4 lbs.). The belt tension is correct if it deflects about 7 mm (0.28 in). If otherwise, loosen bolt (1) shift the alternator (2) in the direction shown by the arrow.
2. Replace the fan belt if worn out, cracked or torn.

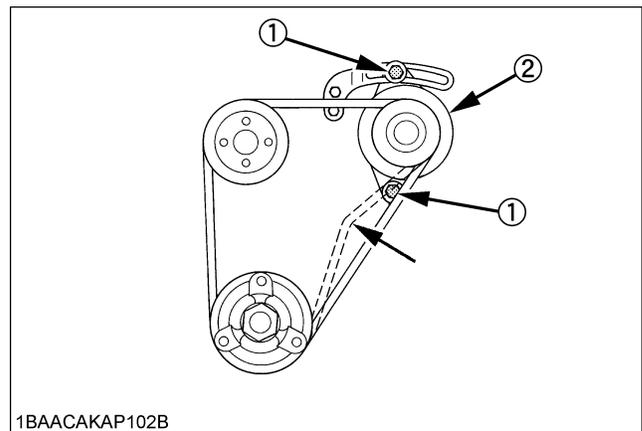

- (1) Bolt
(2) Alternator

IMPORTANT :

- If the engine is run with a loose fan belt, the belt could slip and cause overheating of the engine or insufficient battery charging. Check fan belt tension regularly.
- Should the fan belt break or jump off, the indicator light for battery charge will light up. Stop the engine and remove the key immediately.

■ Checking Radiator Hoses and Clamps




CAUTION

To avoid personal injury:

- Wait long enough for the radiator coolant to cool down.

Check the water hoses for proper connection. This check should be carried out every 200 hours or every 6 months, whichever comes first.

1. Should the hose clamps become loose or water leaks, tighten the hose clamps properly.
2. Should the radiator hoses become swollen, aged or cracked, they must be replaced and the hose clamps tightened again properly.

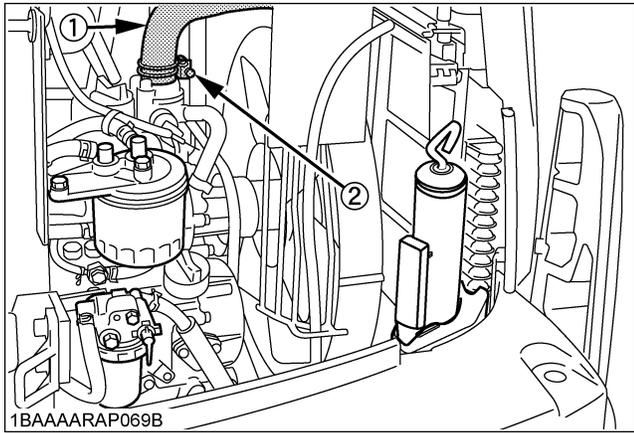

(1) Radiator hoses


(2) Hose clamps

■ Inspection and Cleaning Air Filter Element

Open the engine cover and remove the dust cover. Take out only outer element, clean the element, case interior and reassemble. During reassembly, take care to install the dust cover with facing the TOP mark upward. Do not remove the inner element (safety element).

IMPORTANT :

- Should the machine be used in extremely dusty areas, the air filter element must be inspected and cleaned more frequently than in the specified maintenance periods.
- The air filter has a dry element, keep free from oil.
- Do not run the engine without the air filter.

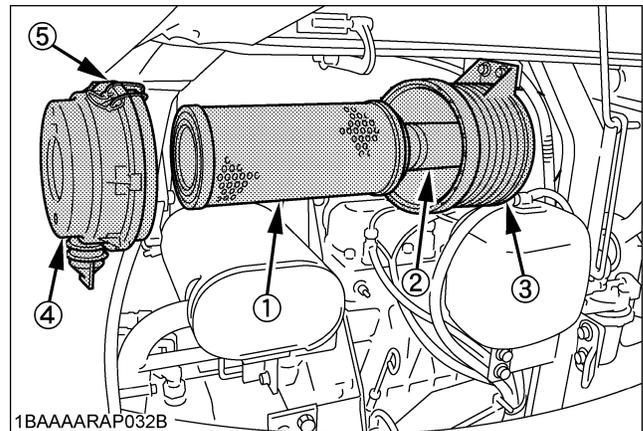

(1) Outer element

(2) Inner element (safety element)

(3) Case


(4) Dust cover

(5) Clamps

■ Greasing Swing Bearing

1. Fill with grease through the respective grease fitting.
2. Grease at each 90° (1.58 rad.) position of the swing frame.

Using the grease gun, apply 5 shots at every position.

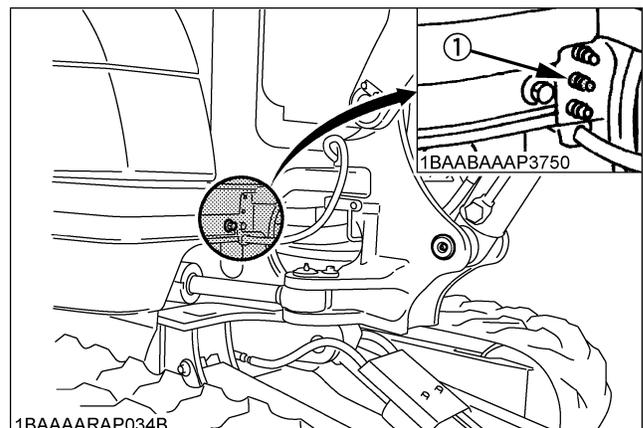

(1) Grease fitting


■ Air Filter Maintenance



CAUTION

To avoid personal injury:

- Wear eye protection.

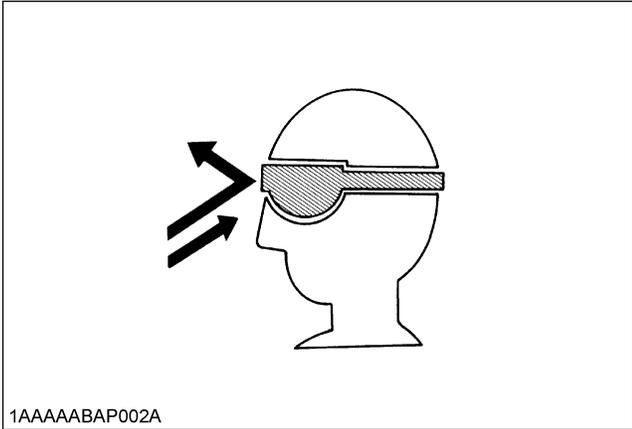


1AAAAABAP002A

The quickest and safest method of maintenance is the exchange of the paper cartridge. Furthermore there are different methods of cleaning the cartridge.

◆ Cleaning with compressed air

Pressure of compressed air must be under 205 kPa (2.1 kgf/cm², 30 psi), and the cartridge should be blown clean from the inside to the outside until the dust deposits are noticeably reduced.

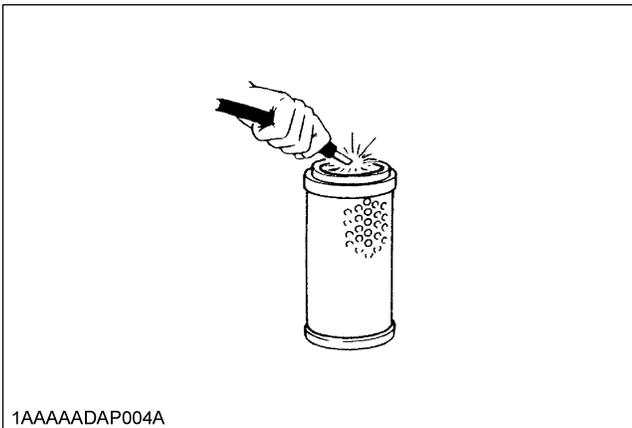


1AAAAADAP004A

IMPORTANT :

- If the air suction is still inadequate, or the color of the exhaust gases is abnormal even after the cleaning, the air filter cartridge must be replaced.


■ Checking Fuel Line and Intake Air Line

1. Check to see that all lines and hose clamps are tightened and not damaged.
2. If hoses and clamps are found worn or damaged, replace or repair them at once.

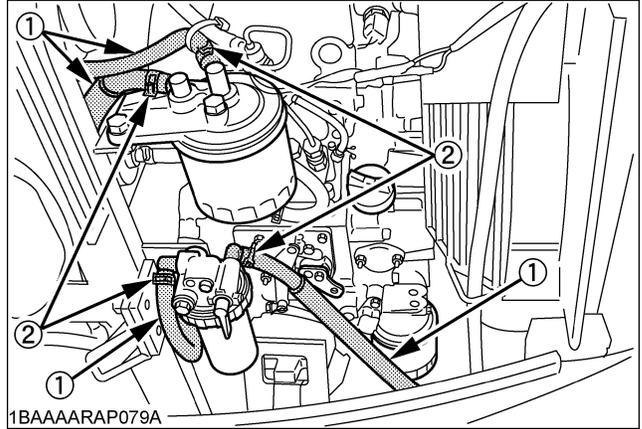

1BAAAAARAP079A

- (1) Fuel lines
- (2) Clamp bands

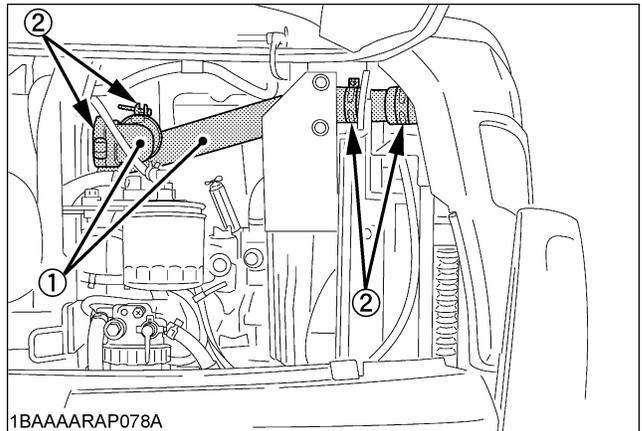

1BAAAAARAP078A

- (1) Hoses
- (2) Hose clamps

EVERY 500 SERVICE HOURS

Do all 50 hour servicing at the same time.

■ Changing Engine Oil (Change the engine oil every 500 hours, or every 1 year in the case that service hour is less than 500 hours)




CAUTION

To avoid personal injury:


- First stop the engine then remove the key and wait long enough for the oil to cool down.

1. Remove the drain plug on the underside of the engine and drain all oil.
2. Re-tighten the drain plug.

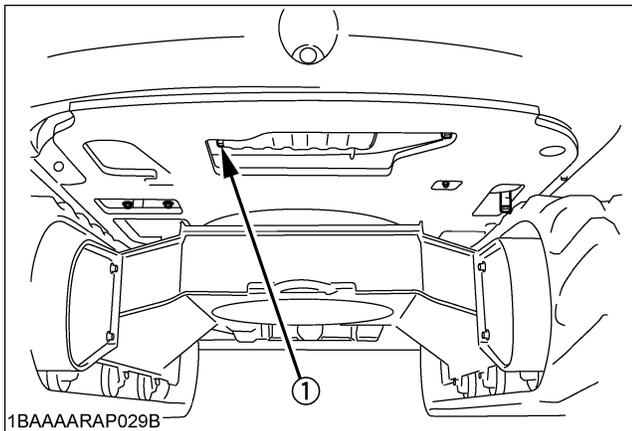

(1) Drain plug

3. Fill through the filling port up the specified level.

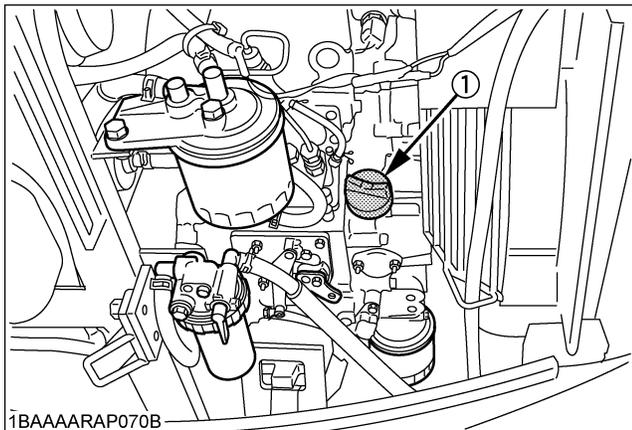

(1) Oil filling port


4. Let the engine idle for approx. 5 min. Check the engine oil level. To check the engine oil level, insert the engine oil dipstick completely into the respective port opening and pull out again. If the oil level lies between both markings, oil level is sufficient.

IMPORTANT :

- Regardless of the service hours, an engine oil change is due every 1 year.

■ Replacing Engine Oil Filter Cartridge (Replace the engine oil filter every 500 hours, or every 1 year in the case that service hour is less than 500 hours)

1. Replace the oil filter cartridge at the same time as doing the engine oil change.
2. Remove the cartridge with the supplied filter wrench.

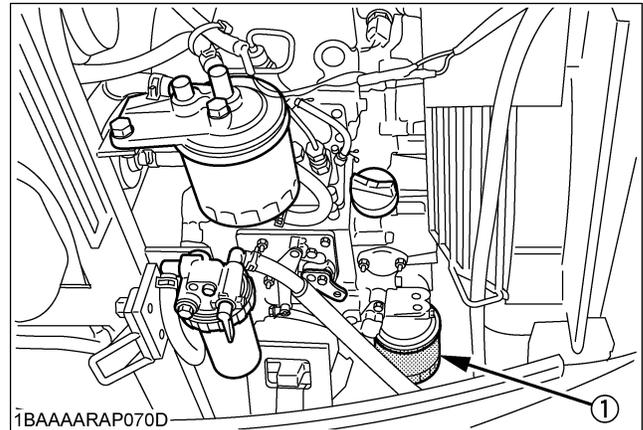

(1) Oil filter cartridge

3. Oil the O-ring of the new oil filter cartridge lightly. Then tighten the oil filter cartridge by hand.
4. Fill engine oil to the specified level.
5. Let the engine run for approx. 5 min. and make sure that the engine oil indicator lamp does not light up. Then stop the engine and remove the key.
6. The engine oil level is reduced by the amount of the filter capacity after the engine is started. It is necessary to add oil.

IMPORTANT :

- Always check the oil level after having exchanged the filter.

Engine oil volumes (with engine oil filter)	4.5 L (1.189 US gal.)
--	--------------------------

■ Drive Unit Oil Change (First Oil Change of the 100 hours)



CAUTION

To avoid personal injury:


- Lower all attachments to the ground, stop the engine and remove the key before undertaking the oil change.

1. Rotate the track so that the drain plug of the drive unit is in the bottom position.
2. Remove the drain plug to let the oil run out. Screw in and tighten the drain plug again and fill with gear oil through the oil check port.
3. Fill oil until it overflows out of the oil check port.

Oil change

- first oil change after 100 hrs
- then every 500 hrs
- or at least once a year

4. Use prescribed gear oil SAE 90.

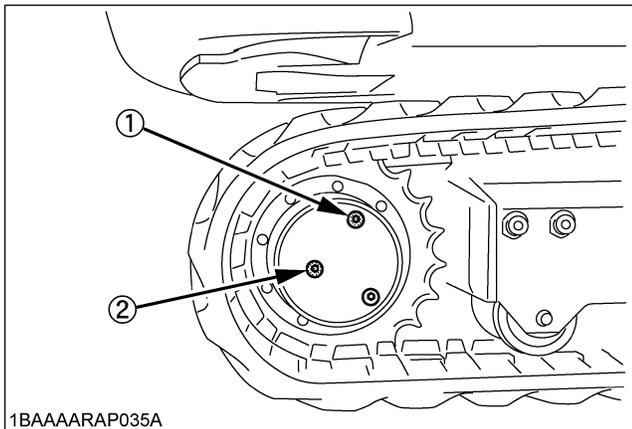

1BAAAARAP035A

- (1) Drain plug
- (2) Oil filling port

Gear oil volume	approx. 0.60 L (0.159 US gal.)
-----------------	-----------------------------------

■ Replacing Fuel Filter Cartridge




CAUTION

To avoid personal injury:

- Keep fire away.

1. Remove the filter with the supplied filter wrench.
2. Add fuel to a new filter before installing.
3. Apply a light film of fuel to the seal of the new filter and turn in tightly by hand.
4. Open the shutoff-valve of the fuel filter again.

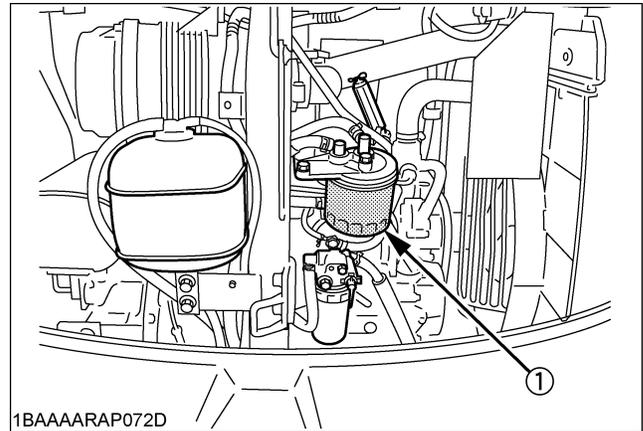

1BAAAARAP072D

- (1) Fuel filter cartridge

IMPORTANT :

- After exchange of the filter, the fuel system must be purged of air.


■ Replacing Hydraulic Return Filter Element (First replacement after 250 service hours)



CAUTION

To avoid personal injury:

- Remove the oil filter only after the oil in the hydraulic tank has cooled down.

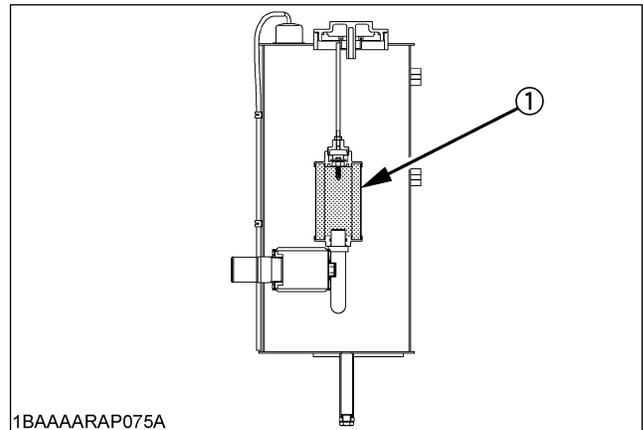

1BAAAARAP075A

- (1) Return filter cartridge

1. Replace the oil filter cartridge at the same time as doing the hydraulic oil change.
2. Remove the cartridge with the supplied filter wrench.
3. Oil the O-ring of the new oil filter cartridge lightly. Then tighten the oil filter cartridge by hand.
4. Fill hydraulic oil to the specified level.

IMPORTANT :

- Always check the oil level when replacing the filter.

EVERY 800 SERVICE HOURS

Do all 50 and 200 hour servicing at the same time.

■Checking Engine Valve Clearance

Consult your local KUBOTA dealer for this service.

EVERY 1000 SERVICE HOURS

Do all 50, 200 and 500 hour servicing at the same time.

■Hydraulic Oil Check for Machines with Hydraulic Breakers

The hydraulic oil change after 1000 operating hours in the operator's manual is based on the type of work done. Following inspection measures are valid when hydraulic breakers are used:

1. Changing and filling up of hydraulic oil
 - (1) The hydraulic oil must be changed more often when breakers are used because the machine is subject to harder conditions than normal excavating work.
 - (2) Use only the recommended oils mentioned in the operator's manual when changing or filling with oil.
 - (3) When filling up oil, never mix oils of different makes.
2. Changing the return filter and oil
 - (1) The filter must be changed more often because of contamination resulting from the frequent assembly and disassembly of the hoses.
 - (2) Use the correct replacement filter.
 - (3) Oil change according to operating hours.

	Hydraulic oil	Return Filter	Suction Filter	
Normal excavator work	every 1000 Hrs.	500Hrs. (250Hrs. after first operation)	1000 Hrs.	
Breaker work portion	20%	evry 800 Hrs.		300 Hrs.
	40%	evry 400 Hrs.		
	60%	evry 300 Hrs.		100 Hrs.
	More than 80%	evry 200 Hrs.		

■Hydraulic Oil Change (Including Replacing Suction Filter in Hydraulic Tank)




CAUTION


To avoid personal injury:

- Wait long enough for the hydraulic fluid to cool down. Then begin with the change of the hydraulic fluid.

1. Park the excavator on a firm, flat and level surface. Lower the attachments and dozer blade to the ground and stop the engine.

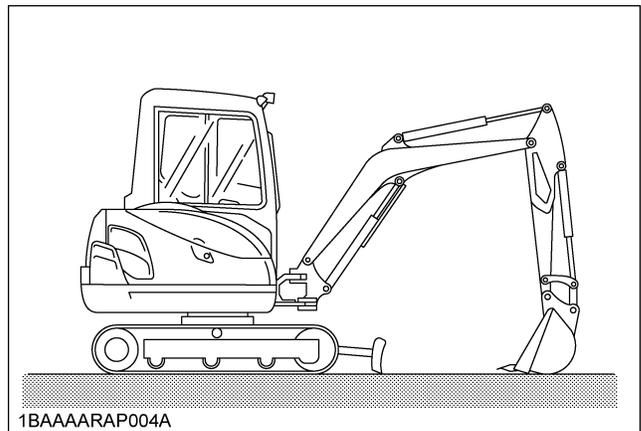

2. Remove the drain plug on the underside of the hydraulic tank and drain the oil.

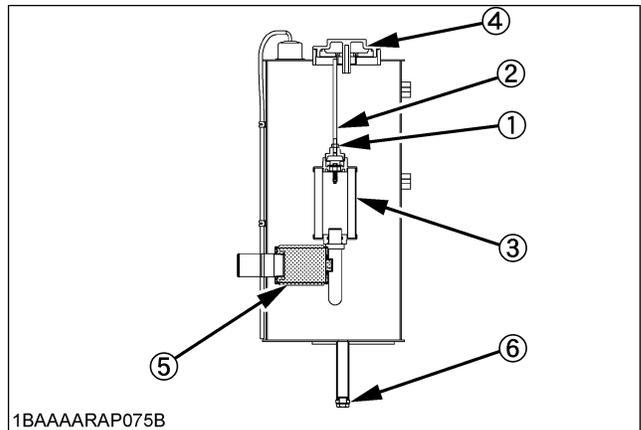


- (1) Set bolt
- (2) Filter support
- (3) Return filter
- (4) Cover
- (5) Suction filter
- (6) Drain plug with a magnet

3. Remove the cover of the hydraulic tank
4. With a fork wrench or similar, remove and replace the filter with new one.
5. Retighten the drain plug, and remove iron powder adhering to the magnet.
6. Fill oil through the oil filling opening on the top side of the tank.
7. Let the engine run for approx. 5 min. and check the oil level again.

IMPORTANT :

- Should dirt deposits be in the hydraulic tank, remove with the help of a clean cloth and light oil.

Hydraulic oil volumes	Hydraulic tank	38 L (10.04 US gal.)
	Whole oil volumes	53 L (14.0 US gal.)

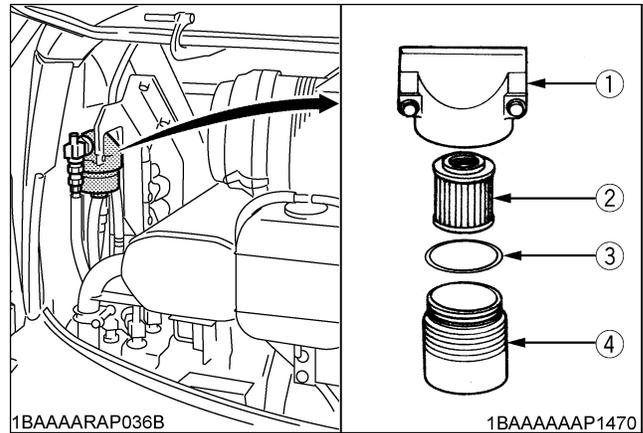

- (1) Head cover
- (2) Element
- (3) O-ring
- (4) Case

■ Replacing Hydraulic Pilot Filter Element



CAUTION

To avoid personal injury:

- Before replacing the element, wait long enough for the hydraulic fluid to cool down.

1. Remove the arch cover.
2. Remove the hydraulic oil tank cover.
3. Remove the pilot filter case from the head cover.
4. Wrench and pull out the element downward.
5. Replace the O-ring with a new one.
6. Apply a light coating of clean hydraulic oil to the O-ring and fit it to the case firmly. Be careful not to scratch the O-ring.
7. Install the case to the head cover firmly.
8. Let the engine run for approx. 3 minutes.
9. Check the oil level of hydraulic oil tank.


EVERY 1000 SERVICE HOURS OR ONCE A YEAR

■ Replacing Air Filter Element

Open the engine cover and remove the dust cover. Take out outer element and inner element (safety element).

Replace inner and outer element.

Installing the dust cover, be sure to its TOP mark (arrow) faces upward.

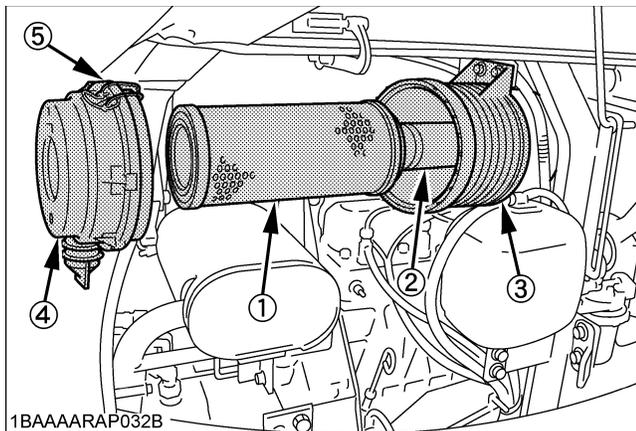

- (1) Outer element
- (2) Inner element (Safety element)
- (3) Case
- (4) Dust cover
- (5) Clamps

IMPORTANT :

- Replacement of the air filter components make be needed when machine is used in extreme conditions.

EVERY 1500 SERVICE HOURS

Do all 50 and 500 hour servicing at the same time.

■ Checking Fuel Injection Nozzle (Injection Pressure)

Consult your local KUBOTA dealer for this service.

EVERY 2000 SERVICE HOURS

Do all 50, 200, 500 and 1000 hour servicing at the same time.

■ Changing Front Idler and Track Roller Oil

NOTE :

- Contact your KUBOTA dealer for details.

■ Checking Alternator and Starter Motor

NOTE :

- Contact your KUBOTA dealer for details.

EVERY 3000 SERVICE HOURS

Do all 50, 200, 500, 1000 and 1500 hour servicing at the same time.

■ Checking Injection Pump

Consult your local KUBOTA dealer for this service.

ANNUAL SERVICE

■ Electrical Wiring and Fuses

Check the terminals periodically for proper connections. Loose wiring or damaged cables can cause improper functioning or short circuiting of the electrical system. Check wiring and replace damaged components immediately. If a fuse blows out soon after having been replaced, contact your nearest KUBOTA dealer. Do not use fuse other than specified.

BIENNIAL SERVICING




CAUTION

To avoid personal injury:

- Do not loosen the radiator cap before the radiator has cooled down sufficiently. Then only loosen the cap and allow enough time for the pressure in the system to be released. Now remove the cap completely.

■ Replacing Radiator Hoses and Hose Clamps

Replace radiator hoses and hose clamps every two years. If the hoses are swollen, hard or cracked, they must be replaced earlier.

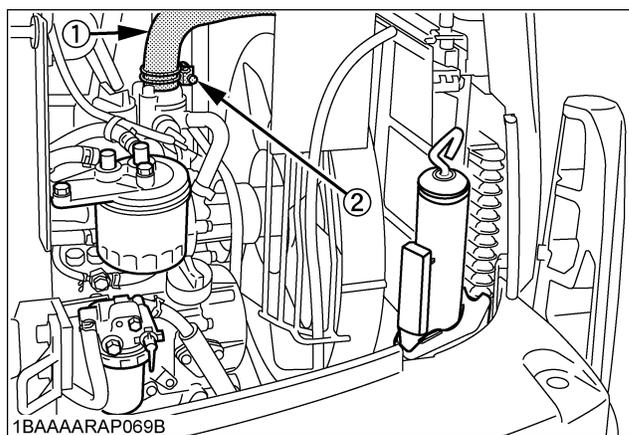

- (1) Radiator hoses
- (2) Hose clamps

■ Changing Radiator Coolant


CAUTION

To avoid personal injury:


- When using anti-freeze, put on some protection such as rubber gloves. (Anti-freeze contains poison.)
- If you accidentally swallowed anti-freeze, seek medical attention at once.
- When anti-freeze comes in contact with the skin or clothing, wash it off immediately.
- Do not mix different types of Anti-freeze. The mixture can produce chemical reaction causing harmful substances.
- Anti-freeze is extremely flammable and explosive under certain conditions. Keep fire and children away from anti-freeze.
- When draining fluids from the engine, place some container underneath the engine body.
- Do not pour waste onto the grounds, down a drain, or into any water source.
- Also, observe the relevant environmental protection regulations when disposing of anti-freeze.
- If swallowed, anti-freeze is poisonous to people, animals and birds.

Stop the engine then remove the key and wait until machine has cooled down completely.


1. Open the drain plug on the bottom of the radiator and drain coolant completely, Should a recovery tank be equipped, disconnect the line from the tank floor and then open the drain shutoff-valve.
2. To clean, rinse the radiator with water.
3. Close the drain plug and fill the radiator and the recovery tank with coolant fluid. Let the engine idle for about 5 min., stop the engine and remove the key then check the coolant level.
4. The shipped machine has been filled with 50% anti-freeze solution.

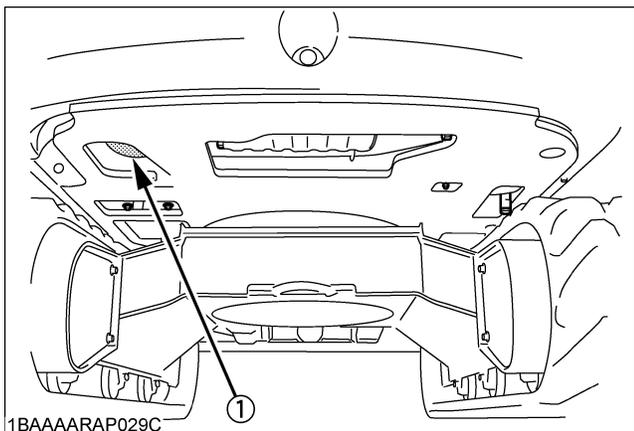

(1) Drain plug

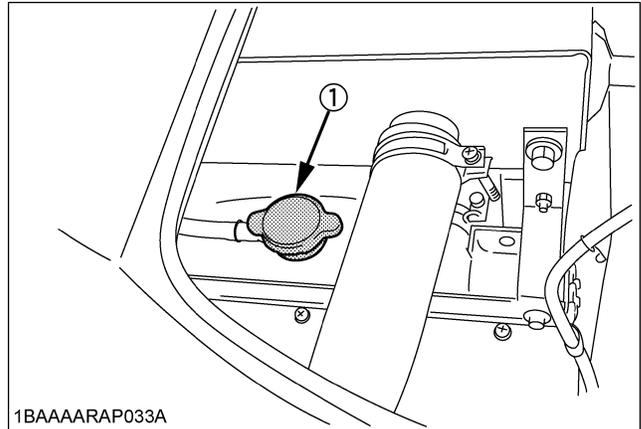

(1) Radiator cap

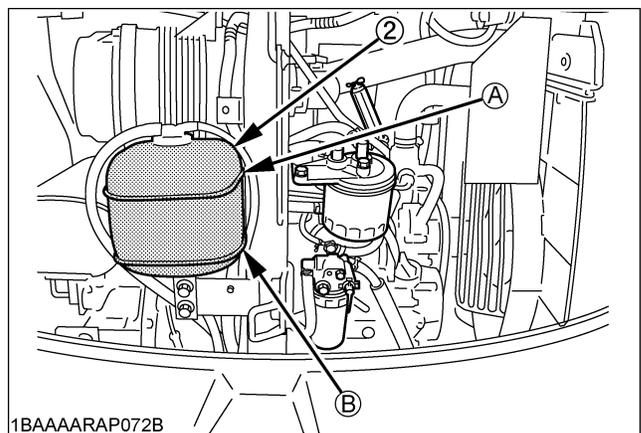

(2) Recovery tank

(A) Full
(B) Low

Radiator	approx. 4.3 L (1.14 US gal.)
Reserve tank	approx. 1.1 L (0.29 US gal.)


IMPORTANT :

- Do not operate the engine without coolant.
- To fill the radiator system and the reserve tank, use fresh water and anti-freeze fluid.
- When the anti-freeze is mixed with water, the anti-freeze mixing ratio must be less than 50%
- Tighten the radiator cap properly. If the cap is loosely or not properly fitted, overheating of the engine can result due to coolant fluid loss.

■ Replacing Fuel Hoses and Hose Clamps

Replace the hoses and clamps.

(See "Checking Fuel Line and Intake Air Line" in "EVERY 200 SERVICE HOURS")

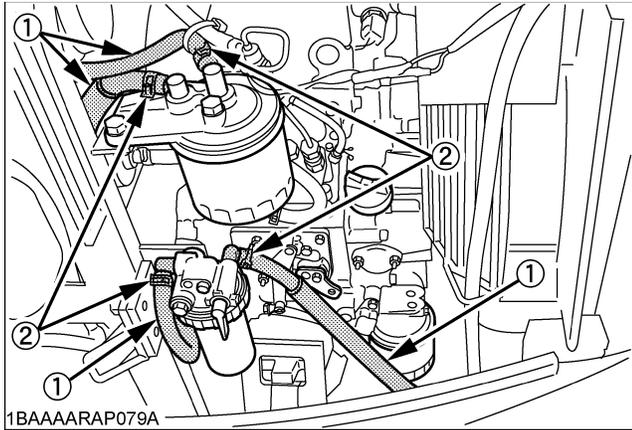


- (1) Fuel lines
- (2) Clamp bands

■ Replacing Intake Air line

Replace the hoses and clamps, if necessary.

(See "Checking Fuel Line and Intake Air Line" in "EVERY 200 SERVICE HOURS")

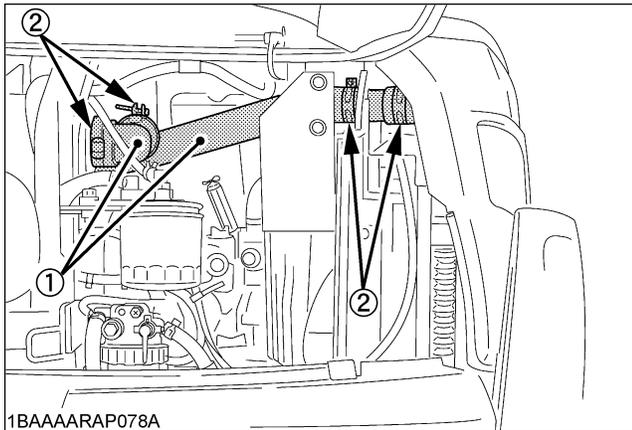


- (1) Hoses
- (2) Hose clamps

OTHER ADJUSTMENTS AND REPLACEMENTS

PURGING FUEL SYSTEM

1. Fill up the fuel tank with fuel.
2. Turn the starter key to the position "RUN".
3. The air in the fuel system will automatically be purged within one minute.

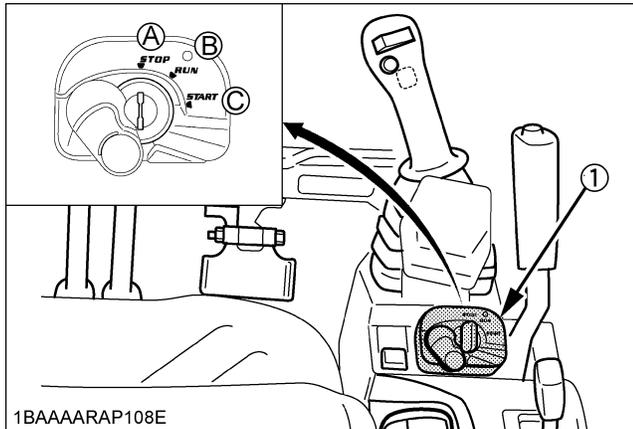

1BAAAAARAP108E

- (1) Starter switch
- (A) "STOP"
(B) "RUN"
(C) "START"

IMPORTANT :


- If the purging was insufficient, the engine stops operating after starting. In this case repeat steps (2) to (3) again.

ADJUSTMENT OF TRACKS

■ Rubber Tracks

Tension the tracks as specified:

1. Apply grease (2) to the grease fitting (1).

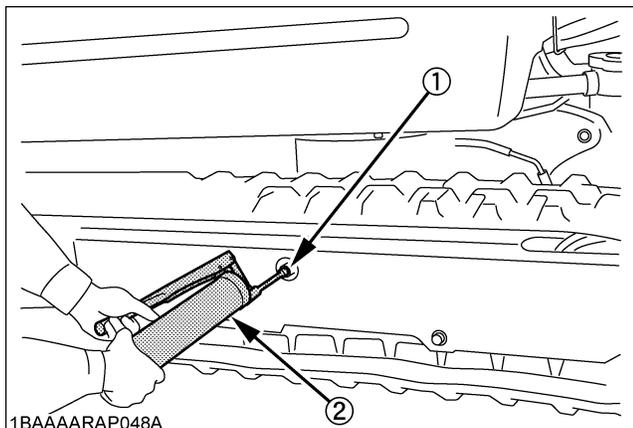

1BAAAAARAP048A

- (1) Grease fitting
(2) Grease gun (Option)


2. Tension the track in the lifted position, so that the distance "A" (clearance between the center track roller and the track surface of the track) is 10 to 15 mm (0.4 to 0.6 in.) (see illustration) In this case, the track seam is positioned on the top center between the idler and the sprocket.




DANGER

To avoid serious injury or death:

- Do not work under the machine in this condition.
- For your safety do not rely on hydraulically supported devices, they may leak down and suddenly drop or be accidentally lowered.

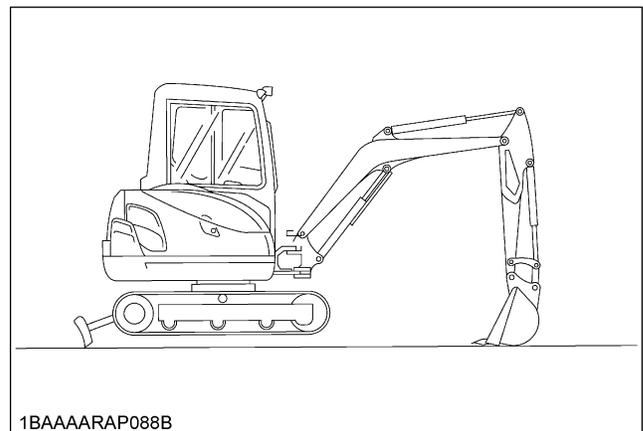

1BAAAAARAP088B

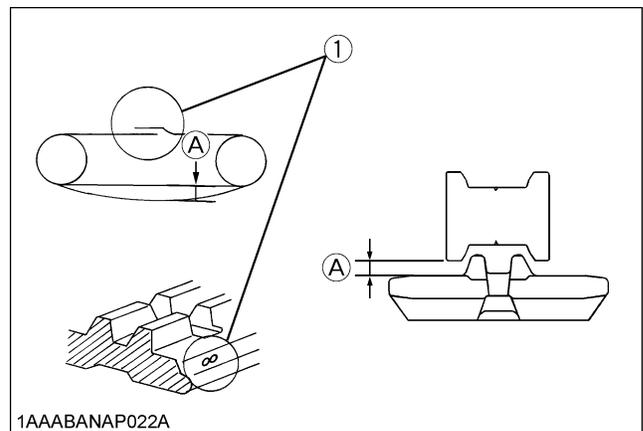

1AAABANAP022A

- (1) Seam (Mark "∞")

(A)	10 to 15 mm (0.4 to 0.6 in.)
-----	------------------------------

IMPORTANT :

- **Track seam**
The ends of the rubber track are joined with a seam. When adjusting the tracks, the seam must be positioned on the top midway between the idler and the sprocket. By machines equipped with an upper roller, the seam mark should be positioned over the upper roller.
If the seam is positioned incorrectly, the tracks will be tensioned to loosely, and a further readjustment will be necessary.
- Rotate the track after adjustment one to two times to check the tension. To loosen the rubber tracks, follow the same method as for steel tracks.
- Additionally following points are to be observed when adjusting rubber tracks.
 - (1) If the track loosen more than 25 mm (1.0 in.), readjust them.
 - (2) Check track tension 30 hours after initial use and readjust if necessary. Check and adjust thereafter every 50 service hours.


Special Information when Using Rubber Tracks

1. When turning, make a slow swing turn. Avoid spin turns to reduce lug wear and entry of dirt.
2. The relief valve may be activated if too much dirt and sand clog the tracks. In this case move the machine for a short distance straight backwards to let the earth and sand fall off, then a turn can be made.
3. Avoid using rubber track on riverbeds, stony underground, ferro-concrete and on iron plates. Increased track wear or damage may occur.

Steel Tracks

◆ Track pad plate tension

1. Apply grease (2) to the grease fitting (1).

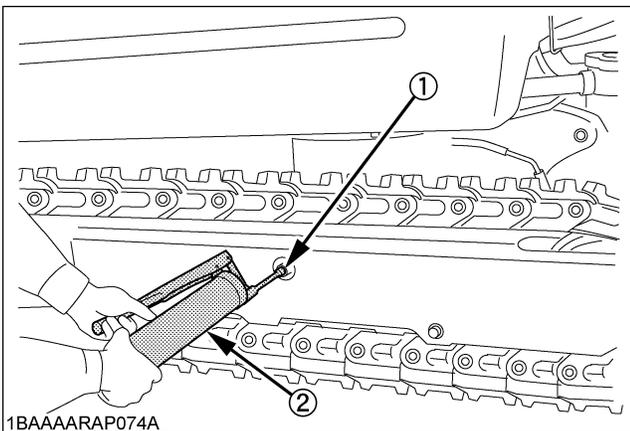


(1) Grease fitting
(2) Grease gun (Option)

2. To check the track tension, the track must be lifted from the ground as shown. The track tension is correct if the clearance between the outer end of the track roller and the track interior surface corresponds to the dimension specified in the table below.


! DANGER

To avoid serious injury or death:

- Do not work under the machine in this condition.
- For your safety do not rely on hydraulically supported devices, they may leak down and suddenly drop or be accidentally lowered.

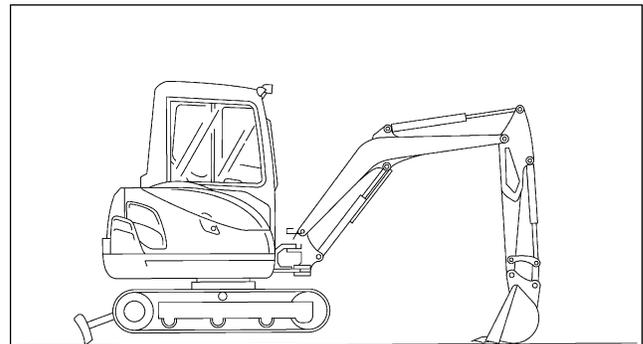

1BAAAAARAP088B

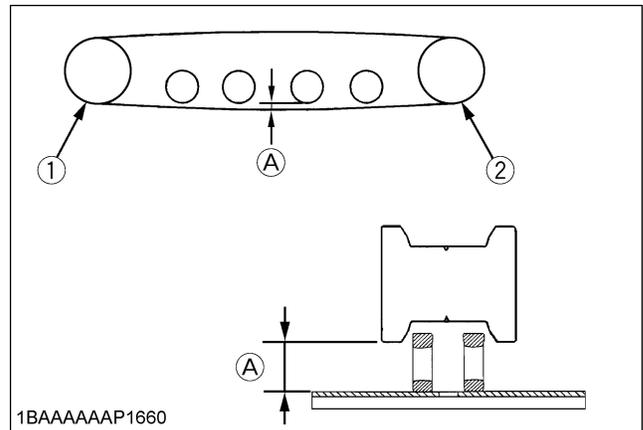

1BAAAAAAP1660

(1) Drive sprocket
(2) Idler

(A)	75 to 80 mm (3.0 to 3.2 in.)
-----	------------------------------

◆ To loosen the tracks, follow following procedure:



CAUTION

To avoid personal injury:

- Do not loosen the grease fitting completely or too quickly. Otherwise grease under high pressure in the tension cylinder could squirt out.
- Make sure that no obstacles, such as stones are caught in the track. Remove such obstacles before adjusting the track tension.

1. Loosen the bolt of the cover and remove the cover.
2. Using a socket wrench, loosen the grease fitting a few turns.
3. When grease oozes out from the thread, rotate the track and loosen the track in the lifted position (see illustration).

After adjustment is completed:

After adjusting track tension (See "ADJUSTMENT OF TRACKS")

Using the socket wrench, tighten the grease fitting.

Tightening torque must be between 1000 to 1100 kgf-cm. (72.3 to 79.6 ft-lbs.)

IMPORTANT :

- If the tracks are too tight, wear is increased.
- If the tracks are too loose, the track pads may collide with the sprocket, wear is increased.
The track may dislocate or come off.
- Clean the track after every use.
- Should the track tension be high due to sticking mud, lift the track with the help of the boom, arm and bucket, idle the engine and remove mud from the track, especially from the openings of the link plate carefully.

CHANGING THE BUCKET



CAUTION

To avoid personal injury:

- When the coupling pins are removed or installed, chips may come off. Always use gloves, goggles and a helmet.
- When the change of the equipment must be performed with the engine running, always work as a 2-person team.
One person sits in the operator's seat and the other works on the machine.
- Do not use your fingers to center the holes, since they may be injured or even cut in case of sudden or uncontrolled movements.
- Read the manual of the attachment to do a correct operation safely when other attachments are installed instead of Kubota specified bucket.

FUSES



CAUTION

To avoid personal injury:


- When changing fuse, stop the engine and turn the key in position "STOP". Keep the pilot control lock lever in the "LOCKED" position.

■ Replacing Fuses

1. Remove the cover of the fuse box.
2. Replace the burnt out fuse with a fuse having the same capacity.

■ Fuse Capacities and Circuits


15A Auxiliary	10A ECU (AC)
15A Wiper / Washer	5A Relay
15A Electrical Outlet	5A Fuel Pump
5A Meter (+B)	10A Alternator
10A Heater	5A Lever Lock
20A Work Lamp	
5A ECU (+B)	5A Starter
5A Horn SW	
10A Horn	
5A Room Lamp	

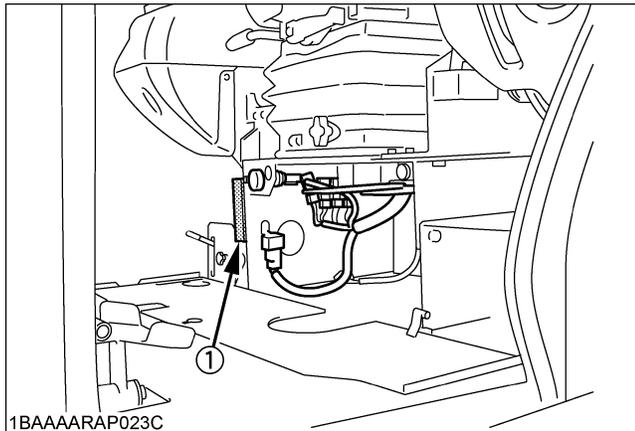

(1) Fuse box

■ Slow Blow Fuse

Slow blow fuse is provided to protect the electrical circuits. If the fusible link is blown, check the electrical circuits for trouble and then replace with a new compatible slow blow fuse.

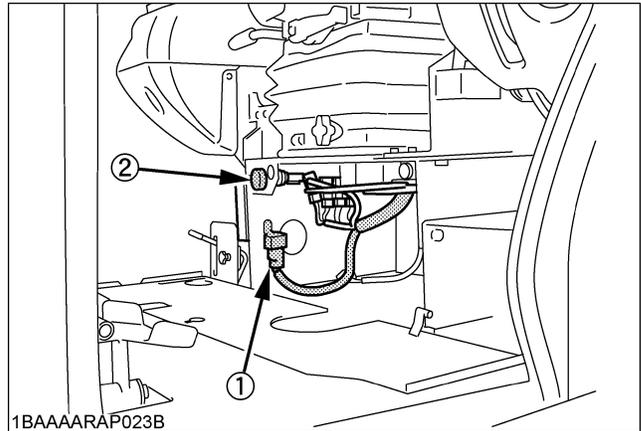

(1) Slow blow fuse (60 A)
(2) Auxiliary electric

NOTE :

- If the machine keeps idling on the reserve power, the battery gets discharged. Raise the engine rpm.

■ Auxiliary Electric

Max power is less than 120 W including the "Beacon" (Auxiliary electric).

If you need another auxiliary electric, contact your KUBOTA dealer for details.

TROUBLESHOOTING

If the mini-excavator does not show the desired performance, or when trouble arises, refer to the table below and undertake appropriate measures.

Trouble		Cause	Solution
Engine	Starting difficulties	Pilot control lock lever in "UNLOCK" position	* Bring pilot control lock lever into "LOCKED" position
		Fuel is too viscous	* Check fuel tank and filter * Remove impurities and water * If necessary, replace filter
		Air or water in the fuel system	* Remove water from the fuel tank * Check fuel pipe joint bolts and nuts for looseness * Purging of the fuel system (for fuel filter and injection pump see "PURGING OF THE FUEL SYSTEM" in the chapter "OTHER ADJUSTMENTS AND REPLACEMENTS".)
		Oil viscosity is too high the engine runs sluggishly in winter	* Pour hot water over the radiator
		Battery is almost dead; insufficient compression	* Recharge battery
	Insufficient engine power	Low fuel level	* Check fuel and add if necessary
		Clogged air cleaner	* Clean the air filter element
	Engine suddenly stops	Low fuel level	* Check fuel and add if necessary * Purge the fuel system
	Abnormal exhaust gas colour	Poor fuel	* Use high quality fuel
		Too much engine oil	* Drain engine oil to prescribed oil level
	Water temperature in red zone (Overheating)	Defective seal of the water pump	* Replace
		Worn or torn fan belt	* Adjust or replace
		Thermostat is defect	* Replace
		Coolant level too low	* Fill to prescribed level
		Radiator grill or fins are clogged	* Clean
		Coolant is contaminated with rust from the cylinder head or crank case	* Replace coolant fluid and add anti-rust
		Defective radiator cap (Evaporation)	* Replace
		Corroded coolant pipes	* Clean
		Continuous operation under full load	* Reduce load
		Cylinder head gasket is damaged (Coolant loss)	* Replace
Engine oil level too low		* Fill to prescribed level	
Maladjustment of fuel injection		* Readjust ignition timing	
Use of poor fuel		* Use prescribed fuel	


Hydraulic System	Boom, arm, bucket, drive, swing and dozer power is too low	Hydraulic oil level too low	* Add oil
		Leakages of hoses and / or joints	*Replace hose or joint
	Swing motor and front attachment does not work	Lock lever in "LOCK" position	*Bring lock lever into "UNLOCK" position
Drive System	Deviation of drive direction	Blocked through stones	* Remove
		Track too loose or too tight	* Adjust accordingly
	Drive lever does not move	Lock lever in "LOCK" position	* Bring lock lever into "UNLOCK" position

KUBOTA I.C.S. NAVIGATION LIST OF ERROR CODE

If an error occurs with the machine, one of the following error codes appears in the LCD.
In case of a trouble, immediately contact your local dealer for inspection and repair.

	LCD	LED	Problem / Error	Solution #1	Solution #2
1	CAN system error 		The Controller Area Network (CAN) has developed a fault. Measured values may be incorrect and switches may not function.	The machine can be started and driven. Do not perform any work with the machine.	Inform your KUBOTA dealer immediately.
2	Feed fuel 		This message appears when the fuel level is low and prompts the operator to refuel.	---	Refuel the excavator.
3	Periodic check soon (notice) 		This message appears 10 hours before the periodic check interval. This message means that the regular service is due shortly.	Operate the machine as usual.	Ask your KUBOTA dealer about the relevant parts. Run the maintenance procedure.
4	Periodic check passed (warning) 		This message means that the regular service is due.	The machine can be operated but service must be carried out urgently.	Ask your KUBOTA dealer about the relevant parts. Run the maintenance procedure.
5	Warning temperature rising 		The temperature of the coolant is higher than normal.	Operate the machine only with reduced loads until the temperature is normal again.	---
6	---	---	---	---	---
7	---	---	---	---	---
8	---	---	---	---	---

	LCD	LED	Problem / Error	Solution #1	Solution #2
9	Clock setting request No display item		Power was interrupted and the clock now has to be set again.	In order to set the clock, press the user setting switch.	---
10	---	---	---	---	---
11	Raise the pilot control lever lock No display item	 (yellow)	This message indicates a step in a procedure.	Raise the pilot control lock lever; the indicator goes out.	---
12	---	---	---	---	---
13	Lower the pilot control lever lock No display item	 (yellow)	This message indicates a step in a procedure.	Lower the pilot control lock lever; the indicator goes out.	---
14	Oil pressure too low E: 014	 (red) + 	The engine oil pressure is too low.	Stop the engine immediately. The engine may have developed a fault.	Inform your KUBOTA dealer immediately.
15	Overheat E: 015		The machine is overheated and must cool off by idling.	Allow the machine to cool off by idling. Do not switch the engine off as the coolant could then boil over.	Clean the radiator and check the coolant. Refill the radiator with coolant by its boiled-over amount. Unclog the radiator and other components before use again. Check also the hydraulic system for oil leak and other troubles. If an oil leak is found, immediately contact your local dealer for repair.

	LCD	LED	Problem / Error	Solution #1	Solution #2
16	Charging system error 		The charging system has developed a fault.	Check the V-belt. When the V-belt is OK, let the engine run until the indicator goes out.	If the indicator does not go out, inform your KUBOTA dealer immediately.
17	Fuel sensor error 		The fuel sensor has developed a fault; the fuel gauge does not appear in the display.	Press the display selector switch to return to the default display.	Inform your KUBOTA dealer immediately.
18	Water temperature sensor error 		The coolant temperature sensor has developed a fault; the coolant temperature gauge does not appear in the display.	Press the display selector switch to return to the default display. The functions of the machine are stable but overheating cannot be excluded.	Inform your KUBOTA dealer immediately.
19	---	---	---	---	---
20	Lever lock system error 		The electrical system in the pilot control lock lever has developed a fault.	The engine can be started but the machine cannot be set in motion.	Inform your KUBOTA dealer immediately.
21	Travel 2 speed system error 		The electrical system in the travel speed has developed a fault.	The machine can only be set in motion at low speed.	Inform your KUBOTA dealer immediately.
22	Versatile operating switch system error 		The multifunctional switch has developed a system fault.	The machine can be operated but the auxiliary port will not function.	Inform your KUBOTA dealer immediately.
23	Auxiliary port 1 system error 		Auxiliary port 1 has developed a fault.	The machine can be operated but auxiliary port 1 will not function.	Inform your KUBOTA dealer immediately.
24	Auxiliary port 2 system error 		Auxiliary port 2 has developed a fault.	The machine can be operated but auxiliary port 2 will not function.	Inform your KUBOTA dealer immediately.

	LCD	LED	Problem / Error	Solution #1	Solution #2
25	<p>Overvoltage</p> 	 (red)	<p>This is a warning that a higher voltage (from a 24-V battery, for example) is being applied to the electric circuit, or that there is a problem with the alternator.</p>	<p>Switch the engine off immediately and check the battery and the alternator. Restart the engine.</p>	<p>If the indicator lights up again after restarting, inform your KUBOTA dealer immediately.</p>
26	---	---	---	---	---
27	<p>External 5-V system error</p> 	 (red)	<p>The 5-V sensor supply line has developed a system fault. The main functions are not available.</p>	<p>The machine can be started and driven. Do not perform any work with the machine.</p>	<p>Inform your KUBOTA dealer immediately.</p>
28	<p>External 12-V system error</p> 	 (red)	<p>The 12-V sensor supply line has developed a system fault. The main functions are not available.</p>	<p>The machine can be started and driven. Do not perform any work with the machine.</p>	<p>Inform your KUBOTA dealer immediately.</p>
29	<p>Starting the engine</p> 	 (yellow)	<p>This error code indicates a step in a procedure.</p>	<p>Start the engine; the indicator goes out.</p>	---

◆ Service hour meter

When the hour meter has counted up to the hours circled in the maintenance list below, the message appears. The message shows up as follows.

No.	Check points		Measures	Hour meter indicator						Interval	
				50	100	250	500	600	750		1000
1	Engine oil		change				○			○	every 500 hrs
2	Hydraulic oil									○	every 1000 hrs
3	Air filter element	Outer element	replace							○	every 1000 hrs
		Inner element								○	every 1000 hrs
4	Drive unit oil		change		●			○			every 500 hrs
5	Engine oil filter		replace				○			○	every 500 hrs
6	Hydraulic return filter cartridge					●			○		every 500 hrs
7	Hydraulic suction filter element									○	every 1000 hrs

● First operation

The message appears. The message shows up as follows.



(The message reappears on the hour meter designated next.)

NOTE :

- The maintenance message disappears automatically in about 10 seconds.
- When the key is turned from "**STOP**" to "**RUN**", the maintenance message reappears and disappears again automatically in about 10 seconds.
- When the key is turned from "**STOP**" to "**RUN**" repeatedly 10 times, the message disappears.

◆ In case the service hour meter replaced due to any trouble with it, the meter is set to "0". Contact your KUBOTA dealer for details.

OPERATION UNDER COLD WEATHER CONDITIONS

PREPARATION FOR OPERATION IN COLD WEATHER

1. Replace engine oil and hydraulic oil with those of viscosities suitable for cold weather.
2. In cold weather, battery power drops, and the battery fluid may freeze if the battery is not sufficiently charged. To prevent the battery fluid from freezing, be sure to keep the battery charged at least 75% or more of its capacity after operation. To ease next starting, it is recommended to keep the battery stored in closed or heated rooms. If the battery fluid level is too low, do not add after operation, but add with the engine running before the next operation.
3. Add anti-freeze to coolant in the radiator and recovery tank, if the ambient temperature is expected to drop below 0°C (32°F). Mixing ratio of water and anti-freeze depends on the expected ambient temperature.

- Mixing ratio between water and anti-freeze

Ambient Temperature	°C (°F)	-5 (+23)	-10 (+14)	-15 (+5)	-20 (-4)	-25 (-13)	-30 (-22)	-35 (-31)
Antifreeze %		30	30	30	35	40	45	50
Water %		70	70	70	65	60	55	50

IMPORTANT :

- Use permanent anti-freeze or long-life coolant.
- Drain the coolant completely and clean the inside of the radiator, then fill with the water and anti-freeze mixture.
- The anti-freeze acts as an anti-corrosive, it is not necessary to add an additive to the water and anti-freeze mixture.
- See "Coolant check" under "DAILY CHECKS" in "MAINTENANCE" for radiator fill volumes.

PROCEDURE AFTER DONE WORK

Clean the excavator thoroughly after work and wipe dry. Otherwise mud and earth on the tracks could freeze if the temperature drops below the 0°C (32°F) mark. Operation of the excavator is then not possible. Store the excavator in a dry place; if not possible, store on wooden planks or on mats. If the excavator is kept on damp or muddy ground, the tracks could freeze overnight. Operation of the excavator is then not possible. Furthermore the drive unit may be damaged.

Additionally, the piston rods of the hydraulic cylinders must be rubbed dry. Otherwise severe damage could occur if dirty water seeps through the seals.

LONG STORAGE



CAUTION

To avoid personal injury:

- Do not clean the excavator with the engine running.
- To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building without proper ventilation.
- When storing, remove the key from the starter switch to avoid unauthorized persons from operating the excavator and getting injured.
- Bring the excavator on a firm, flat, and level surface. Lower the attachments and dozer blade on the ground.

■ Should the Excavator be Stored for a Longer Period of Time, Observe Following Procedures:

1. The whole excavator should be cleaned thoroughly and in all cases stored indoors. If the excavator has to be kept outdoors, lay out wooden planks on even ground, place the excavator on the planks and cover completely.
2. Do an oil change and grease the excavator.
3. Heavily grease the visible section of the cylinder rods.
4. Remove the battery and store indoors.
5. If it is expected that the temperature will sink below the 0°C (32°F) mark, add anti-freeze or drain coolant completely.

IMPORTANT :

- Wash the excavator after stopping the engine.
If you wash the excavator while running the engine, splashing water gets into the air cleaner through its intake and cause engine damage.
Carefully wash and do not splash water over the air cleaner while the engine is running.

■ Observe Following Procedures when the Machine is to be Operated after Long Storage.

1. Wipe off the grease from the hydraulic cylinder rods.
2. Turn on the engine and operate the attachments and the drive mechanisms under no load in order to circulate the hydraulic oil.
(If the machine is stored for longer than one month, do steps 1 and 2 once every month.)

Periodic replacement of important component parts

To ensure safety in operation, you are strongly requested to inspect and service the machine at regular intervals. For added safety, ask your KUBOTA dealer to replace the following important component parts.

These parts are prone to degradation in material or subject to wear and tear with time. It is difficult to judge how much they have been affected at regular inspection. It is therefore necessary to replace them with new ones, whether wear is visible or not after a specified time of use.

If any of them is found worn to be even before the specified use, they must be repaired or replaced the same as other parts.

If any of the hose clamps are found deformed or cracked, the hose clamps must also be replaced.

For the hydraulic hoses other than the ones to be replaced periodically, inspect them for the following points. If found loose or very worn, tighten and / or replace the hose.

When replacing the hydraulic hoses, change their O rings and sealing components with new ones.

For replacement of the important parts, contact your KUBOTA dealer.

- At the following periodic inspections, check the fuel hoses and hydraulic hoses as well.

Inspection Interval	Check points
Daily Checks	Oil leak at fuel and hydraulic hose connections and points
Every month	Oil leak at fuel and hydraulic hose connections and points Damages at fuel and hydraulic hose (cracks, chafing)
Every year	Oil leak at fuel and hydraulic hose connections and points Interference, deformation, degradation, twist and other damages (cracks, chafing) of fuel and hydraulic hoses

List of important component parts

No.	Component parts	Used place	Q'ty	Period
1	Fuel hose	Fuel tank - Water separator	1	Every 2 years or 4000 hours
		Water separator - Fuel filter	1	
		Fuel filter - Fuel pump	1	
		Fuel pump - Fuel nozzle	1	
		Fuel nozzle - Fuel tank	2	
2	Hydraulic hose (suction)	Tank - Main pump	1	
3	Hydraulic hose (delivery)	Main pump - Control valve	3	
		Main pump - Pilot filter	1	
		Pilot filter - Change valve	1	
4	Hydraulic hose (Boom cylinder)	Control valve - Boom cylinder	2	
5	Hydraulic hose (Arm cylinder)	Control valve - Pipe, Arm	2	
		Pipe, Arm - Arm cylinder	2	
6	Hydraulic hose (Bucket cylinder)	Control valve - Pipe, Bucket	2	
		Pipe, Bucket - Bucket cylinder	2	
7	Hydraulic hose (Swing cylinder)	Control valve - Swing cylinder	2	
8	Hydraulic hose (Dozer cylinder)	Control valve - Rotary joint	2	
		Rotary joint - Pipe	2	
		Pipe - Dozer cylinder	2	
9	Hydraulic hose (Service port)	Control valve - Pipe, SP	2	
		Pipe, SP - Pipe, Arm	2	
10	Hydraulic hose (Swivel motor)	Control valve - Swivel motor	2	
11	Hydraulic hose (Truck motor)	Rotary joint - Truck motor	4	

To prevent serious damage to the hydraulic system, use only a KUBOTA genuine hydraulic hose.

RECOMMENDED OILS

IMPORTANT :

1. Before delivery the hydraulic oil used was Shell Tellus S2M46.
2. Use engine oil API service classification CF/CF-4 or better and SAE10W-30.
3. Use SAE 90 (API, GL-4/GL-5) as drive unit oil for all seasons.
4. Other than the oil mentioned below, JCMAS HK certified oil and GK certified grease can also be used. Check the Japan Lubricating Oil Society (JALOS) website for more details.

	Application	Viscosity	KTC recommends	Shell	Mobil	Exxon	MIL-Standard	
Gear oil	In winter or by low temperatures	SAE 75		Shell Oil S8643	Mobilube HD80W-90		MIL-L-2105C	
		SAE 80		Shell Spirax HD80W	Mobilube HD80W-90			
	In summer or by high ambient temperatures	SAE 90	Excavator Gear Oil 90 Part Number 70000-68700 (1 Quart)		Shell Spirax HD90	Mobilube 46 Mobilube HD80W-90		MIL-L-2105 MIL-L-2105C
		SAE 140			Shell Spirax HD140	Mobilube HD85W-140 Mobilube HD80W-140		MIL-L-2105C MIL-L-2105C
	All-weather gear oil	Multi-purpose		Shell Spirax HD80W Shell Spirax HD85W	Mobilube HD80W-90	GX80W-90	MIL-L-2105C	
	Hydraulic oil	In winter or by low temperatures	ISO 32	Excavator Hydraulic Fluid 32 Part Number 70000-68720 (5 Gal Pail) Part Number 70000-68740 (55 Gal Drum)	Shell Tellus S2M32 or Shell Tellus S2MX32	Mobil DTE-Oil 13	NUTO H32	
ISO 46			Excavator Hydraulic Fluid 46 Part Number 70000-68760 (5 Gal Pail) Part Number 70000-68780 (55 Gal Drum)	Shell Tellus S2M46 or Shell Tellus S2MX46	Mobil DTE-Oil 15	NUTO H46		
In summer or by high ambient temperatures		ISO 68		Shell Tellus S2M68 or Shell Tellus S2MX68	Mobil DTE-Oil 16	NUTO H68		
Grease				Shell Alvania EP2	Mobilux EP2	BEACON Q2		
Fuel				Light oil No. 2-D (ASTM D975)				
Fuel under -5°C (+23°F)				Light oil No. 1-D (ASTM D975)				

NOTE :◆ **Engine Oil:**

- Oil used in the engine should have an American Petroleum Institute (API) service classification and Proper SAE Engine Oil according to the ambient temperatures.

Above 25 °C (77 °F)	SAE 30 or SAE 10W-30, SAE 15W-40
0 °C to 25 °C (32 °F to 77 °F)	SAE 20 or SAE 10W-30, SAE 15W-40
Below 0 °C (32 °F)	SAE 10W or SAE 10W-30, SAE 15W-40

- Refer to the following table for the suitable API classification engine oil according to the engine type (with internal EGR, external EGR or non-EGR) and the fuel.

Fuel used	Engine oil classification (API classification)	
	Oil class of engines except external EGR	Oil class of engines with external EGR
Ultra Low Sulfur Fuel [<0.0015% (15 ppm)]	CF, CF-4, CG-4, CH-4, CI-4 or CJ-4	CF, CI-4 or CJ-4 (Class CF-4, CG-4 and CH-4 engine oils cannot be used on EGR type engines)

EGR: Exhaust Gas Re-circulation

	except external EGR	with external EGR
Model	KX71-3	---

◆ **Fuel:**

- Cetane number of 45 is minimum. Cetane number greater than 50 is preferred, especially for temperatures below -20 °C (-4 °F) or elevations above 1500 m (5000 ft).
- Diesel fuels specified to EN 590 or ASTM D975 are recommended.
- No.2-D is a distillate fuel of lower volatility for engines in industrial and heavy mobile service. (SAE J313 JUN87)

BIODIESEL FUEL (BDF)

B0-B20 Biodiesel fuels (BDF): mixed diesel fuels containing 20% or less biodiesel can be utilized under the following conditions.

IMPORTANT :

- Refueling and handling fuel should be done with caution in order to avoid contact with the fuel and spillage that could create a potential environmental or fire hazard. Wear appropriate protective equipment when refueling.
- ◆ Applicable BDF:
 1. Blended diesel fuels containing 6% through 20% BDF (B6 - B20) which comply with American Society for Testing and Materials (ASTM) D7467 Standard, as revised, can be used without adversely affecting the performance and durability of the engine and fuel system components.
 2. Any mineral oil diesel fuel, if used, must conform to ASTM D975 (or the European EN590) Standard, as revised. B100 fuel used to make Biodiesel blended fuels must meet ASTM D6751 (or EN14214) Standard, as revised. The final blended fuel B20 must conform to ASTM D7467 Standard, as revised. Straight vegetable oil is NOT allowed in any blended fuel.
 3. Allowable blended fuel is mineral oil diesel fuel blended with B100 (i.e. 100% BDF). The blended fuel ratio shall be less than 20% B100 and 80% or more diesel fuel. The B100 source used for Biodiesel blends must be purchased from an accredited BQ-9000 marketer or producer. More information about qualified marketer(s) and producer(s) can be found at <http://www.bq-9000.org>.
- ◆ Preparation:
 1. Before using BDF concentrations greater than B5, you are advised to replace the engine oil, engine oil filter and fuel filter with new oil and filters. For replacement procedures, refer to the "REGULAR CHECKS AND MAINTENANCE WORK" section.
- ◆ Product Warranty, Emission and Other Precautions:
 1. The engine emission control system was certified according to current regulations based on the use of non-BDF. When using BDF, the owner is advised to check applicable local and federal emission regulations and comply with all of them.
 2. BDF may cause restricted or clogged fuel filters during cold weather conditions, resulting in the engine not operating properly.
 3. BDF encourages the growth of microorganisms which may cause degradation of the fuel. This in turn may cause fuel line corrosion or reduce fuel filter flow earlier than expected.
 4. BDF inherently absorbs moisture which may cause degradation of the fuel earlier than expected. To avoid this, drain the water separator and fuel filter port often.
 5. Do not use Biodiesel concentrations higher than 20% (i.e. greater than B20). Engine performance and fuel consumption will be affected, and degradation of the fuel system components may occur.
 6. Do not readjust the engine fuel control system as this will violate emission control levels for which the equipment was approved.
 7. Compared with soybean-based and rapeseed-based feedstock, palm oil-based feedstock has a thicker consistency (i.e. higher viscosity) at lower temperatures. Consequently, fuel filter performance may be reduced, particularly during cold weather conditions.
 8. The KUBOTA Warranty, as specified in the Owner's Warranty Information Guide, only covers defects in product materials and workmanship. Accordingly, any problems that may arise due to the use of poor quality fuels that fail to meet the above requirements, whether biodiesel or mineral oil based, are not covered by the KUBOTA Warranty.
- ◆ Routine handling:
 1. Avoid spilling BDF onto painted surfaces as this may damage the finish. If fuel is spilled immediately wipe clean and flush with soapy water to avoid permanent damage.
 2. When using BDF, you are advised to maintain a full tank of fuel, especially overnight and during short term storage, to reduce condensation within the tank. Be sure to tighten the fuel cap after refueling to prevent moisture build up within the tank. Water in the Biodiesel mixture will damage fuel filters and may damage engine components.


- ◆ Maintenance Requirements when using BDF B0 through B5:
Follow the oil change intervals recommended by referring to the "MAINTENANCE" section. Extended oil change intervals may result in premature wear or engine damage.
- ◆ Maintenance Requirements when using BDF B6 through B20:
The maintenance interval for fuel related parts changes.
See the table below for the new maintenance interval.

Items		Interval	Remarks
Fuel filter cartridge	Replace	every 250 hrs	
Fuel line	Check	every 100 hrs	
	Replace	every 1 year	Consult your local KUBOTA Dealer for this service.

- ◆ Long Term Storage:
 1. BDF easily deteriorates due to oxygen, water, heat and foreign substances.
Do not store B6 through B20 longer than 1 month and B5 longer than 3 months.
 2. When using B6 through B20 and storing the machine longer than 1 month, drain the fuel from the tanks and replace with light mineral oil diesel fuel.
Subsequently, run the engine at least 30 minutes to remove all of the Biodiesel from the fuel lines.
 3. When using B5 fuel and storing machine longer than 3 months, drain the fuel from the tanks and replace with light mineral oil diesel fuel.
Subsequently, run the engine at least 30 minutes to remove all of the Biodiesel from the fuel lines.

APPENDICES

MAIN DIMENSIONS

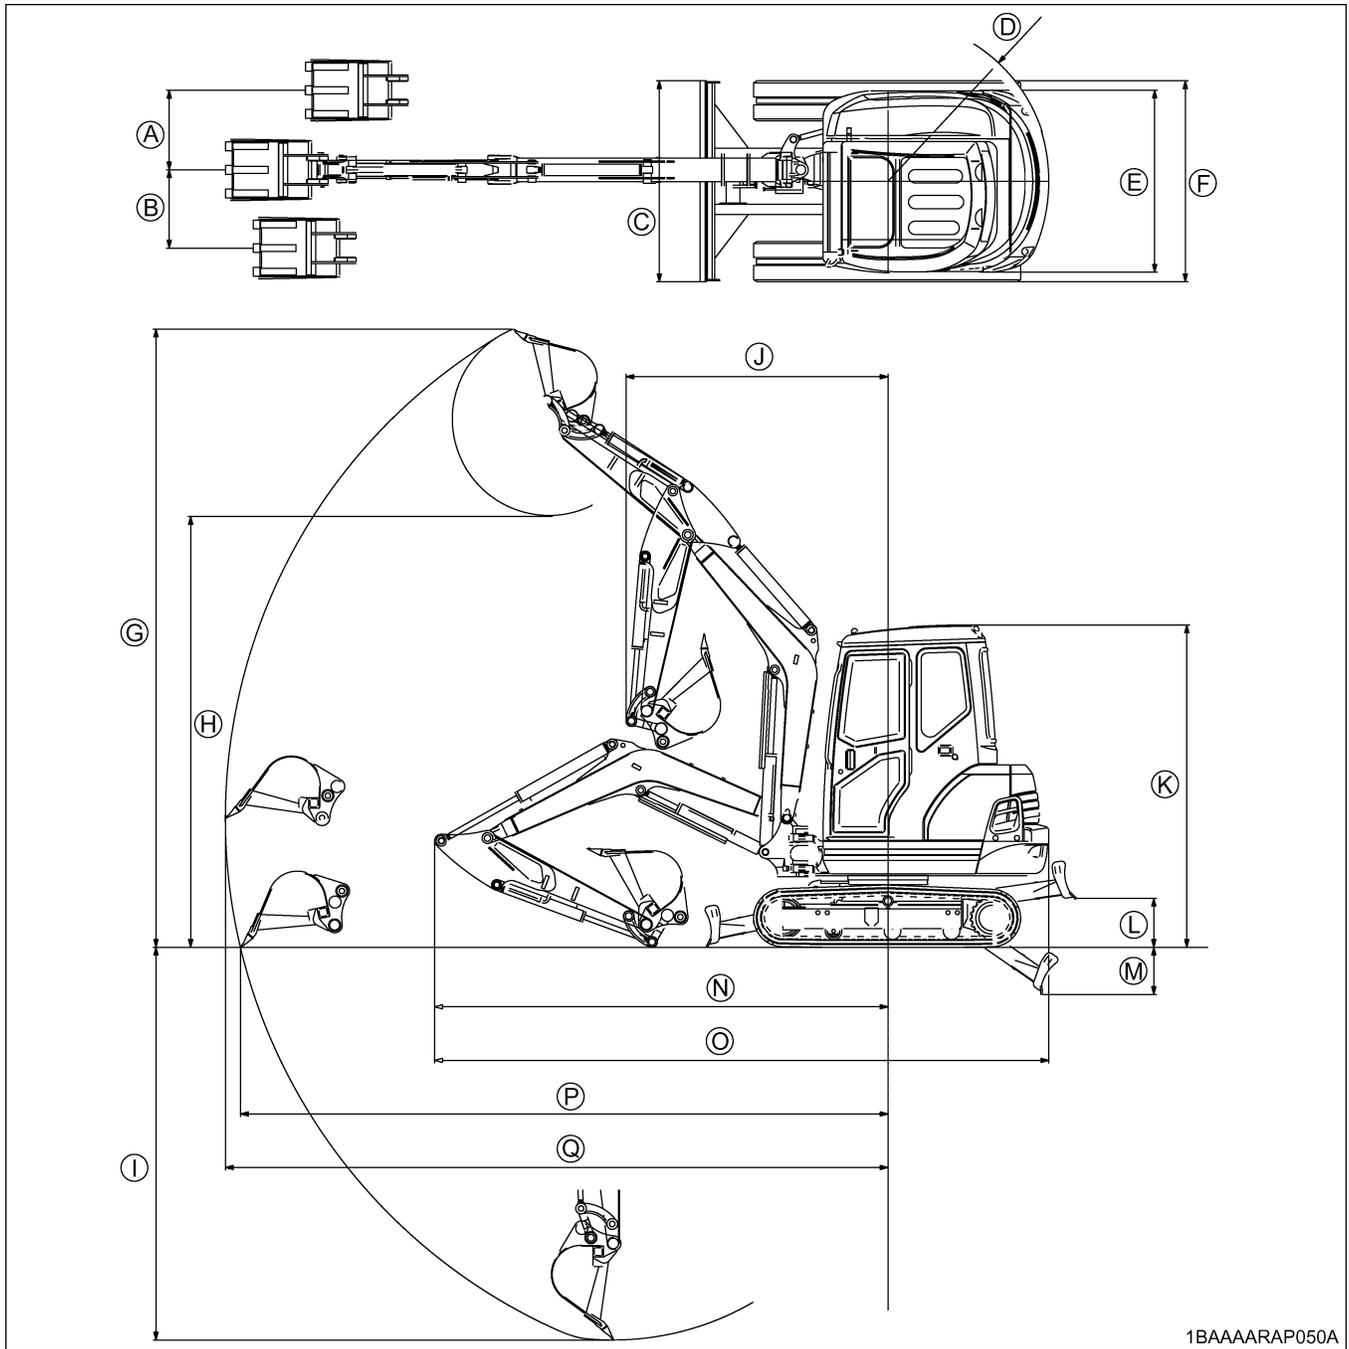

With rubber track.

mm (in.)

	(A)	(B)	(C)	(D)	(E)	(F)	(G)	(H)	(I)	(J)	(K)	(L)	(M)	(N)	(O)	(P)	(Q)
KX71-3	600 (23.6)	590 (23.2)	1500 (59.1)	1210 (47.6)	1360 (53.5)	1500 (59.1)	4700 (185.0)	3180 (125.2)	2970 (116.9)	1940 (76.4)	2410 (94.9)	340 (13.4)	310 (12.2)	3350 (131.9)	4550 (179.1)	4880 (192.1)	4990 (196.4)

LIFTING CAPACITY

1. The lifting capacities are based on ISO 10567 and do not exceed 75% of the static tilt load of the machine or 87% of the hydraulic lifting capacity of the machine.
2. The strokes are as follows.
 - (1) The load point corresponds to the front bolt part of the arm.
 - (2) The machine positions are (i) over - front (Blade down), (ii) over - front (Blade up), and (iii) over - side.
 - (3) The operating cylinder is the boom cylinder.
3. The bucket of the excavator, the hook, the sling and other lifting accessories are taken into consideration for the loads.

Machine conditions:


No bucket, all others according to the standard regulations.



WARNING

To avoid personal injury or death:

- No loads greater than those values mentioned in the lifting capacity tables are to be lifted.
- The values mentioned in the table are valid only on even, hard grounds. When lifting on soft ground, the machine can tip over due to the load being concentrated only on one side of the machine.
- The table values are calculated at the end of the arm without the bucket. In order to find the allowable loads for machines with bucket, the bucket weight must be subtracted from the values in the table.

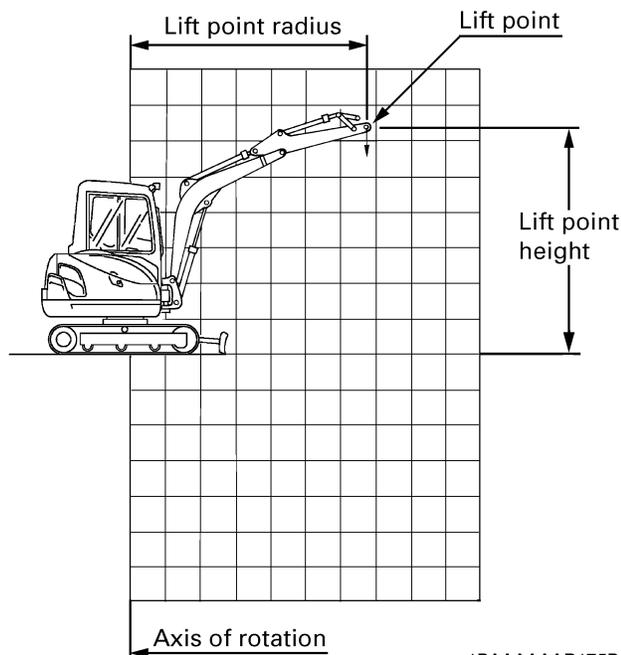

1BAAAAAP175B

